




ASSEMBLY INSTRUCTIONS:12540094/01

ambia. GARDEN

BDSK Handels GmbH & Co. KG
Mergentheimer Straße 59
DE-97084 Würzburg

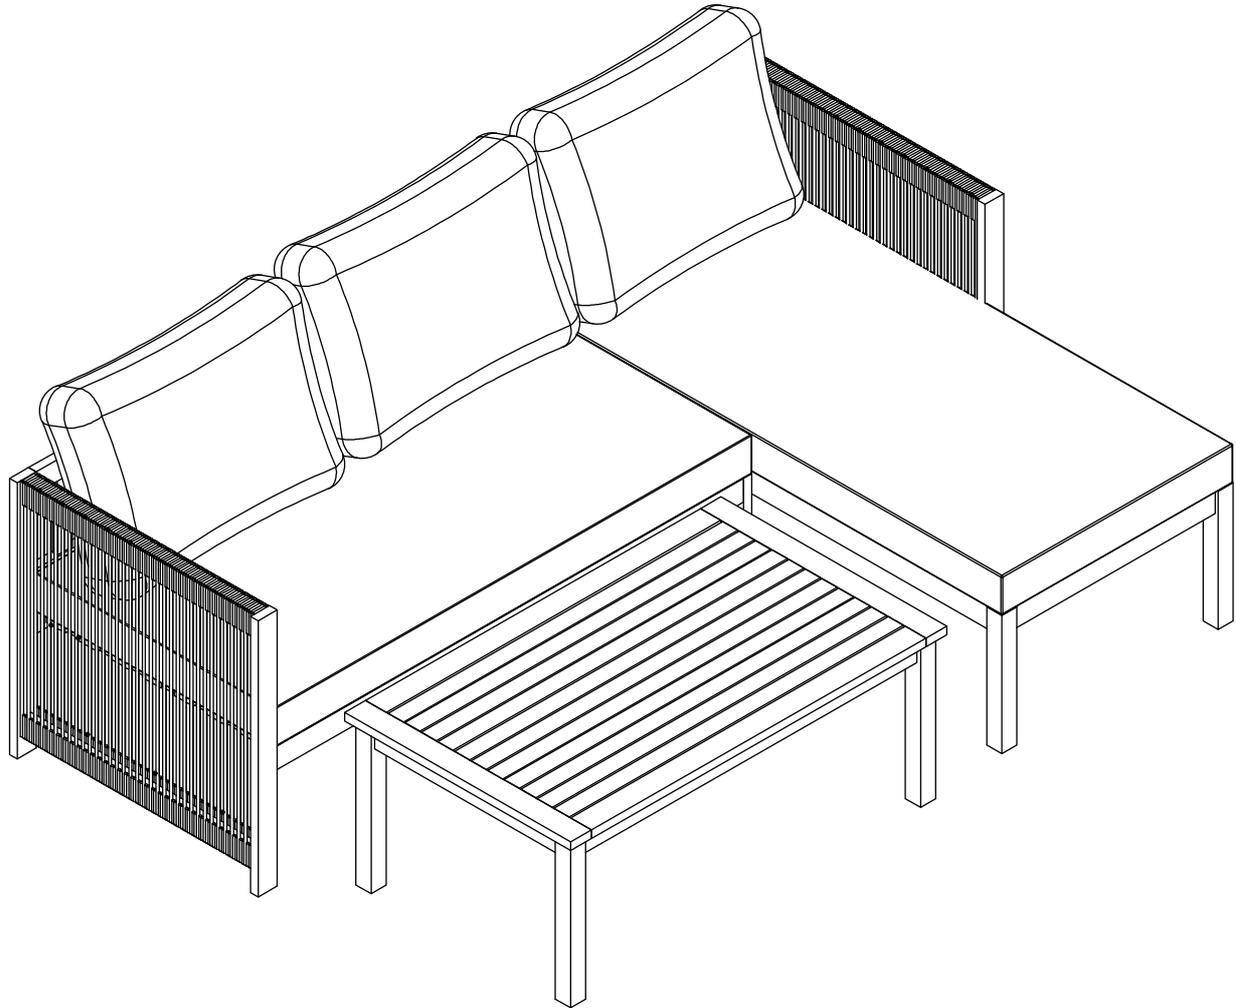


ASSEMBLY INSTRUCTIONS:12540094/01

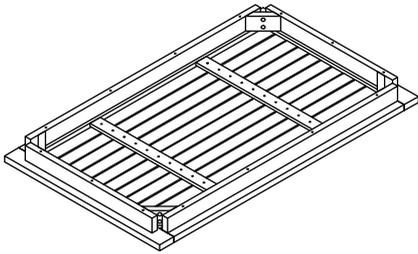No	Name of Hardware	Fig	Qty	A	B
1	Bolt M6 x 60 mm		8		
2	Washer		8		
3	Allen Key		1		


x1

x4


Step 1:






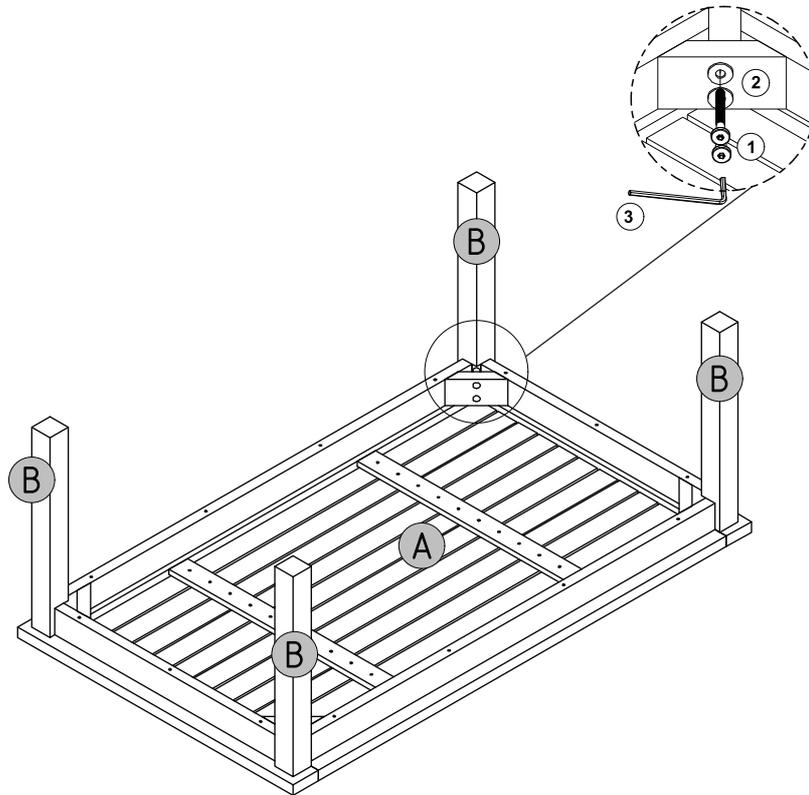


Step 2:

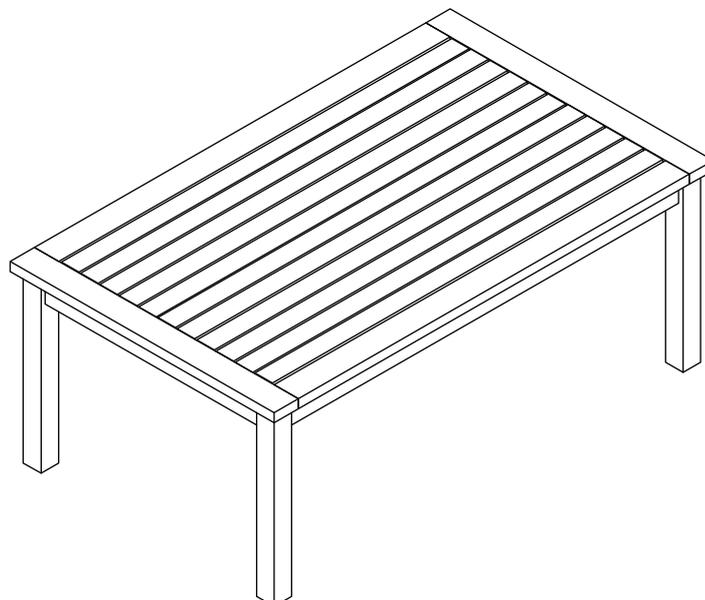


ASSEMBLY INSTRUCTIONS:12540094/01

No	Name of Hardware	Fig	Qty
1	Screw M6 x 50 mm		2
2	Screw M6 x 70 mm		5
3	Allen Key		1

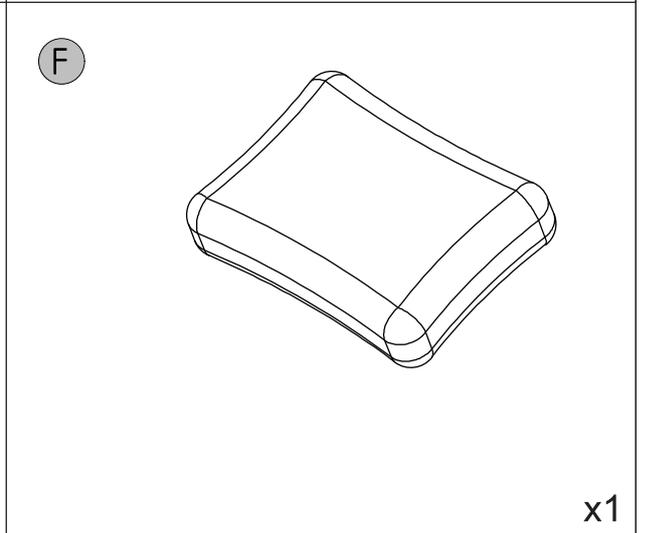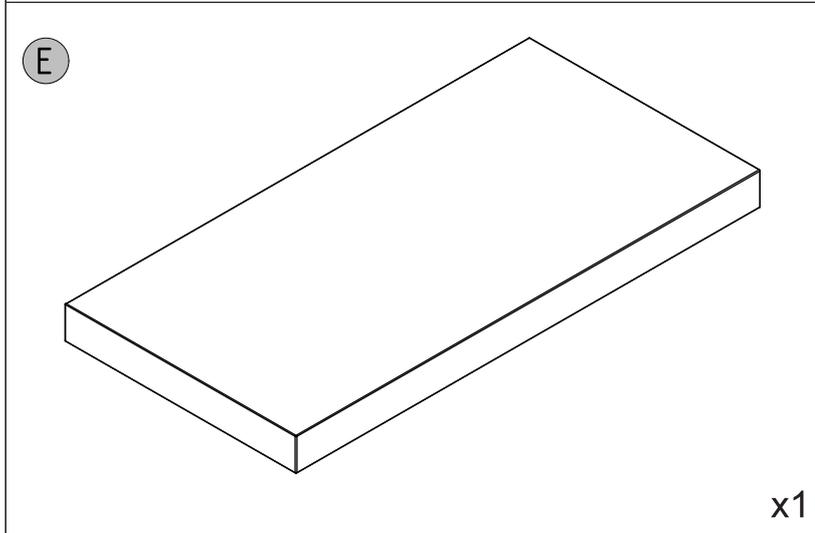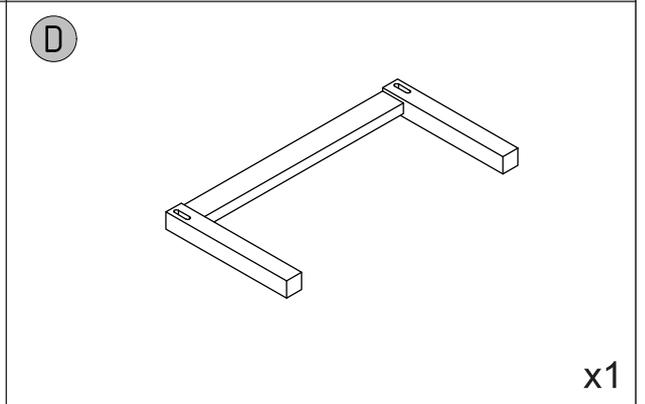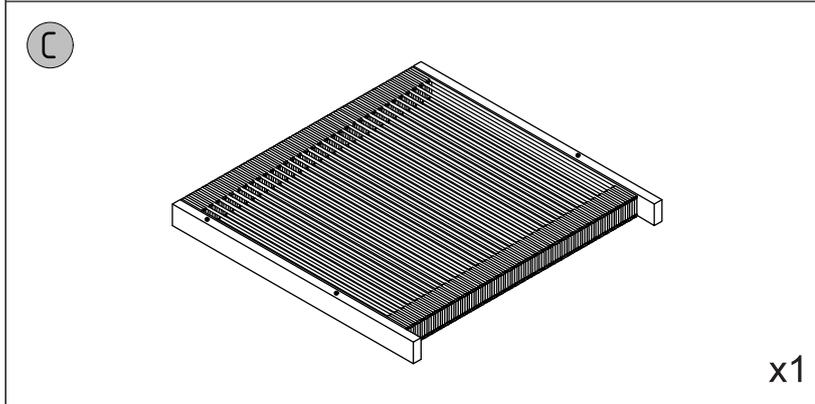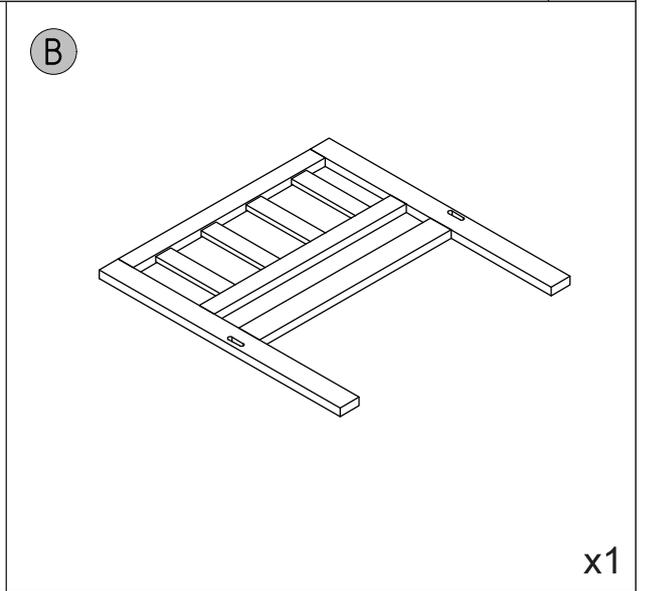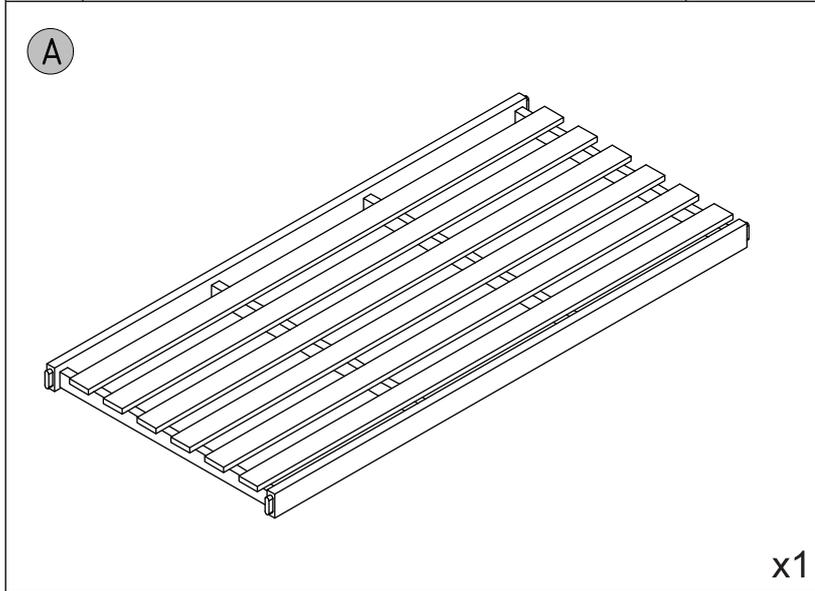


ASSEMBLY INSTRUCTIONS:12540094/01


Step 1:

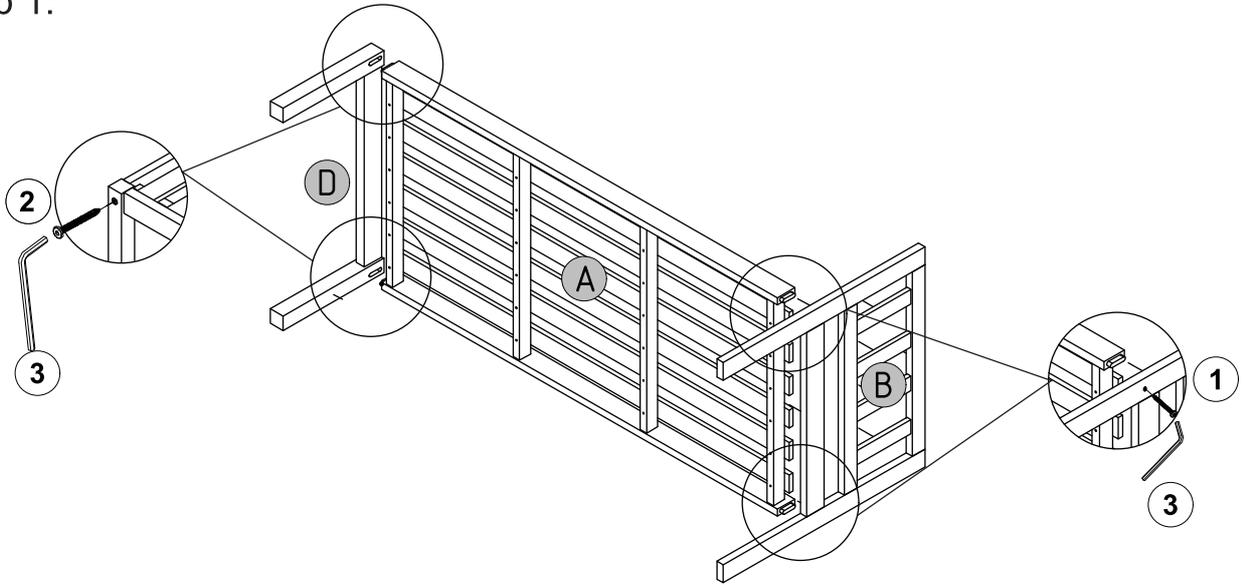


Step 2:






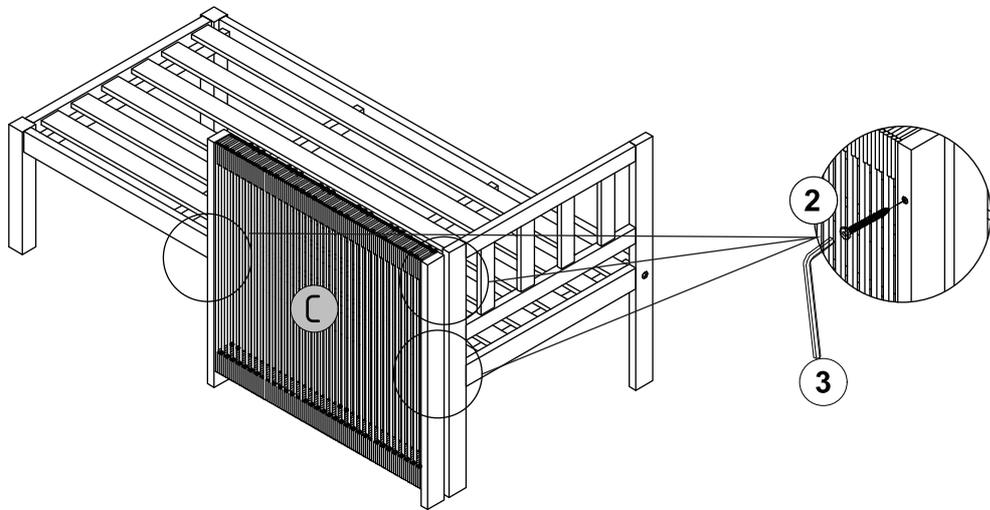


Step 3:

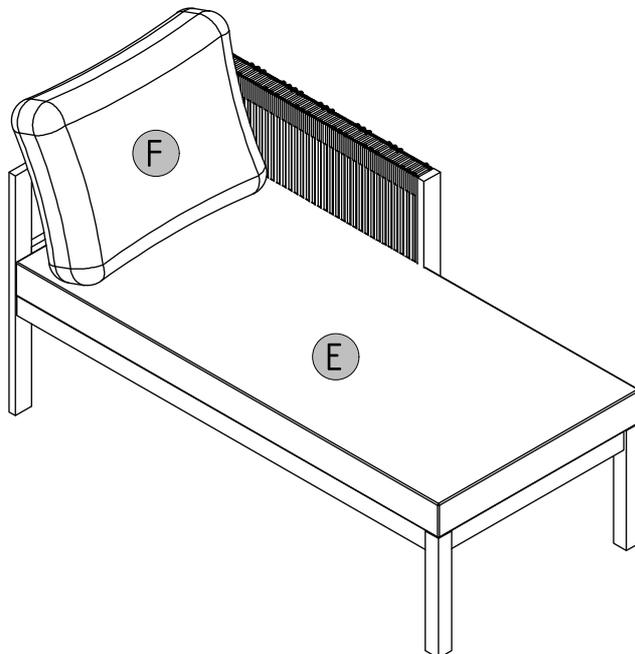


ASSEMBLY INSTRUCTIONS:12540094/01

No	Name of Hardware	Fig	Qty
1	Screw M6 x 50 mm		1
2	Screw M6 x 70 mm		5
3	Allen Key		1
4	Fixed belt		2

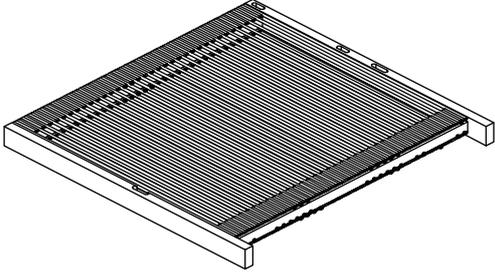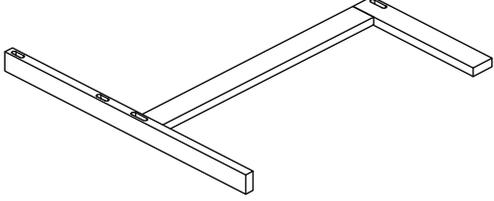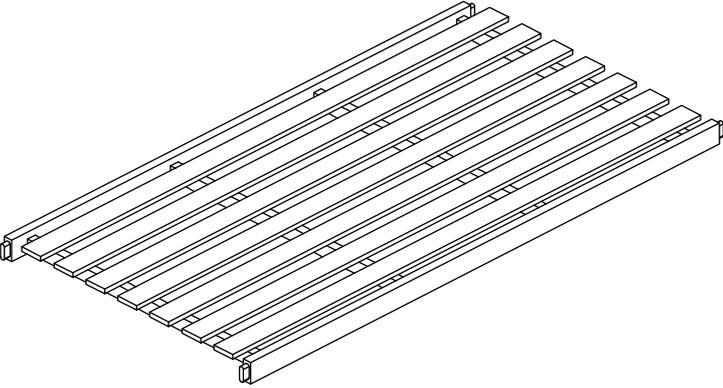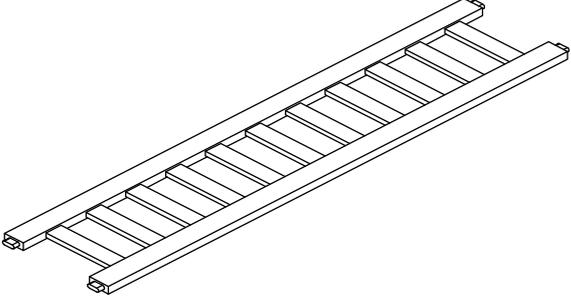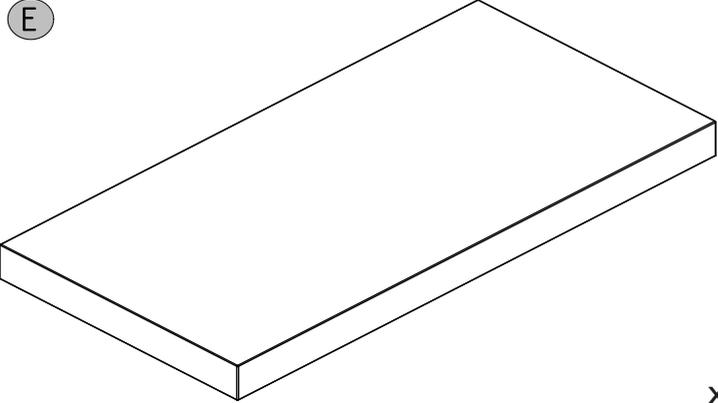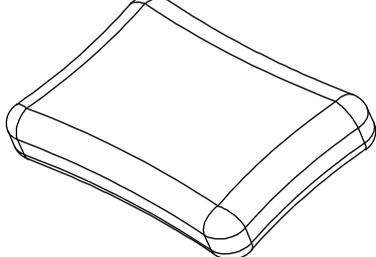
<p>A</p>  <p style="text-align: right;">x1</p>	<p>B</p>  <p style="text-align: right;">x1</p>
<p>C</p>  <p style="text-align: right;">x1</p>	<p>D</p>  <p style="text-align: right;">x1</p>
<p>E</p>  <p style="text-align: right;">x1</p>	<p>F</p>  <p style="text-align: right;">x2</p>

ASSEMBLY INSTRUCTIONS:12540094/01

Step 1:

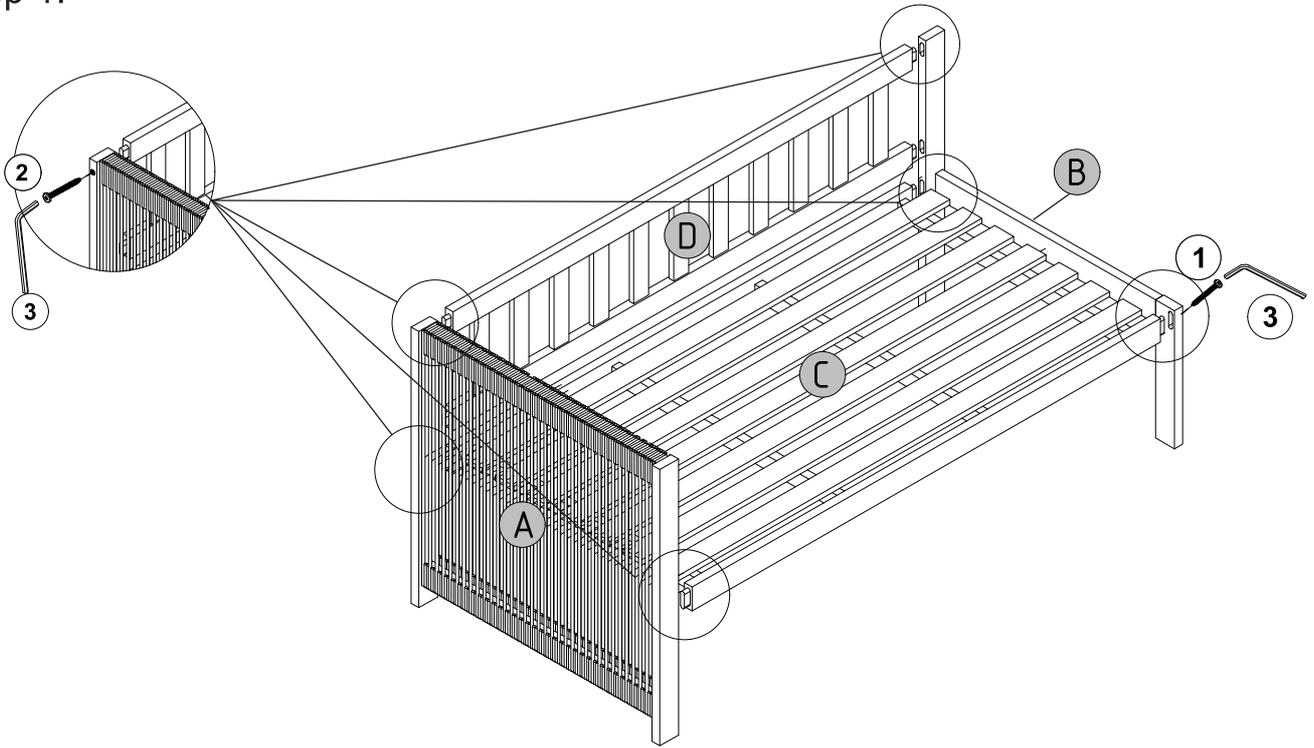


Step 2:

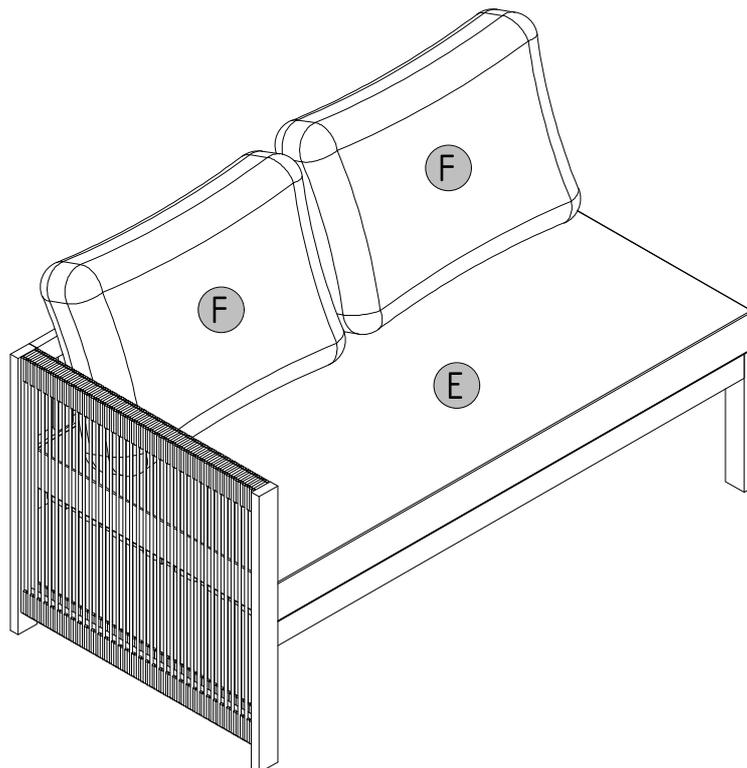

ASSEMBLY INSTRUCTIONS:12540094/01

Step 3:

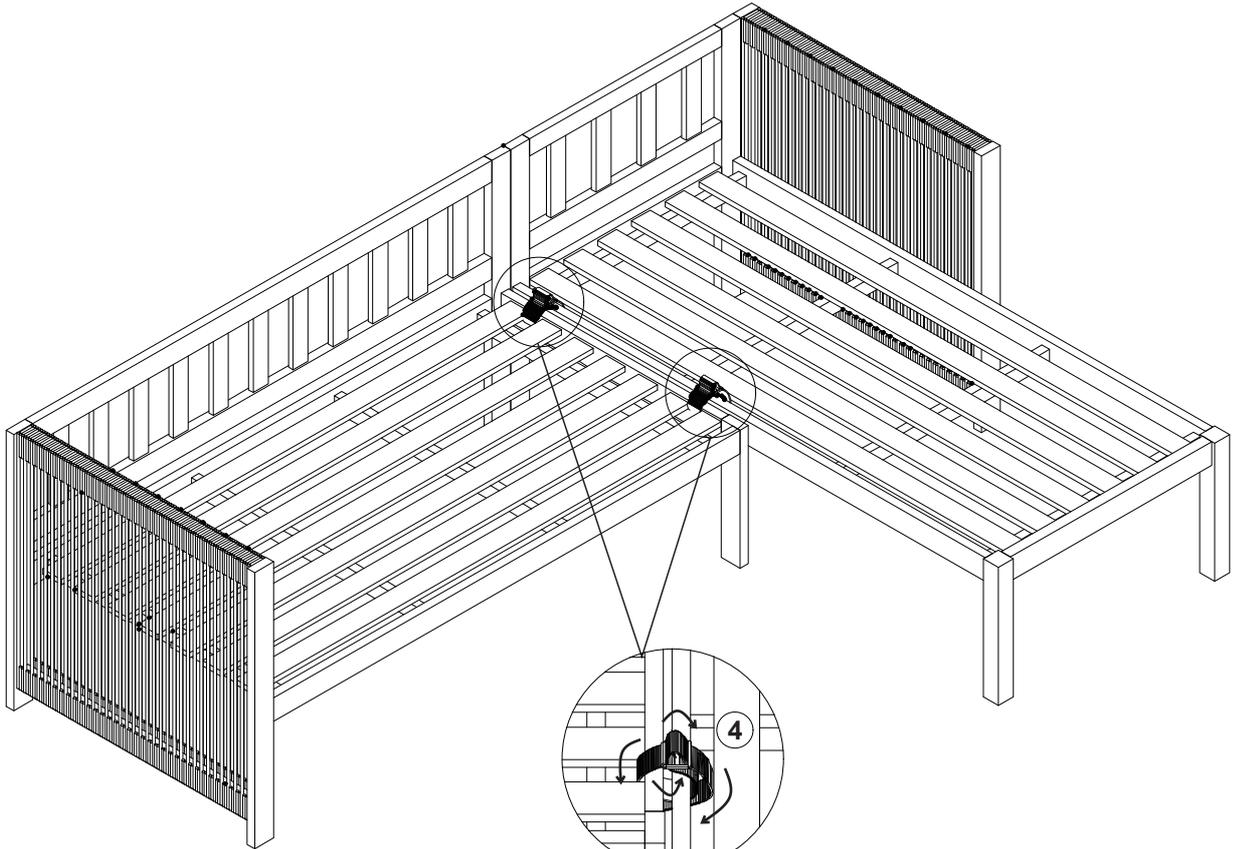

4

