




FLORENCE 1800

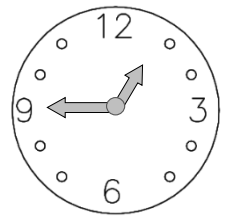


45 min



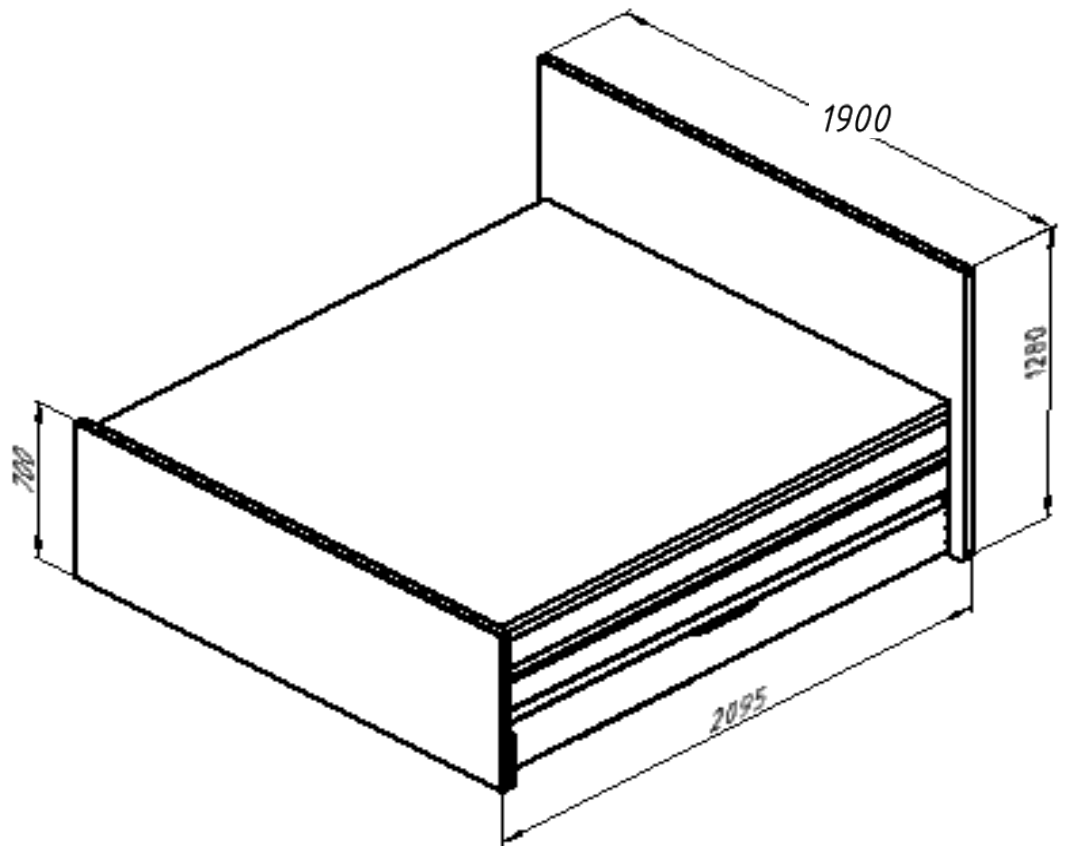




- | | | | |
|----|---------------------|----|---------------------|
| DE | Montageanleitung | HR | Upute za montažu |
| SE | Installation manual | HU | Telepítési útmutató |
| CZ | Montážní návod | SK | Inštalačná príručka |
| EN | Installation manual | SL | Navodila za montažo |

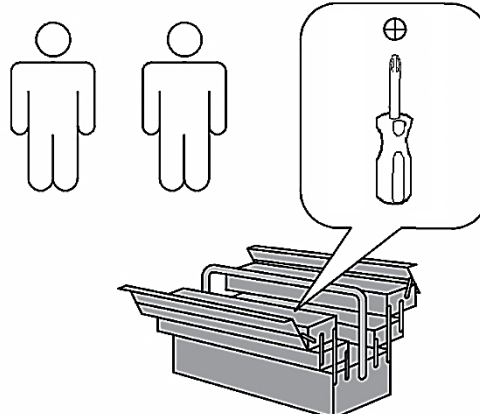



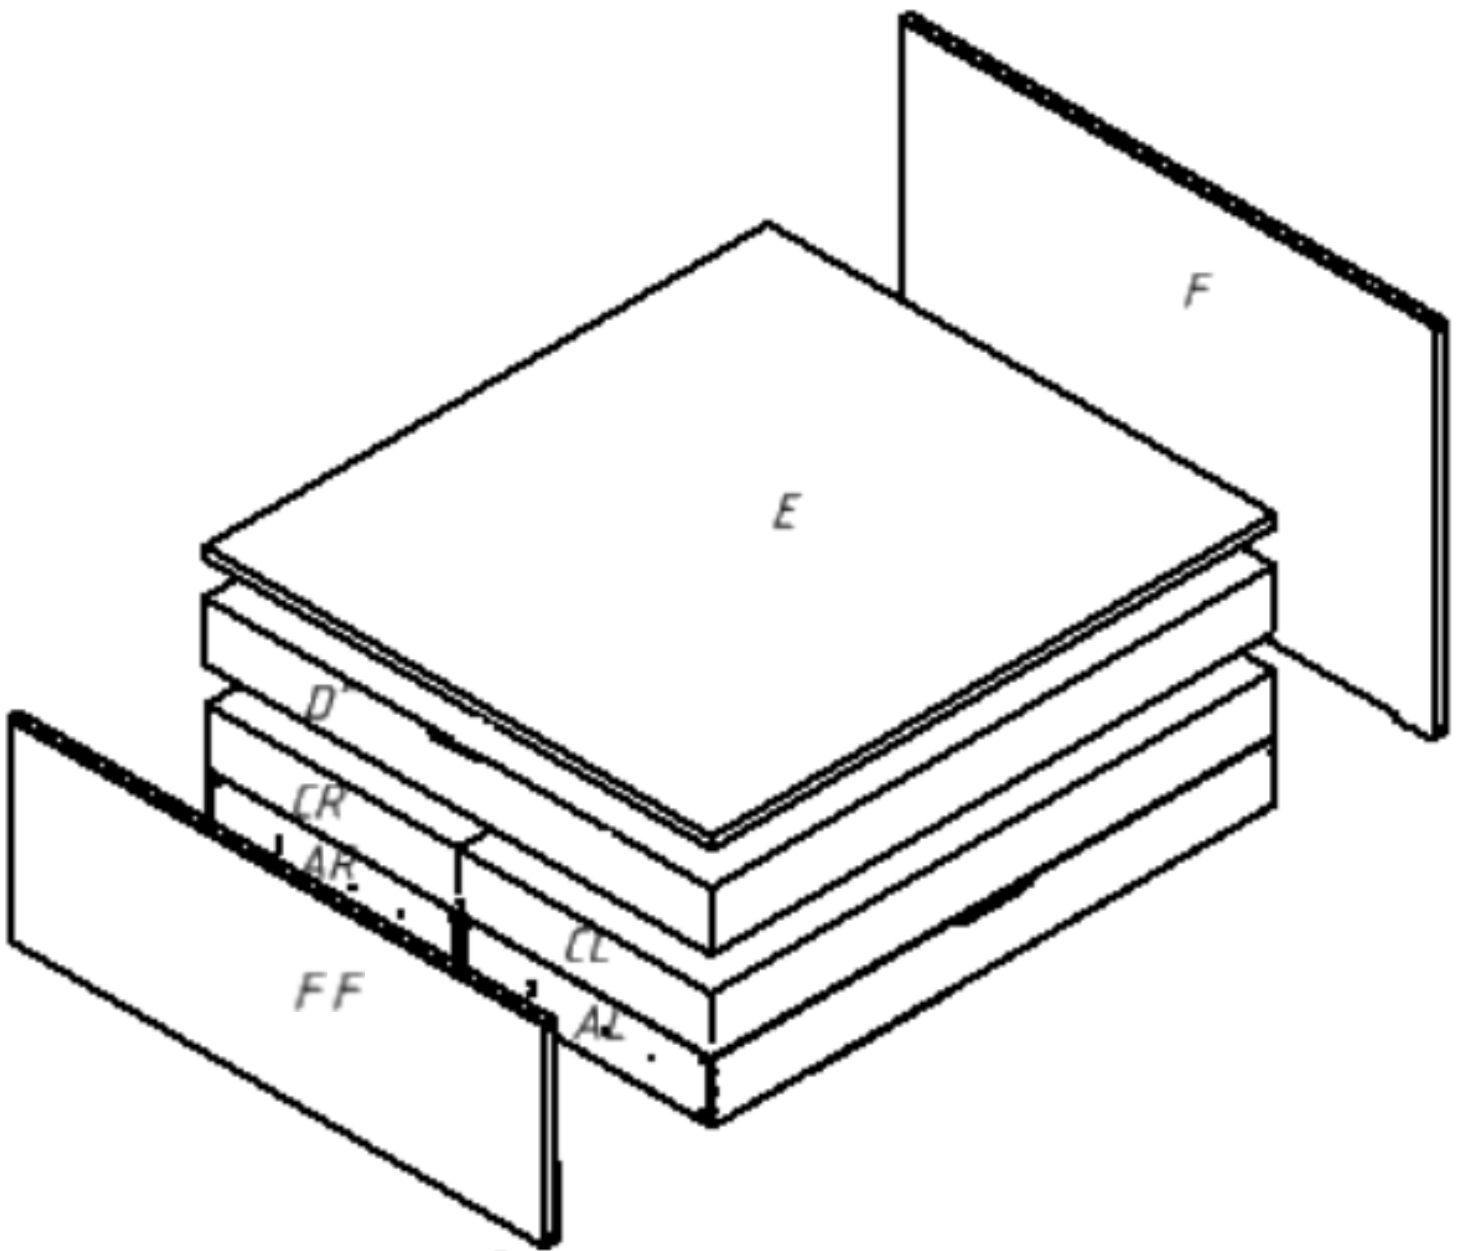


		SIZE (mm)	QUAN	Nº PACK
1	AL, AR	1995x895x210	1	1/5, 2/5
2	CL,CR	2000x900x200	1	1/5, 2/5
3	FF	1840x710x75	1	4/5
4	F	1900x1280x75	1	5/5
5	D	2000x1800x190	1	3/5
6	E	2000x1800x40	1	1/5

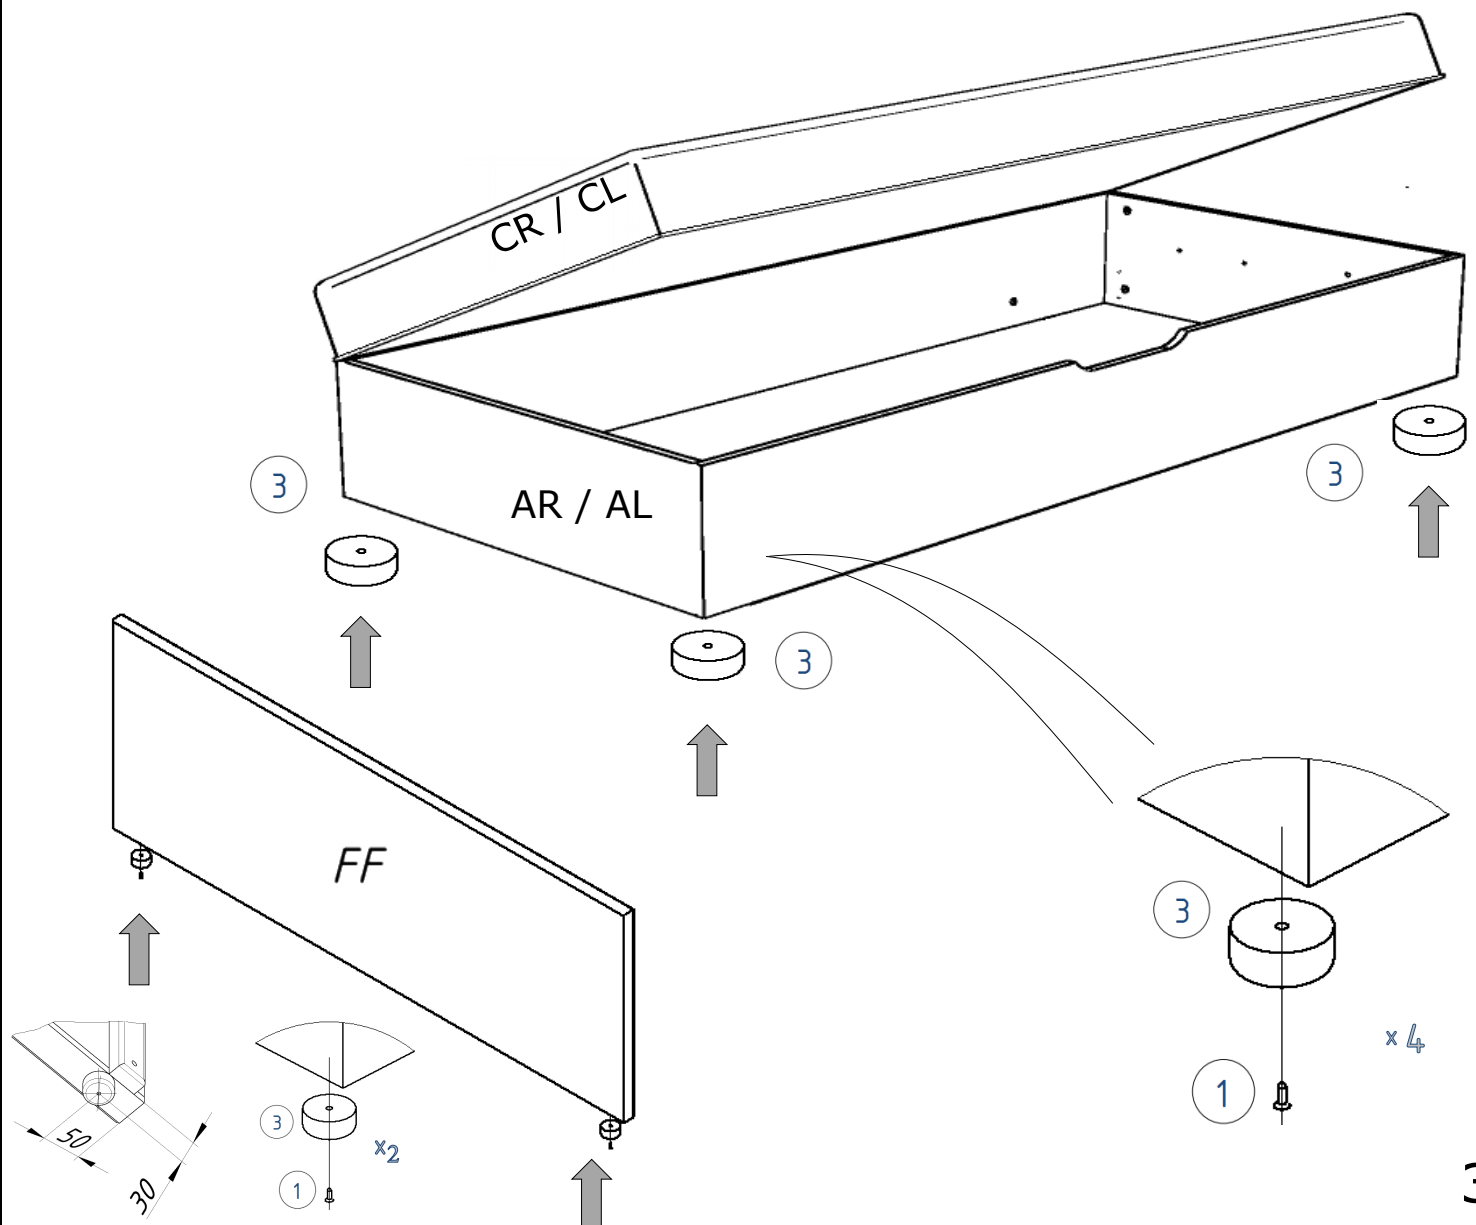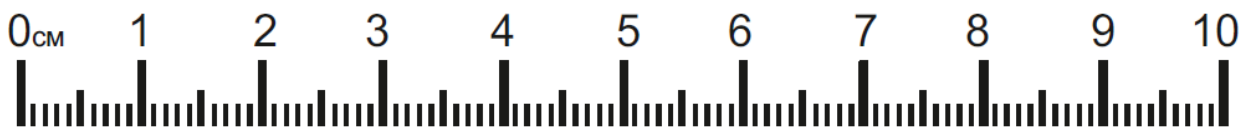
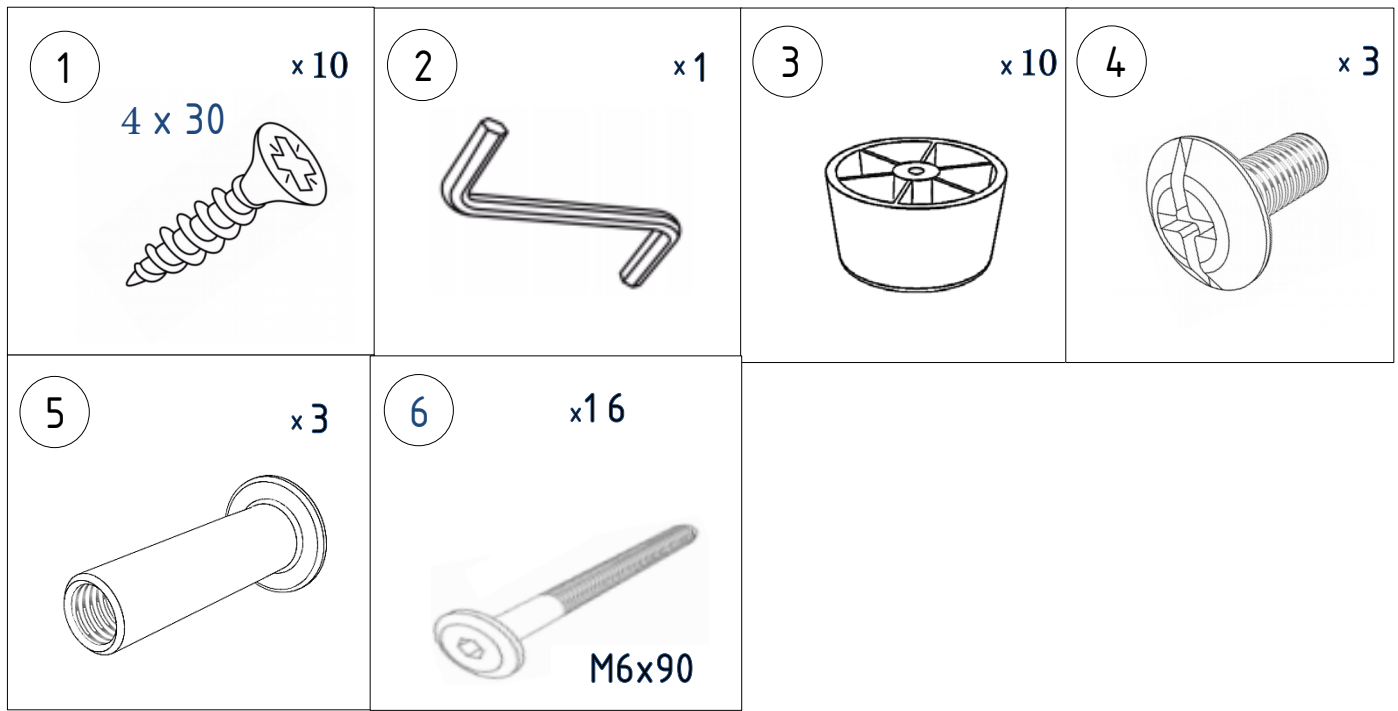


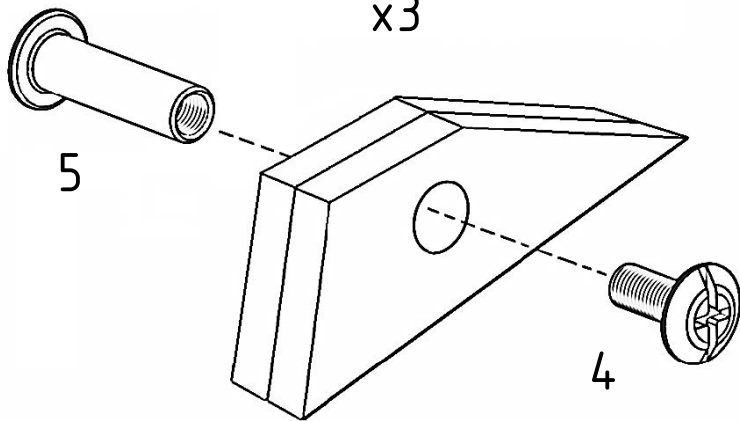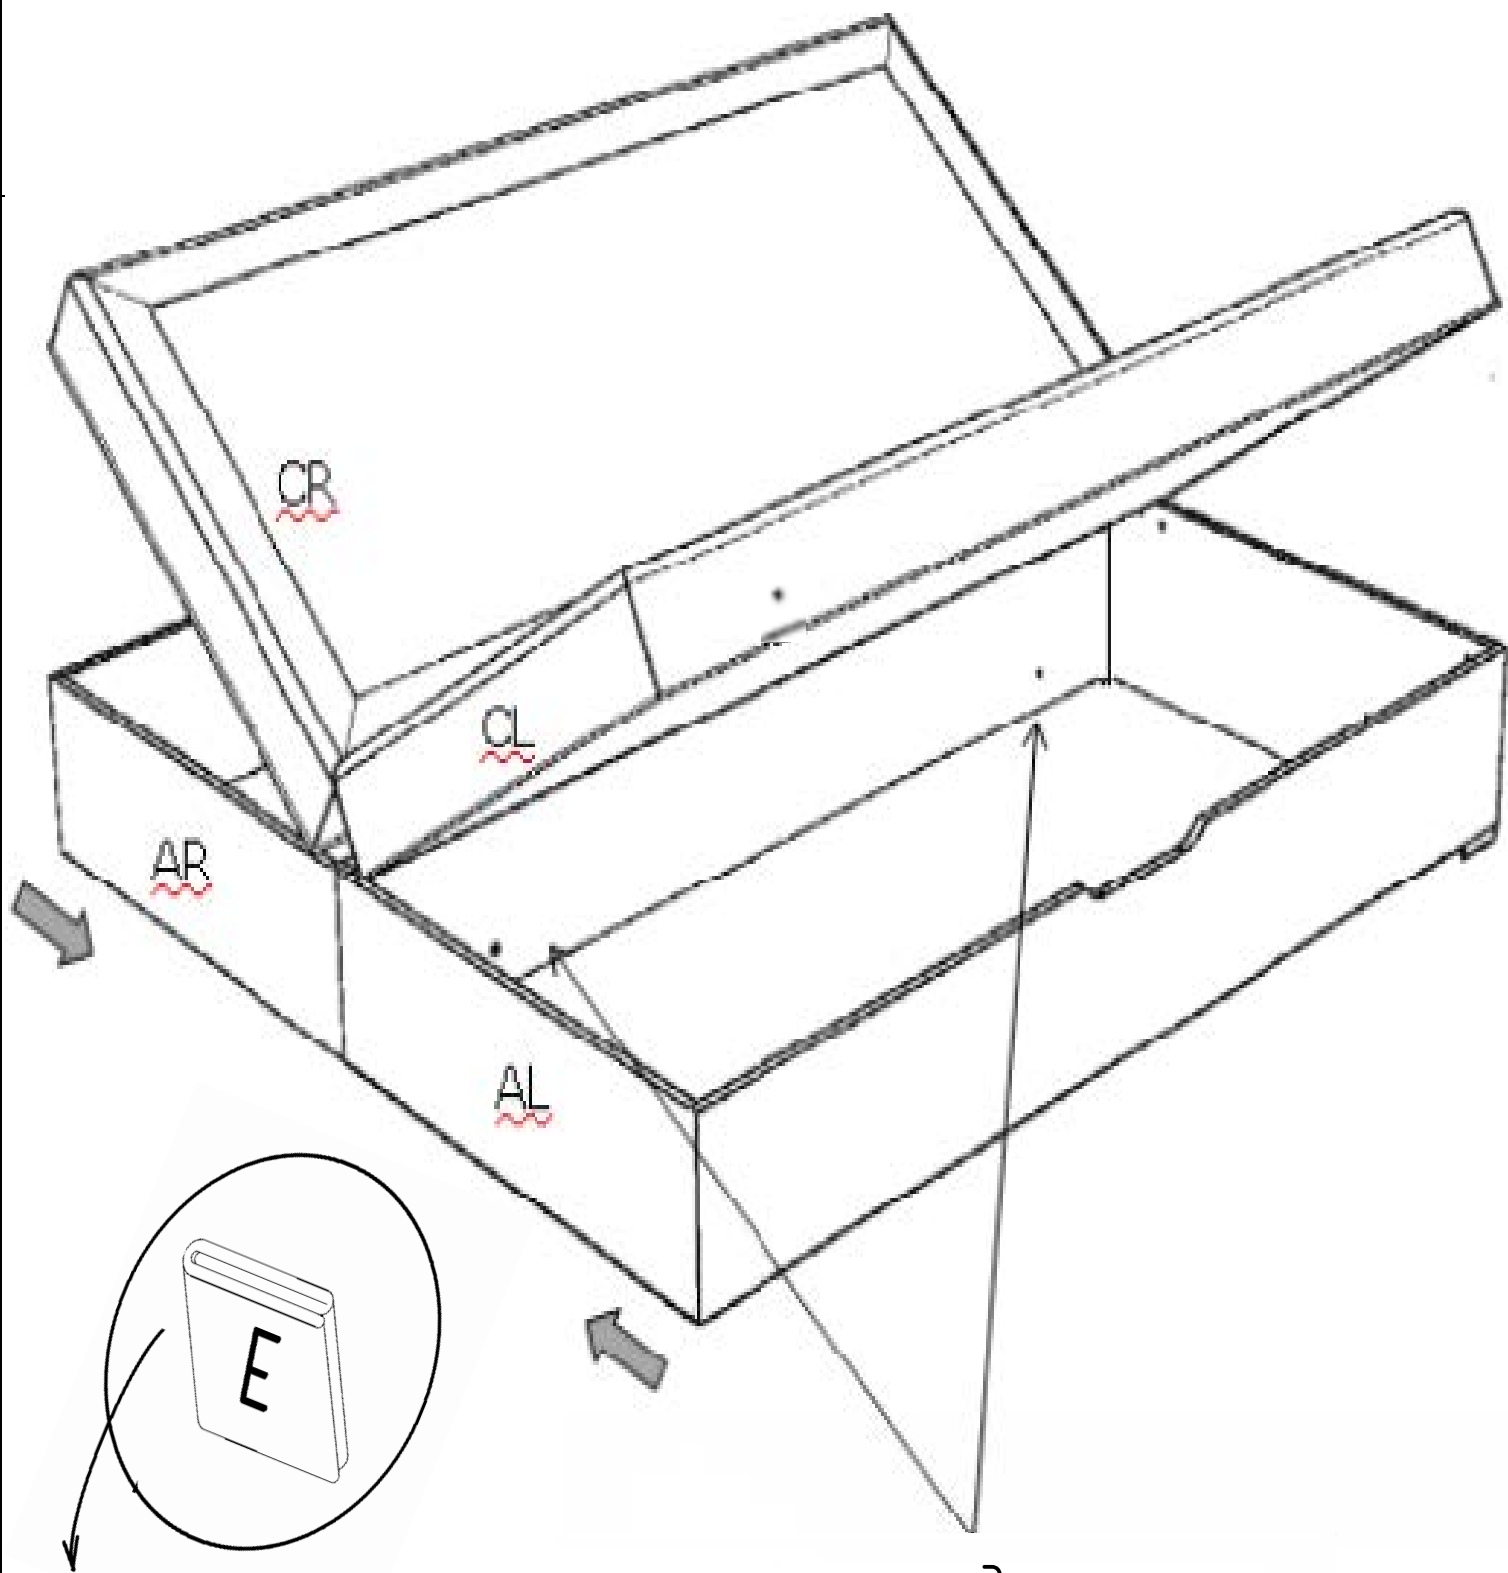

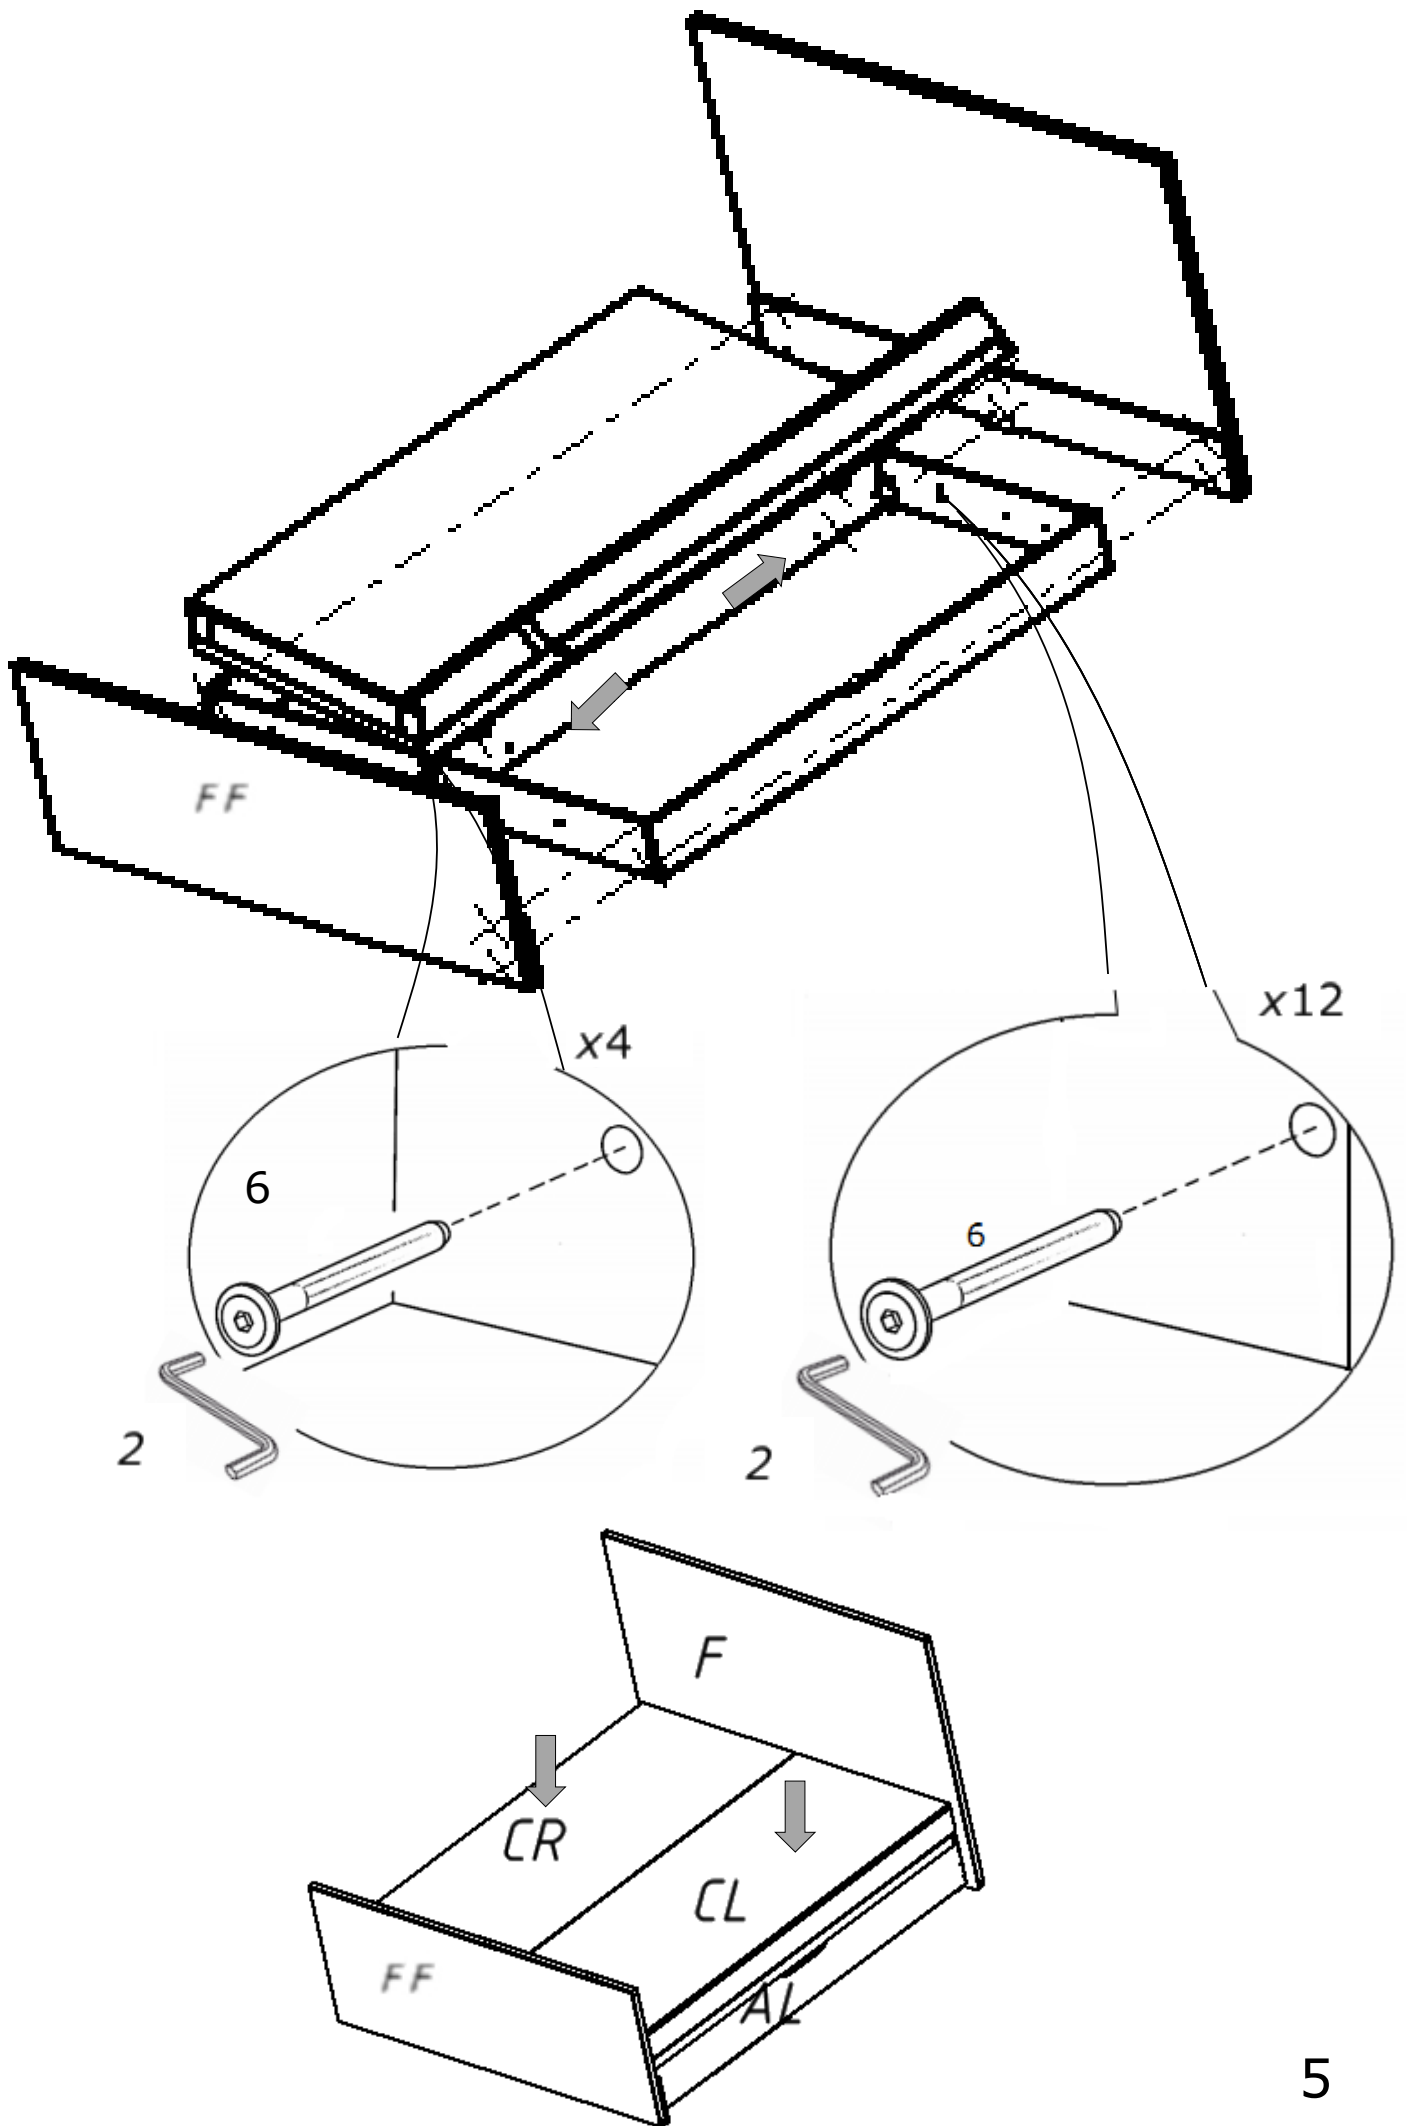


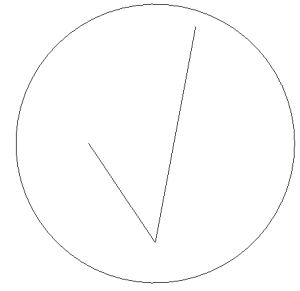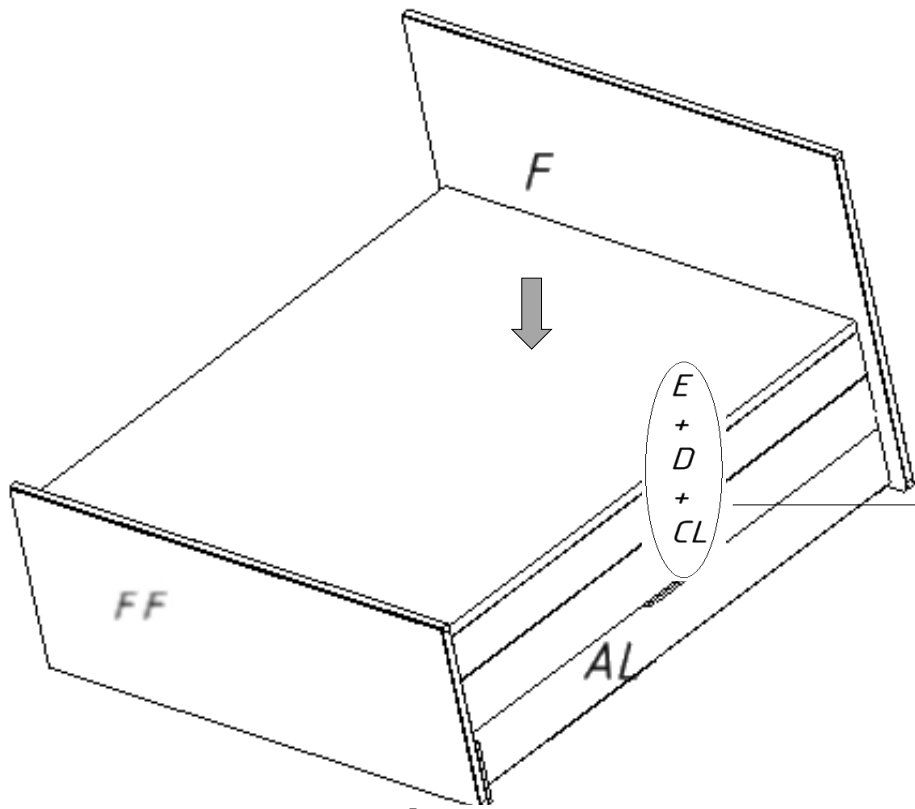

$E + D + CL + AL$

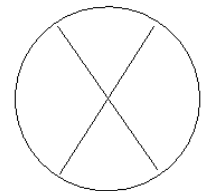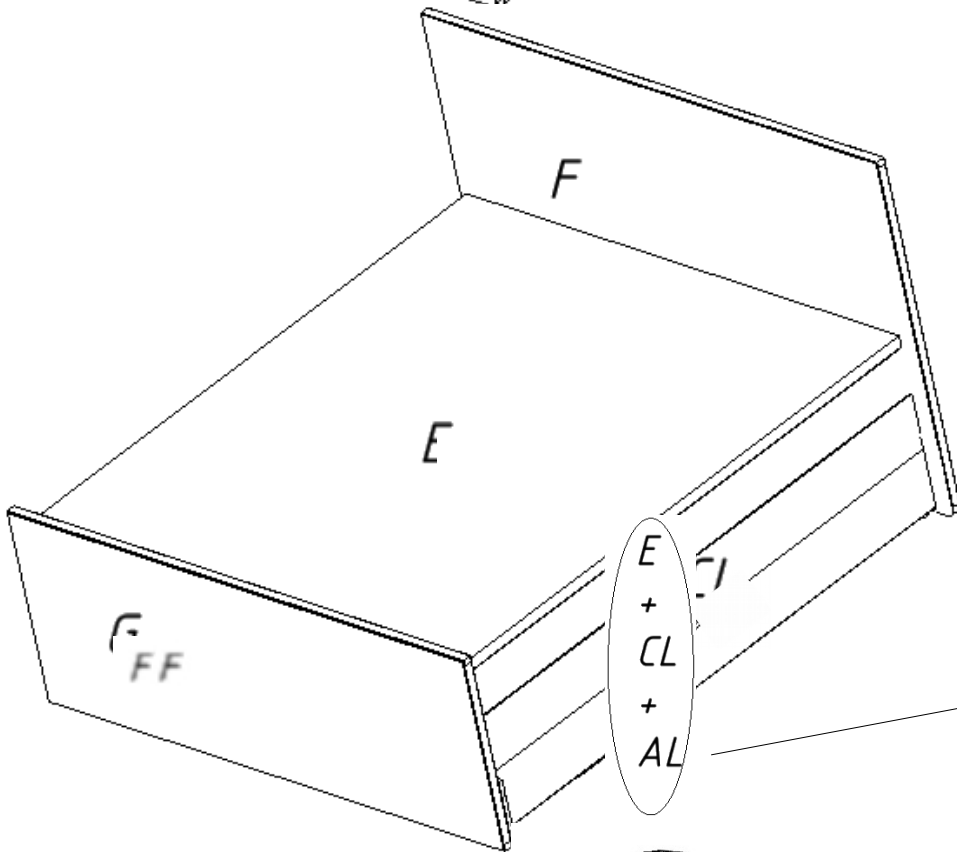

$E + CL + AL$

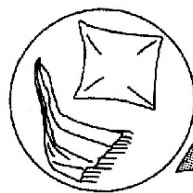

max 10 kg

