

2 X



- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCTIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) NAPUTCI ZA MONTAŽU
- (E) INSTRUCCIONES DE MONTAJE

- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) KÖZGYŰLÉS UTASÍTÁSOK
- (SL) ASSEMBLY INSTRUCTIONS
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS

designwerk

FIRST CLASS LIVING



„BERRY”



REC AT RE



REC AT LI



REC PS AT RE



REC PS AT LI

1/2

A H=25mm 2x	B 1x	C H=50mm 4x	D H=50mm 1x	E 2x	F 1x
PRE-ASSEMBLED/ PRÉ ASSEMBLÉ/ VORMONTIERT/PREMONTATO/ WSTĘPNIE ZAMONTOWANE			HARDWARE BAG / SACHET MATÉRIEL / ZUBEHÖRBEUTEL / SACCHETTI MATERIALE / BOLSA DE MATERIALES / WOREK MATERIALOWY		

0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180

1

ELT AT LI

ELT AT RE

2

3

2 X



(D) AUFBAUANLEITUNG
(NL) HANDLEIDING VOOR DE MONTAGE
(TR) MONTAJ TALIMATI
(RO) INSTRUCTIUNI DE ASAMBLARE
(F) INSTRUCTION D'ASSEMBLAGE
(CZ) POKYNY K MONTÁŽI
(BG) ИНСТРУКЦИИ ЗА МОНТАЖ
(HR) NAPUTCI ZA MONTAŽU
(E) INSTRUCCIONES DE MONTAJE

(GB) ASSEMBLY INSTRUCTIONS
(PL) INSTRUKCJA MONTAŻU
(RU) Инструкция по монтажу
(I) PROCEDURA DI ASSEMBLAGGIO
(SK) POKYNY K MONTÁŽI
(HU) KÖZGYŰLÉS UTASÍTÁSOK
(SLO) ASSEMBLY INSTRUCTIONS
(S) MONTERINGSANVISNING
(LT) DIEGIMO INSTRUKCIJOS

designwerk

FIRST CLASS LIVING



„BERRY”



REC AT RE



REC AT LI






REC PS AT RE





REC PS AT LI

2/2

4

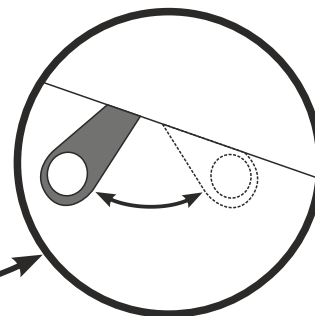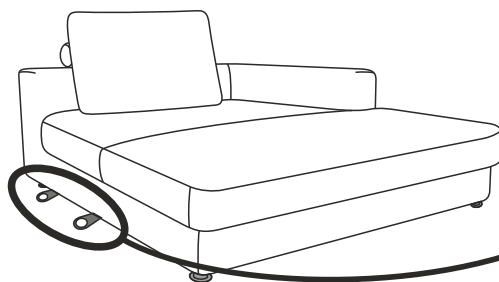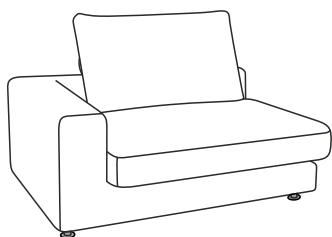

5

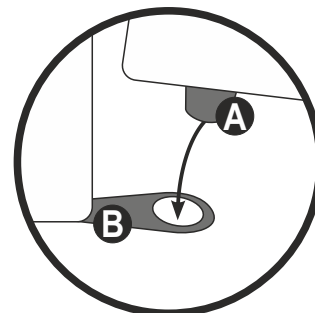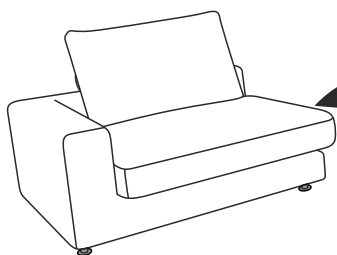

6

