
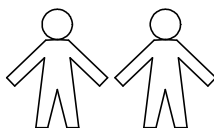





1.

M1919_03








rauch

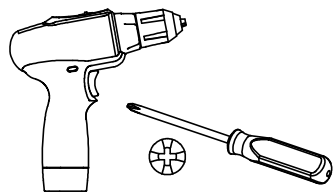

ABD-FOLIE
147x46



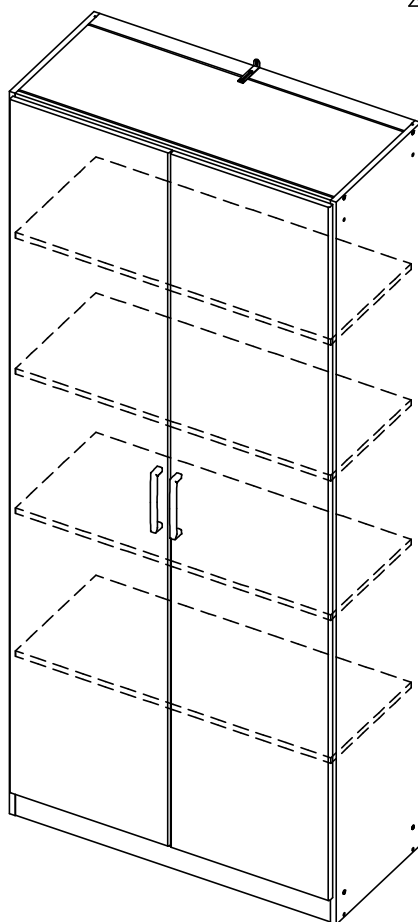
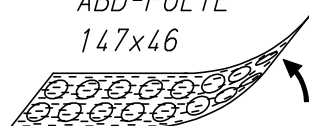


2.

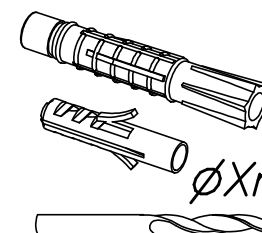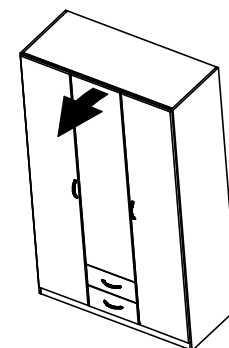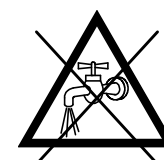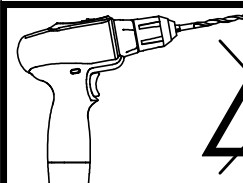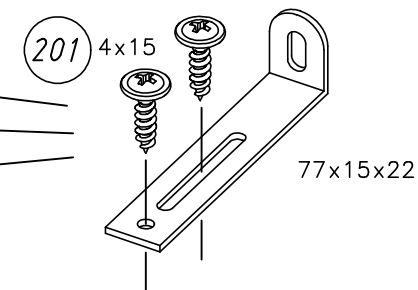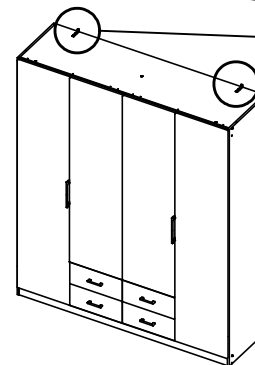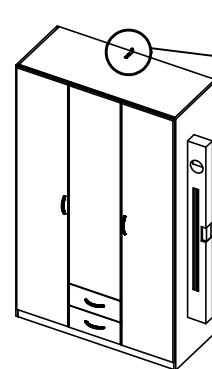




?

ØXmm

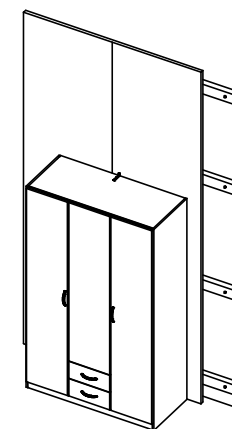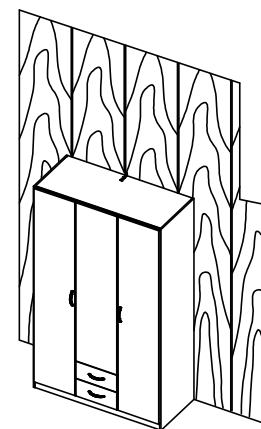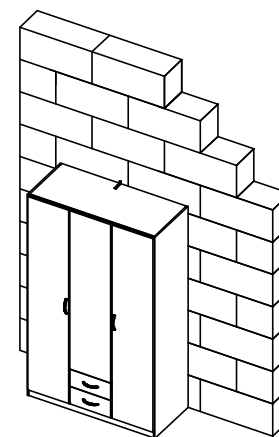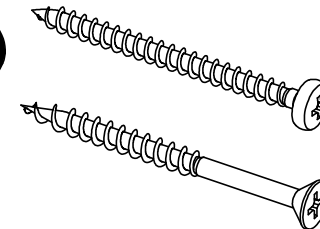


This exploded view diagram illustrates the assembly of a cabinet. The components are labeled as follows:

- Tu1** and **Tu2**: Two vertical panels on the left side.
- Se1**: A vertical panel with a perforated edge, positioned between Tu2 and the main cabinet body.
- Wa**: A horizontal panel located above the main cabinet body.
- Bo1** and **Bo2**: Two horizontal panels, one below and one above the main cabinet body.
- Rw**: The main cabinet body, featuring a central vertical panel and two side panels.
- Se2**: A vertical panel with a perforated edge, positioned to the right of the main cabinet body.
- So1** and **So2**: Two horizontal panels at the bottom, likely representing the base or feet.

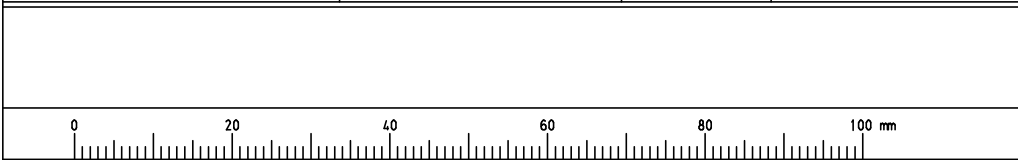
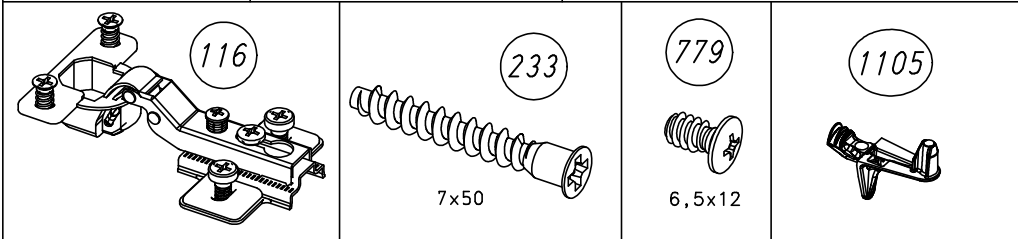
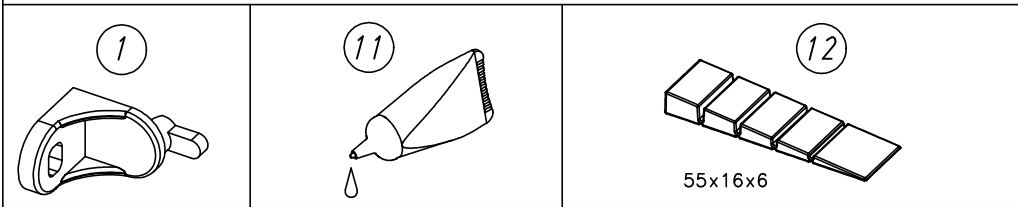


M1919

5.

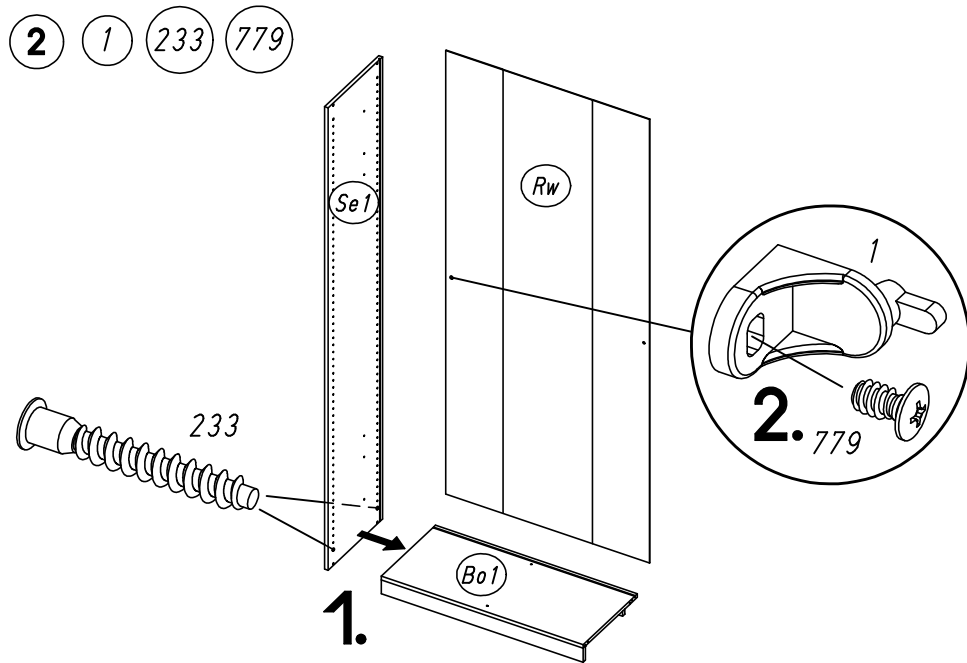


6.

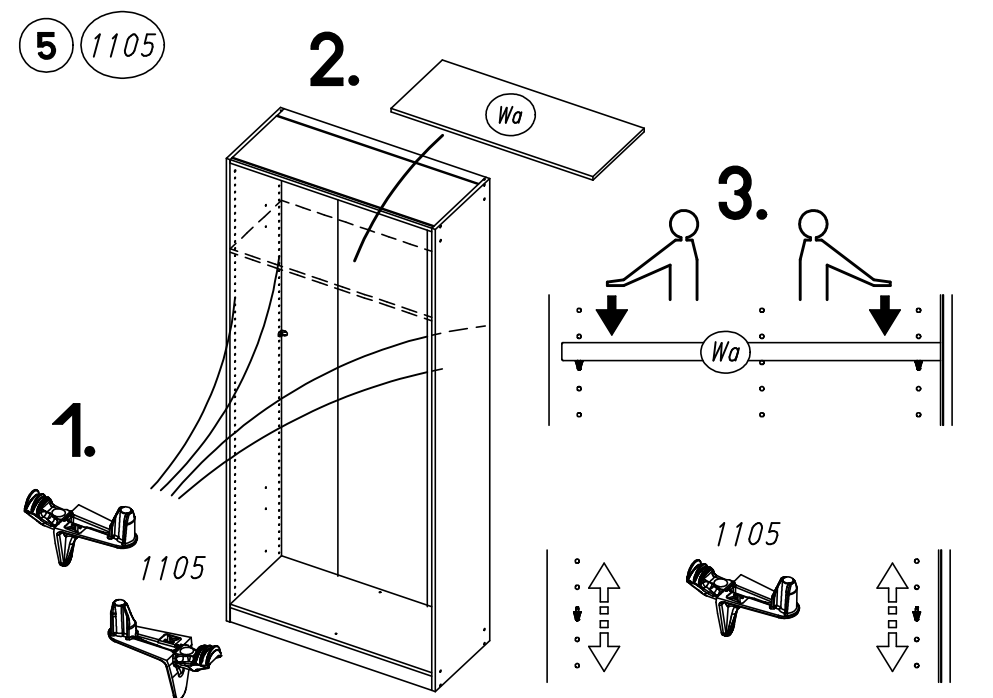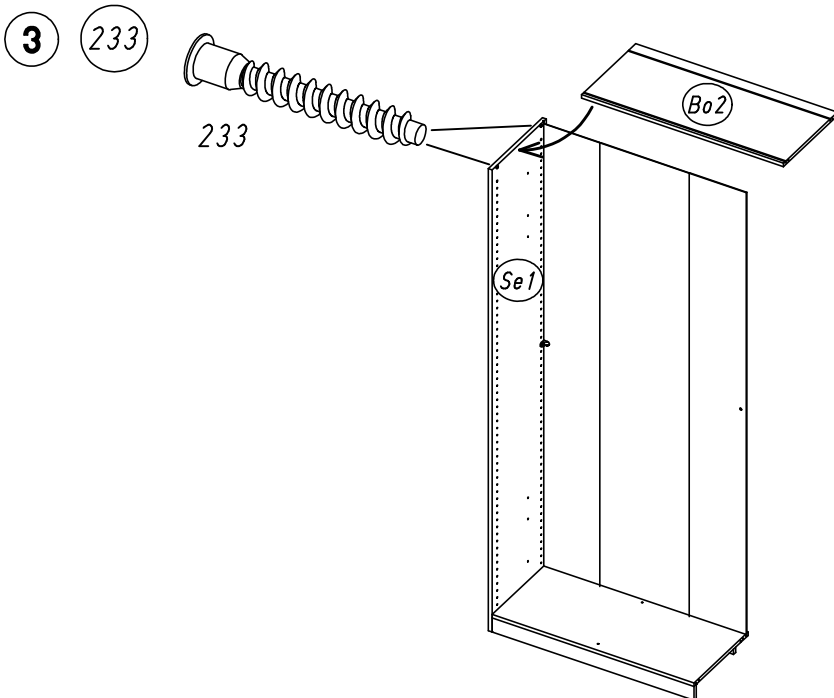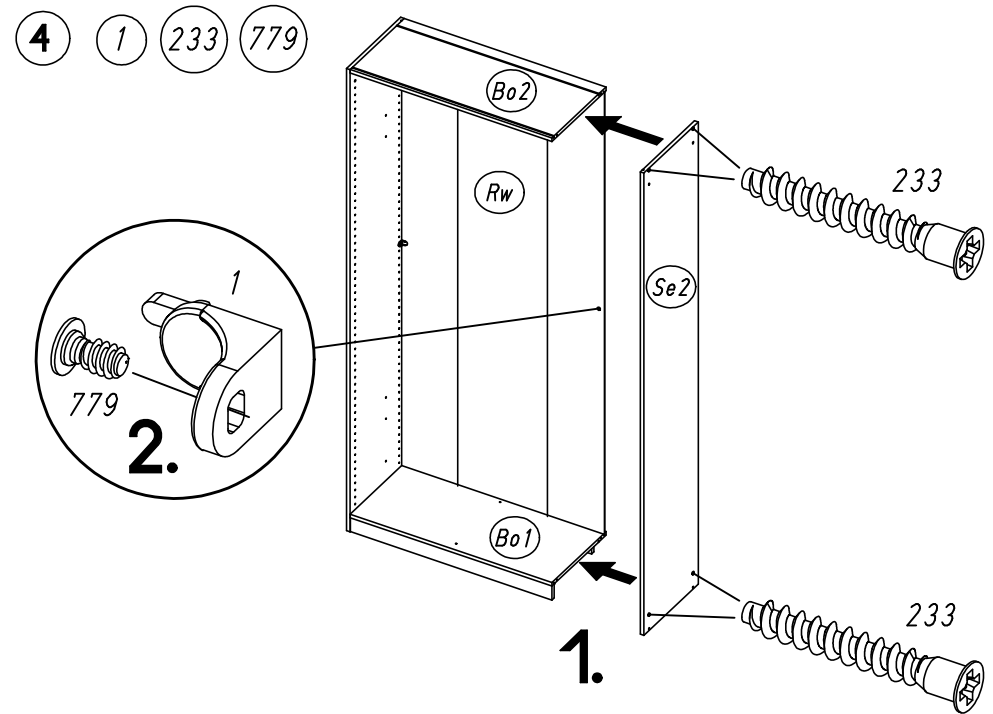


7.

6

116

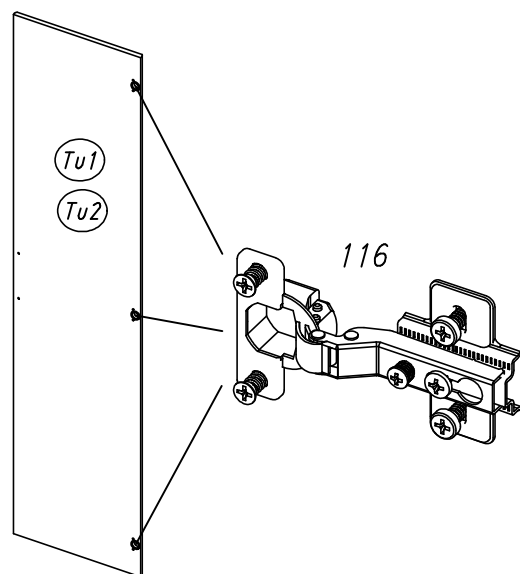

7

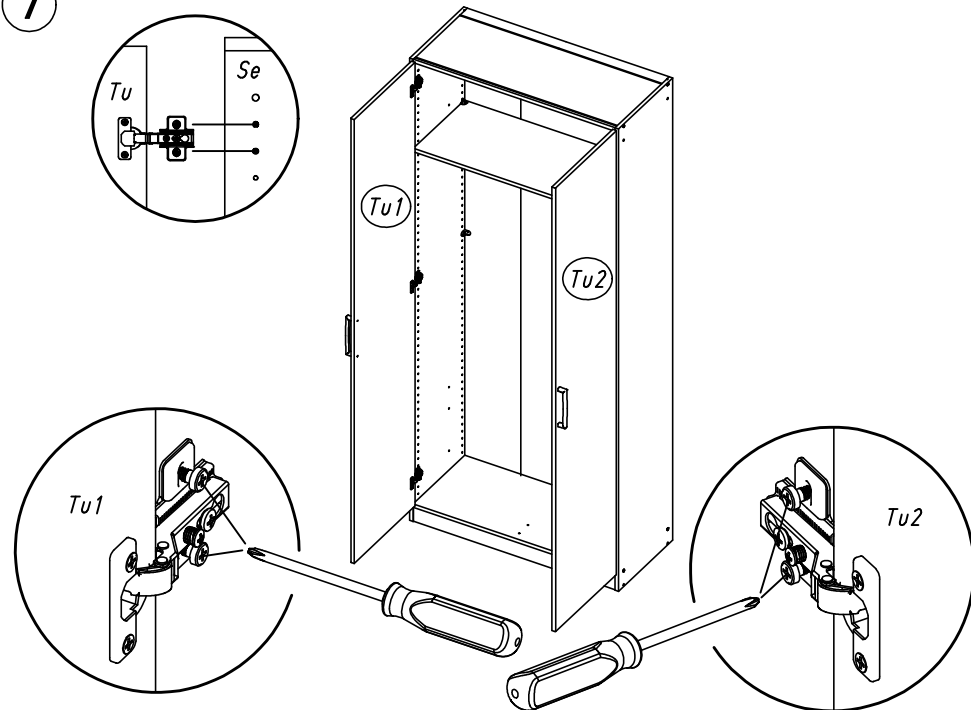


M1919

8.


8

12

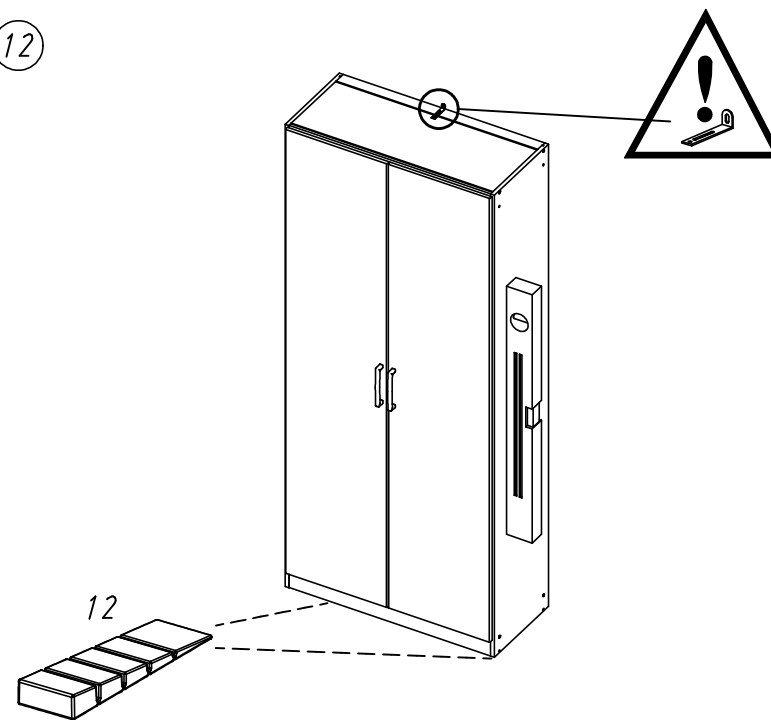

9

ABD-FOLIE
147x46

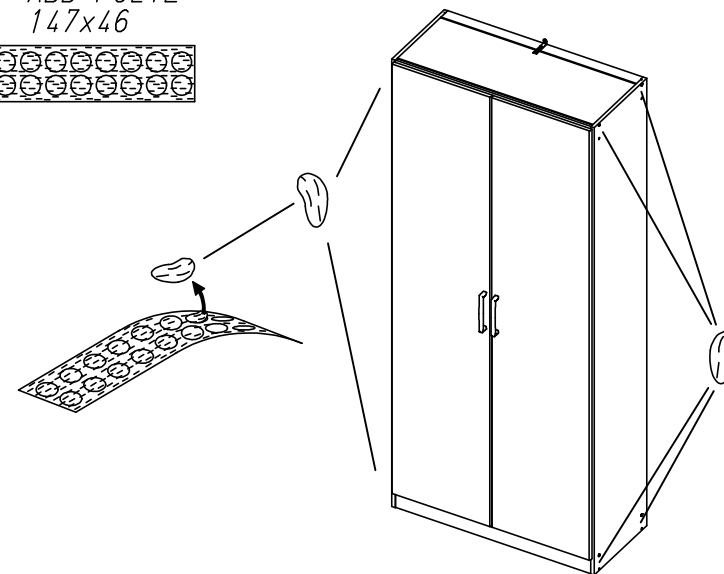

M1919

10

