


Montageanleitung Funktionsbett TRIER	Mountinginstruction Funktionsbett TRIER
Mounting instructions Multifunction bed TRIER	Date 22.03.2024

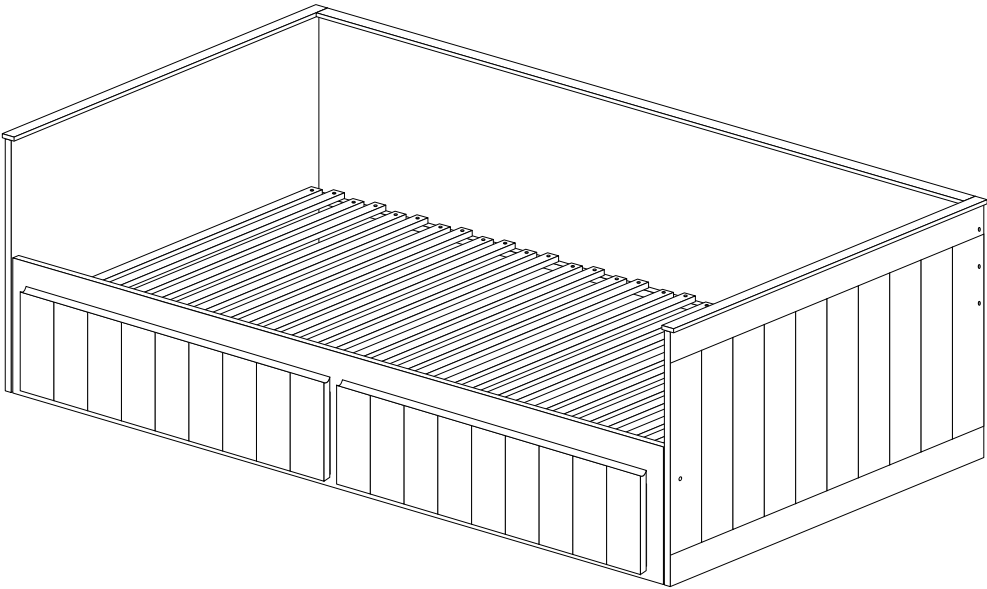


Notwendiger Hinweis:

Important information:

Belangrijke informatie:

Information importante:

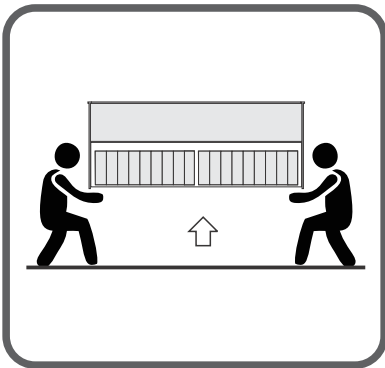

Bett nicht verschieben,
nur angehoben verstellen.

Move not only raises
bed adjusted







Bed niet verschuiven,
men moet het bed opheffen
om te verplaatsen

Ne pas pousser le lit,
il faut le porter pour déplacer



⌚

2:30'

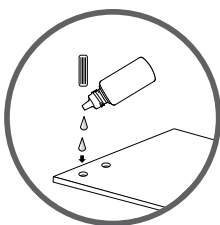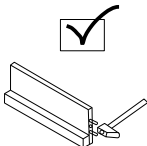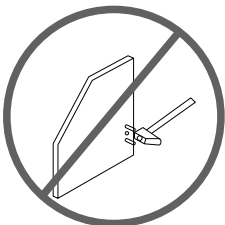

- A



x 11
- B



∅15x12.5/ x 11
- C



∅ 8 x 35 x/38
- D



M 7 x 50 /x 17
- E



CL / x 2
- E



CR / x 2
- E



DL / x 2
- E



DR / x 2
- F



∅ 4 x 40 /x 59
- G



6x20/ x 12
- H



∅ 4 x 16 /x 28
- I



glue /x 1
- J



h=42mm/ x 6
- K



x 2
- L




∅ 4 x 20 /x 8
- M



∅3.5x 10 /x 4
- N



x 1

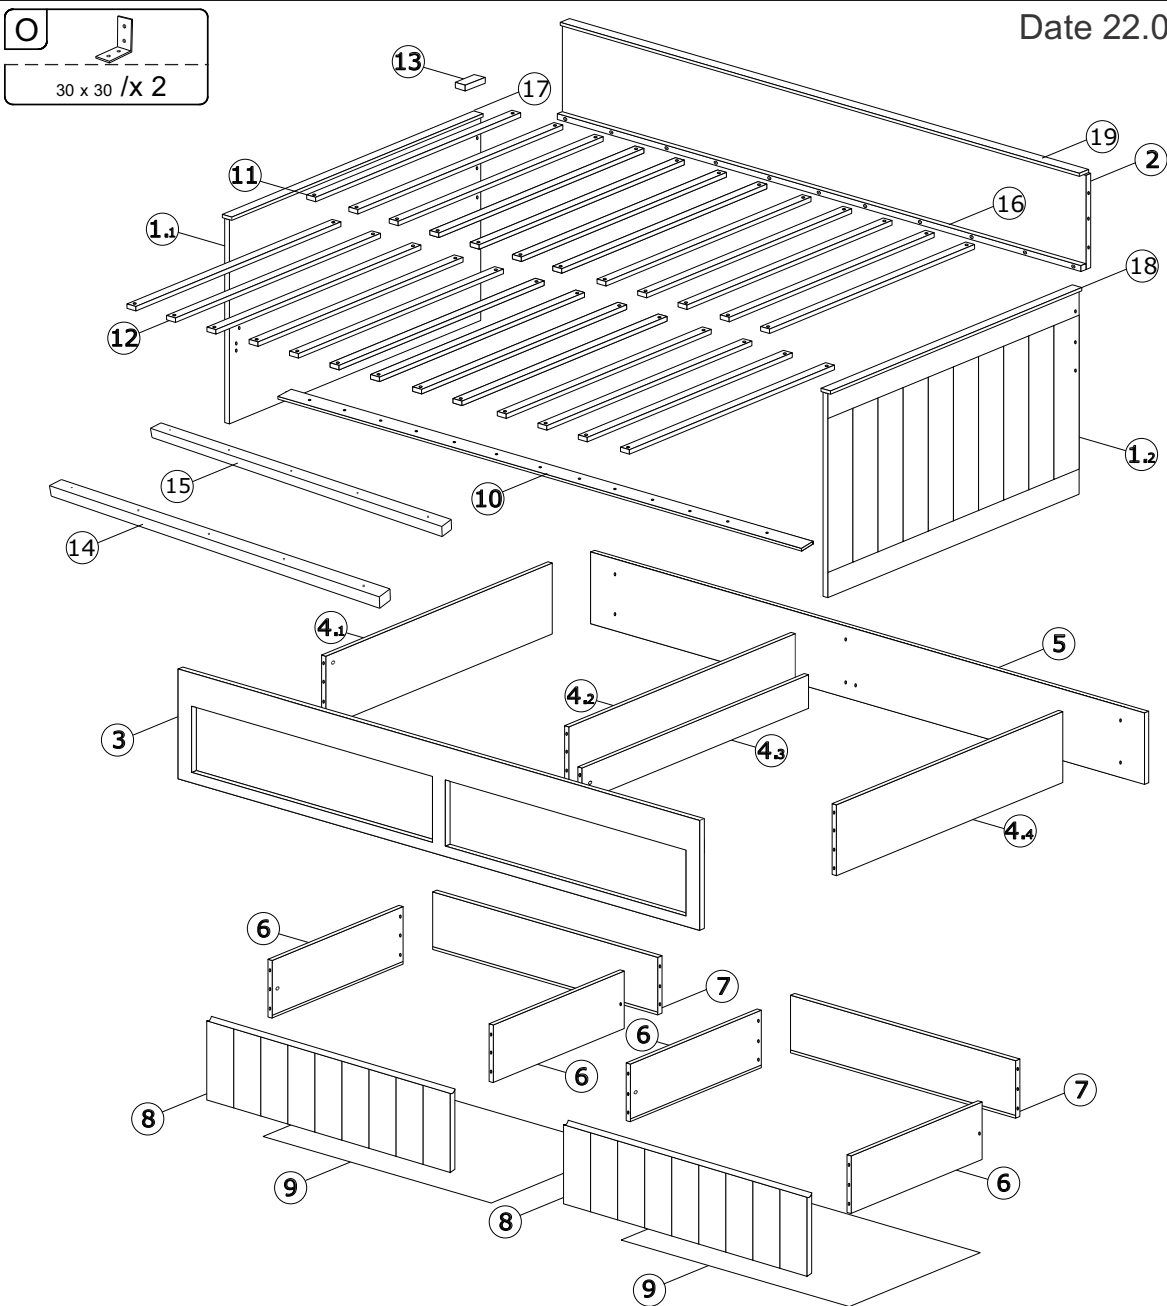

Stückliste / Bill of Materials / Detail visserie

N°	QTY.	Dimensions / mm	Box*
1	2	970 x 798 x 22	1/4
2	1	2000 x 515 x 18	2/4
3	1	1993 x 390 x 22	2/4
4.1	1	884 x 273 x 16	3/4
4.2	1	884 x 273 x 16	3/4
4.3	1	884 x 100 x 16	3/4
4.4	1	884 x 273 x 16	3/4
5	1	1996 x 273 x 16	3/4
6	4	500 x 150 x 16	2/4
7	2	862 x 150 x 16	2/4
8	2	934 x 225 x 18	3/4

N°	QTY.	Dimensions / mm	Box*
9	2	877 x 502 x 3	1/4
10	1	2000x80x8	2/4
11	12	900 x 67 x 15	4/4**
12	13	900 x 67 x 15	4/4**
13	1	91 x 50 x 3	4/4**
14	1	910 x 35 x 25	2/4
15	1	953 x 35 x 25	2/4
16	1	1995 x 35 x 25	2/4
17	1	980 x 48 x 18	1/4
18	1	980 x 48 x 18	1/4
19	1	1975 x 48 x 18	2/4

* Welches Teil ist welcher box / Which part is in which box / Réparation des pièces par boîte

**Zusätzlicher Satz optional / Additional set optional / Jeu supplémentaire en option

Ⓓ ACHTUNG bei einer Beanstandung !!
Um eine zügige Beanstandungsabwicklung zu gewährleisten, bitte bei Beschlägen den Buchstaben und die Menge angeben, Beispiel: A M6x95
bei Möbelteilen die Zahl angeben
Beispiel: 1 1960x160x20

ⒼB if you have a COMPLAINT !!
in order to enable us to deal with any complaints quickly, in the case of furniture items please state the letter and the quantity, Example: A M6x95
For furniture items please state the number Example: 1 1960x160x20

Ⓐ NL OPGELET bij een klacht !!
Om een vlotte klachtenafwerking te waarborgen, bij beslag de letters, het codenummer, en het aai, bvb: A M6x95
bij meubeldelen het kengetal aangeven bvb: 1 1960x160x20

Ⓕ F ATTENTION en cas de réclamation !!
Pour assurer un traitement rapide des réclamations, veuillez indiquer, pour les ferrures, la lettre, le n, Exemple: A M6x95
Pour les parties de meubles indiquer le nombre Exemple: 1 1960x160x20

FUNKTIONSBETT TRIER

1


F ⊕ 21 st.



Positioning and securing of the bed side slats


10Min.

1

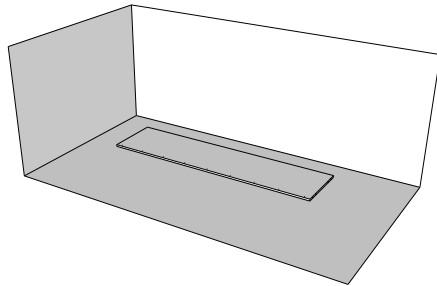


Put the back panel of the bed on ground facing backside and make sure that there is nothing below the panel

2

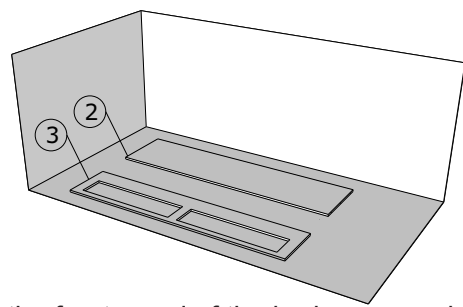


Put the front panel of the bed on ground facing frontside and make make sure that there is nothing below the panel

3

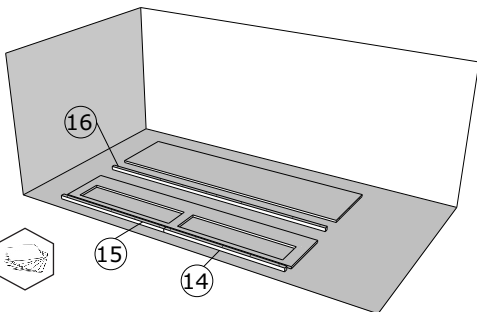

Make sure that front panel of the bed and back side panel of the bed are clean from dust,dirt and oil.

4

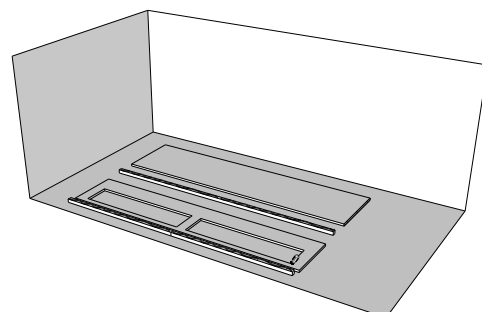


Make sure that all panels that you need to apply glue to are clean from dust,dirt and oil and then apply glue on them.



5




5 Min.

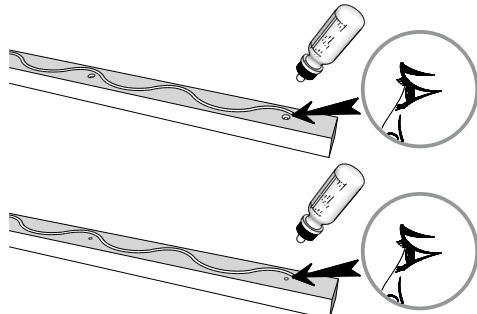

Make sure that you apply the glue from right side and wait 5min. for glue to cure.

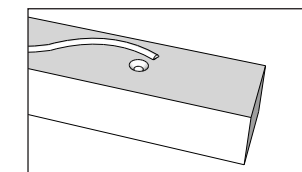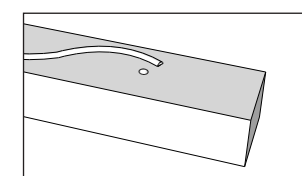


6

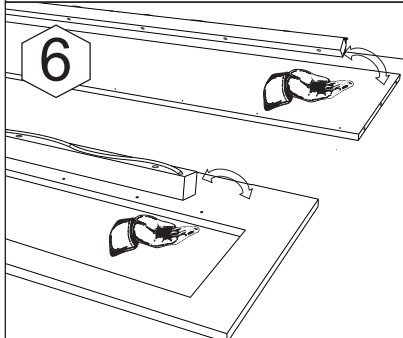

Gently turn over all panels that you apply glue on and place them on right position.

7

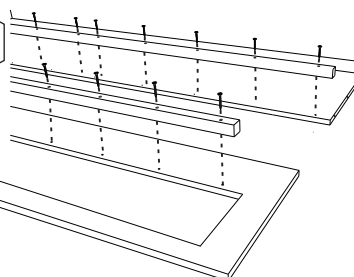

Gently apply pressure on the surface of the panels and secure them with screws.


IMPORTANT:

Full cure time of the glue is 12 hours!

FUNKTIONSBETT TRIER



2

D		6 st.
L		8 st.
K		2 st.
M		4 st.
O		2 st.
C		14 st.

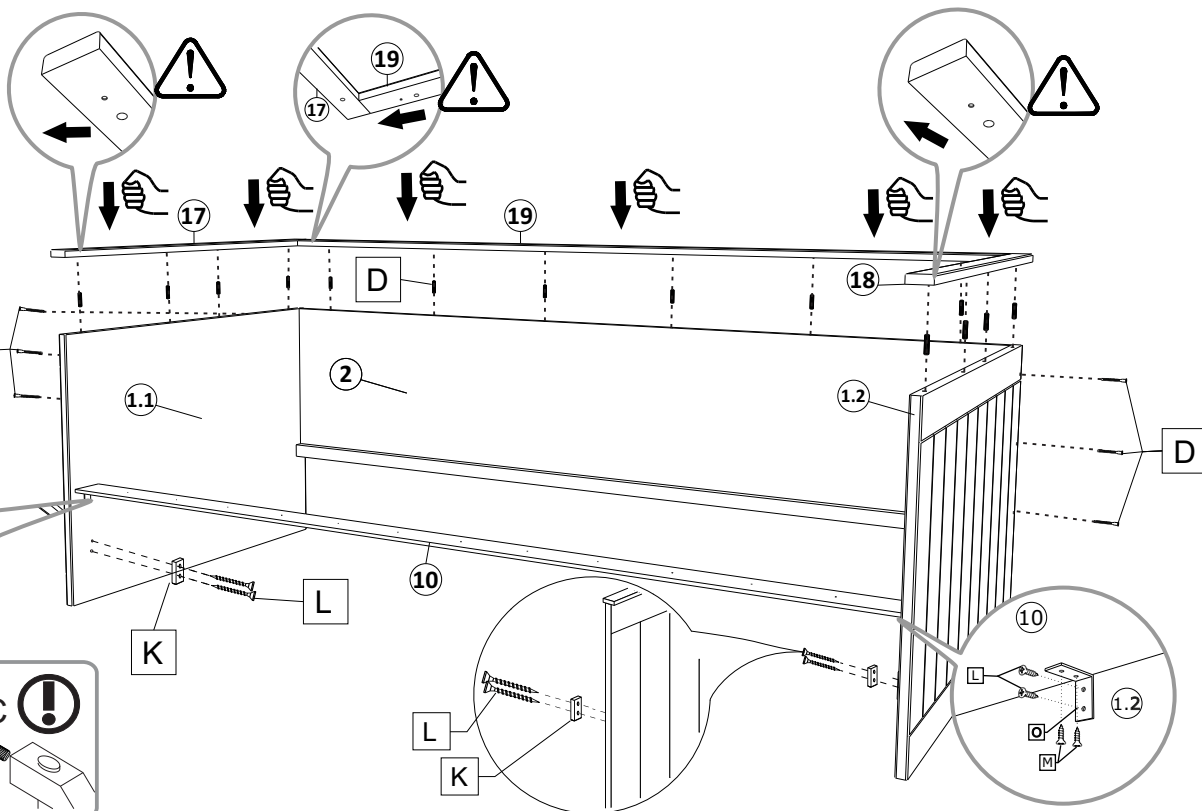

3

G		12 st.
F		12 st.

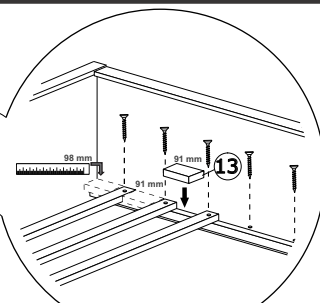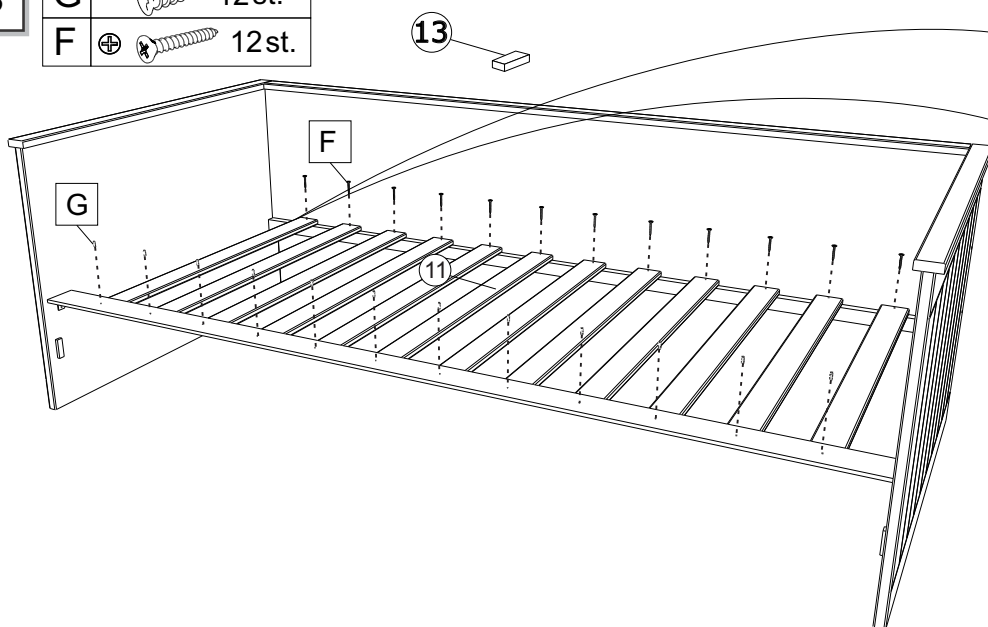

ACHTUNG

Setzen Sie Abstand zu bekommen

IMPORTANT

Put to get distance

AANDACHT


Zet om afstand te krijgen

ATTENTION

Mettez pour obtenir la distance

4


H		8 st.
E _{CL}		CL 2 st.
E _{CR}		CR 2 st.
B		7 st.

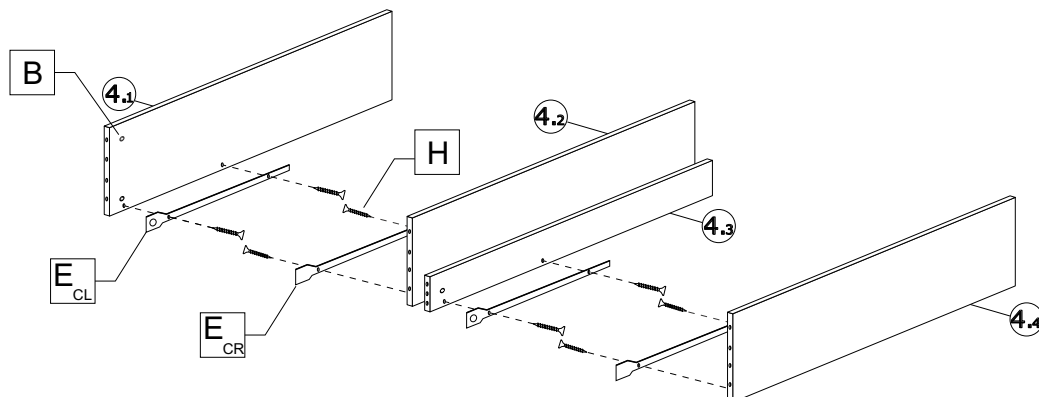

FUNKTIONSBETT TRIER


5

H		12 st.
J		6 st.

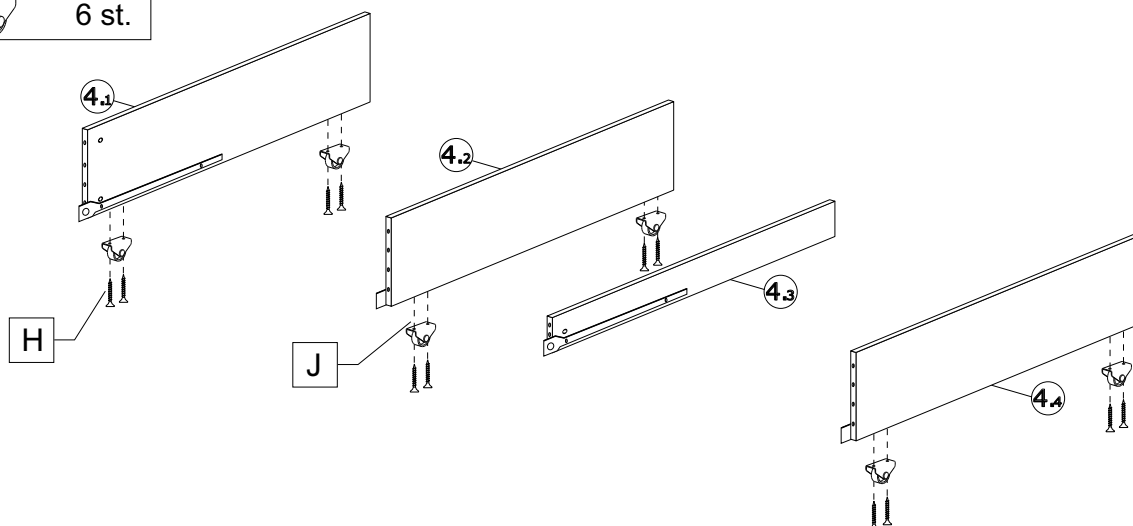


6

A		7 st.
C		8 st.

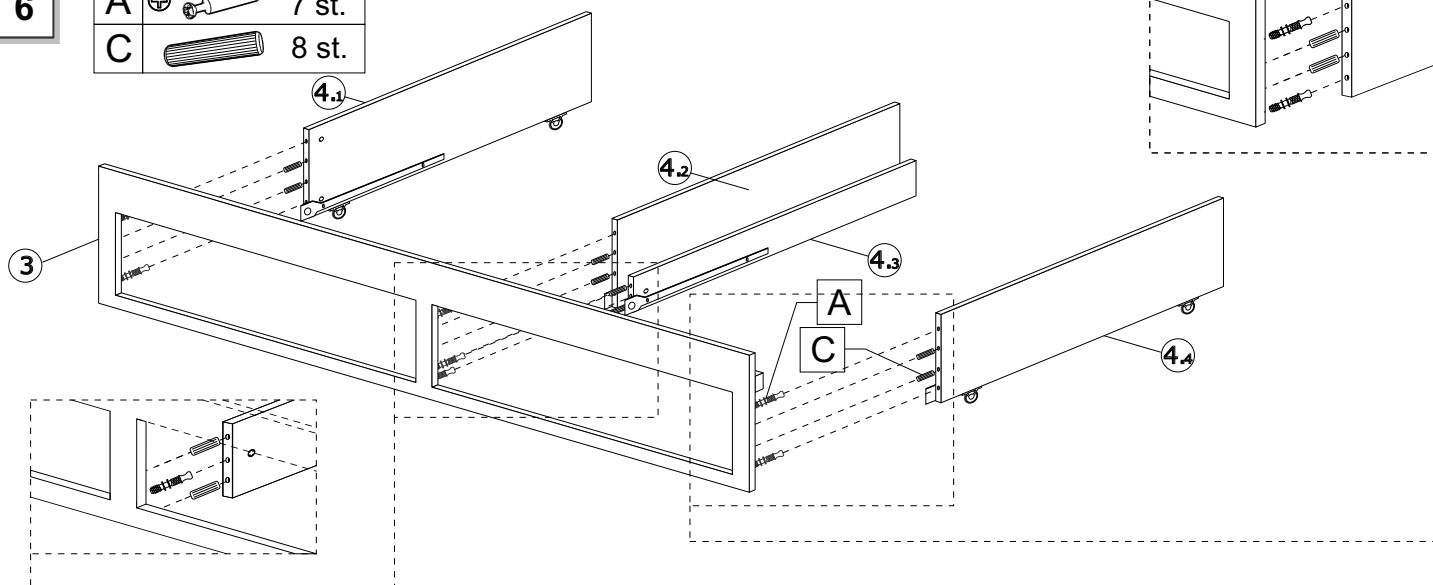

7


D		7 st.
---	---	-------

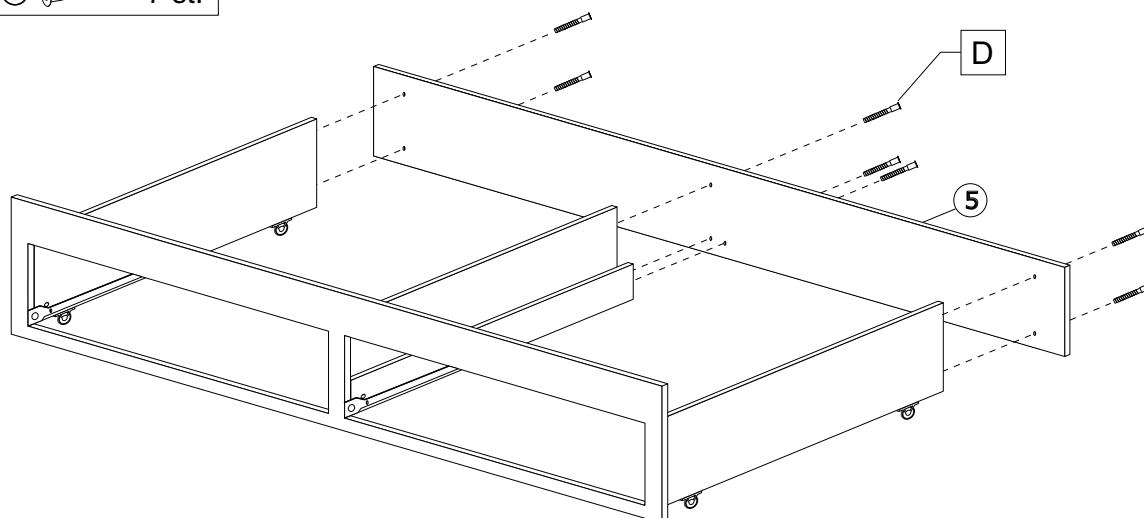

FUNKTIONSBETT TRIER

8

F  26 st.

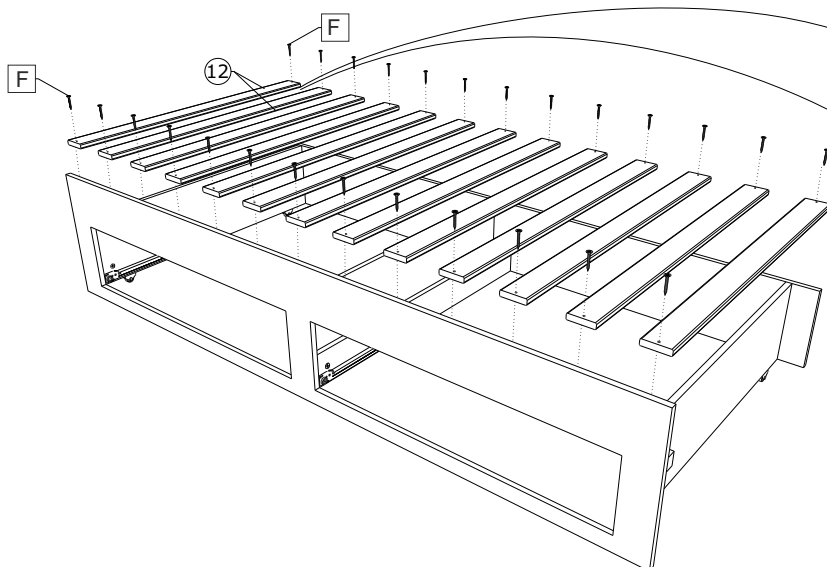

ACHTUNG

14 einsetzen um den Abstand zu erhalten

IMPORTANT

Put to get distance

AANDACHT



Zet om afstand te krijgen

ATTENTION

Mettez pour obtenir la distance



9

C  8 st.
D  4 st.

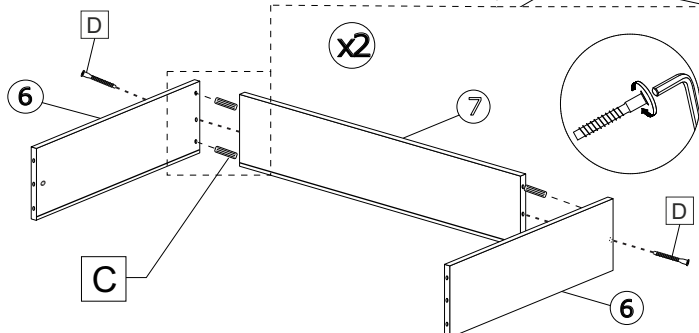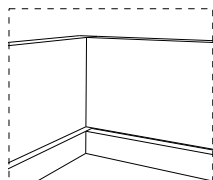



9

A  4 st.
B  4 st.
C  8 st.

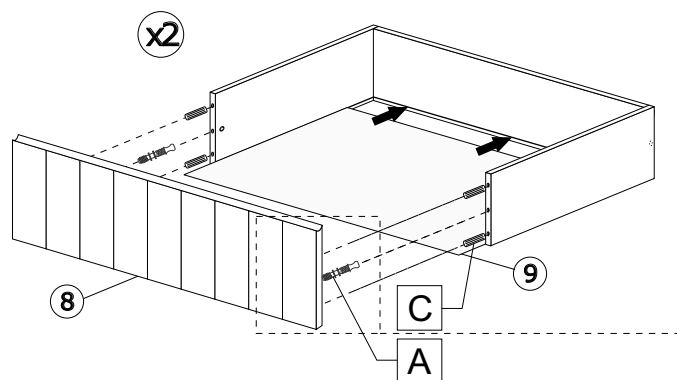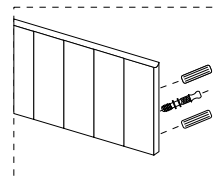


10

H  8 st.
E_{DL}  DL 2 st.
E_{DR}  DR 2 st.

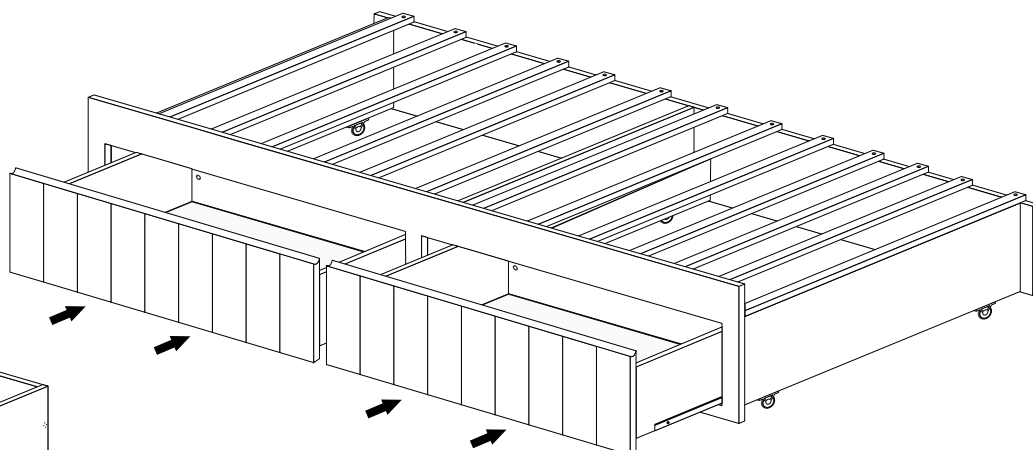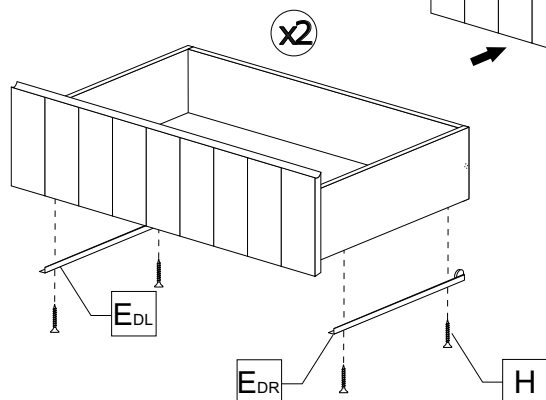

FUNKTIONSBETT TRIER

11

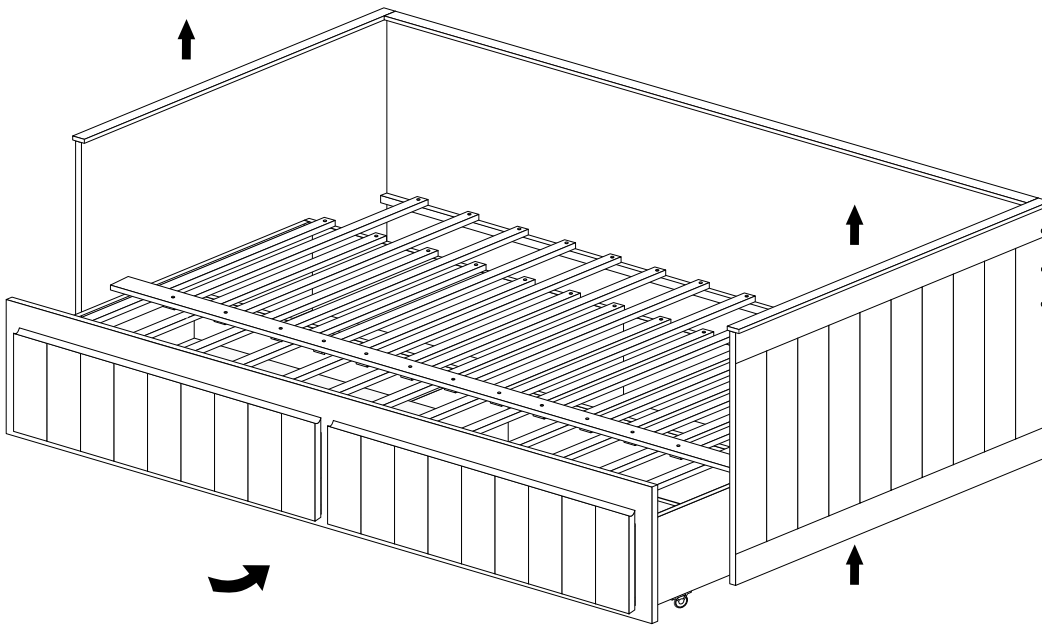

ACHTUNG
Heben Sie zum Einfügen

IMPORTANT
Lift to insert

AANDACHT
Lift in te voegen

ATTENTION
Ascenseur pour insérer

12

