










Montageanleitung: Anstellcontainer 1630

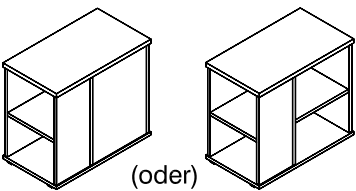

(" links ") oder: " rechts"

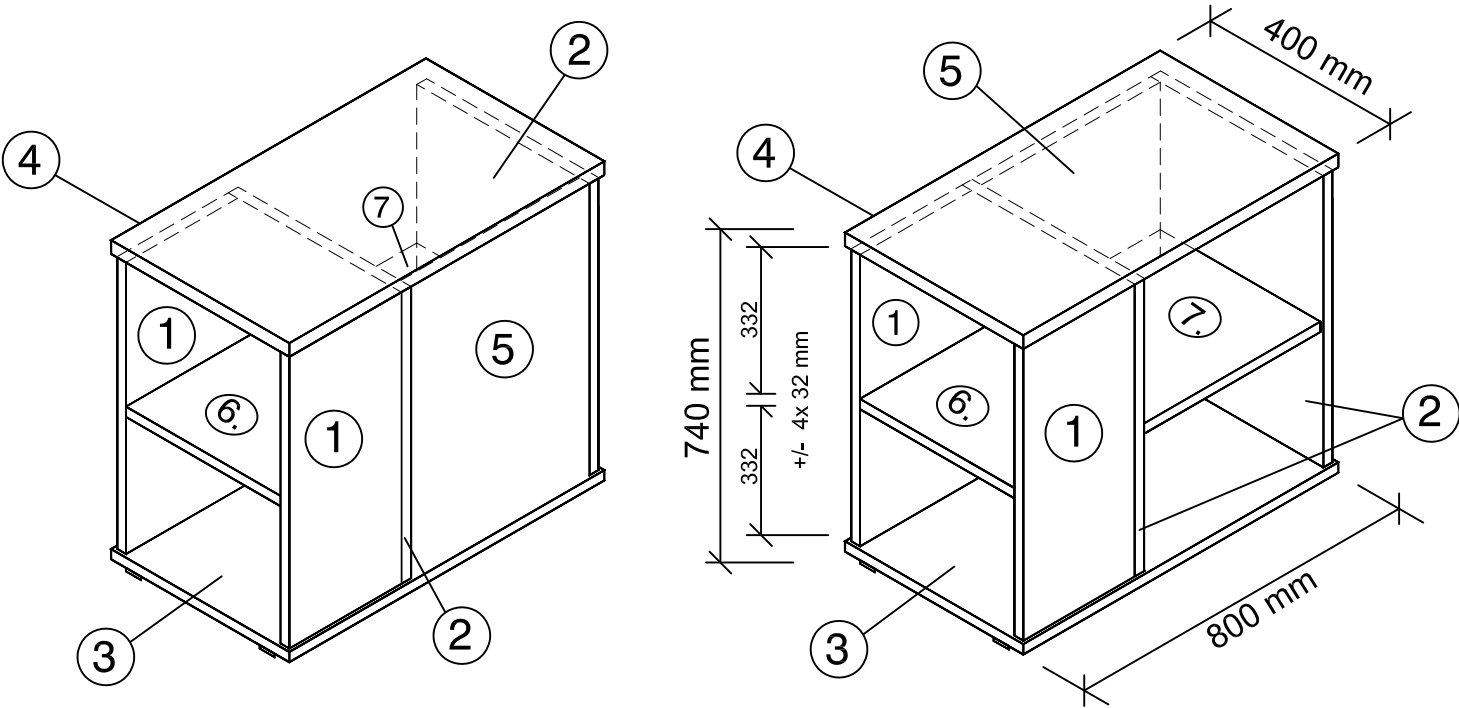

Holzteile (Panel)

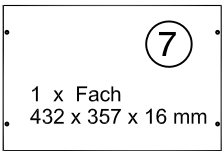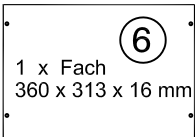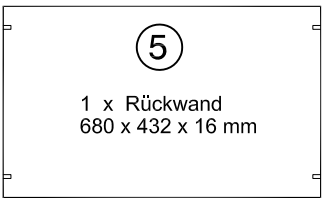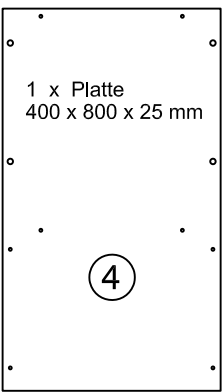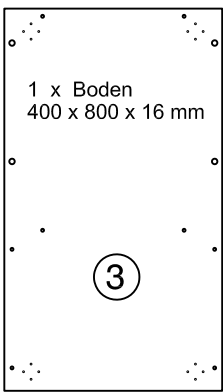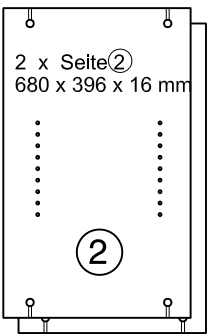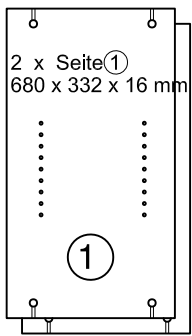

Beschlagbeutel (fittings)

4 x(A)	16 x(B)	16x(C)	4 x(D)	16 x(E)	8 x(F)	2 x(G)
500 302	500 234	500 270	500 578	500 359	508 667	500 516

