
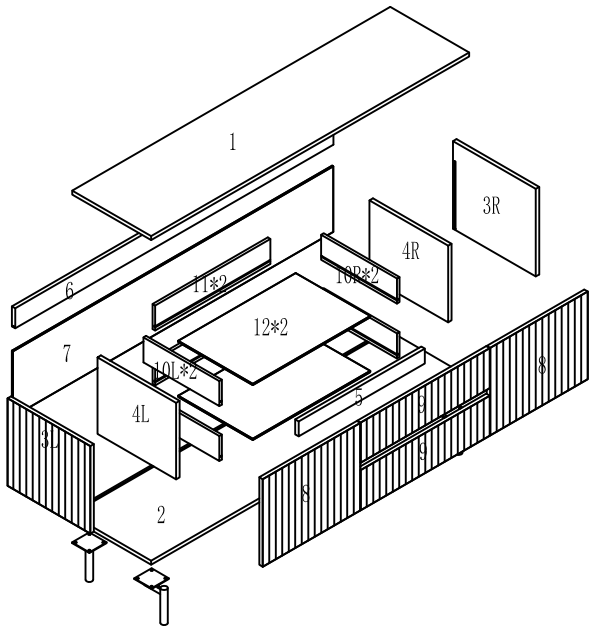



E6GT01

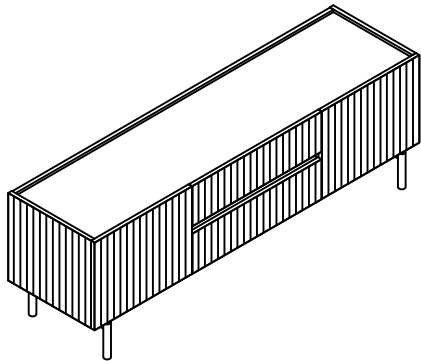


NO.	SIZE	QTY
1	1468*364*16	1
2	1468*381*16	1
3	350*382*16	2
4	306*363*16	2
5	582*60*16	1
6	1468*80*16	1
7	1478*262*5	1
8	350*450*16	2
9	160*596*16	1
10	350*100*12	4
11	533*99*12	2
12	543*344*5	2

A M6*40 20pcs	B $\phi 15*11.5$ 20pcs	C $\phi 8*30$ 20pcs
D $\phi 12*10mm$ 8set	E M4*14 24pcs	F M4*30 8pcs
J M7*50mm 4pcs	M / 4pcs	I M6*12 20pcs
L H150 2pcs	T $\phi 20*H150$ 3pcs	K 12" 2set
N / 8pcs	Z $\phi 20$ 20pcs	


STEP 1:

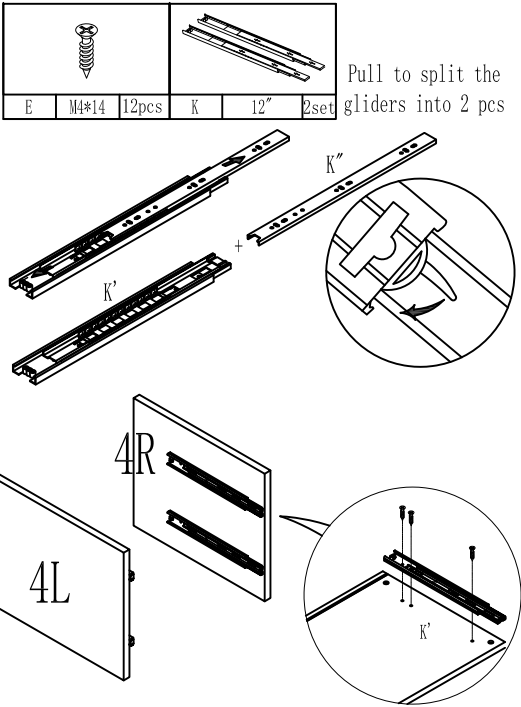

STEP 2:

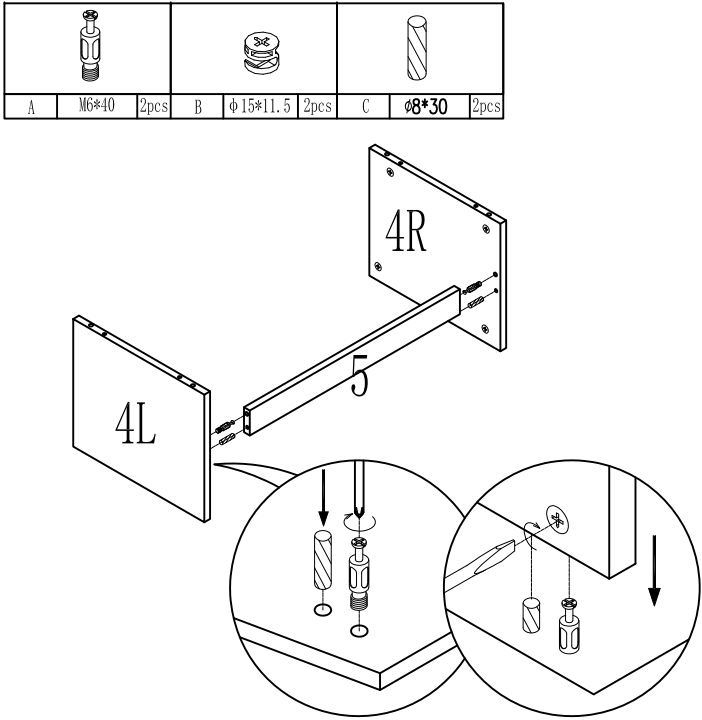


STEP 3:

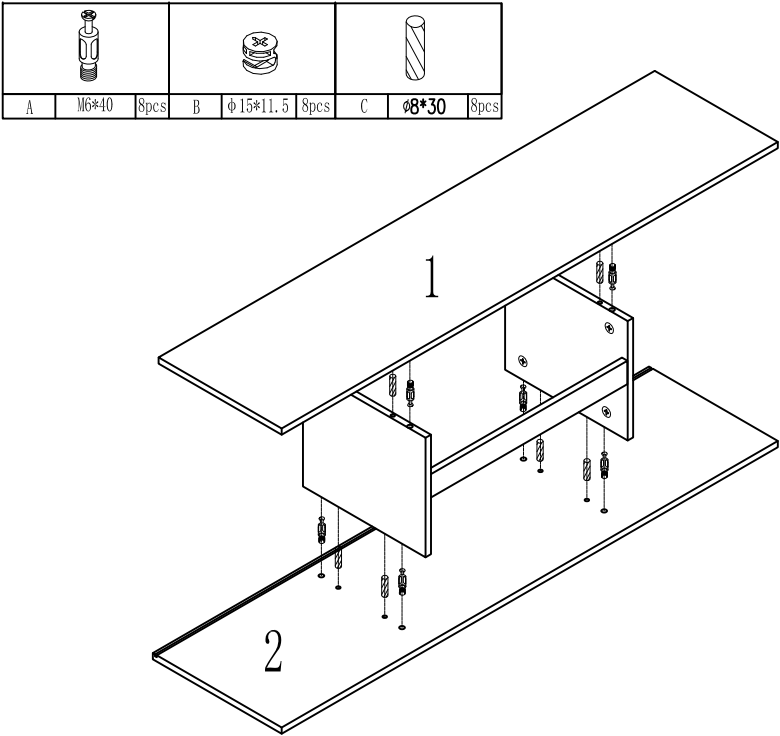


STEP 4:

								
A	M6*40	10pcs	B	φ15*11.5	10pcs	C	φ8*30	10pcs

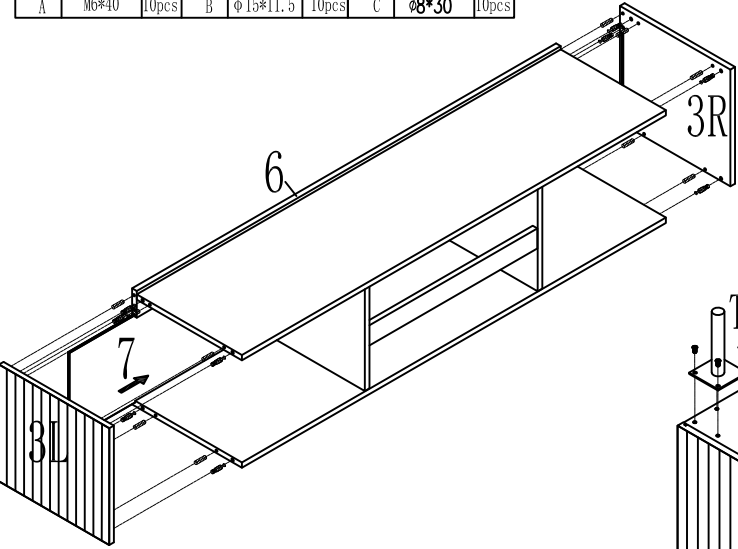


STEP 5:

					
L	H150	2pcs	T	φ20*H150	3pcs
					
I	M6*12	20pcs			

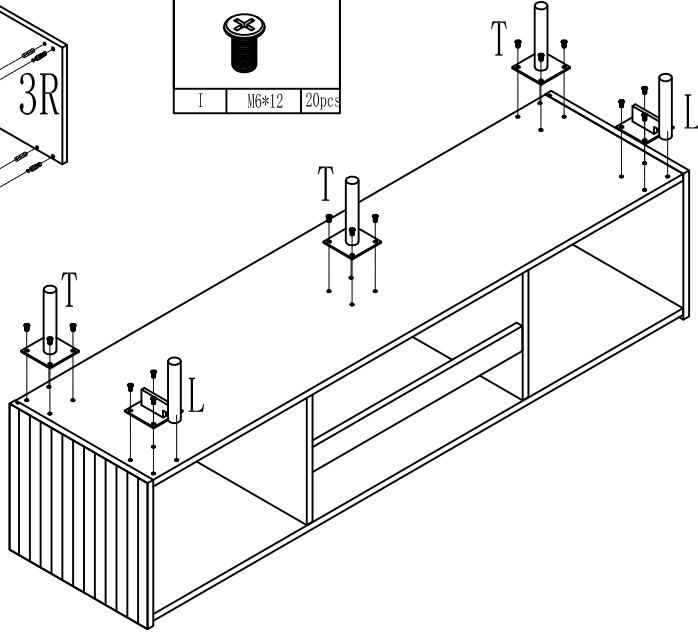


STEP 6:

					
J	M7*50mm	4pcs	N	/	8pcs

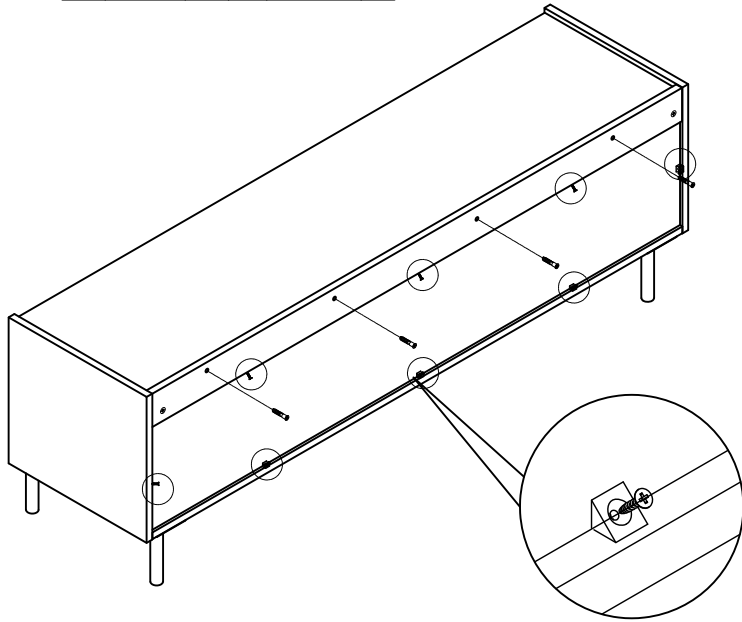


STEP 7:

		
M	/	4pcs

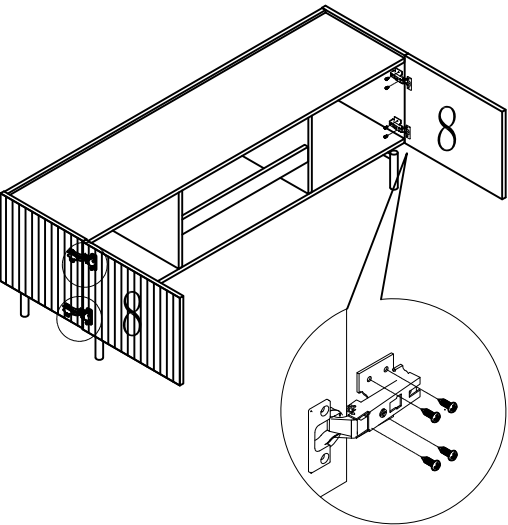


STEP 8:

								
D	φ12*10mm	8set	E	M4*14	12pcs	F	M4*30	8pcs

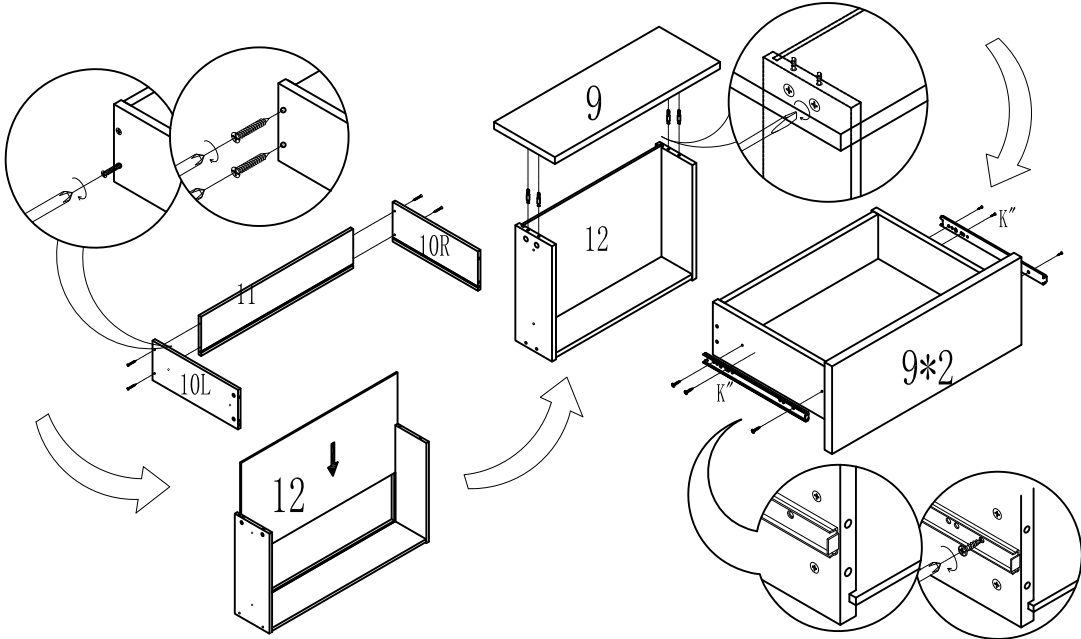


STEP 9:

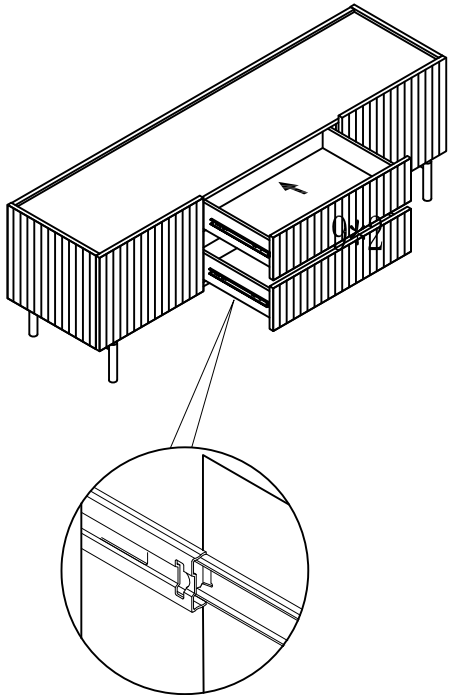

STEP 10:

		
Z	Ø20	20pcs

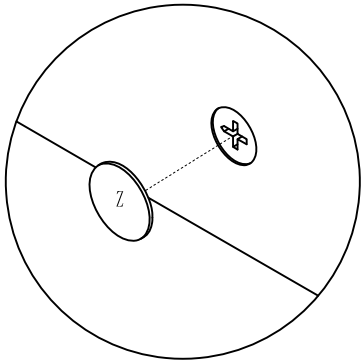

Add the screw covers for those visible cams

