







Assembly Instruction

KOMMODE MALIN

Article number: 05540001/03

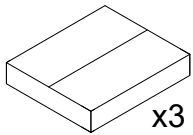


x3

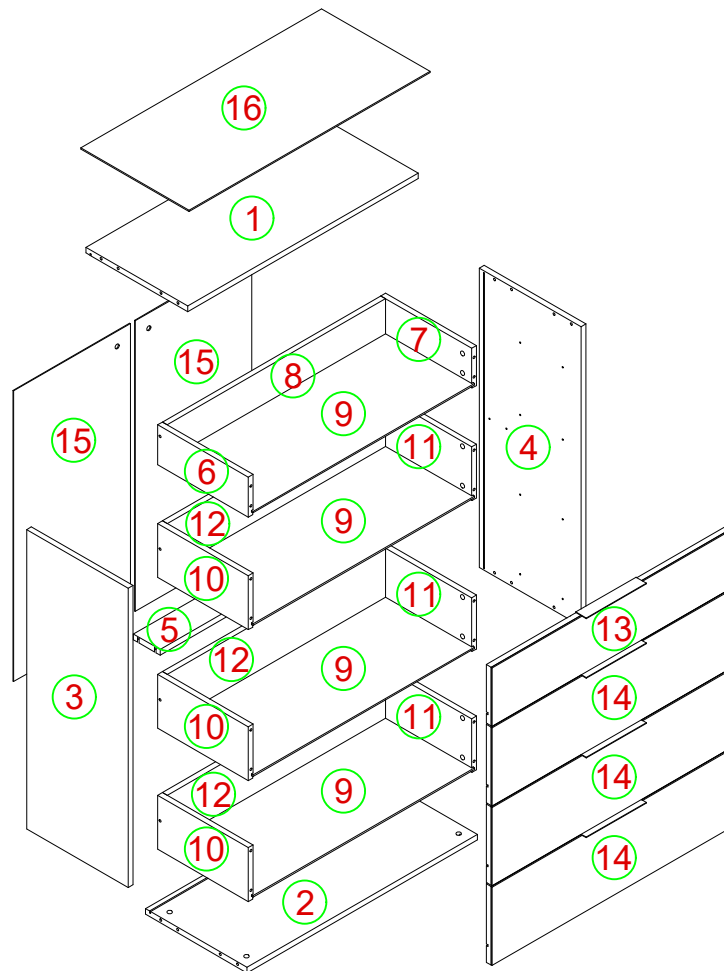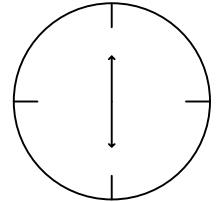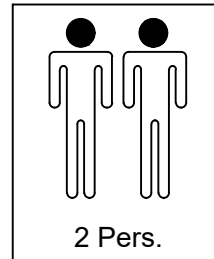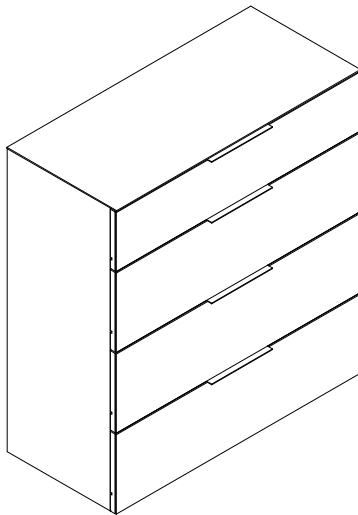


249 X 6 PCS 	565 X 1 PCS 	180964 X 1 PCS 	286 X 1 PCS 	95200 X 1 PCS 	147 X 24 PCS 	145662 X 16 PCS 
100 X 24 PCS 	101 X 24 PCS 	81062 X 4 PCS 	103 X 4 PCS 	361 X 8 PCS 	175 X 16 PCS 	22018 X 32 PCS 
150217 X 4 SET 	150218 X 4 SET 	157124 X 16 PCS 	298177 X 4 PCS 	298188 X 5 PCS 	4997 X 16 PCS 	172 X 8 PCS 


1

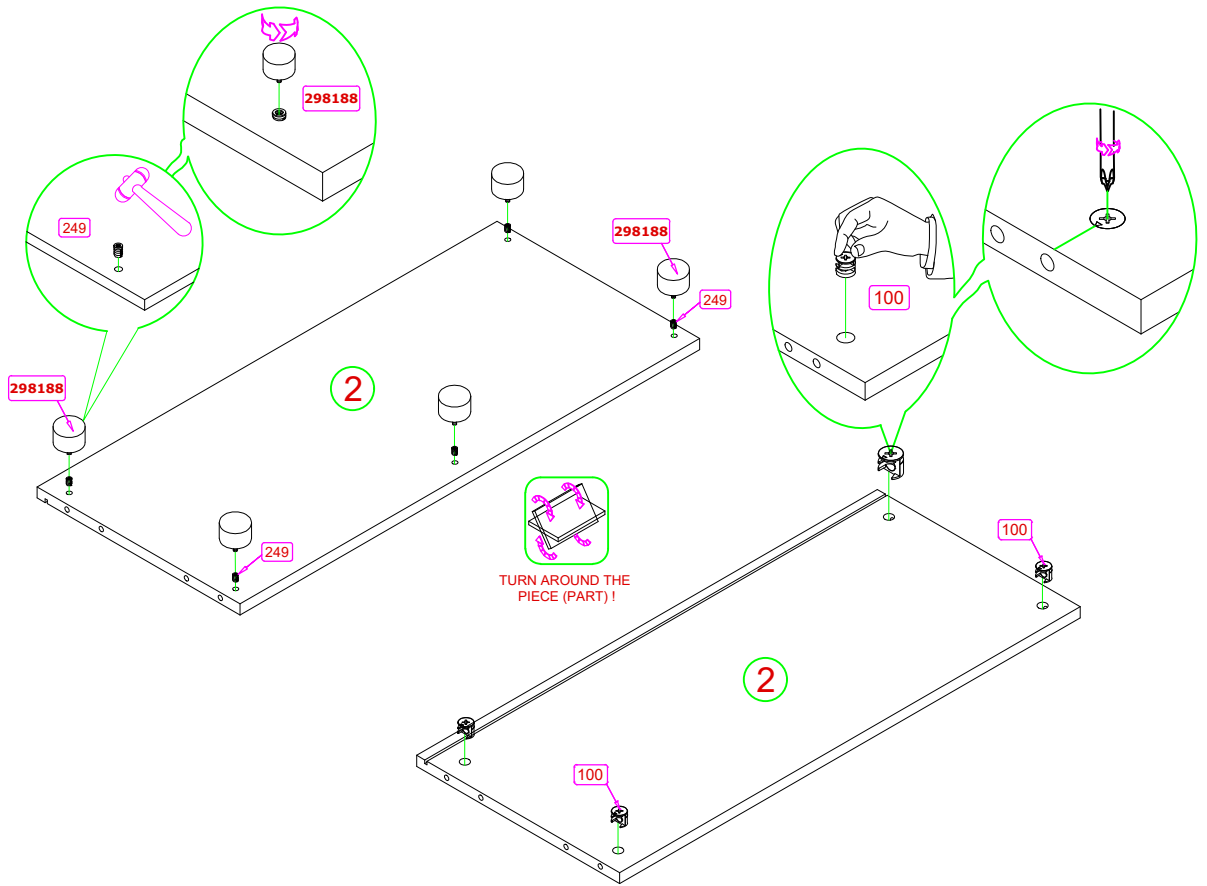


2

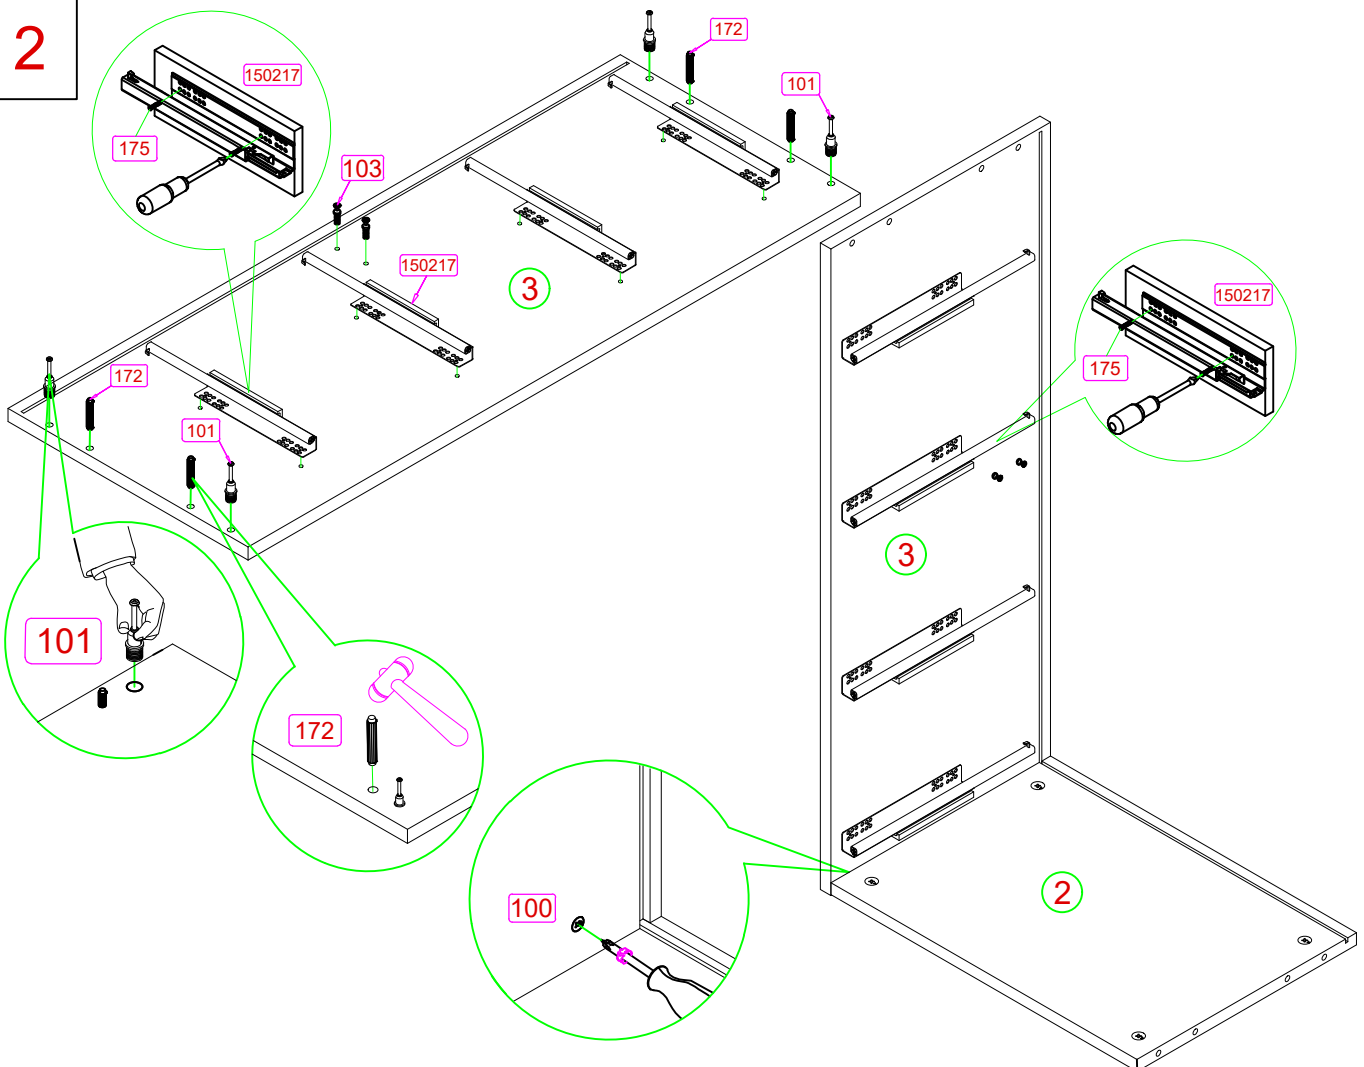


3

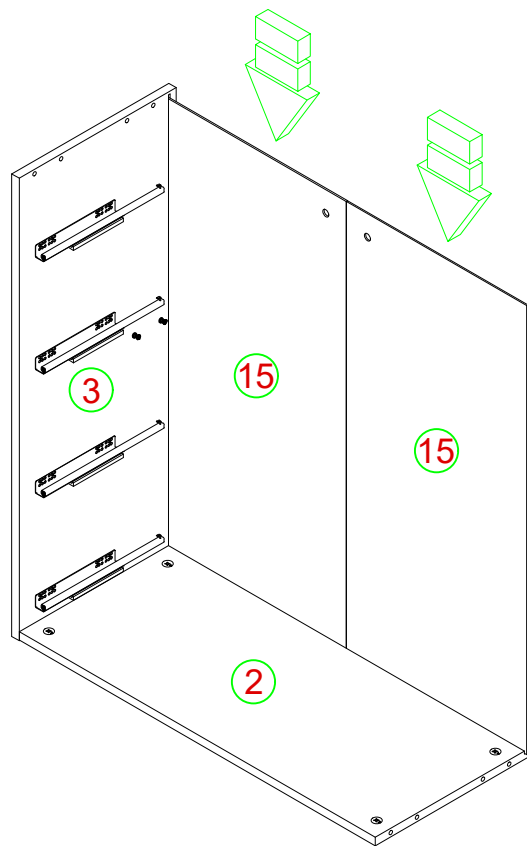


4

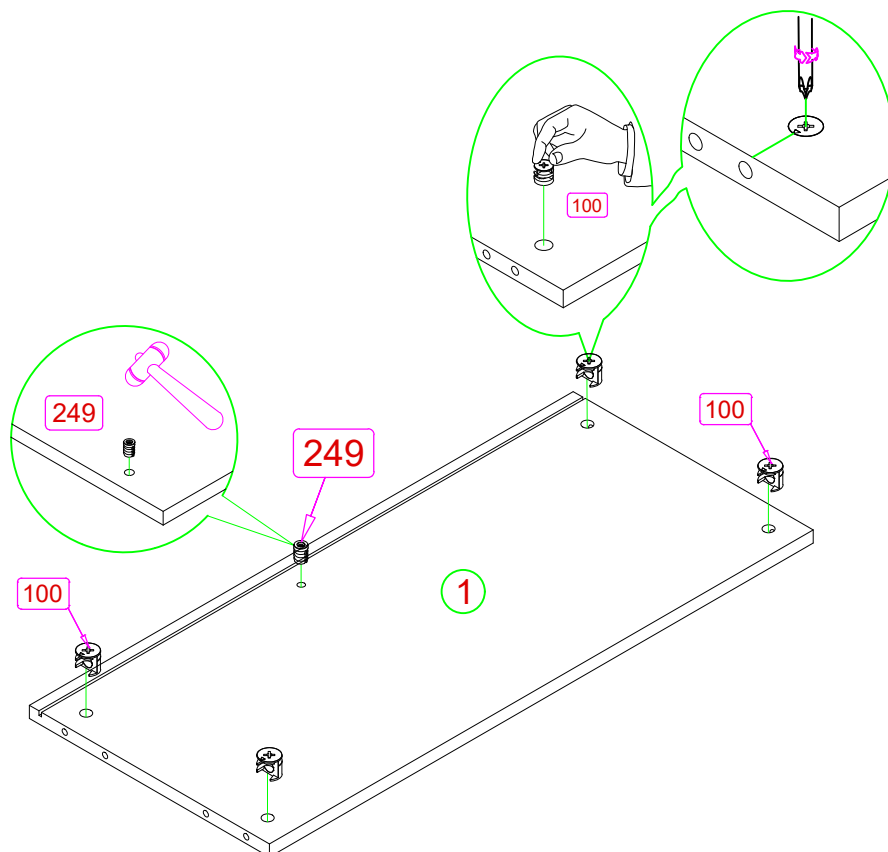


5

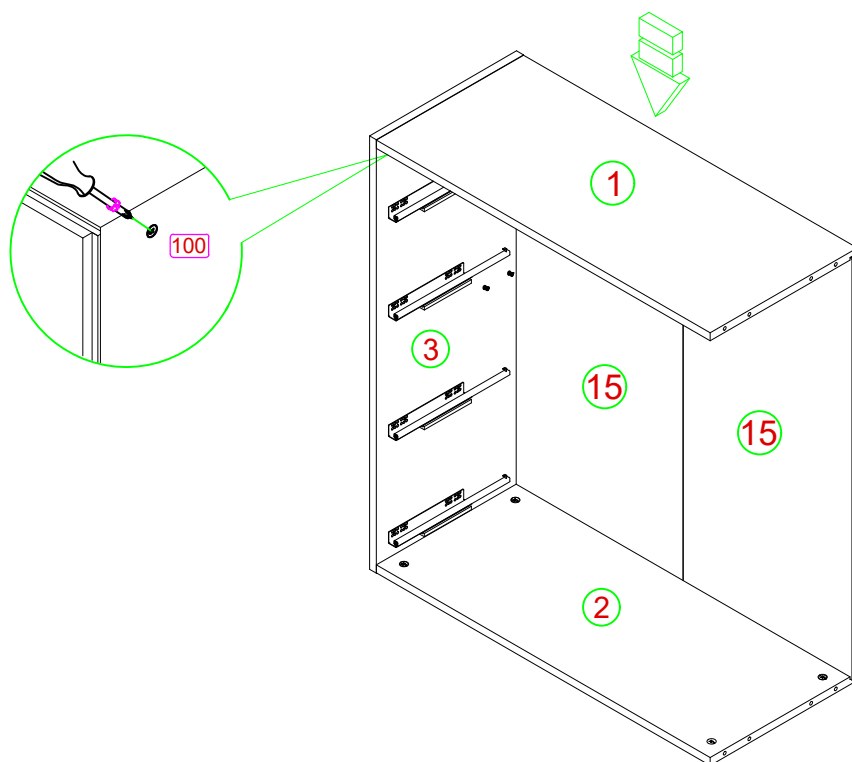


6

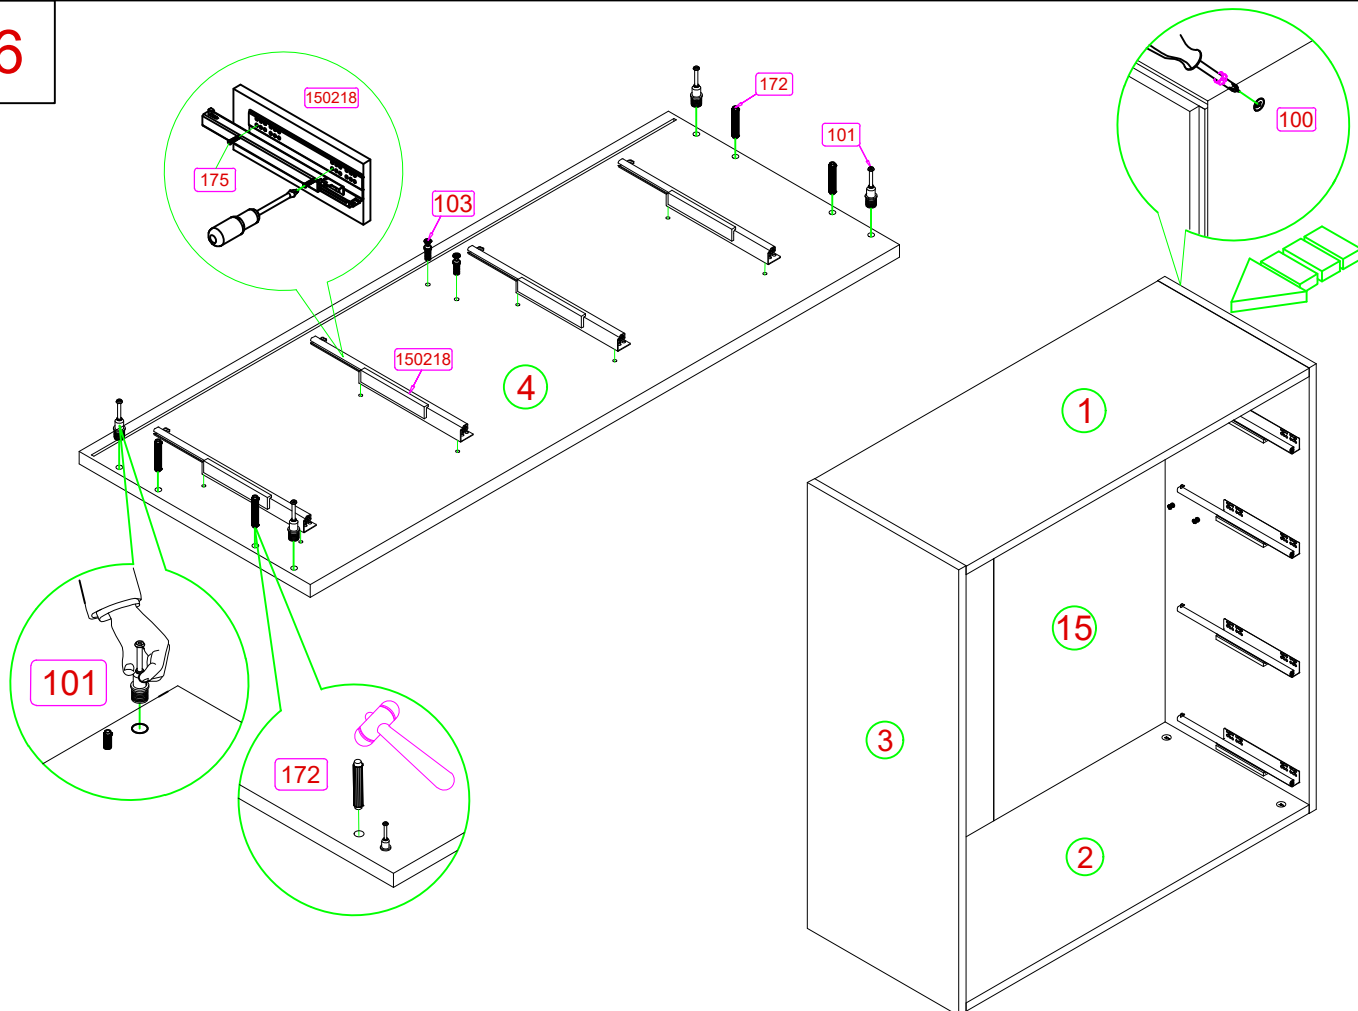


7

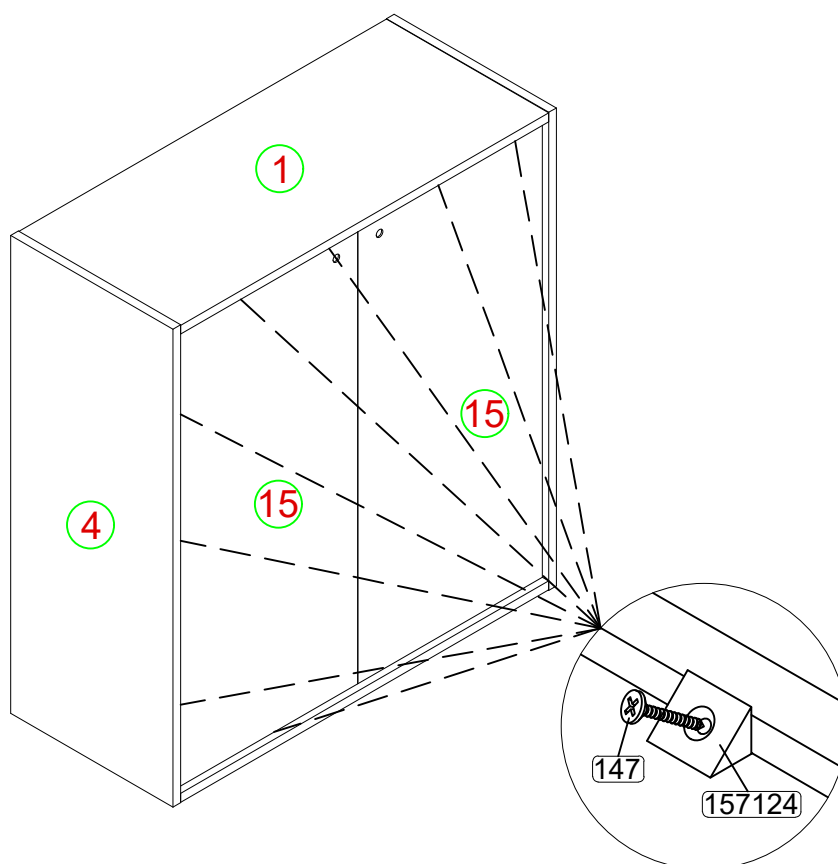

8

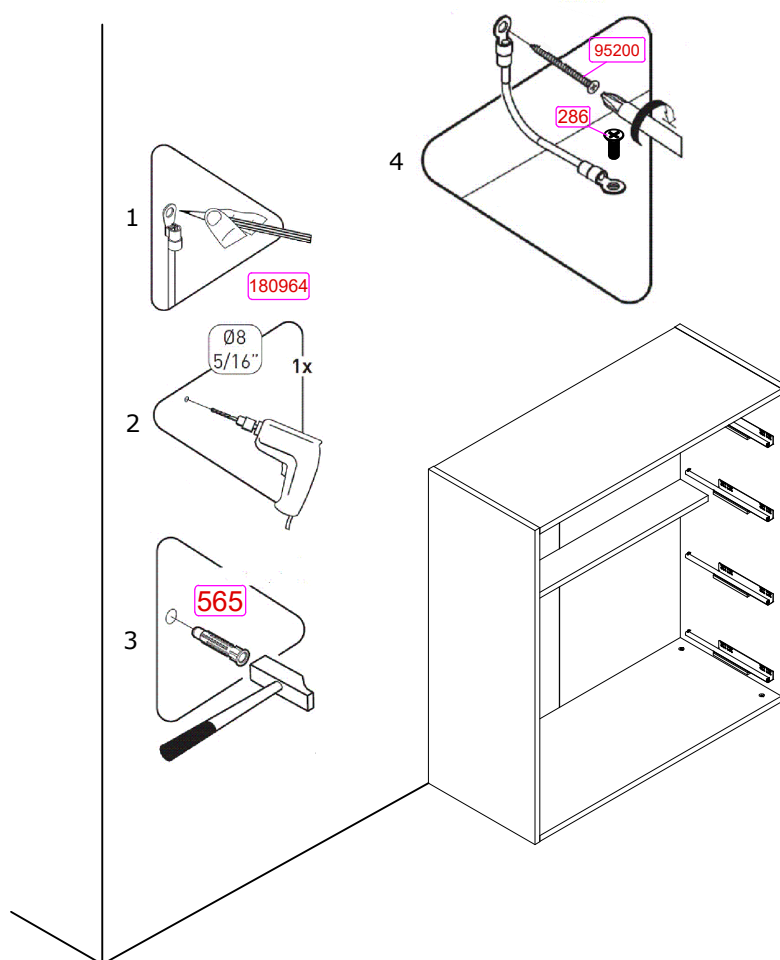

9

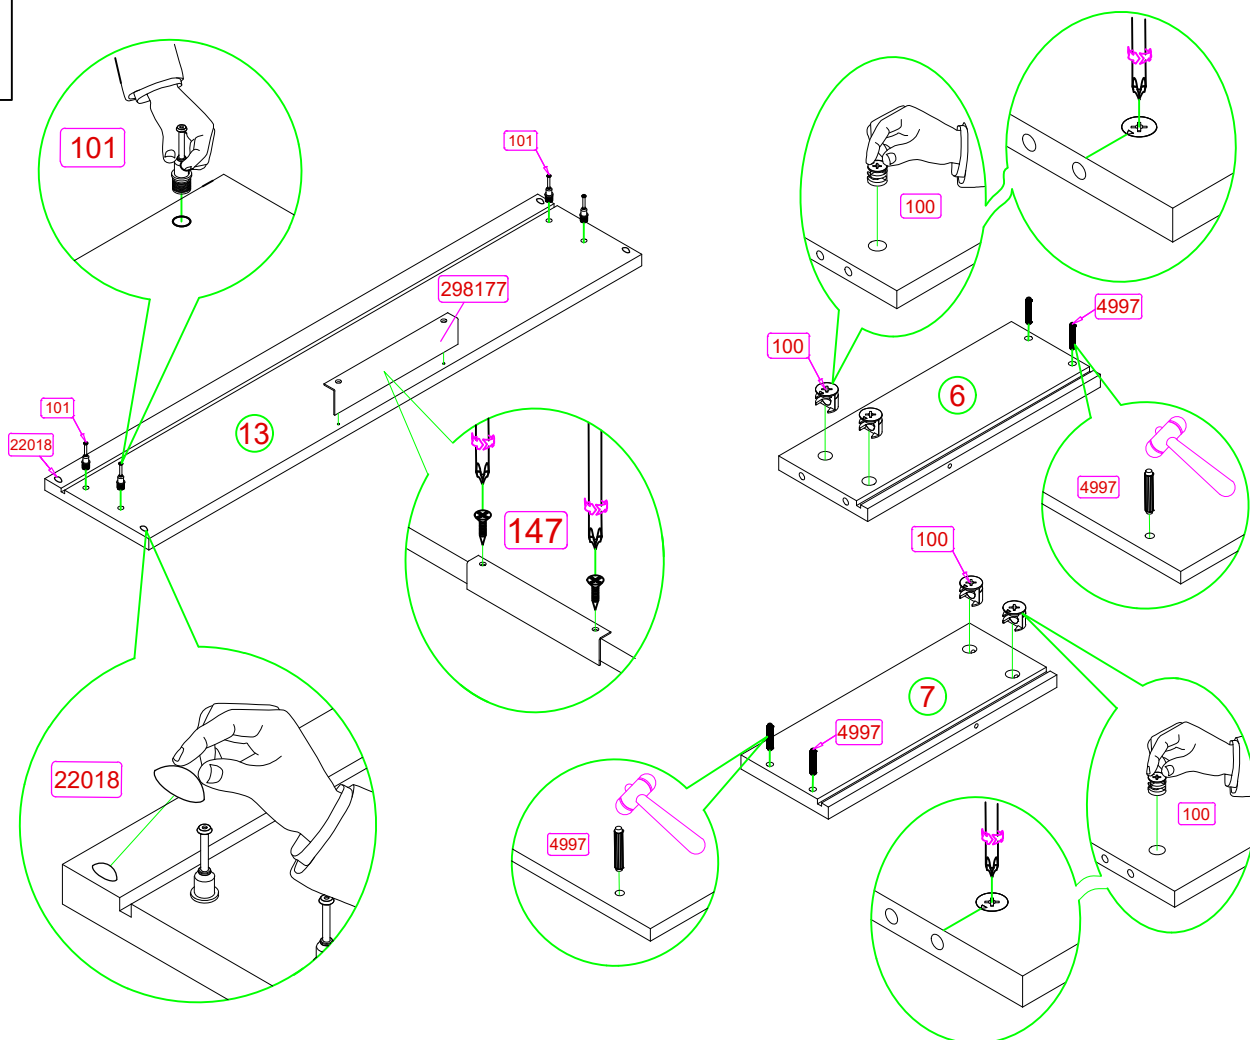

10


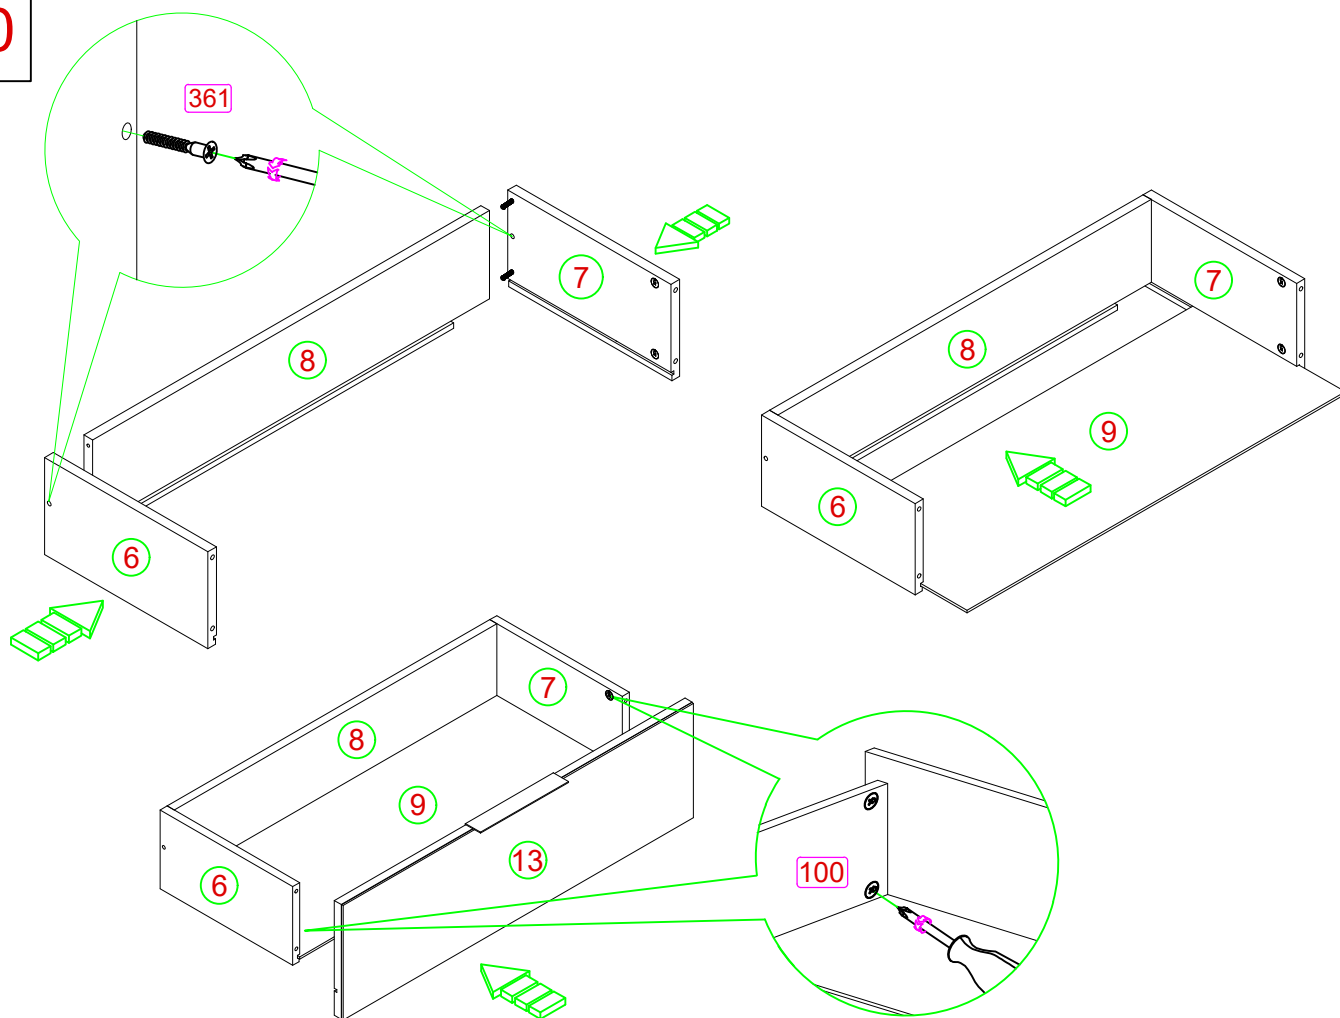


Diagram 2 shows the assembly of the front panel (10) and side panel (11) to the main frame (9, 12, 14). The front panel (10) is attached to the side panel (11) using a screw (361). The side panel (11) is then attached to the main frame (9, 12, 14) using a screw (100). A green arrow indicates the direction of assembly.

13



14

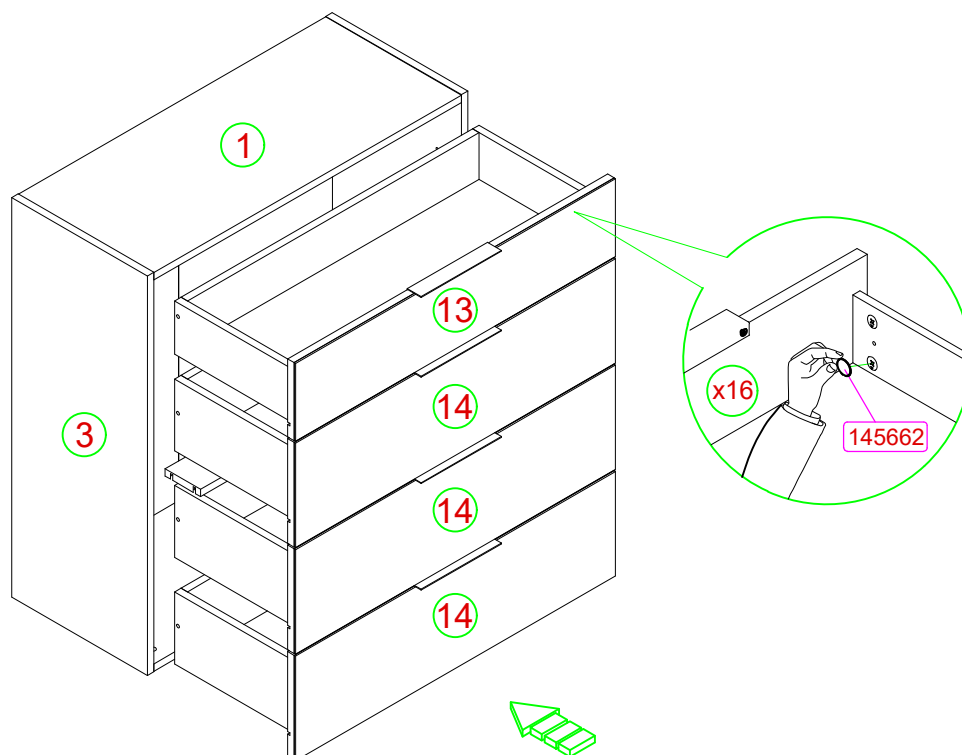