


Malmo/Theodor


Srebrna noga

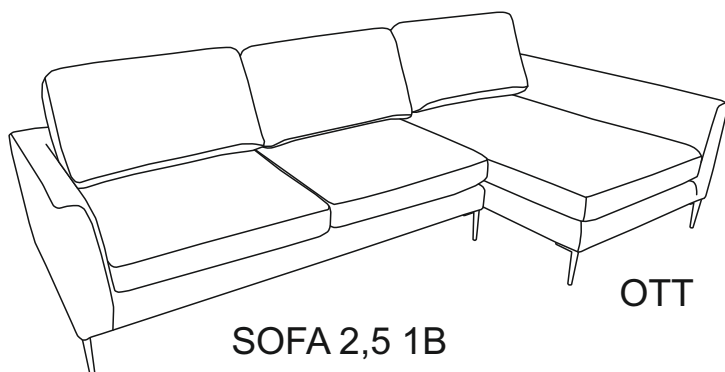

SOFA 2,5 1B

OTT


Lb5



8x

H170

SR 6x40

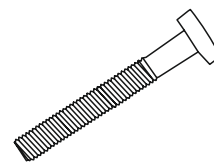


8x

WK 5x25



8x

BL 4



1x

OTT

Lb5

Lb5

Use screwdriver to remove plastic covers before you screw legs


Lb5

Lb5



WK 5x25

WK 5x25

SR M6x40

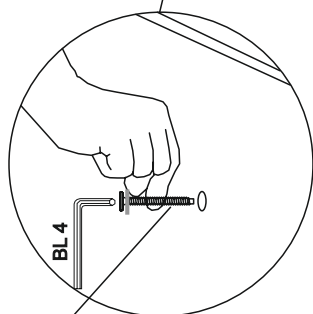



SR M6x40

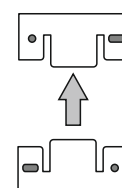

connection pins

łączniki

SOFA 2,5 1B

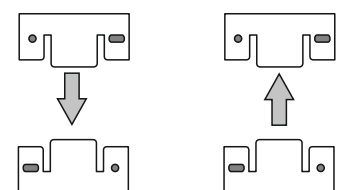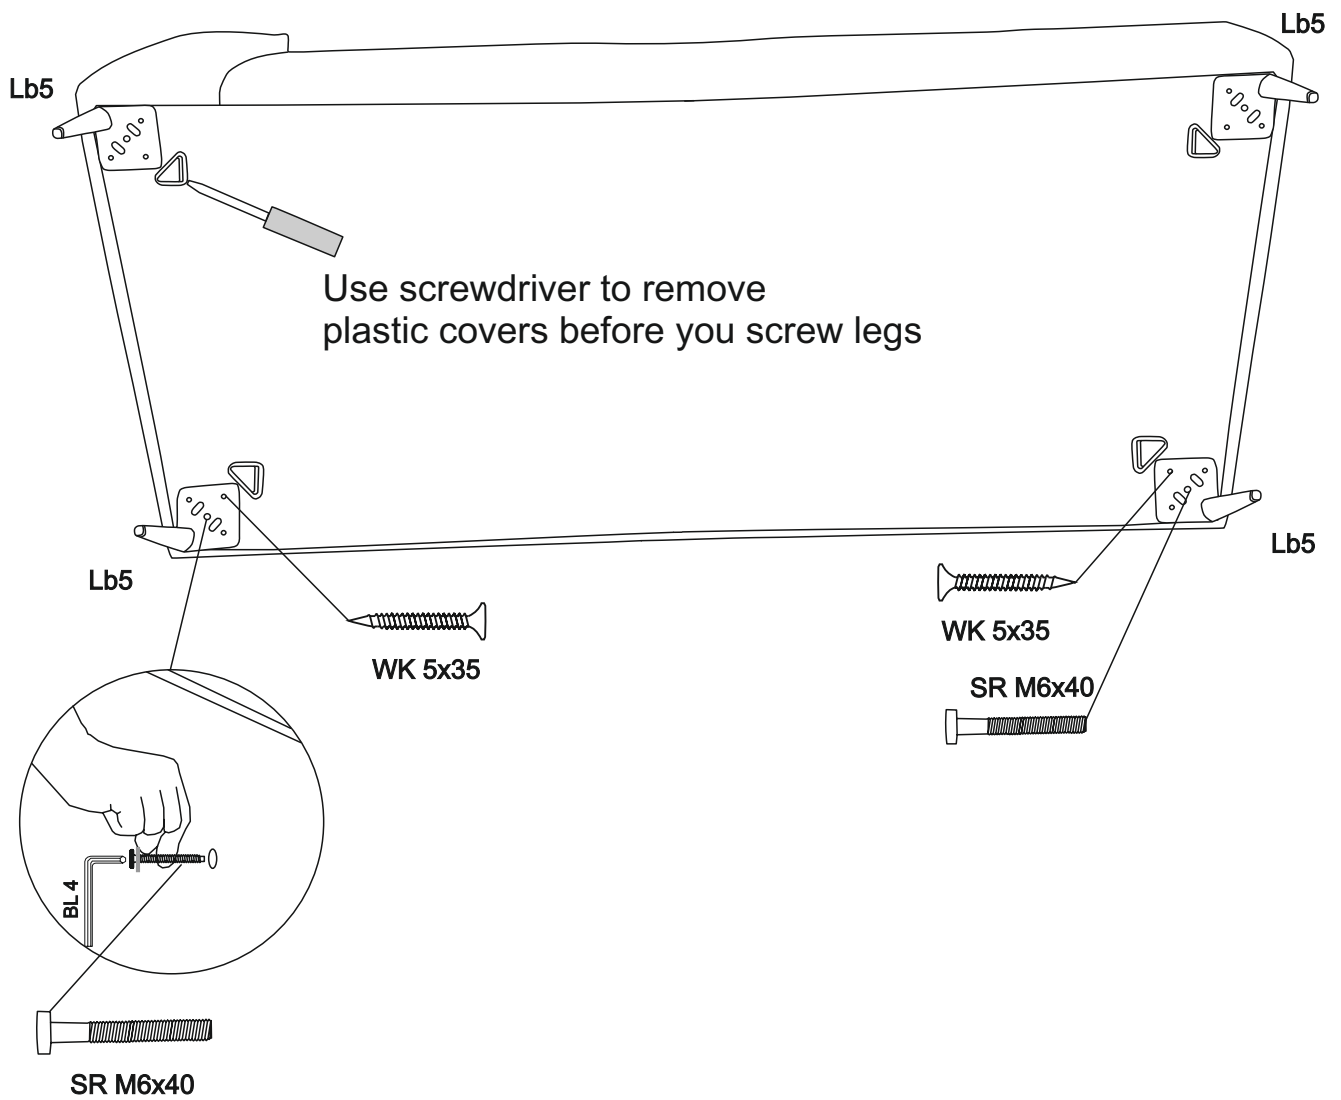

connection pins
łączniki