




Verona

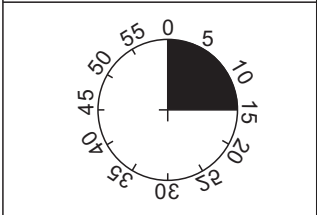


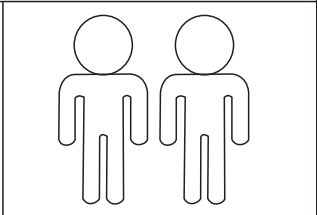

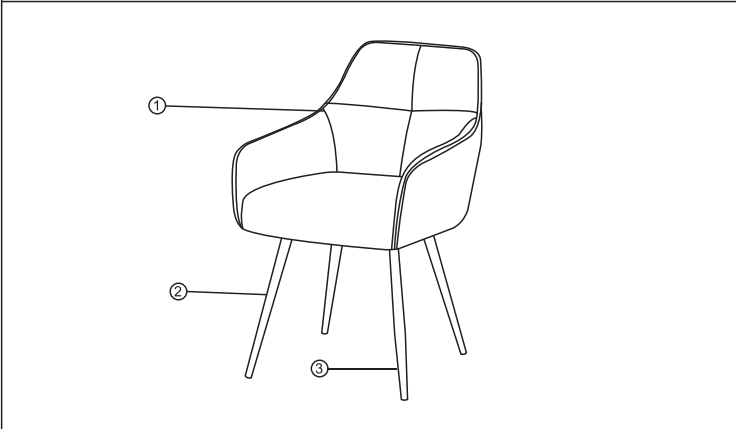


1

2

3


1	1x
2	1x
3	1x




A	M6X45	B	M6X13	C	ø18xø6x1.5	D	5MM	E	T3.0x80x80
									
4x		4x		4x		1x		1x	





I.

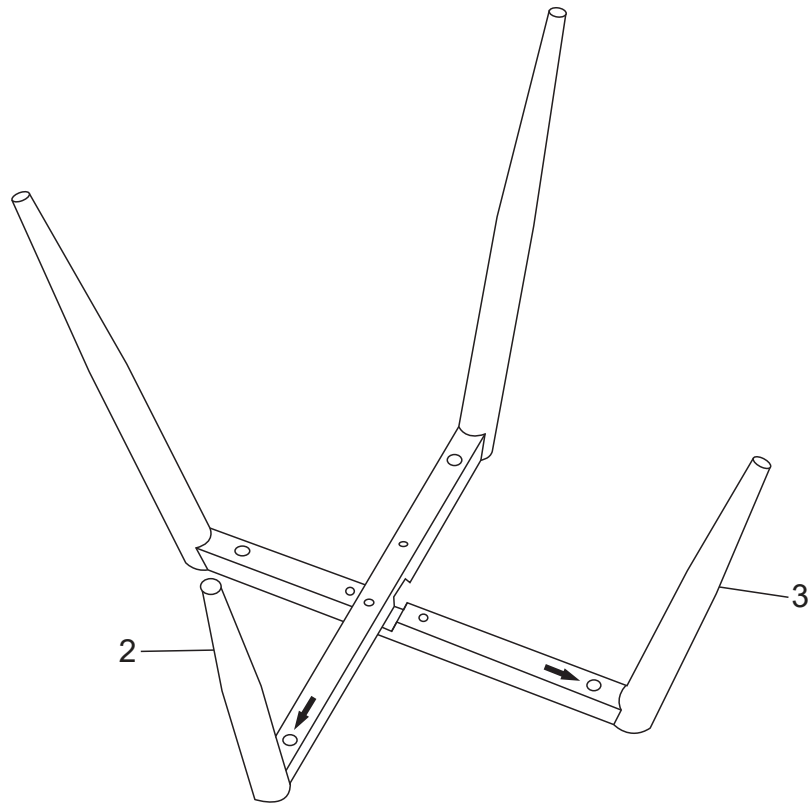1

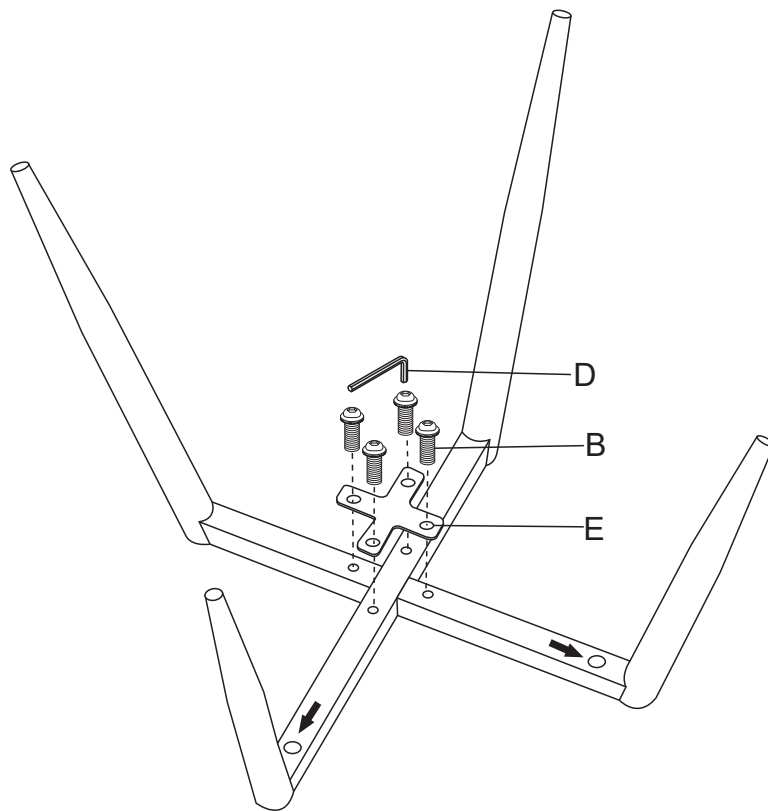


2







B	M6X13
	4x
D	5mm
	1x
E	T3.0x80x80
	1x
	75%


II.

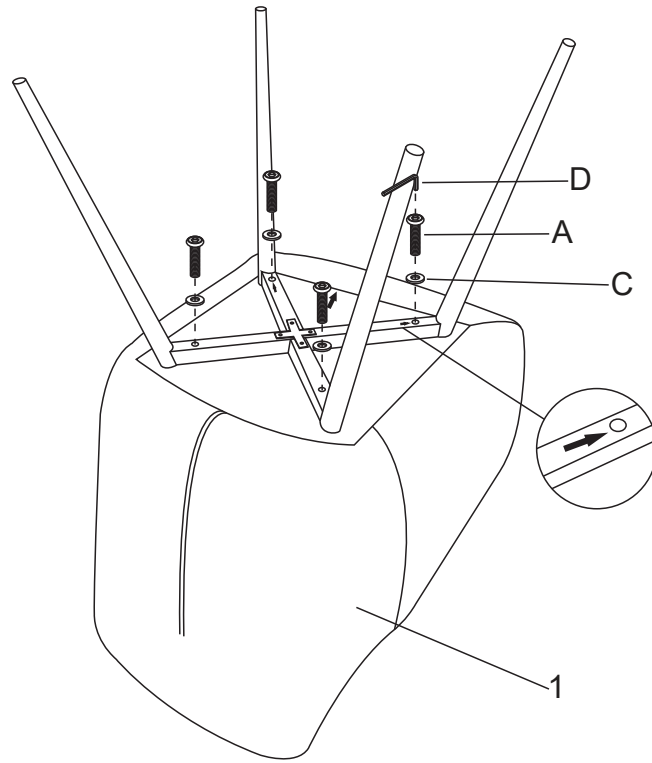

3



A	M6X45
	
	4x
C	∅18X∅6X1.5
	
	4x
D	5mm
	
	1x
	

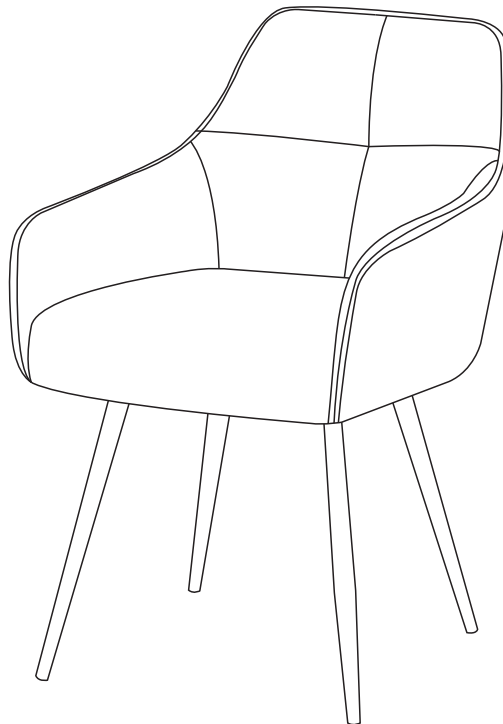4



D	5mm
	
	1x
	



LE TRI
+ FACILE



BAC
DE
TRI

Séparez les éléments avant de trier