



Concept Epure MK-139

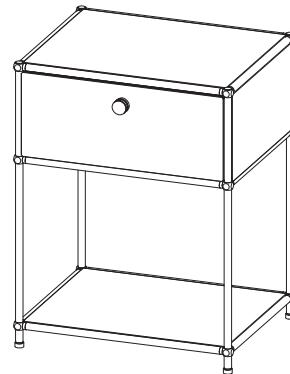


PART	PICTURE	QTY
①		3
②		1
③		1

PART	PICTURE	QTY	PART	PICTURE	QTY	PART	PICTURE	QTY
④		1	(B)		4	(I)		1
⑤		1	(C)	M6*27	8	(J)		1
⑥		1	(D)	M6*15	4	(K)		1
⑦		4	(E)	M4*8	2	(L)		2
⑧		4	(F)		1	(M)		4
⑨		4	(G)	M5*8	4	(N)	Ø4*30	4
(A)		4	(H)	(M3)	1	(O)		2


STEP:

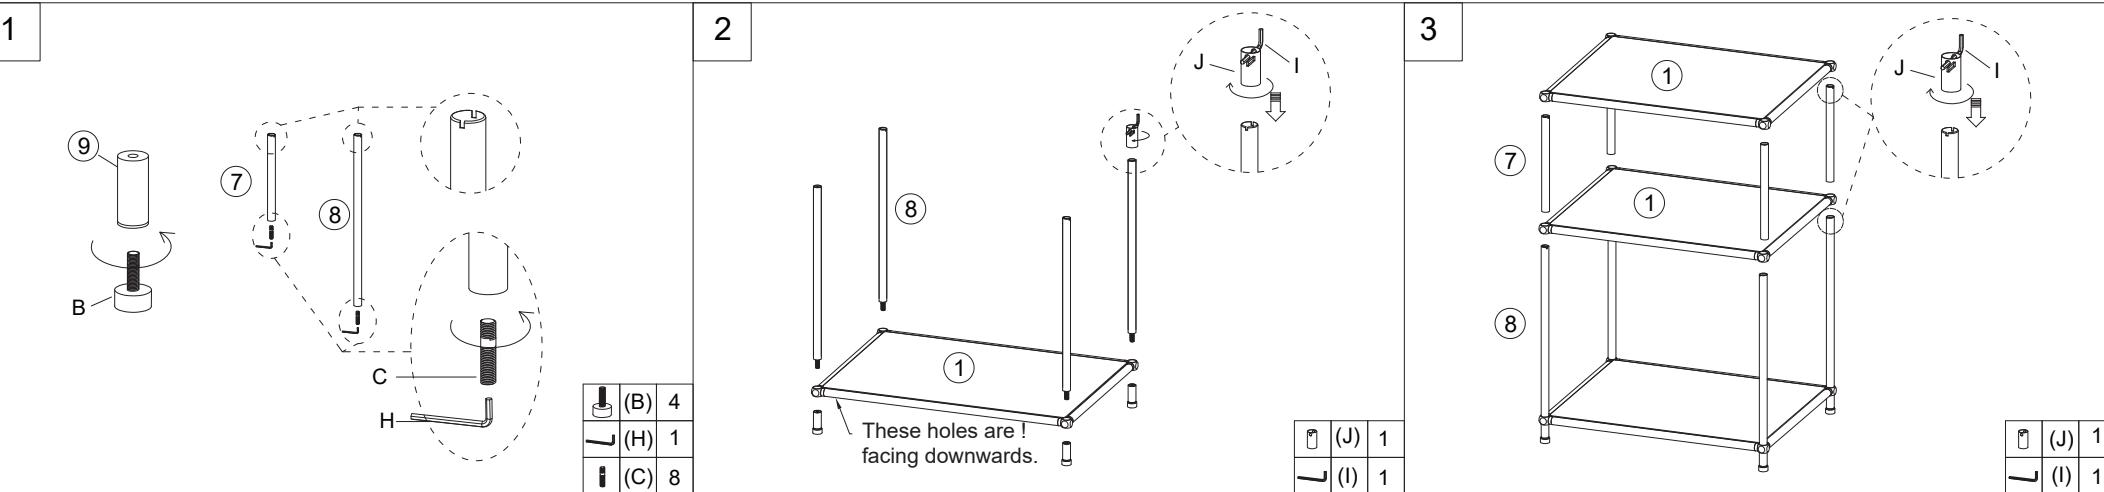


4

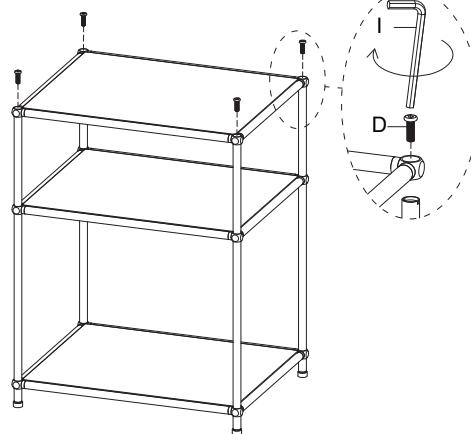

5

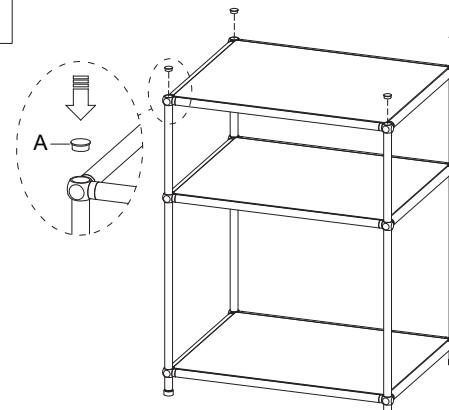


6

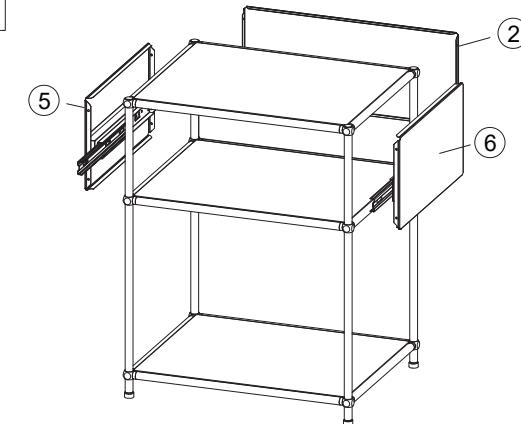


7


Anchor advice: ensure the appropriate mounting screws and method are used based on the specific wall type.

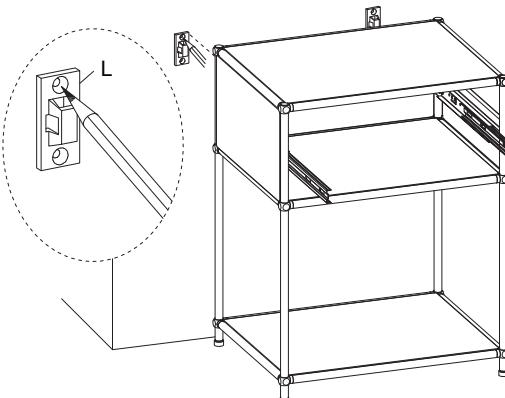


8

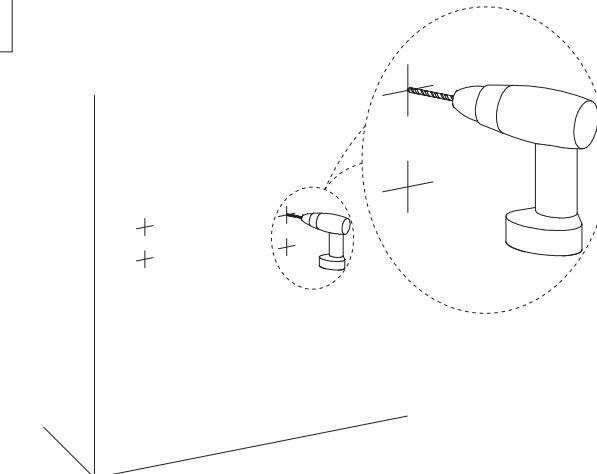



9

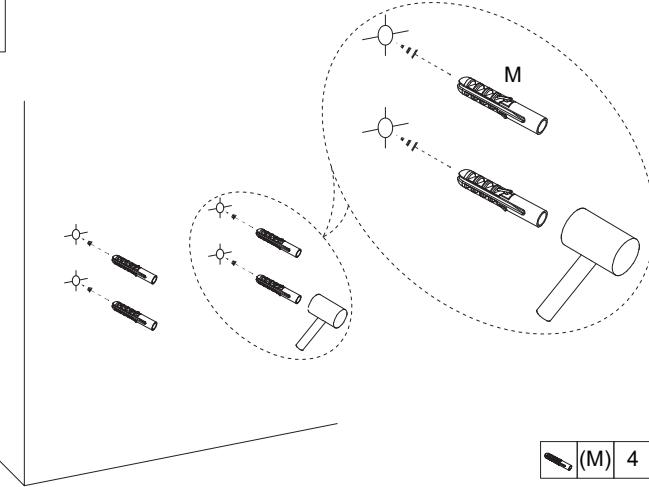

10


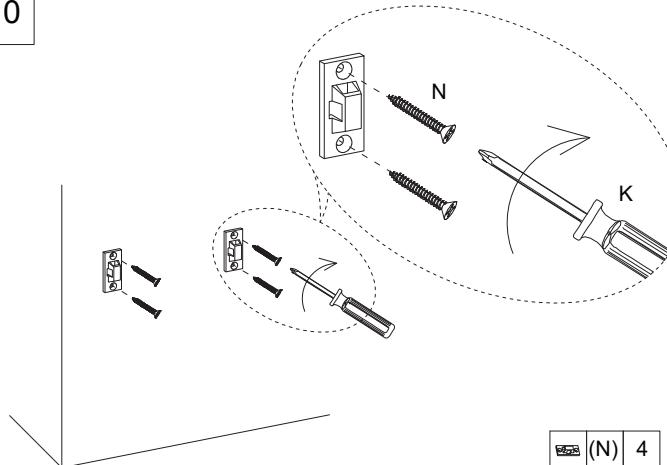


11

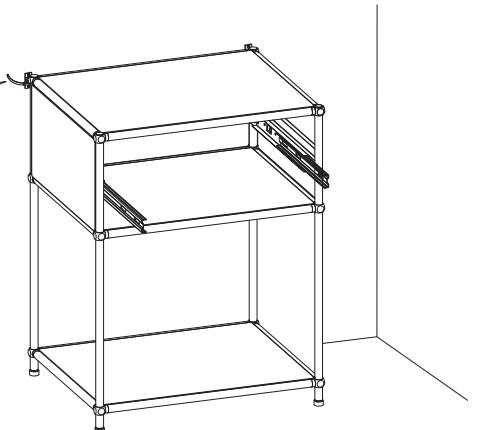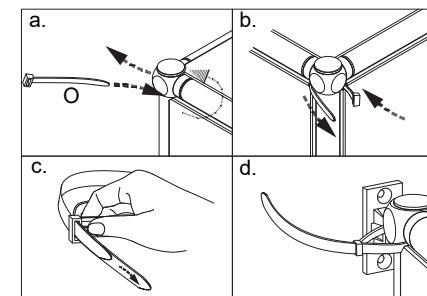
 (O) 2


12

Don't tighten screws at this step.

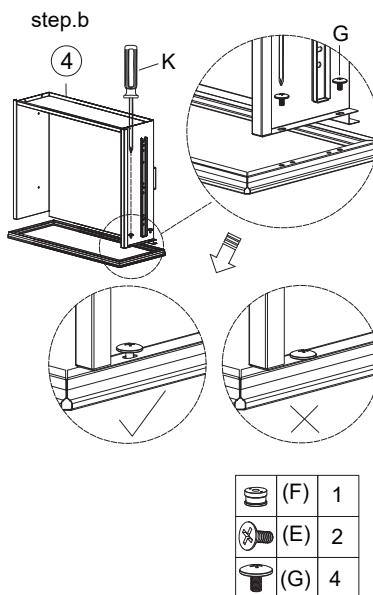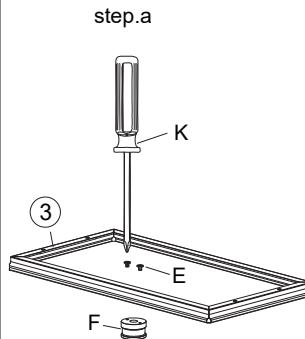


13

Pull out the rails on the side panels ⑤ and ⑥. Align the rails on the drawer ④ with them, then slide the drawer in gently and evenly.

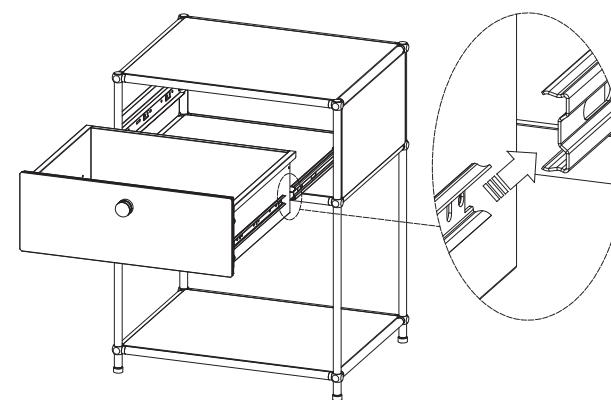


14

If the drawer is not installed properly, you need to hold the clip on both sides, pull out the drawer, and repeat the step 13.

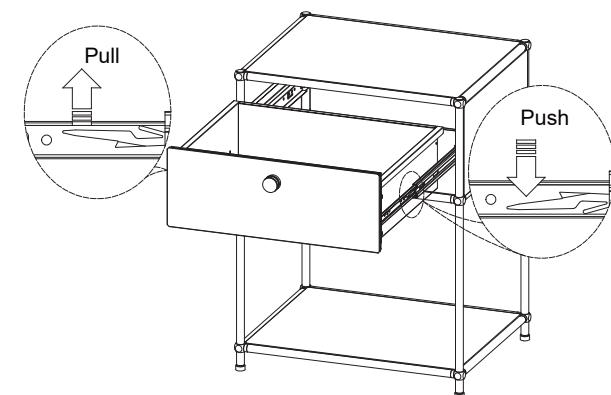


15

if the drawer is not closing completely , adjust the feet B as needed ,ensure that the furniture is square and level for proper drawer closure. (Use a spirit level if needed).

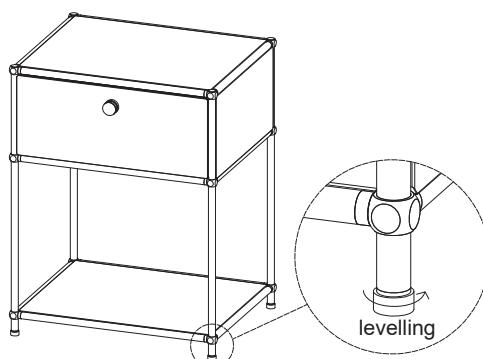


16

Tighten the screw after drawer close perfectly.

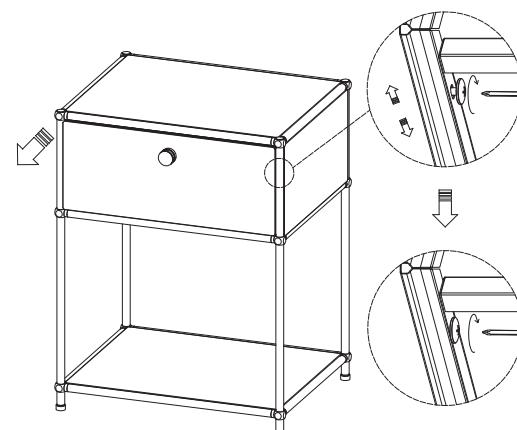

17

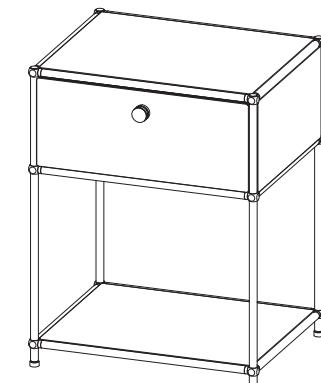

Unsere Marken:

Floordirekt**KARAT****Casa Fura****etm****master****office****marshall****SKY**

Velvet Trading GmbH / Ost-West Handelsgesellschaft GmbH
www.floordirekt.com