



TURIN 1,8

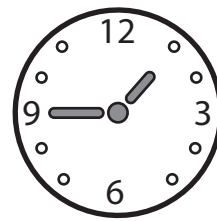

45 min

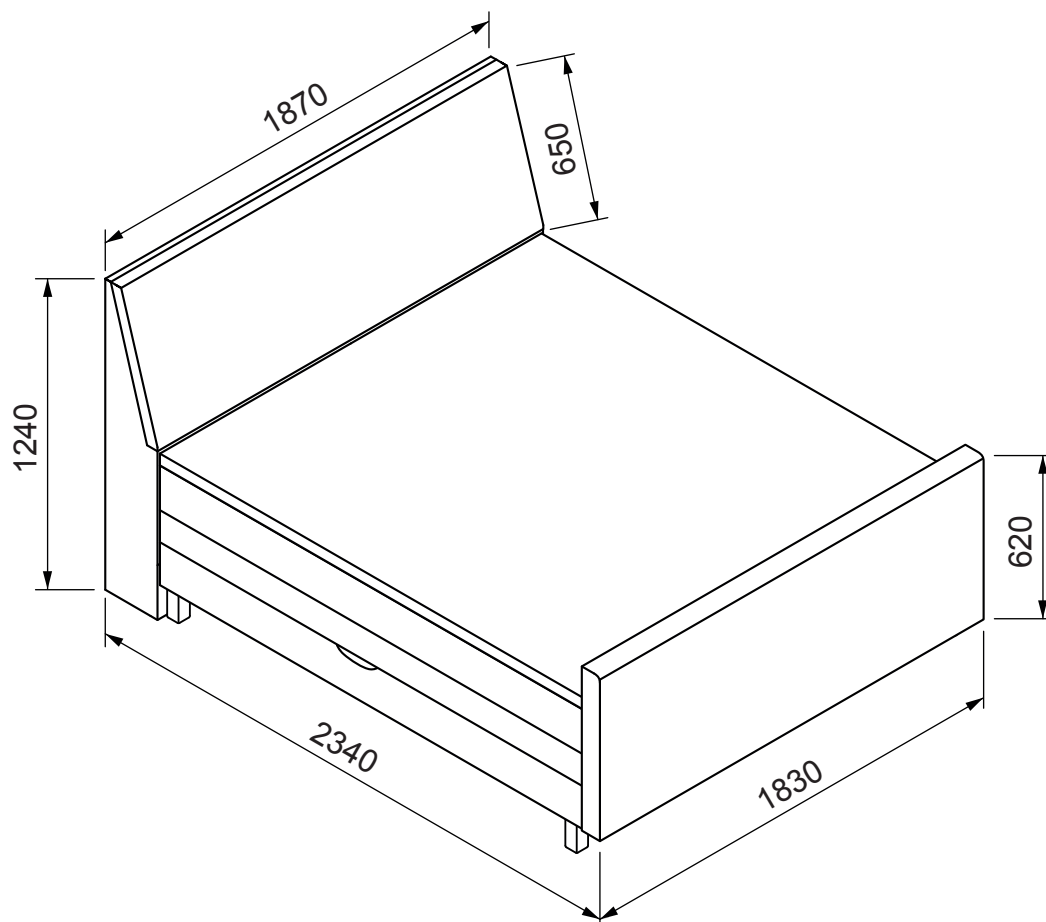

DE

Montageanleitung

SE

Installation manual

CZ

Montážny návod

EN

Installation manual

HR

Upute za montažu

HU




Telepítési útmutató


SK

Inštalčná príručka

SL








Navodila za montažo

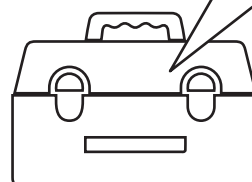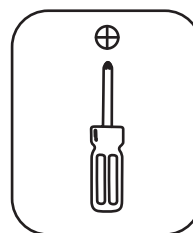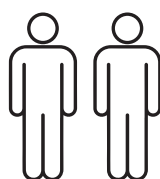


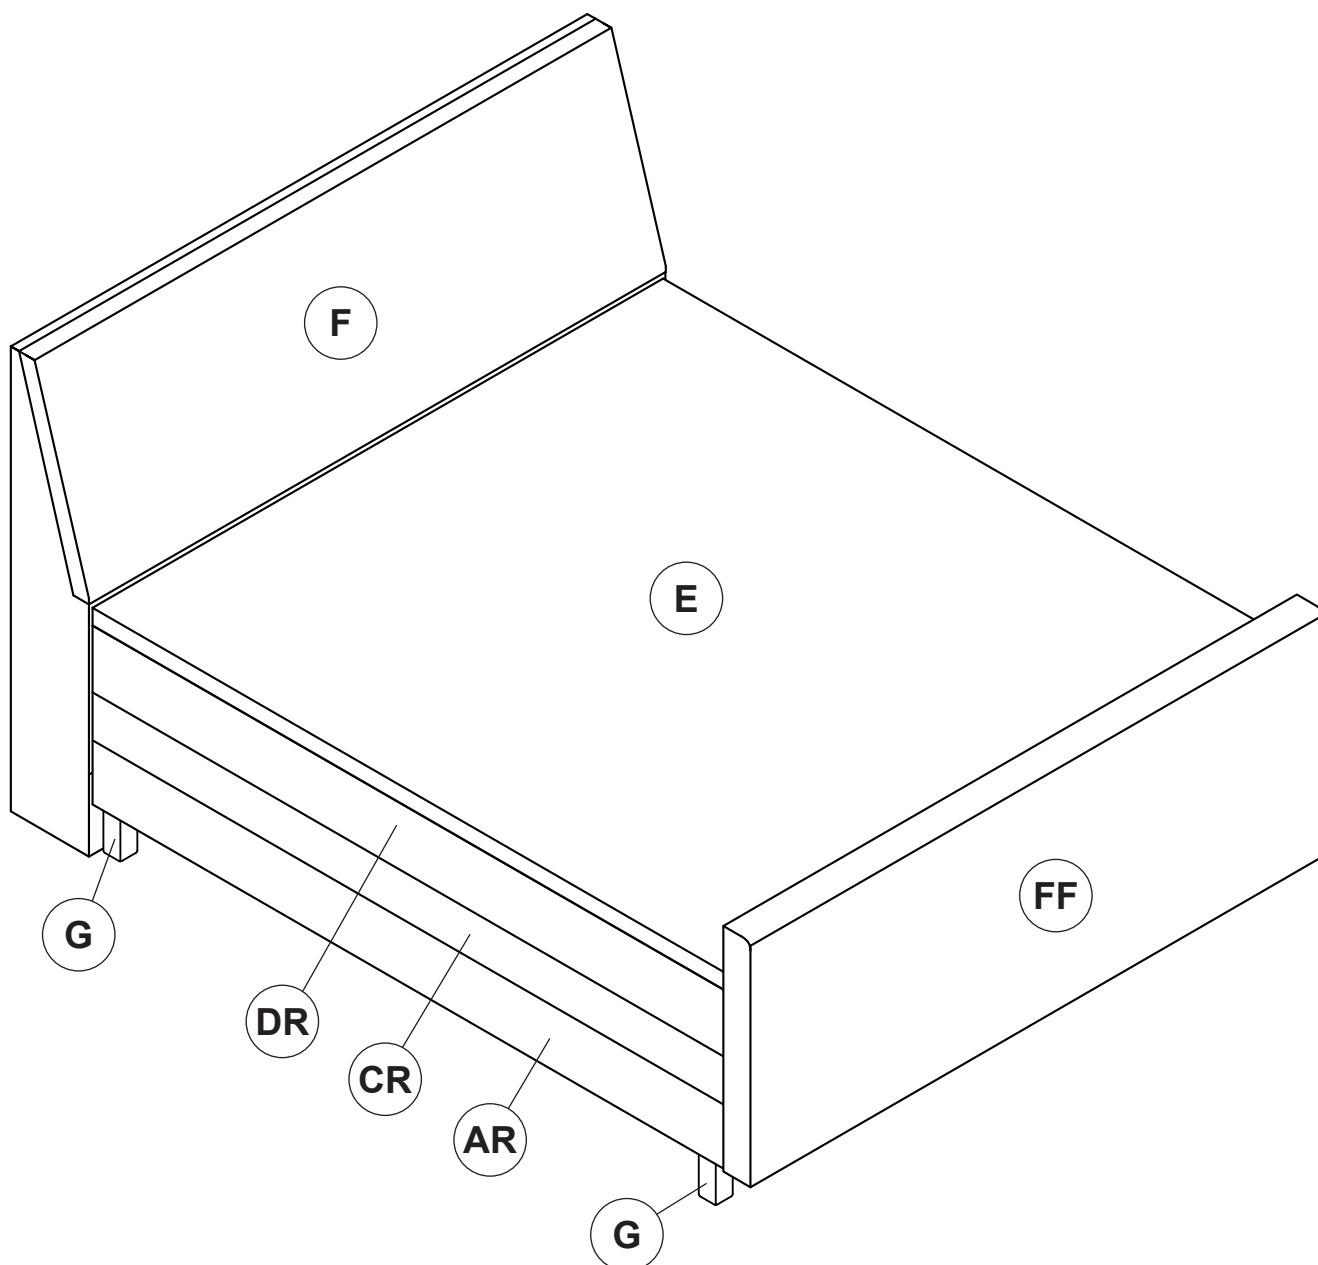



		Size (mm)	Quantity	№ Pack
1	AL	2000x900x175	1	1/5
2	AR	2000x900x175	1	2/5
3	CL	2000x900x125	1	1/5
4	CR	2000x900x125	1	2/5
3	DL	2000x900x180	1	3/5
4	DR	2000x900x180	1	3/5
5	E	2000x1800x50	1	1/5
6	F	1870x1240x250	1	4/5
7	FF	1830x620x90	1	5/5
8	G	50x50x120	4	1/5

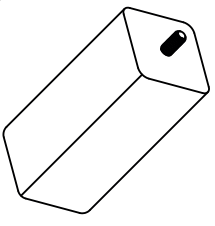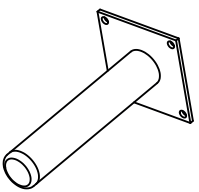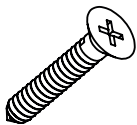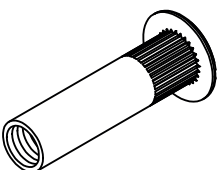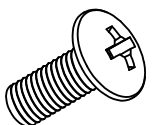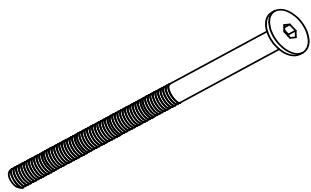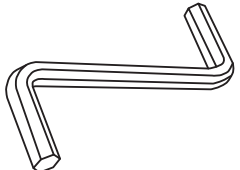



G h=120 x4 	1 h=120 x2 	2 4x30 x4 	3 M6 x3 
4 M6 x3 	5 Ø6x18 x16 	6 M6x90 x16 	7 x1 

1/4

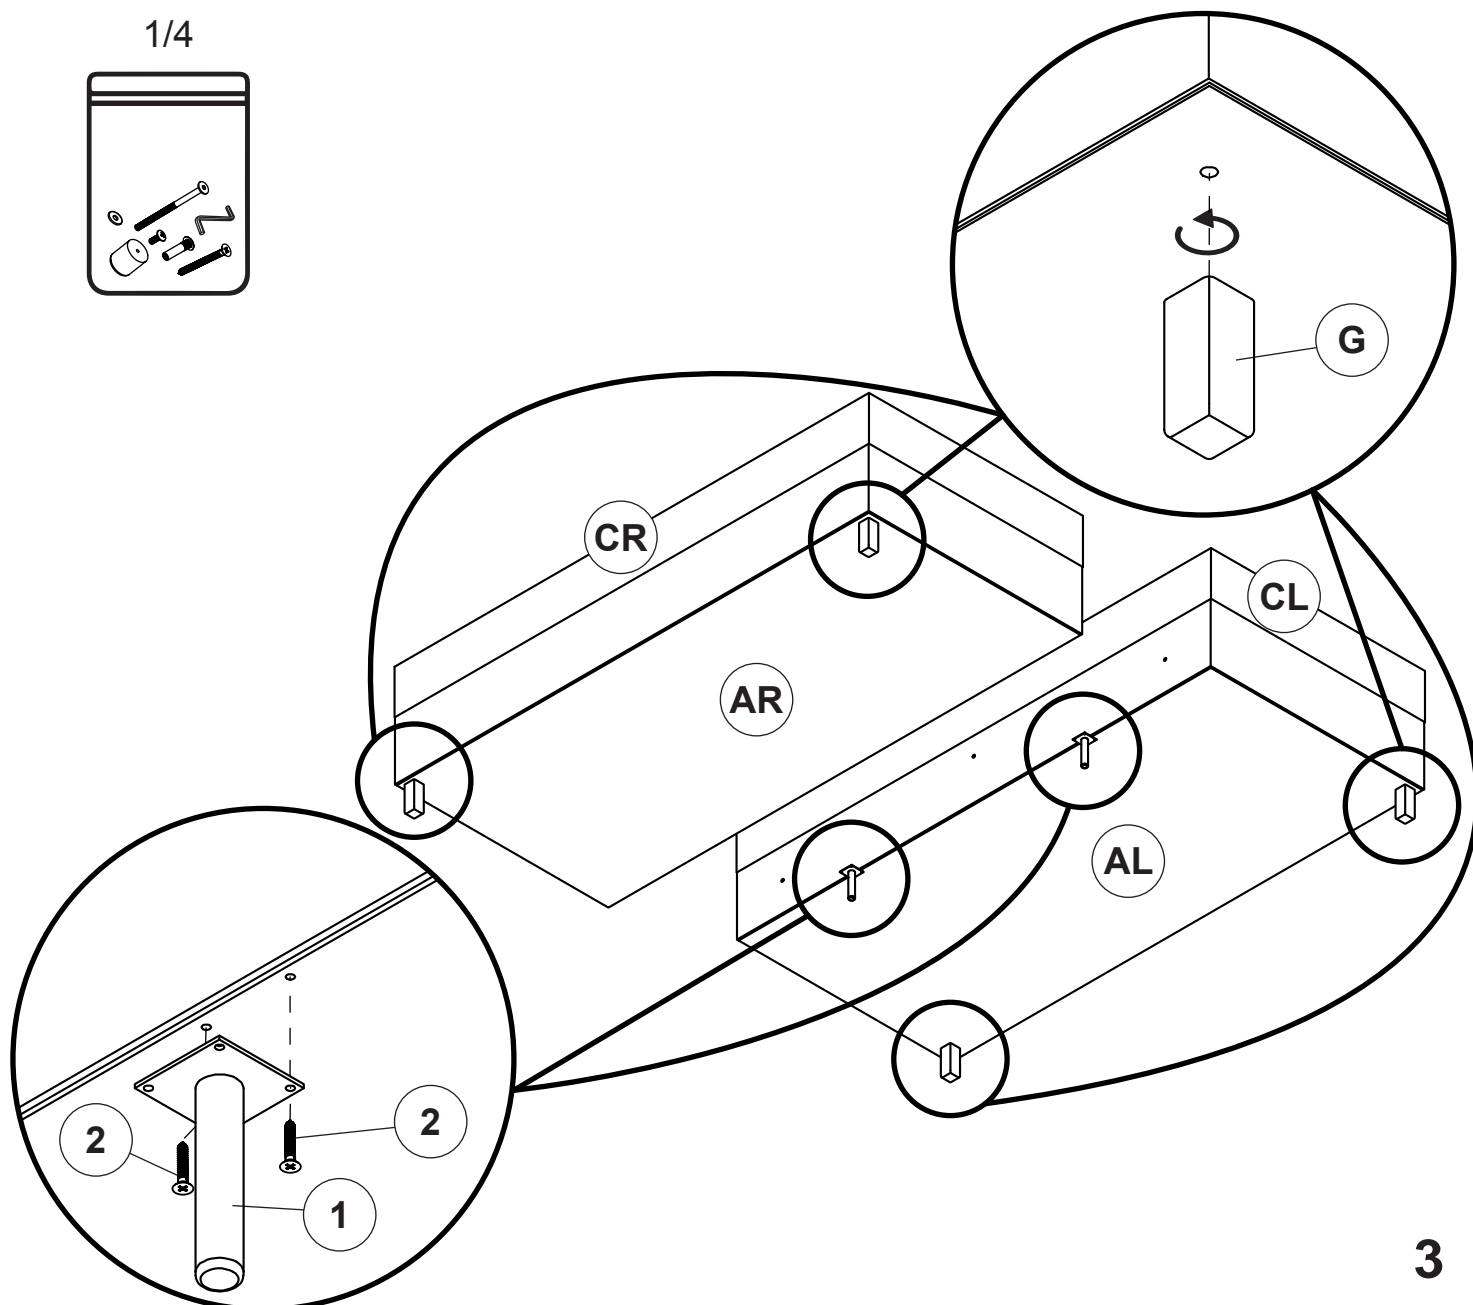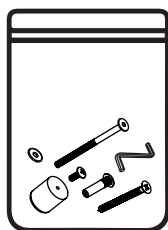

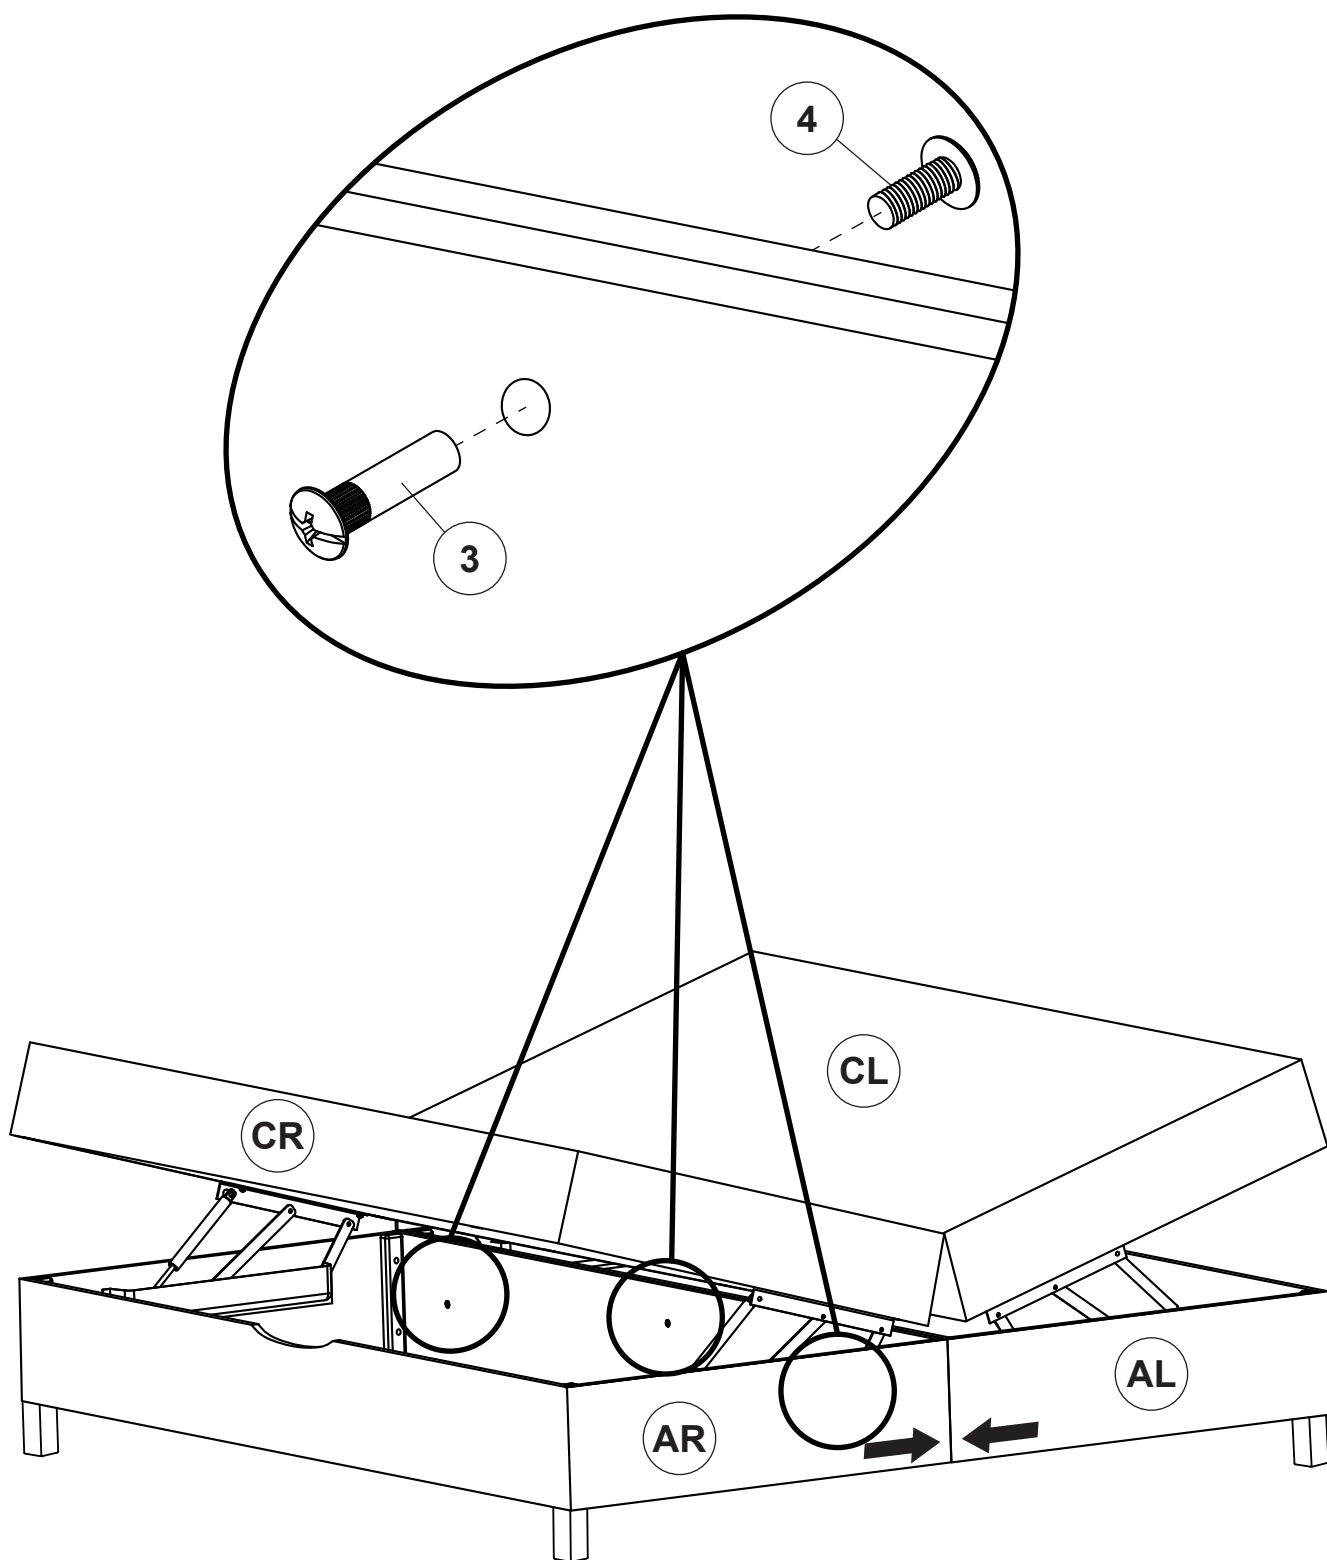

x4

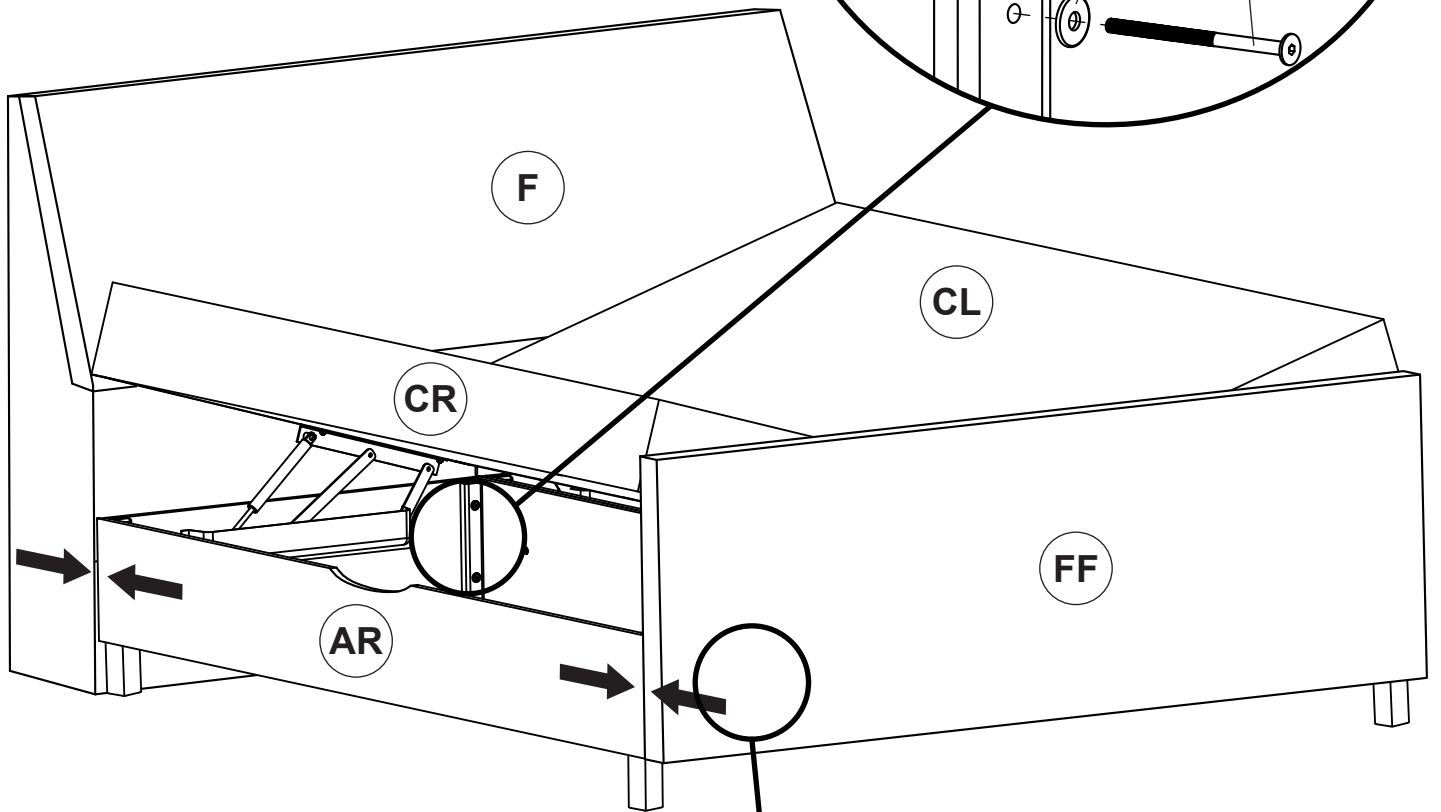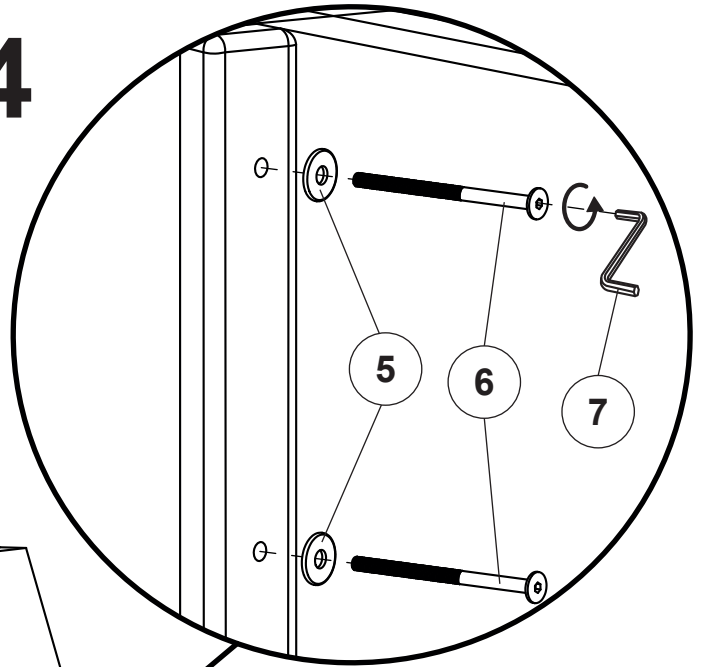

x4

