
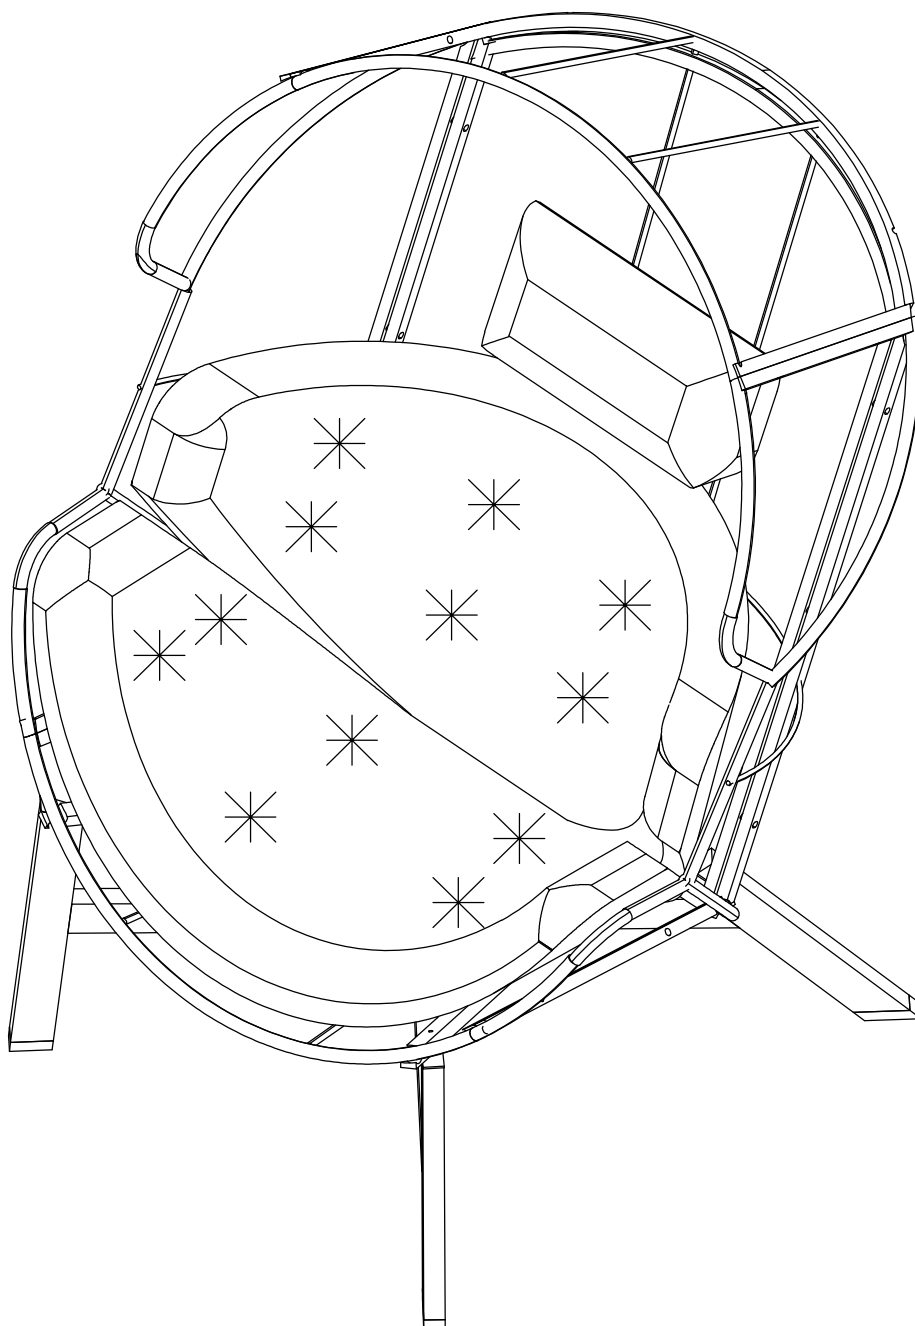
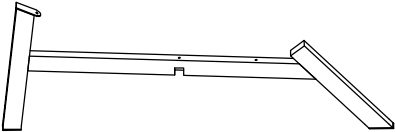
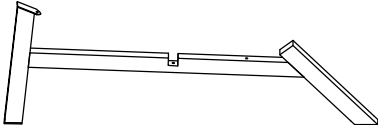
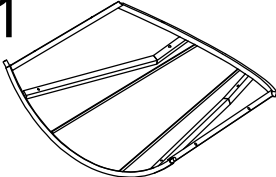
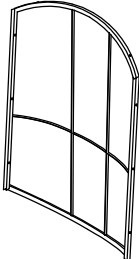
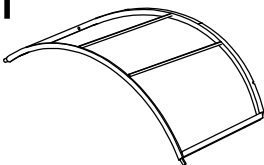

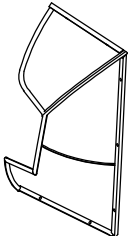
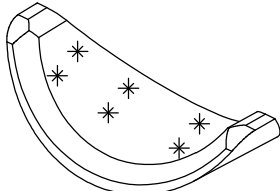


ASSEMBLY INSTRUCTIONS






000X0002/11

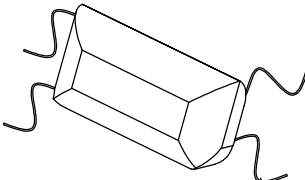



Parts List

A x1 	B x1 	C x1 
D x1 	E x1 	F x1 
G x1 	H x2 	I x1 



Hardware List

1 x3PCS Extra 1 pc  Bolt M6 x 65 mm	2 x18PCS Extra 2 pcs  Bolt M6 x 50 mm	3 x2PCS Extra 1 pc  Bolt M6 x 20 mm	4 x42PCS Extra 2 pc  Washer M6	5 x18PCS Extra 2 pcs  Nut M6
6 x18PCS Extra 1 pc  Head Nut	7 x1PC  Wrench Lock	8 x1PC  Allen Key	9 x4PCS  Foot Button	


STEP 1

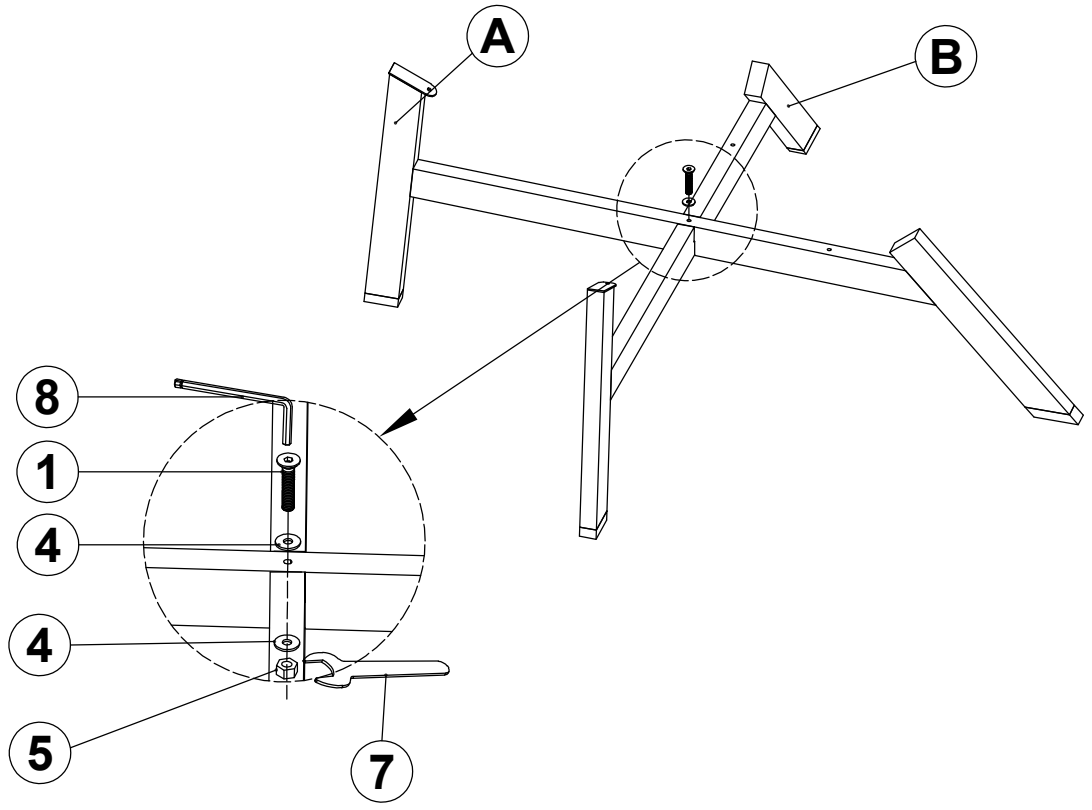


STEP 2

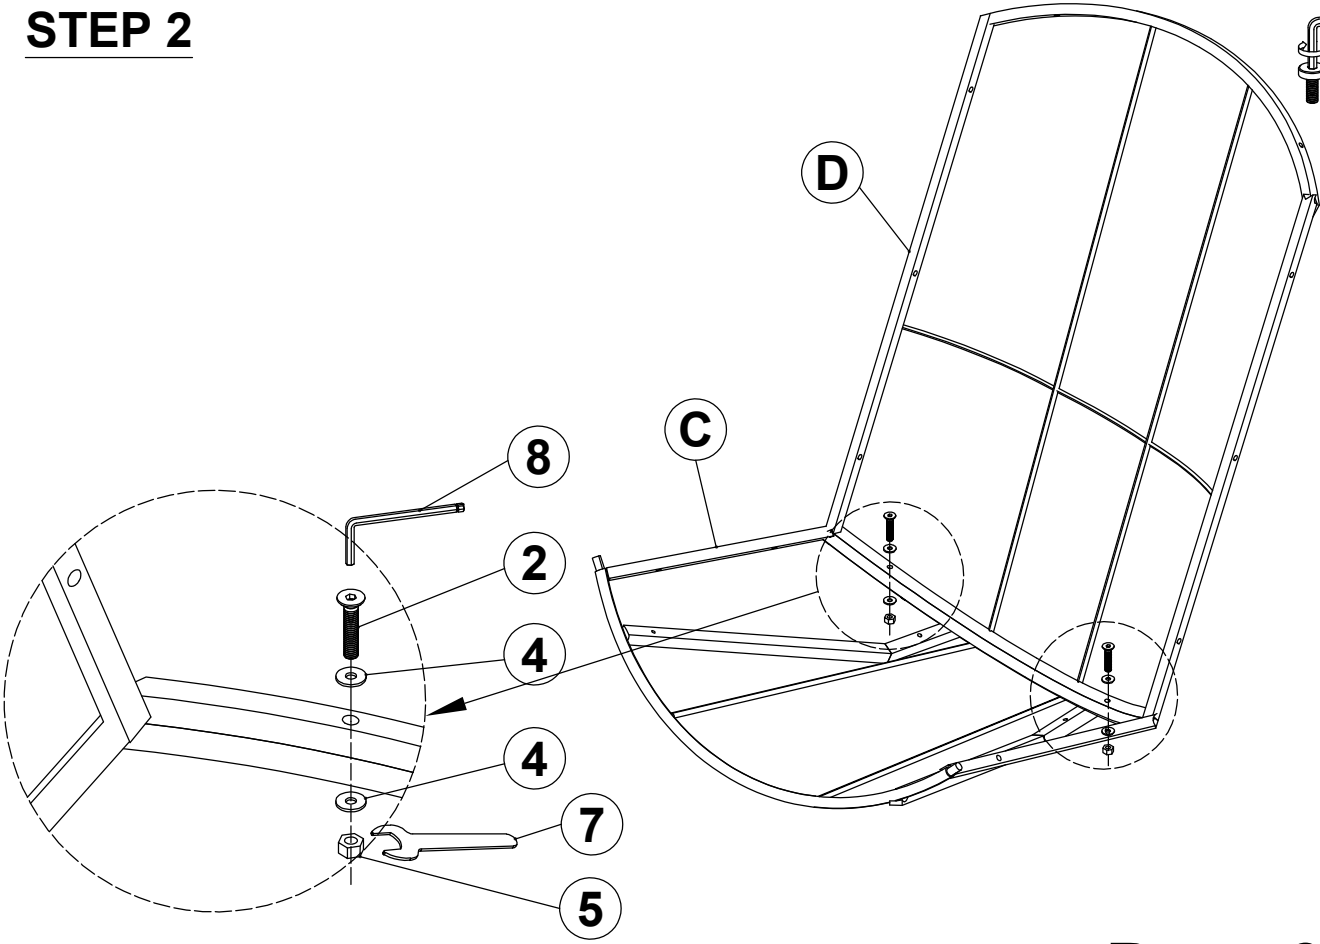


STEP 3

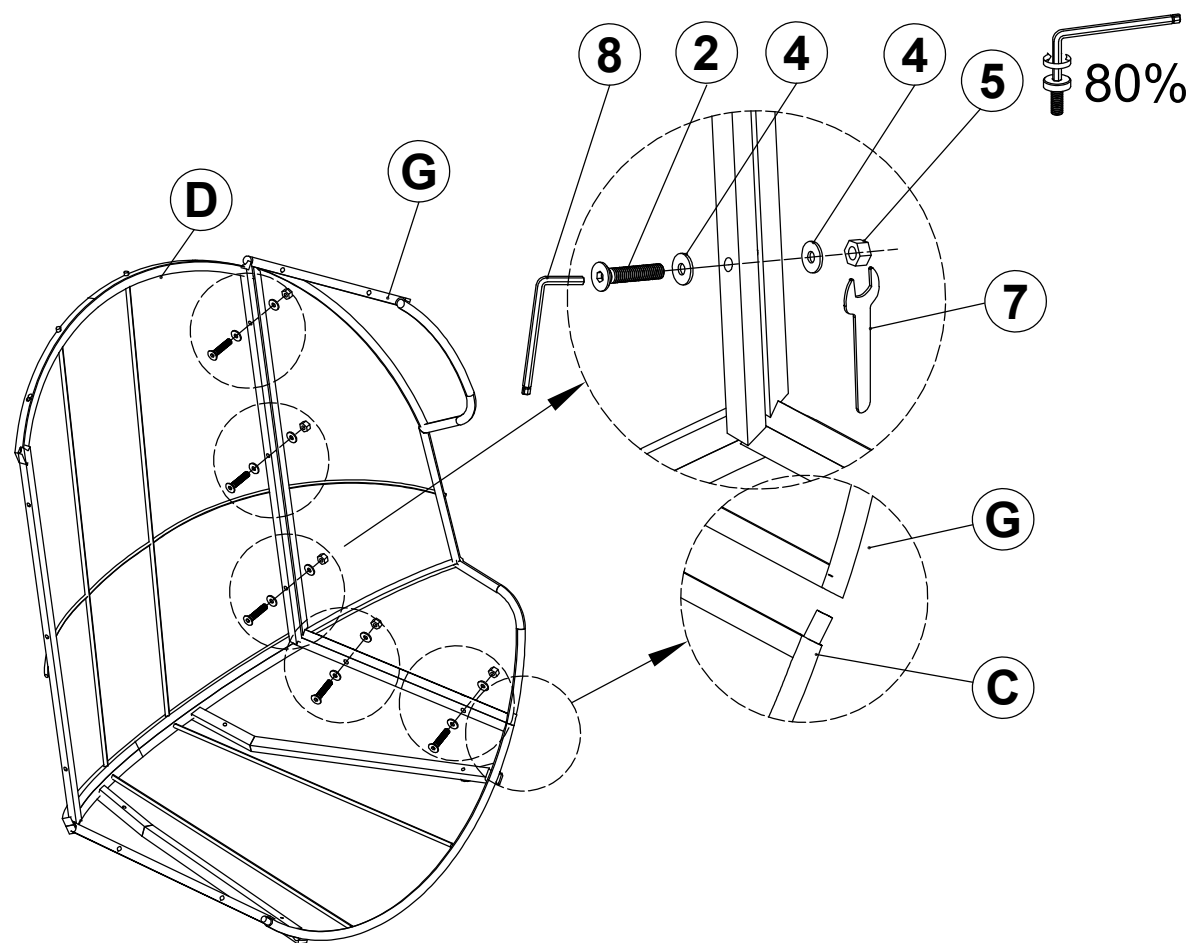


STEP 4

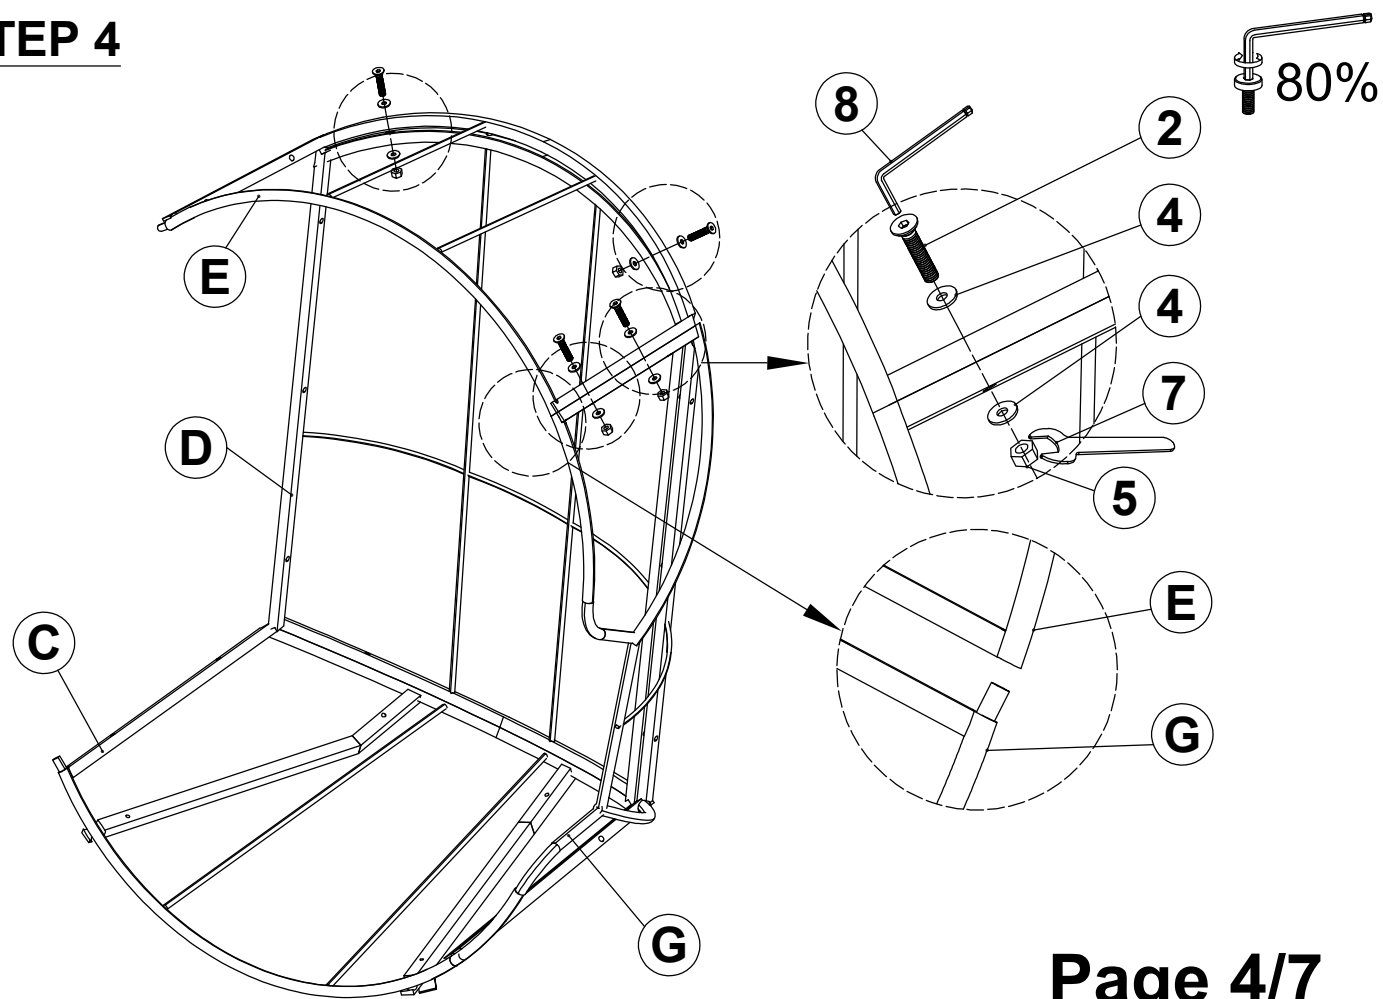

STEP 5


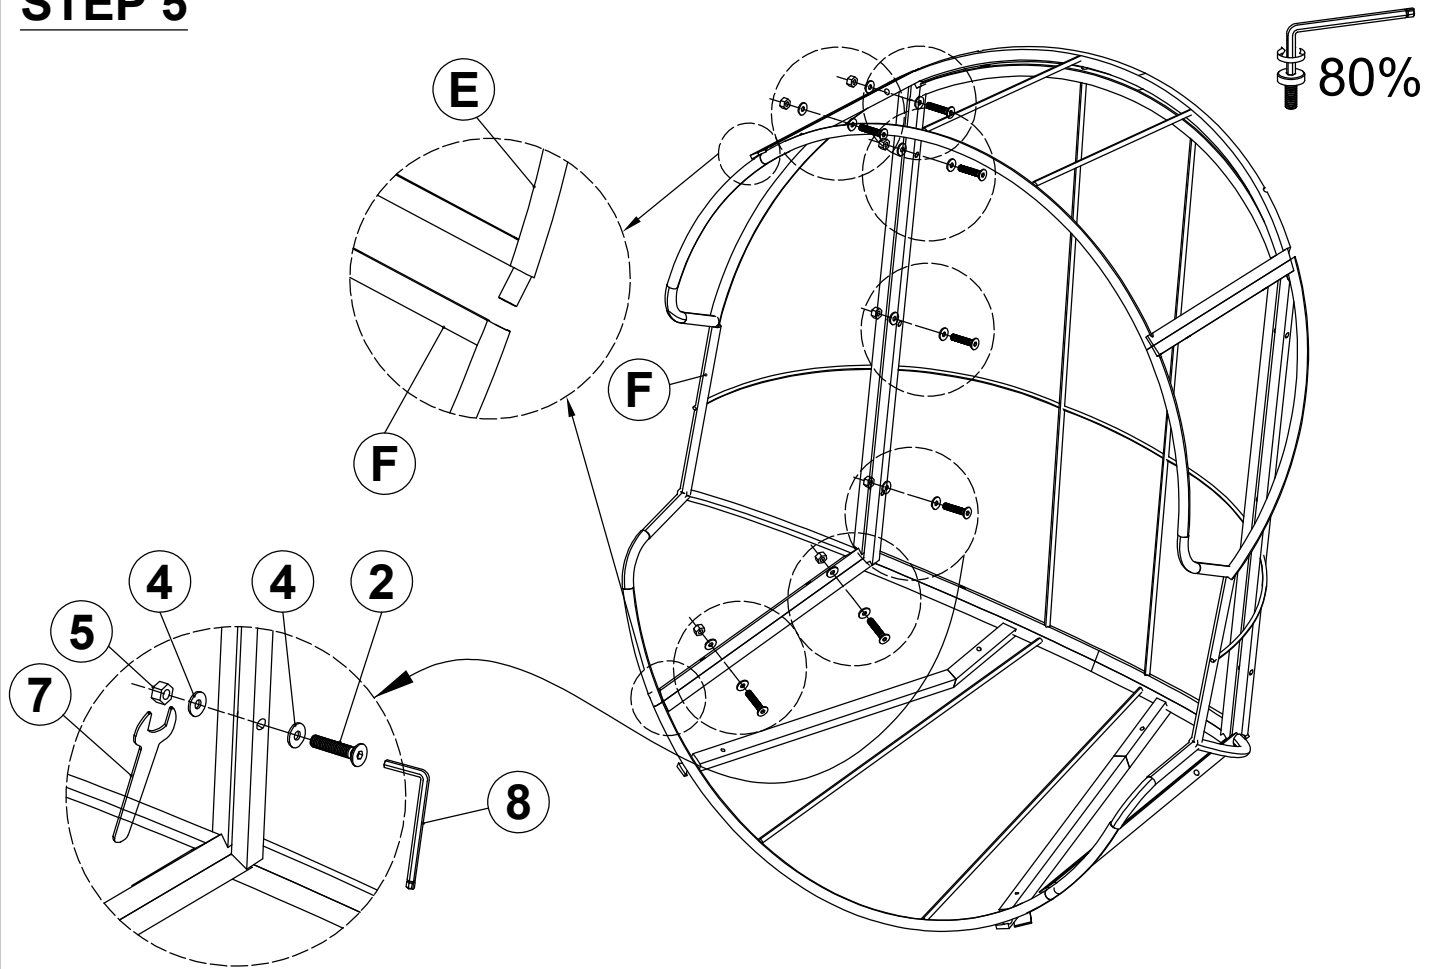


STEP 6

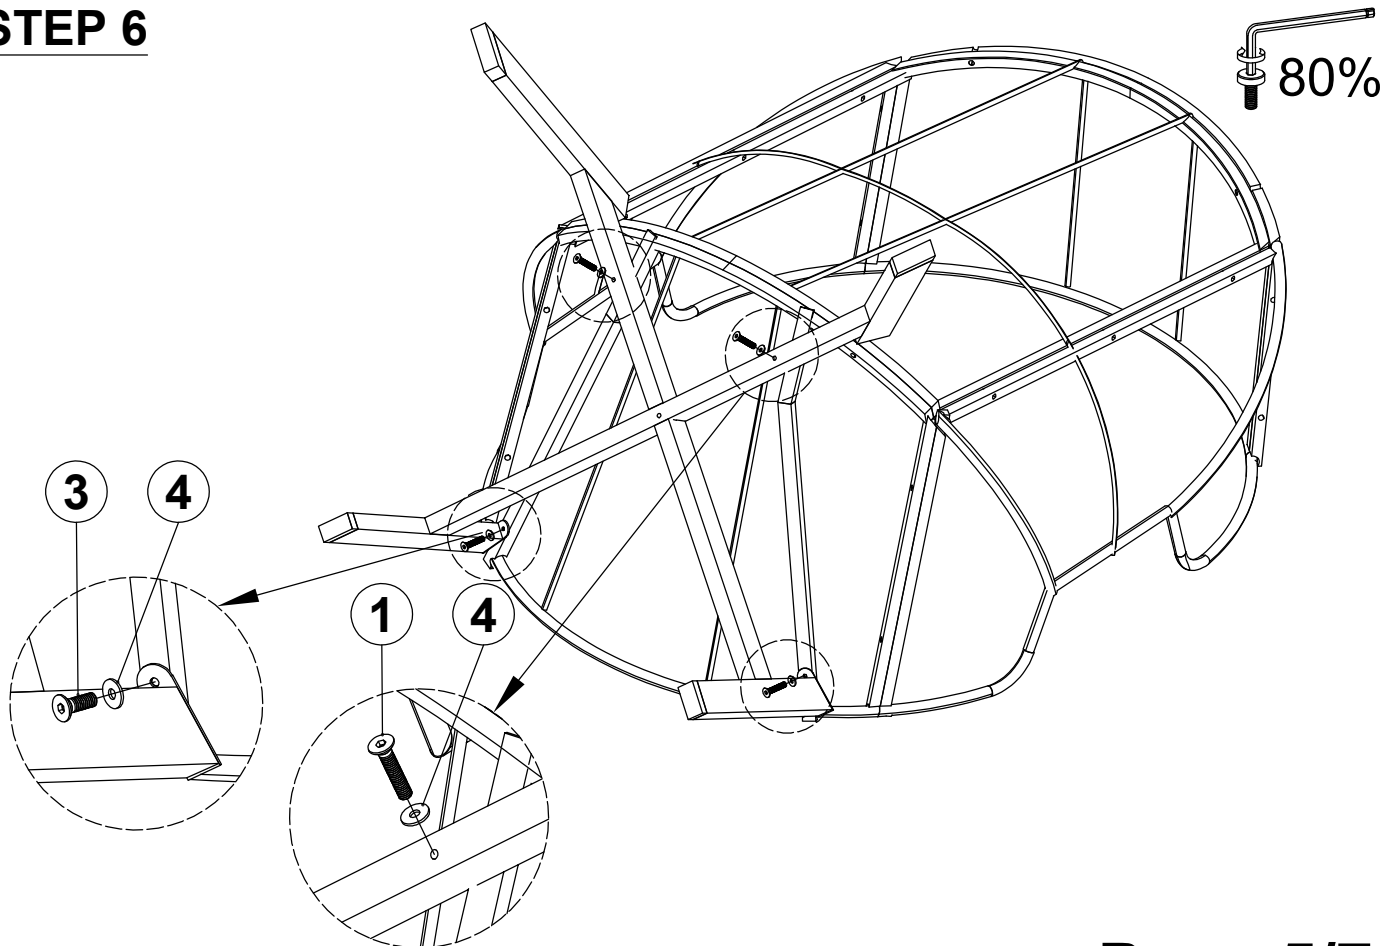


STEP 7

9		4
---	---	---

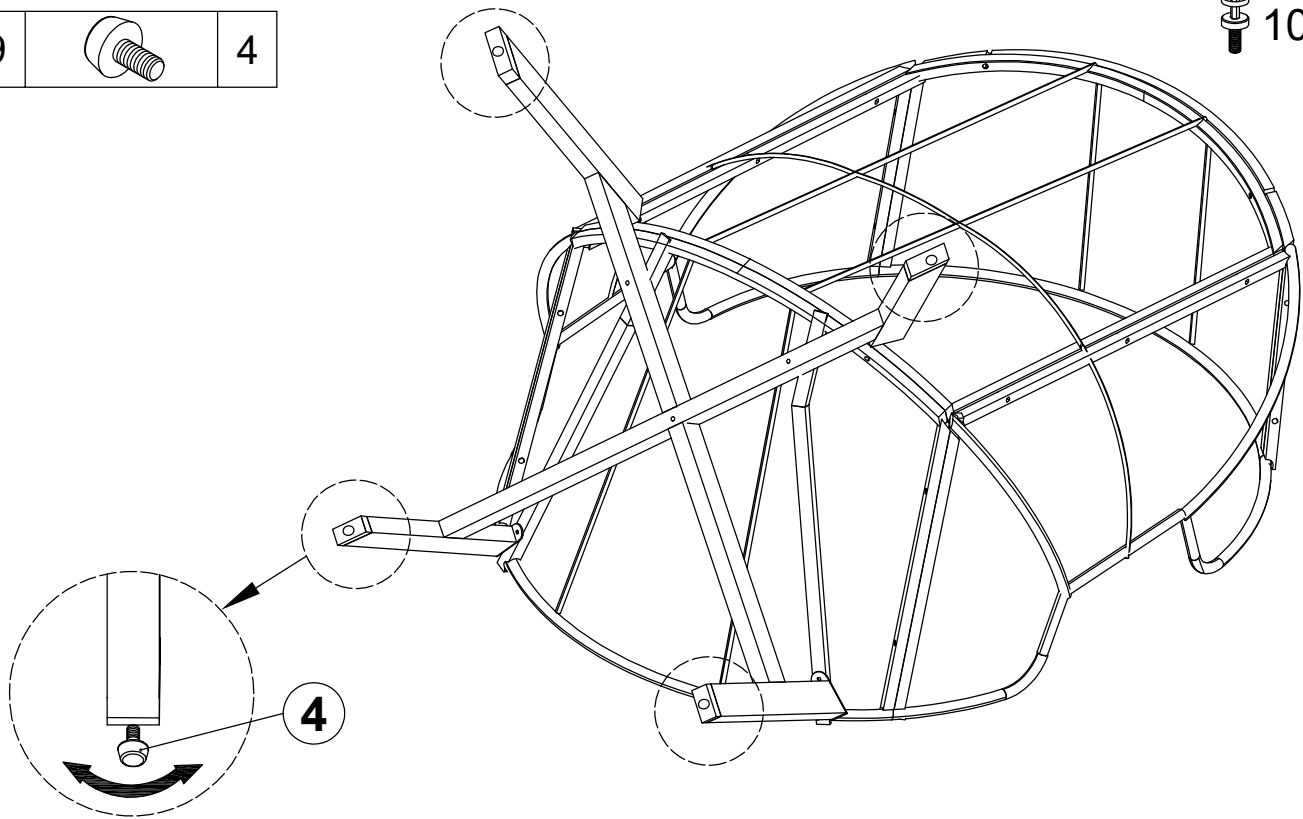


STEP 8

6		18
---	---	----

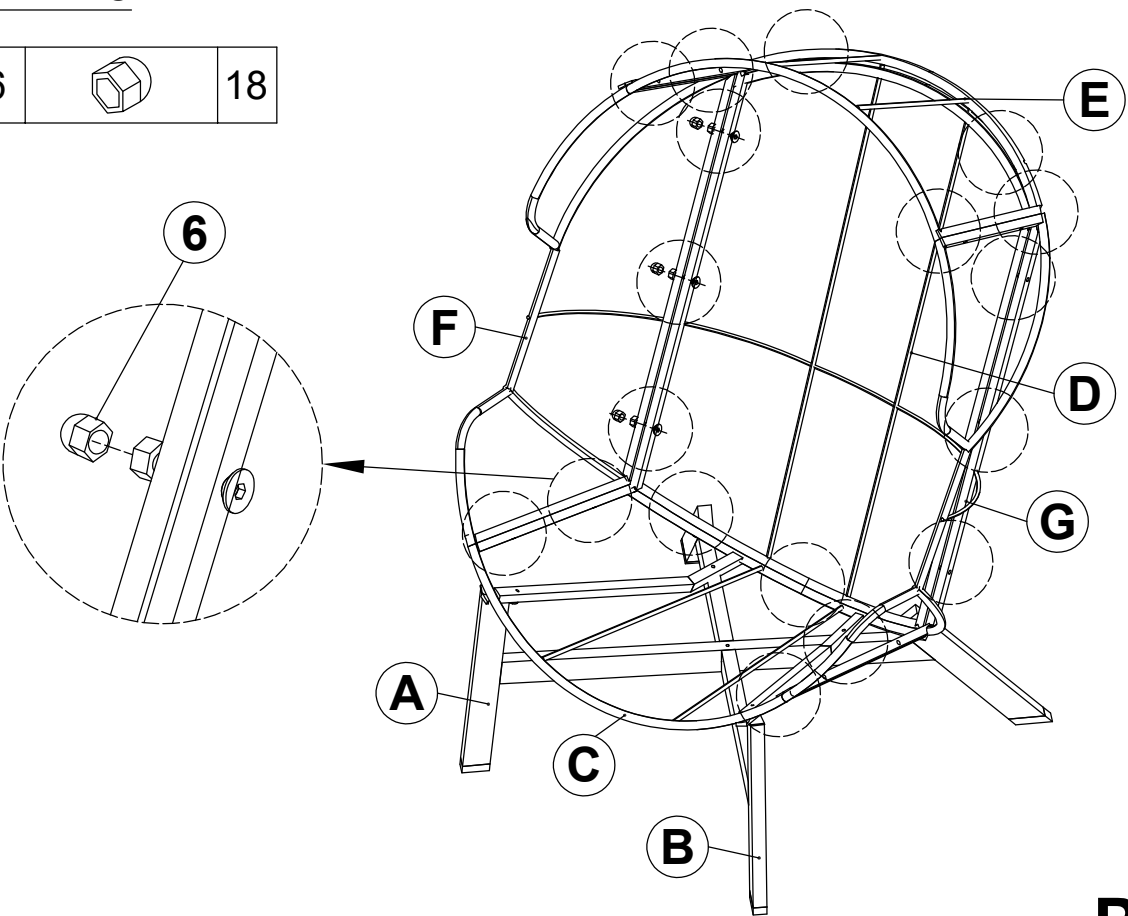

STEP 9

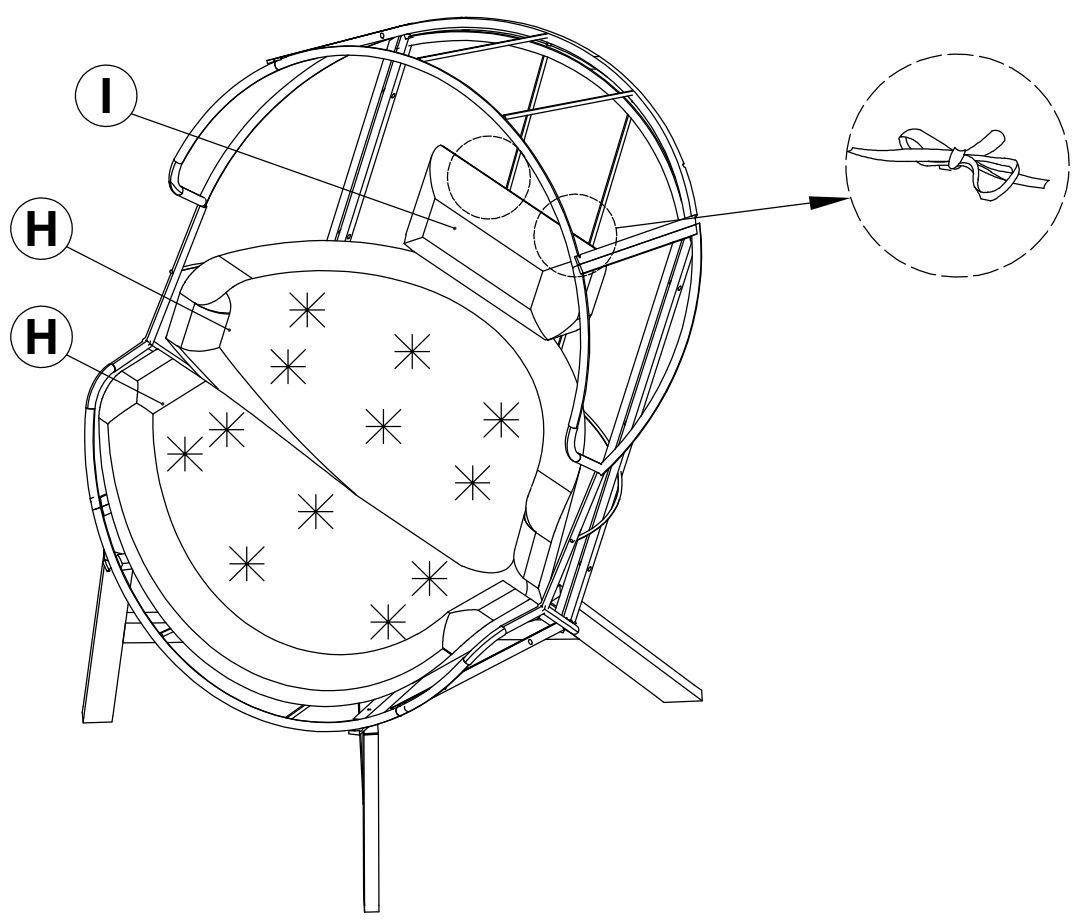

STEP 10

