

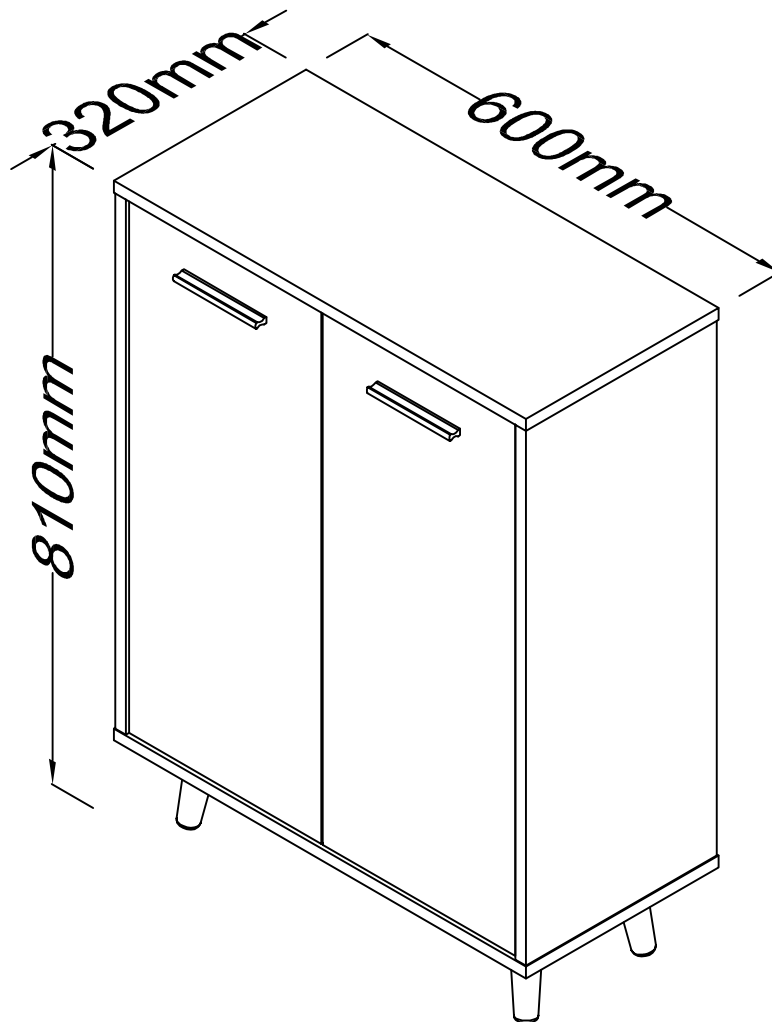



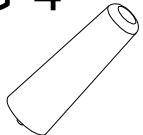






Sideboard Landos
Montageanleitung
Instruction manual

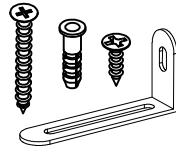

VCM Morgenthaler GmbH
D-79346 Endingen am Kaiserstuhl
service@vcm-gruppe.de
www.vcm-gruppe.de

A*12  40 mm	B*12  15*9 mm	C*6  8*40 mm	D*44  3.5*12mm	E*4  3.5*35 mm	F*4 
G*4  100 mm	H*2 	I*4  3.5*16 mm	J*4  12mm	K*2 	L*18 

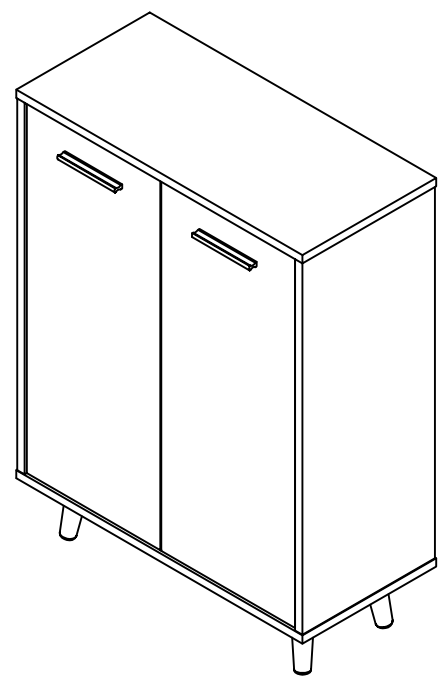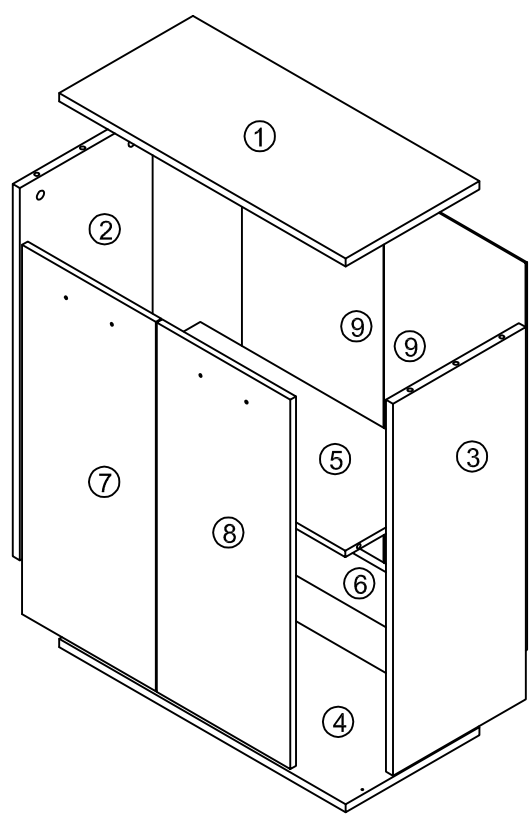


1

A*4




40 mm

C*2



8*40 mm

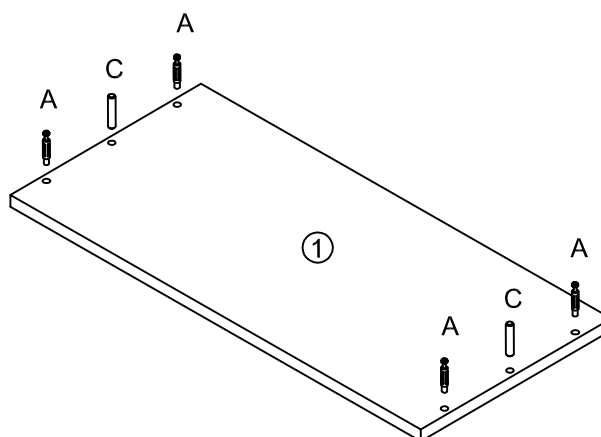


2

A*8




40 mm

C*4



8*40 mm

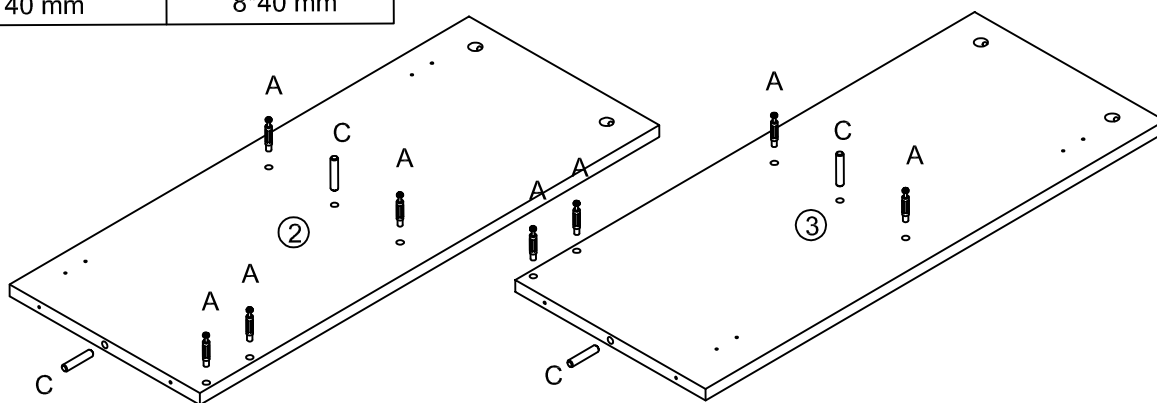


3

B*8





15*9 mm

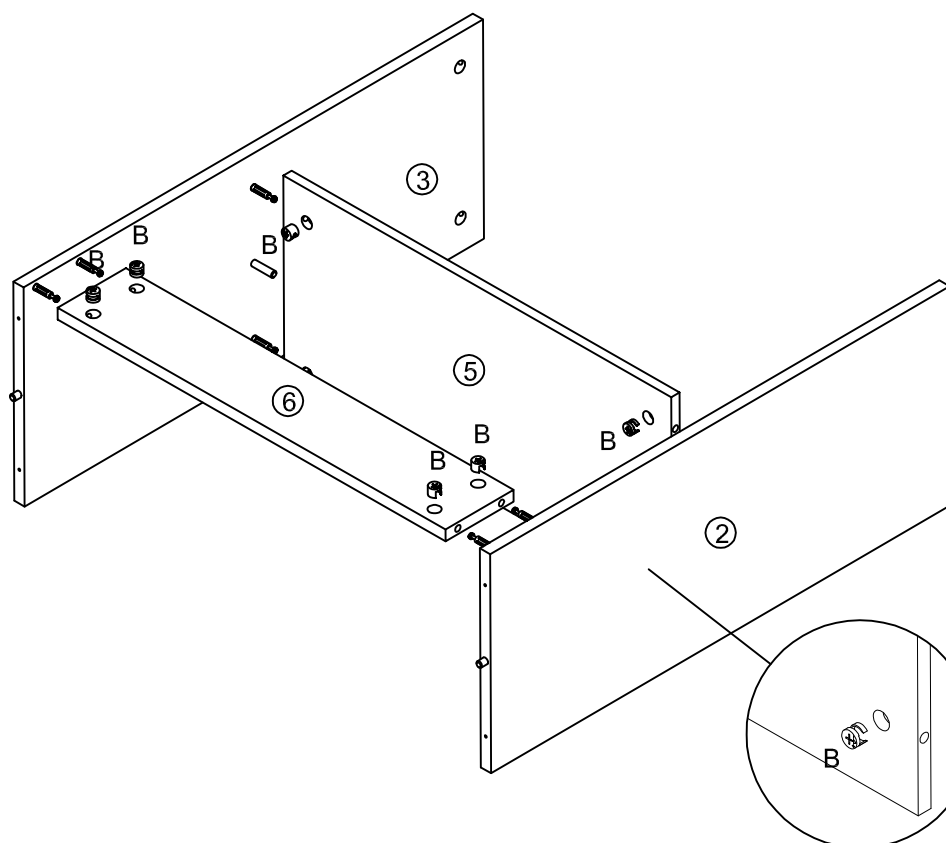

4

B*4


15*9 mm

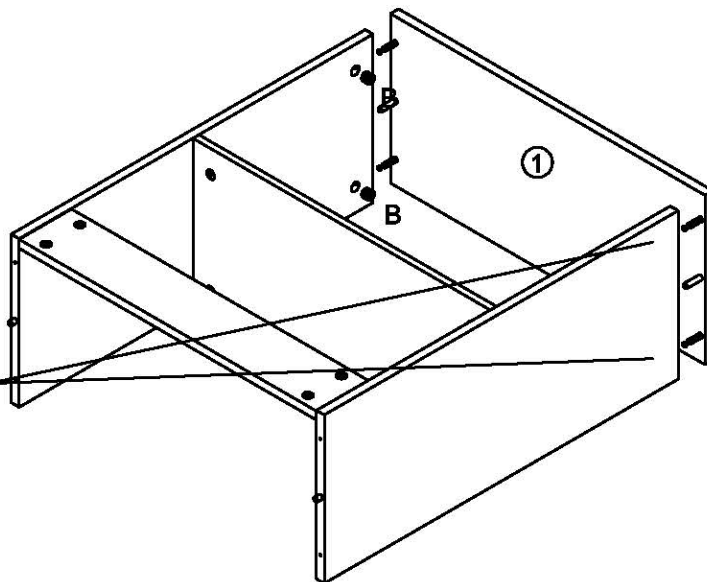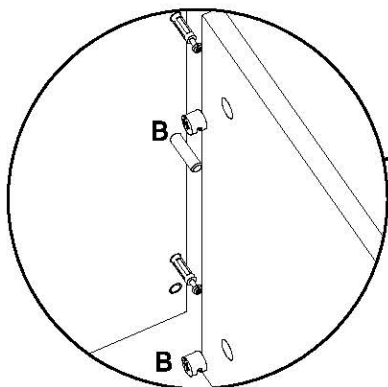

5

E*4




3.5*35 mm

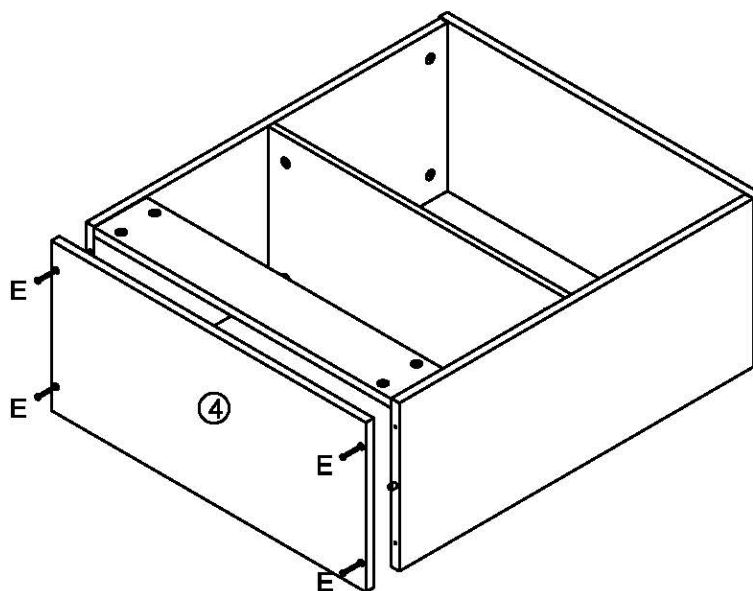

6


D*20

3.5*12mm

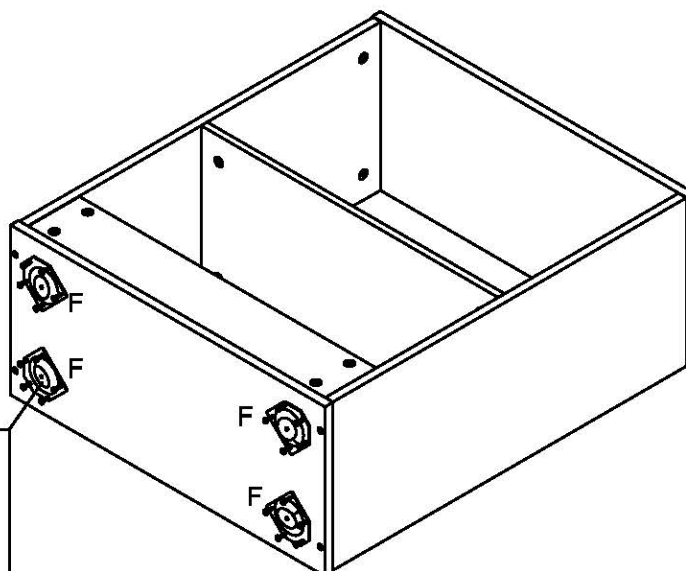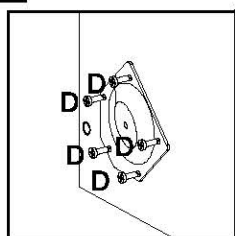

F*4

7

G*4


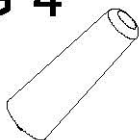


100 mm

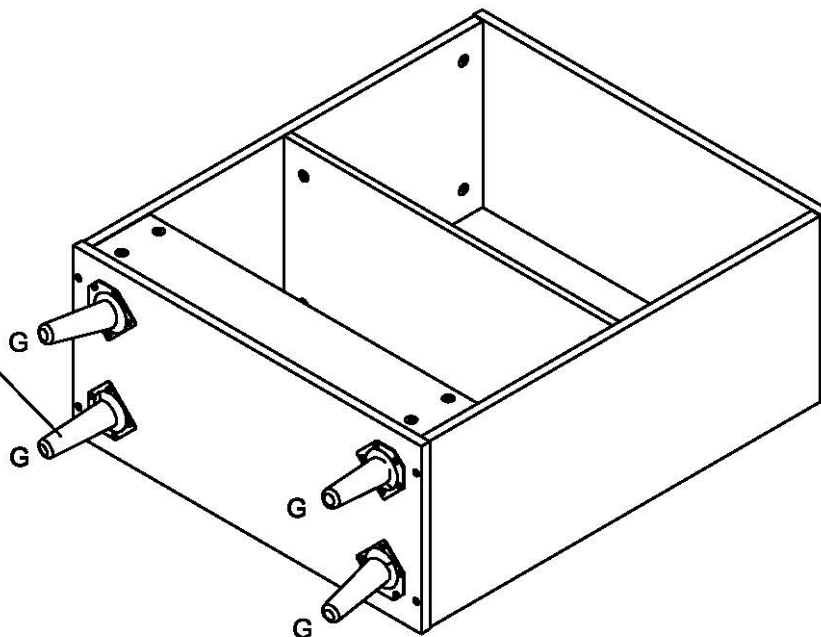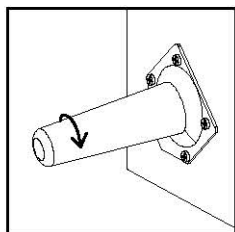

8

L*18

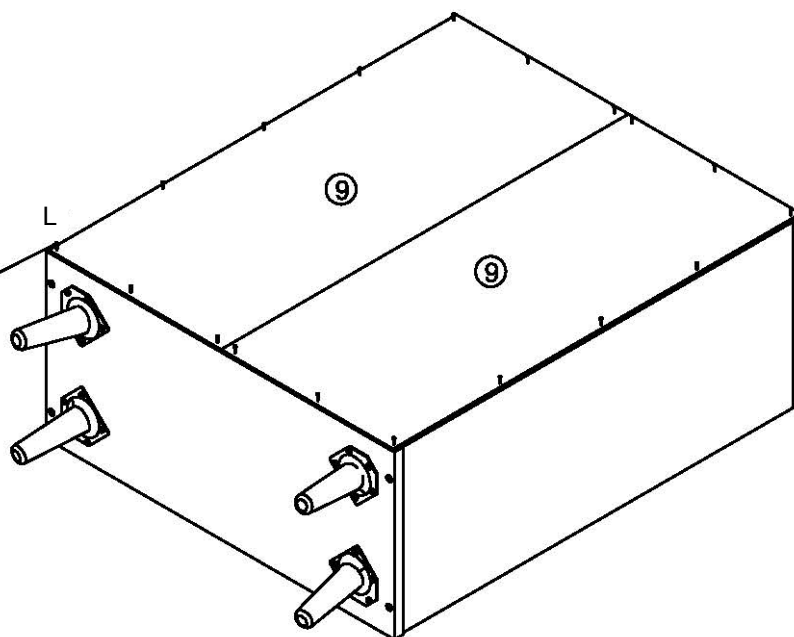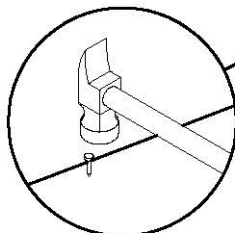

9

D*8




3.5*12mm

J*4



12mm


H*2



I*4



3.5*16 mm


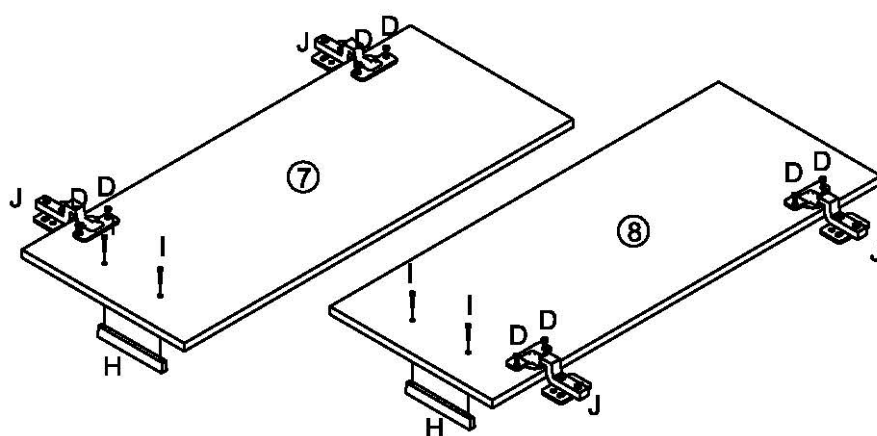


10

D*16



3.5*12mm

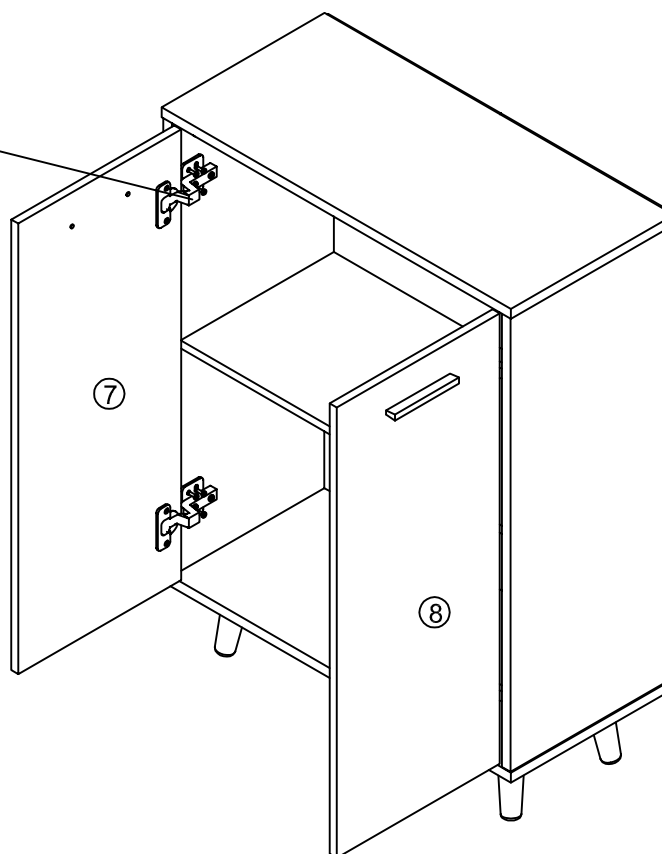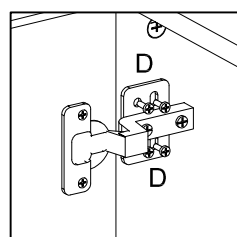

11

K*2

