

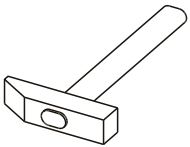
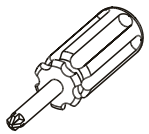
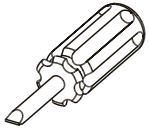
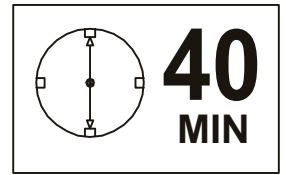
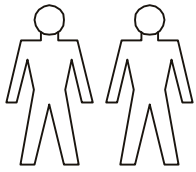
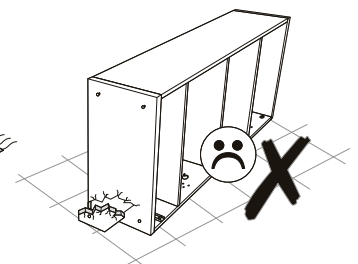
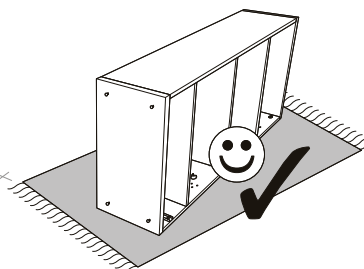
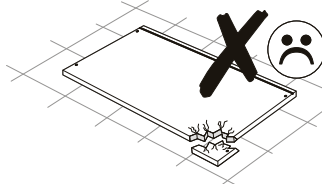
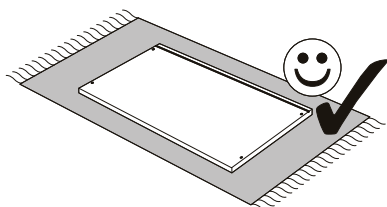







Schuhschrank 902 2T

Benton	00030029/50
Camron	00030001/64

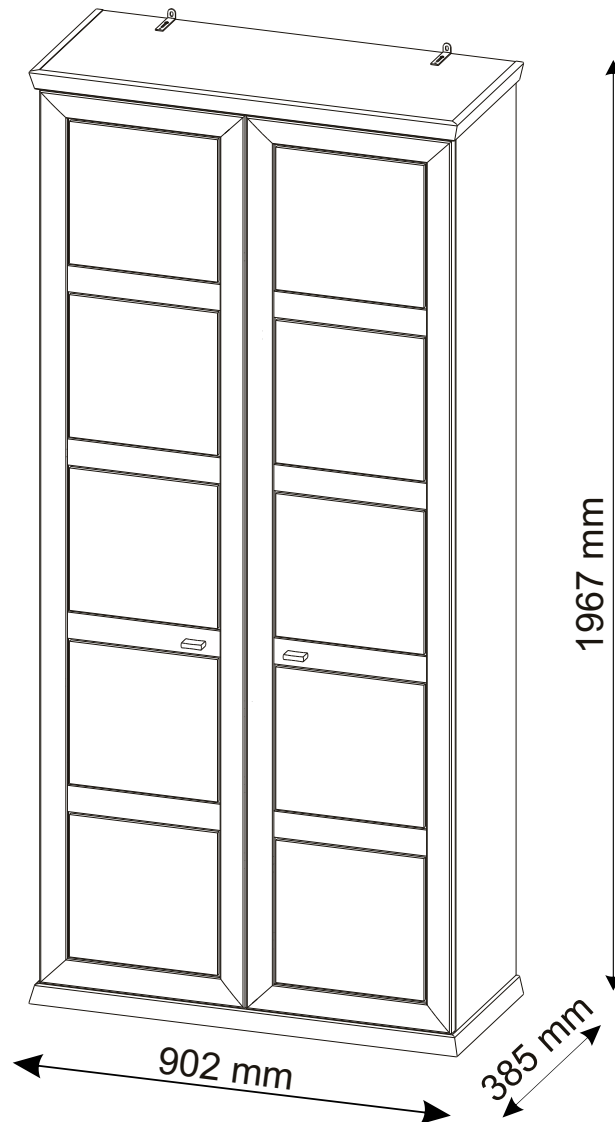

Ø8

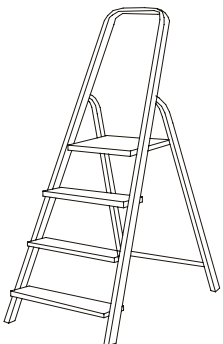


D0 3 x 15 mm  x24	U3  x4	D10 4 x 16 mm  x16	MM 260 250 240 230 220 210 200 190 180 170 160 150 140 130 120 110 100 90 80 70 60 50 40 30 20 10 0
P0  x2	E0 5 x 50 mm 8 x 50 mm  x2	D21 5 x 13 mm  x2	
Q3  x40	C0  x8	U2  x6	
M1  x24	C2  x12	J10  x8	
J3  x8	L6  x2	H2 4 x 22 mm  x4	

30



20


10

0


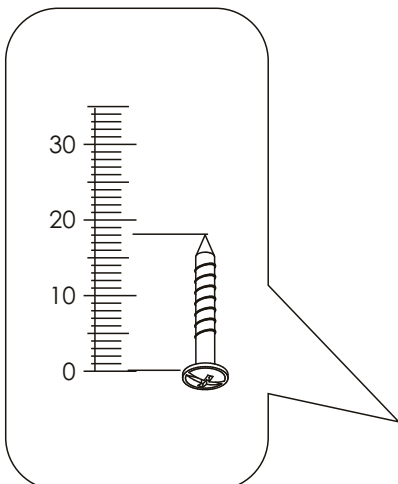


1	1909	348	16	x1	1/4
2	1909	348	16	x1	1/4
3	838	328	16	x1	2/4
4	838	328	16	x4	1/4
4	838	328	16	x6	2/4
5	848	1919	3	x1	4/4
6	1880	432	25	x1	4/4
7	1880	432	25	x1	4/4
8	902	385	40	x1	3/4
9	902	385	40	x1	3/4
					2/4

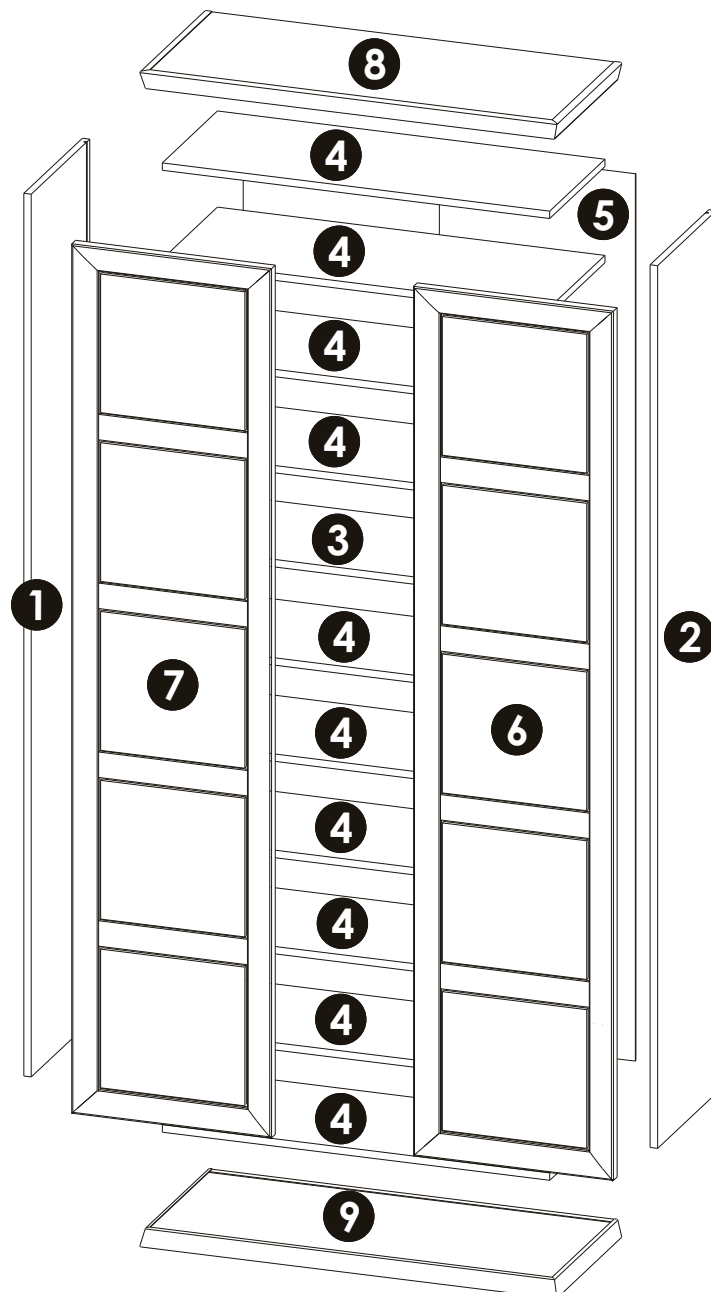
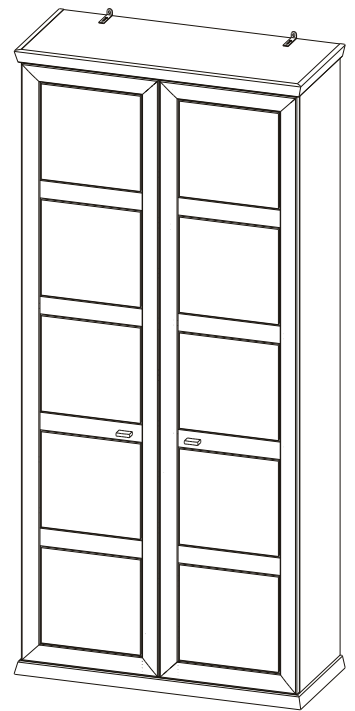





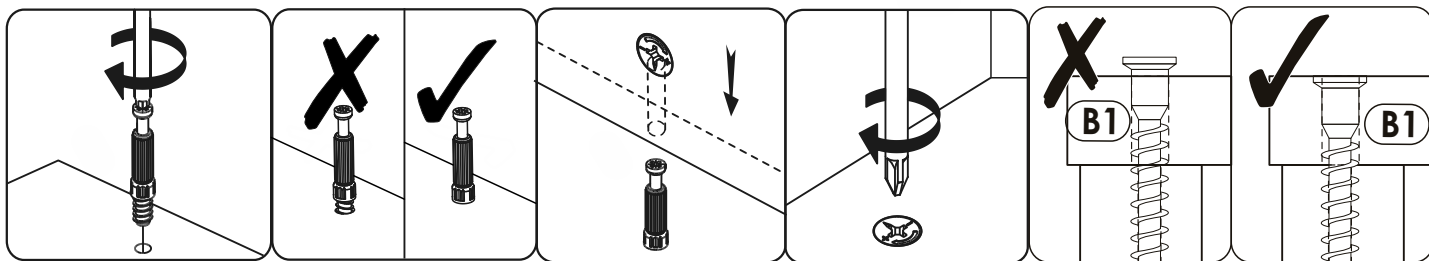


1 ►

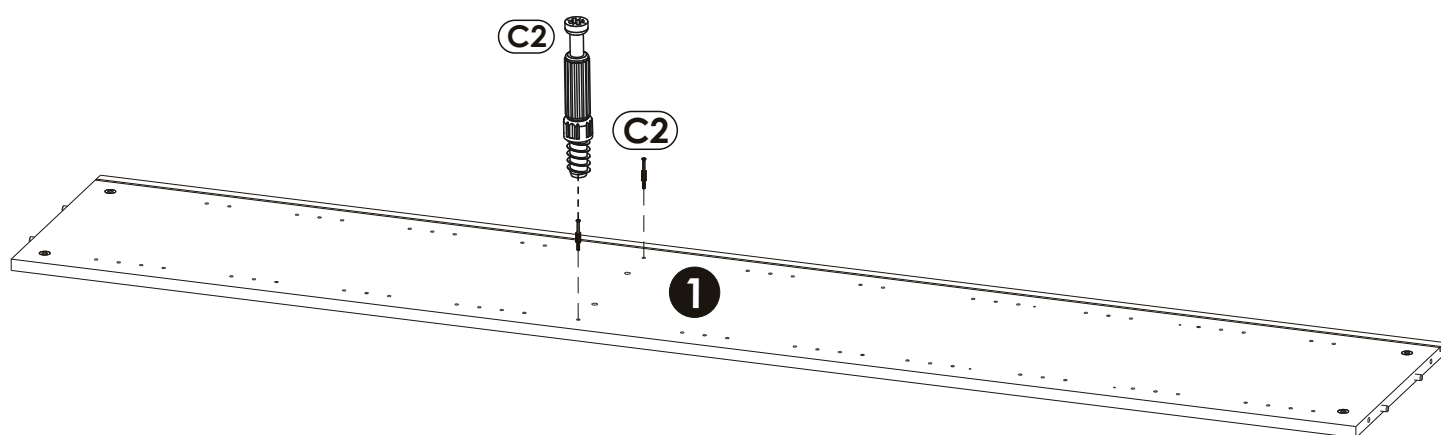
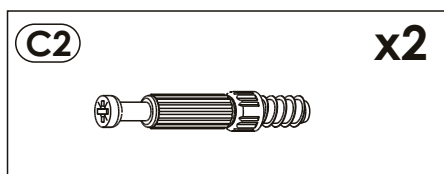



2 ►

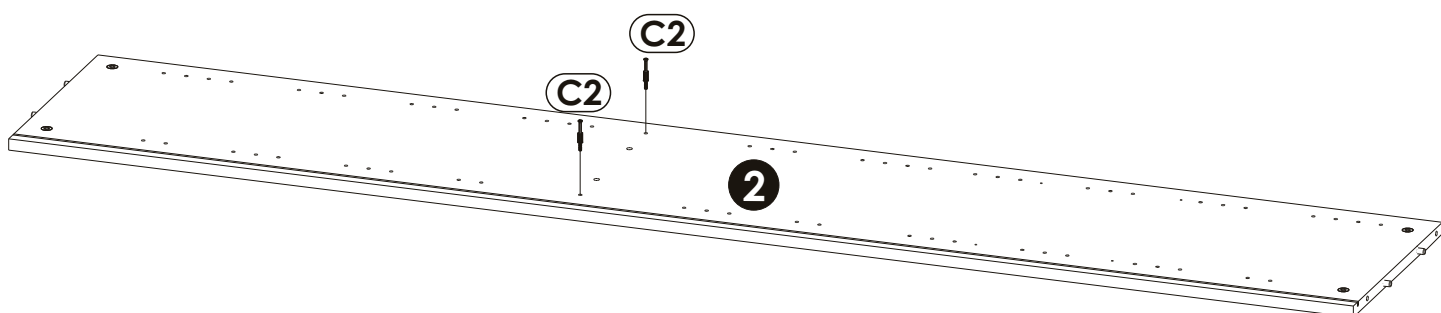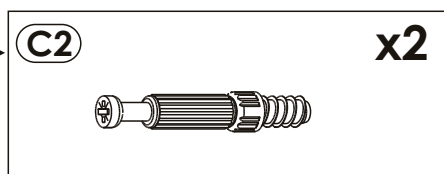

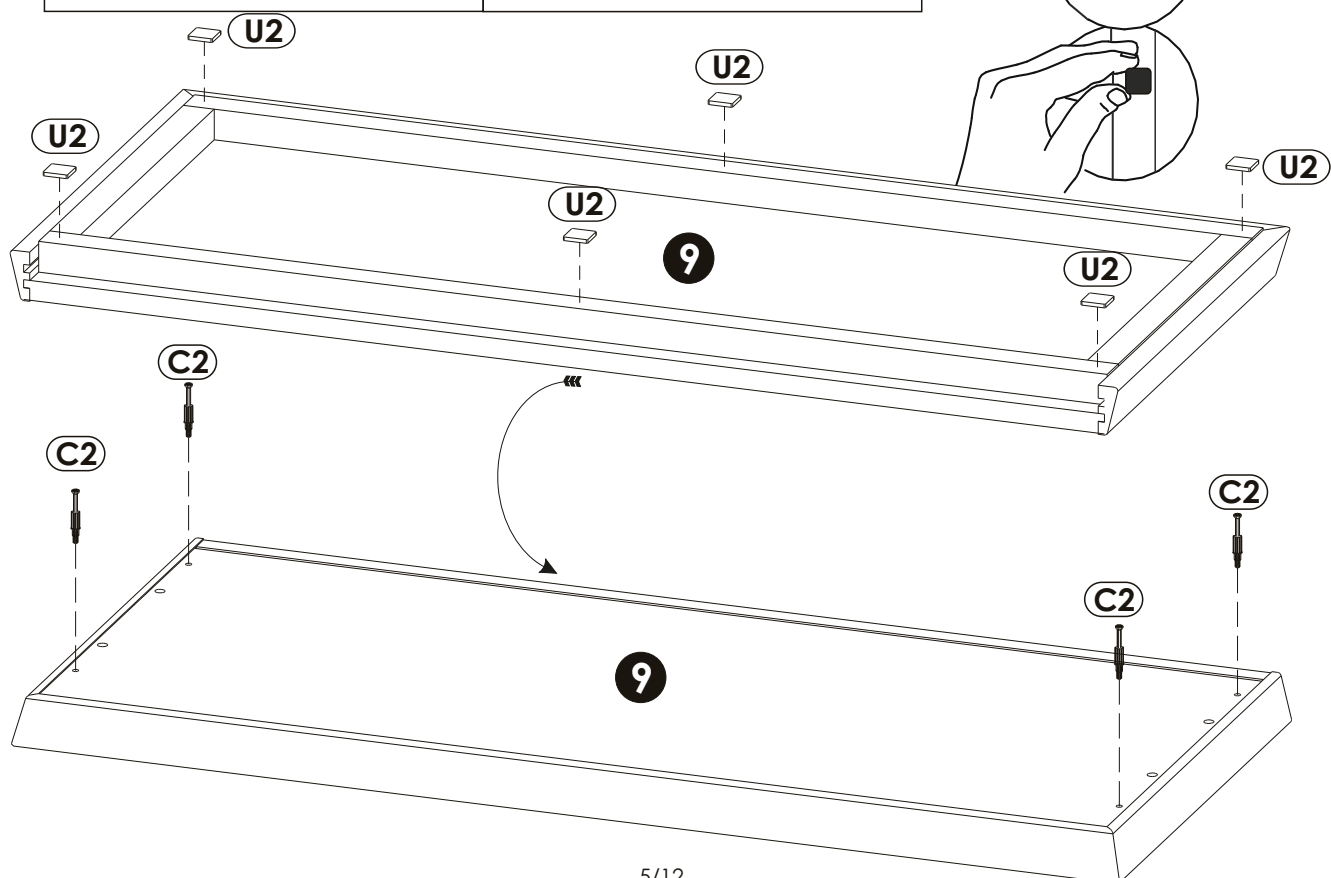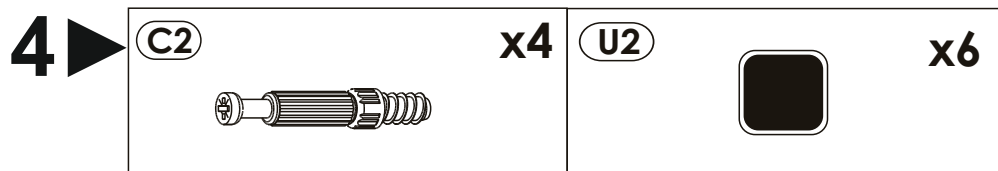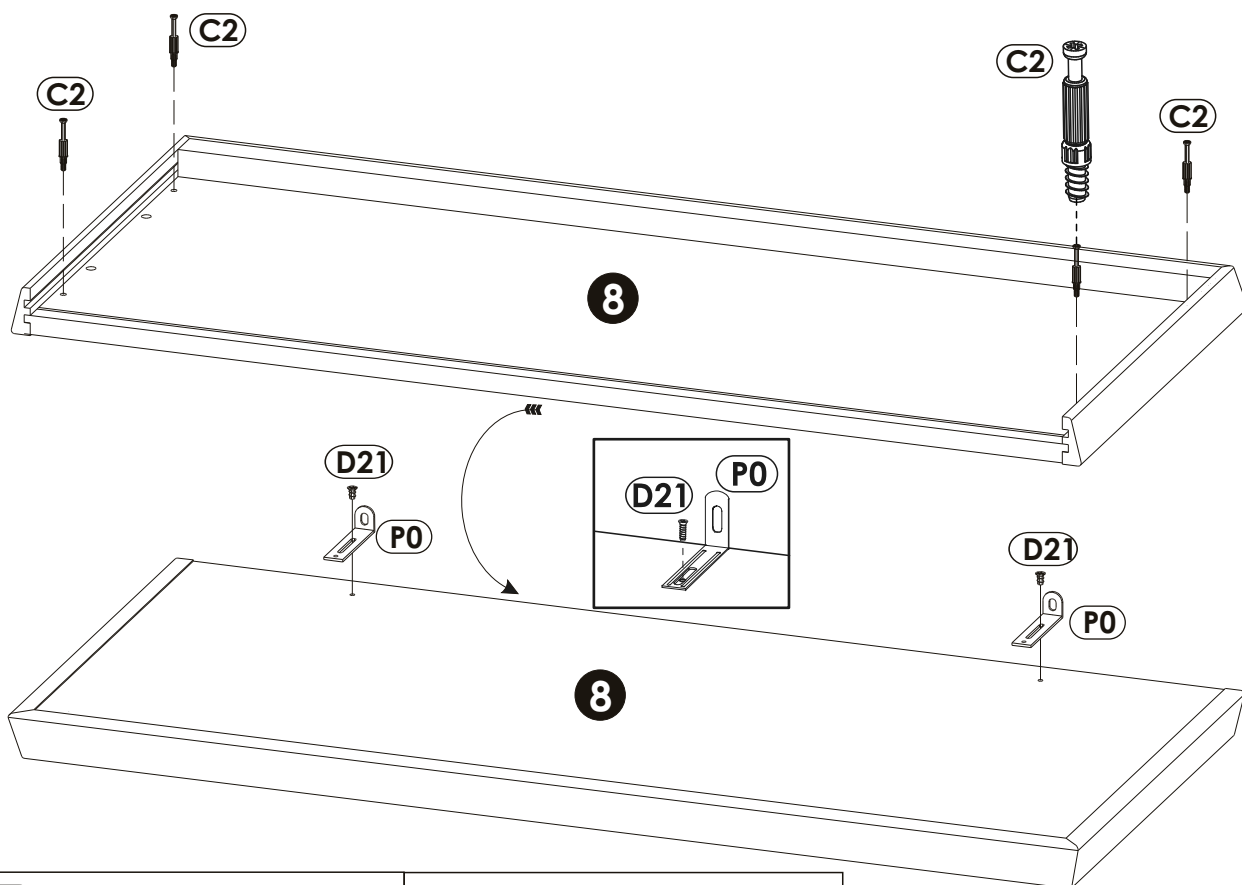
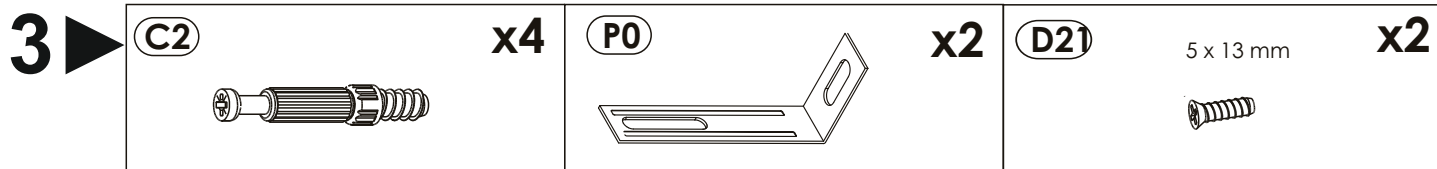



5 ▶

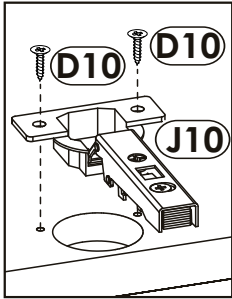J10 	x4	L6 	x1	U3 	x2
H2 	4 x 22 mm x2	D10 	4 x 16 mm x8		


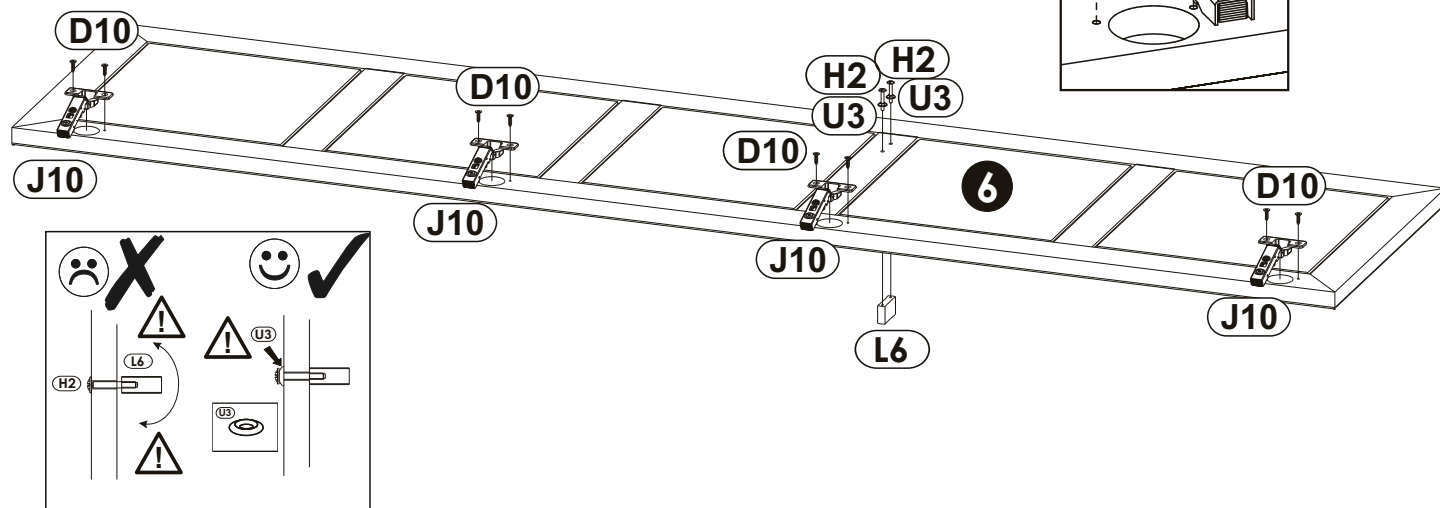


6 ▶


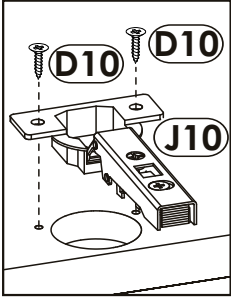
J10 	x4	L6 	x1	U3 	x2
H2 	4 x 22 mm x2	D10 	4 x 16 mm x8		

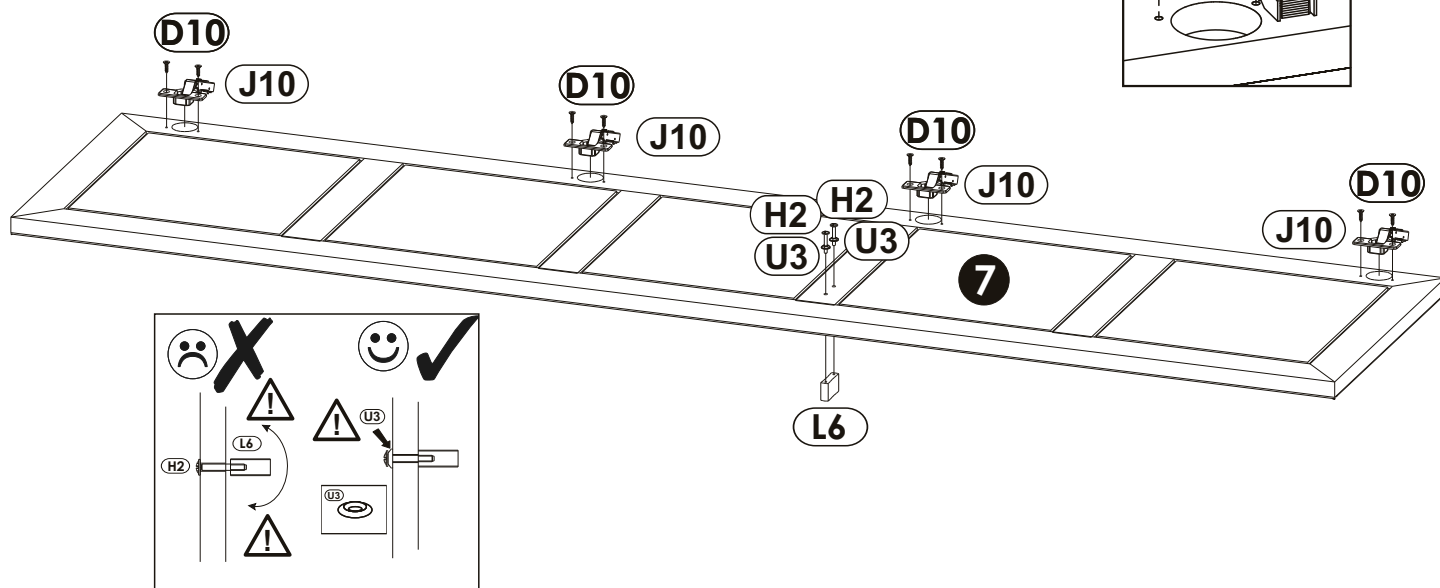



7 ►

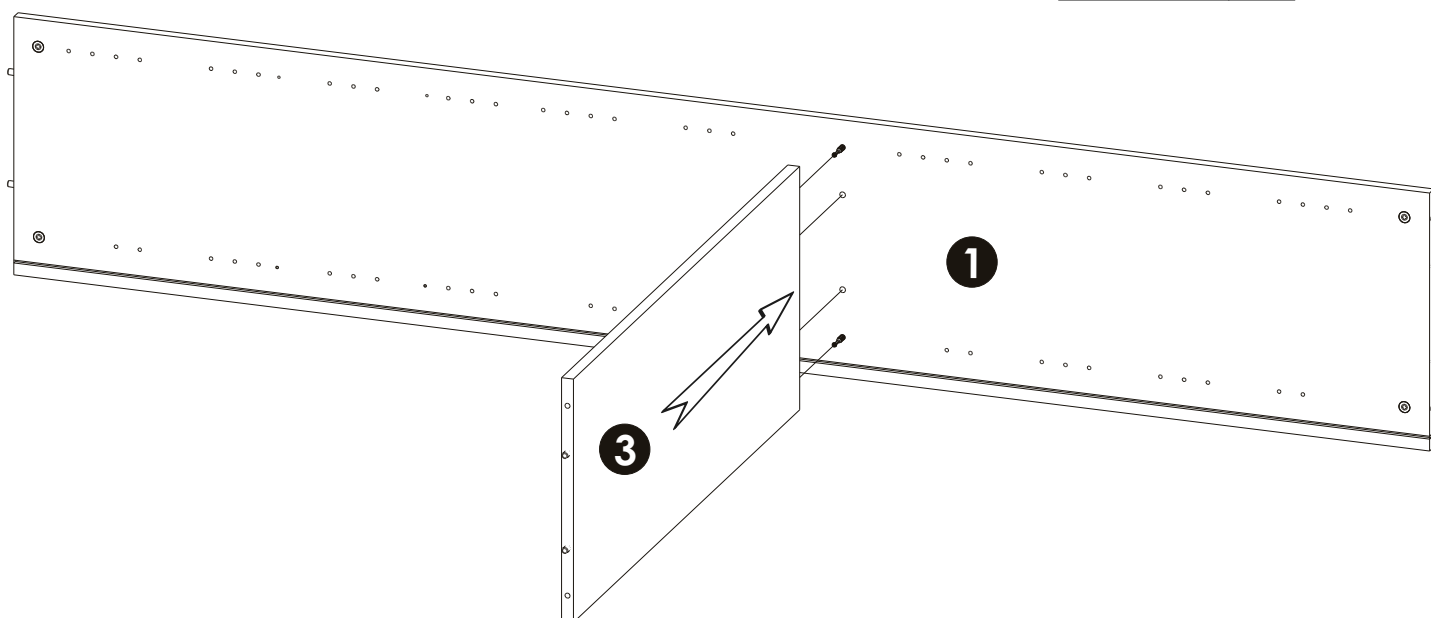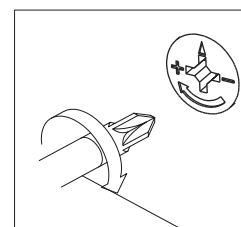


8 ►

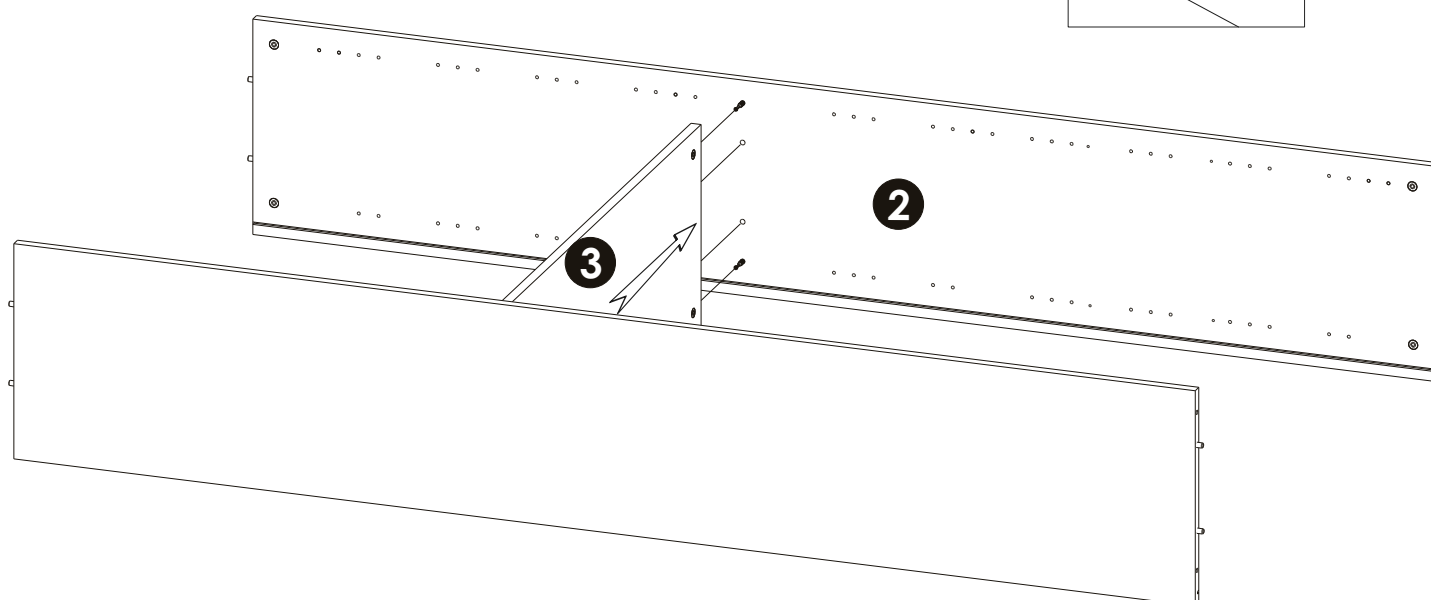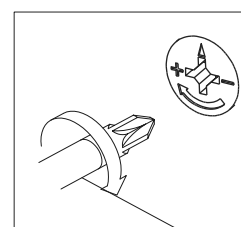



9 ►

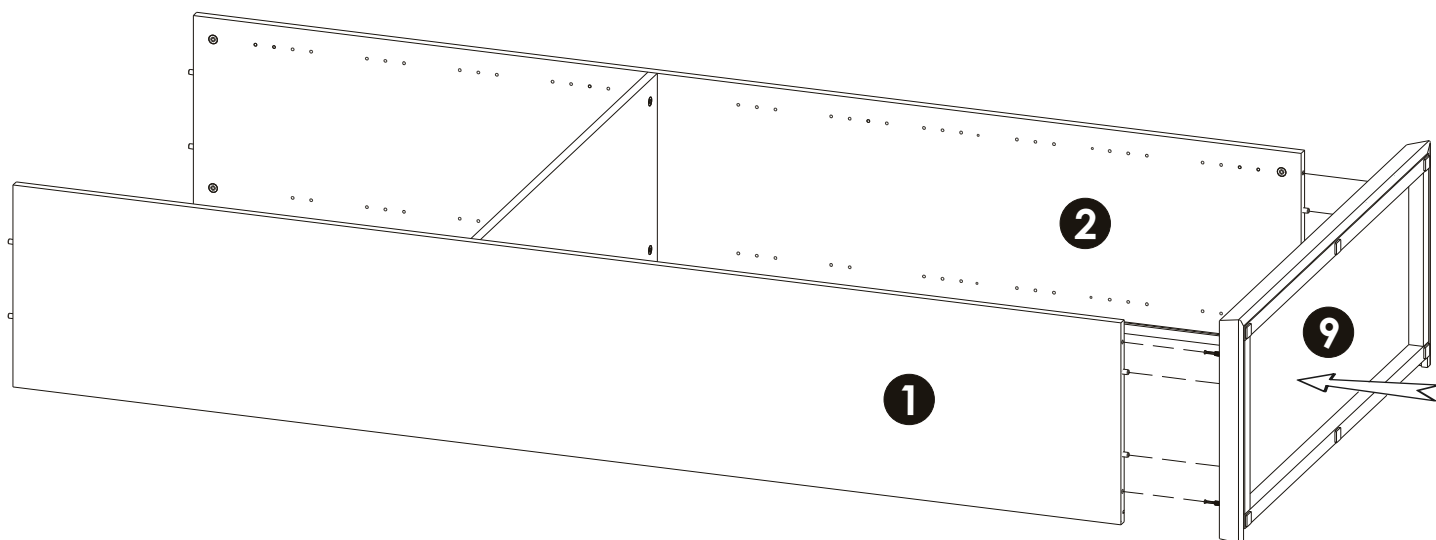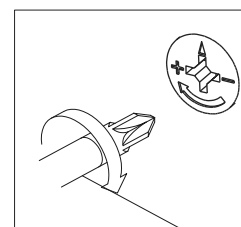









10 ►


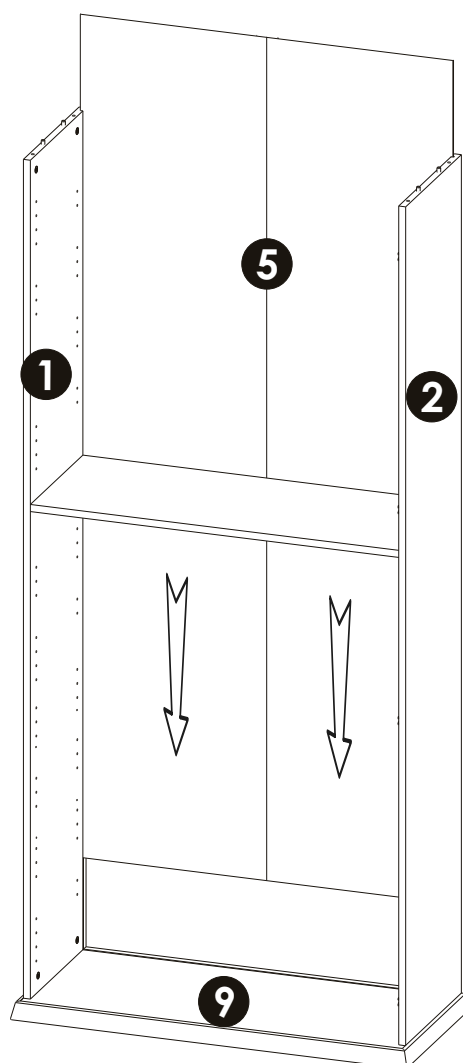


11 ►

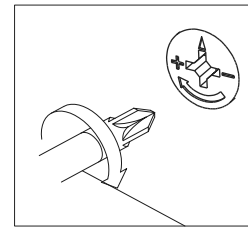
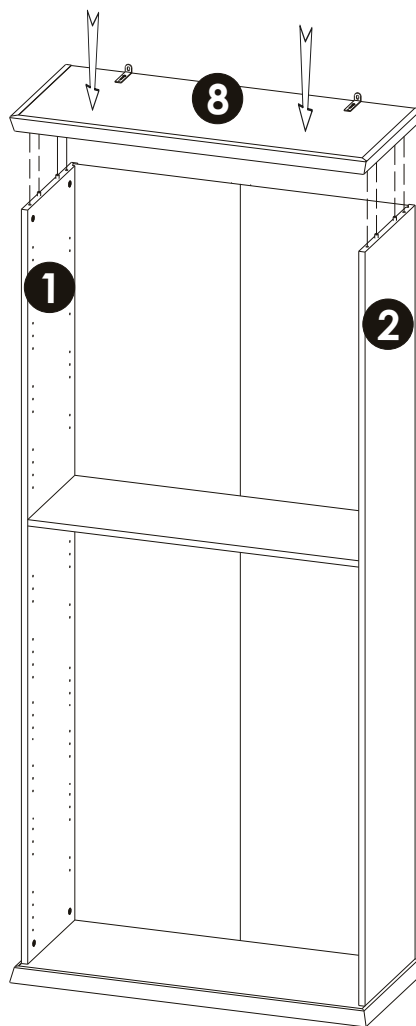


12 ►

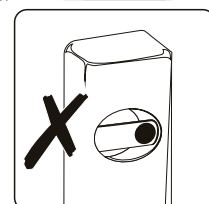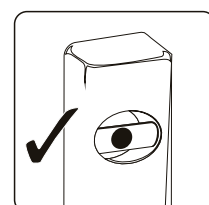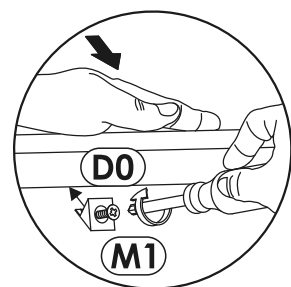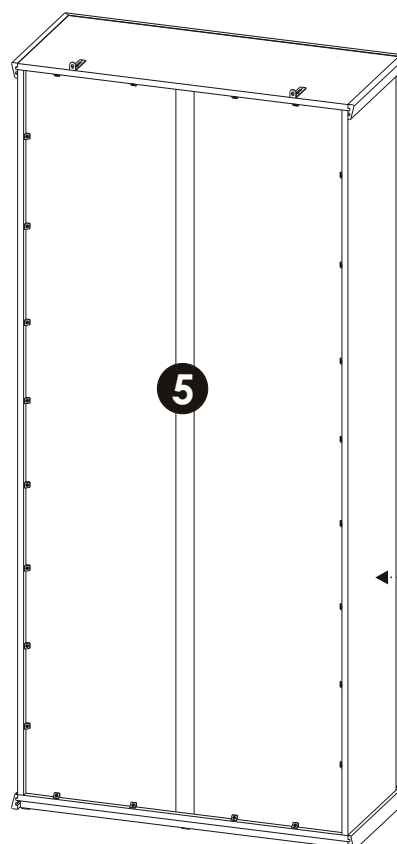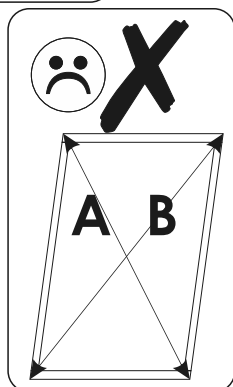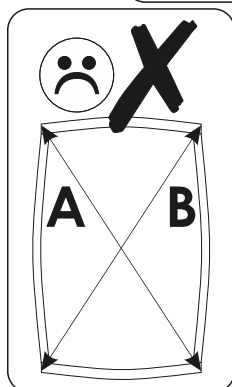
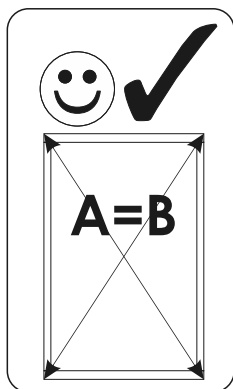
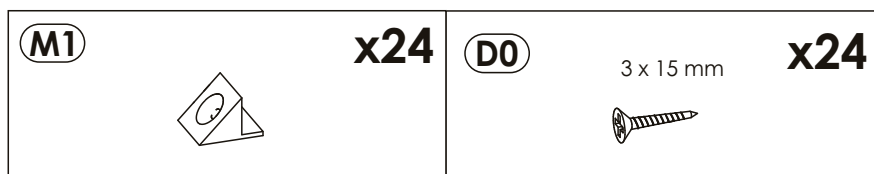


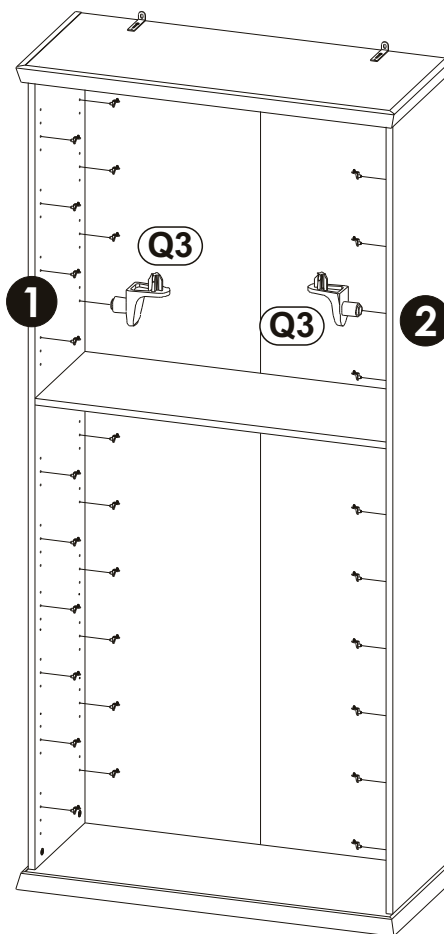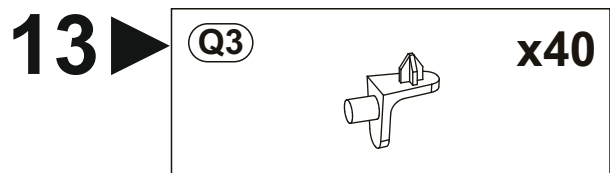






14 ►

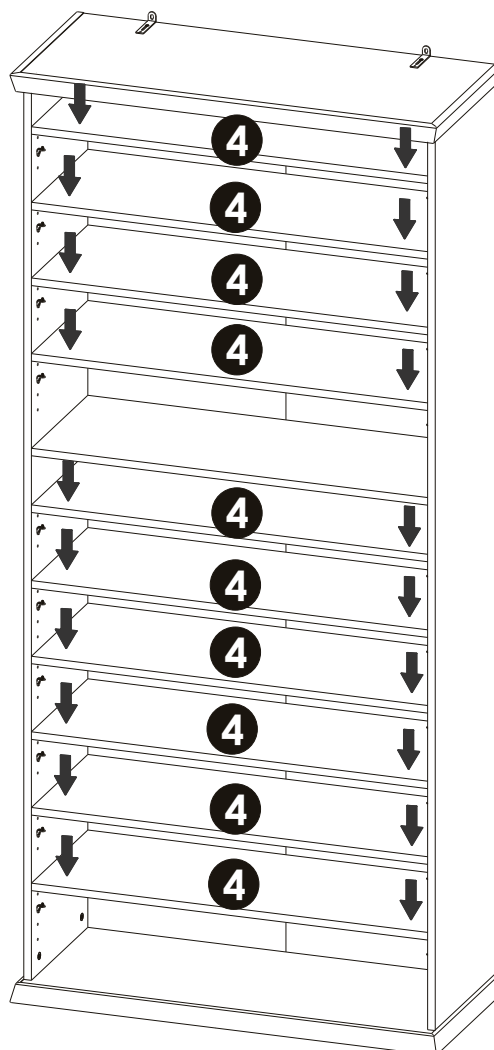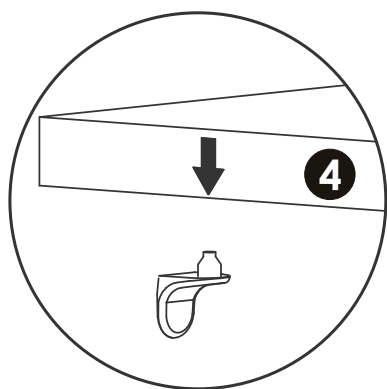




15▶

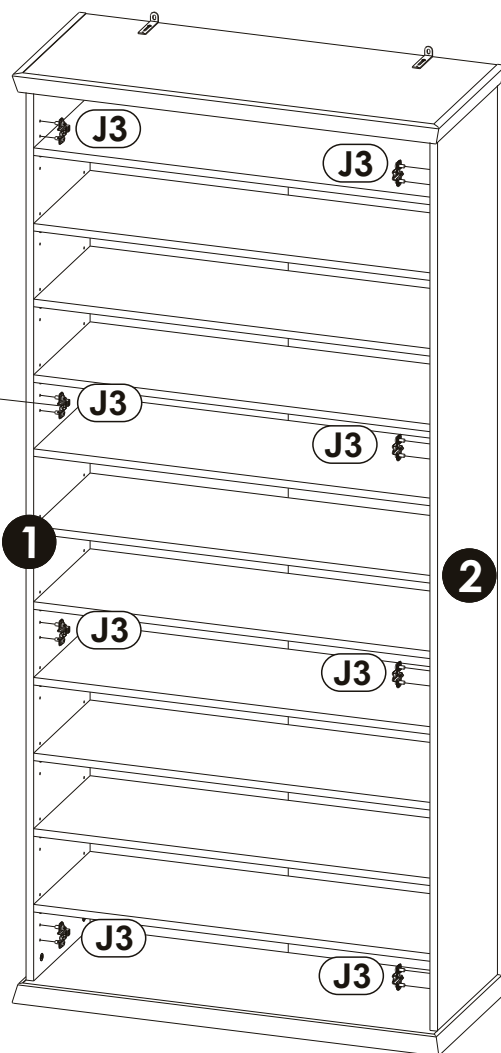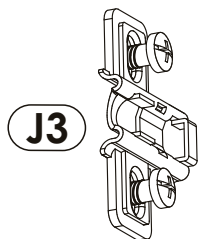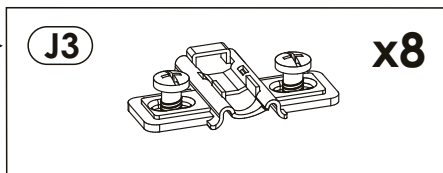

16▶

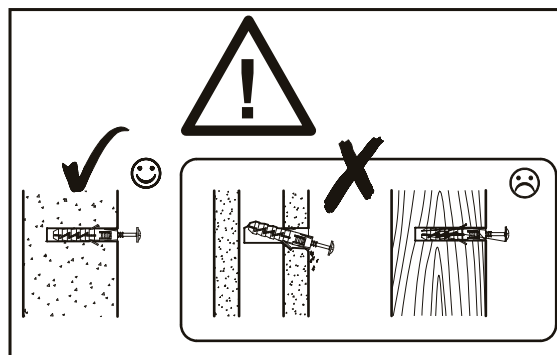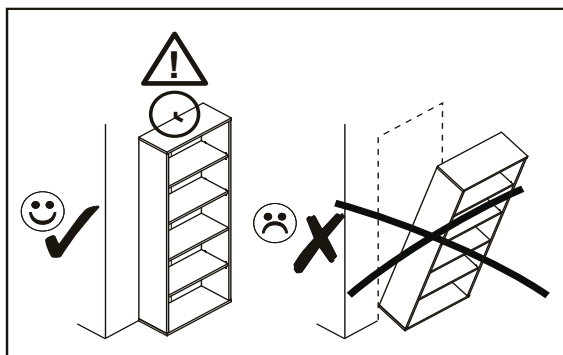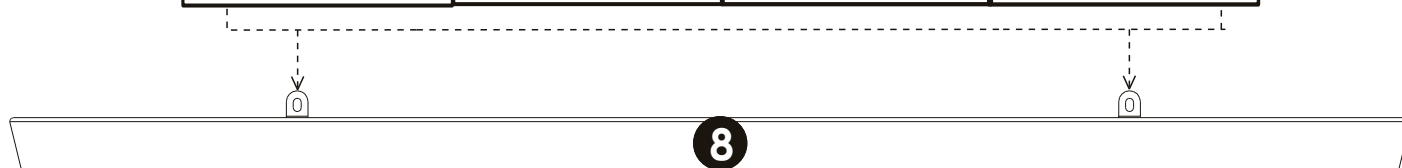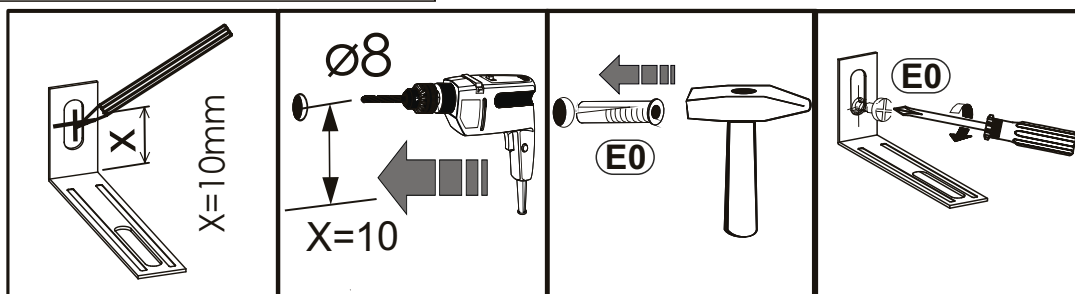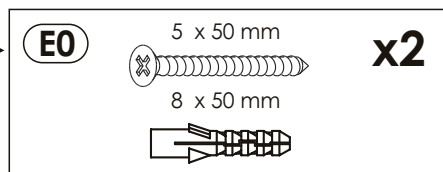

17▶

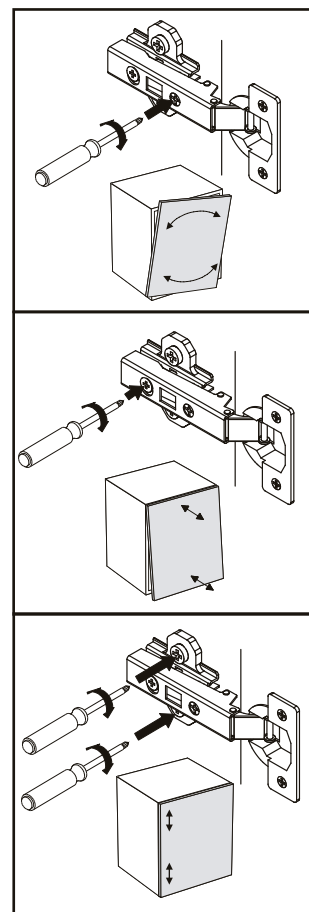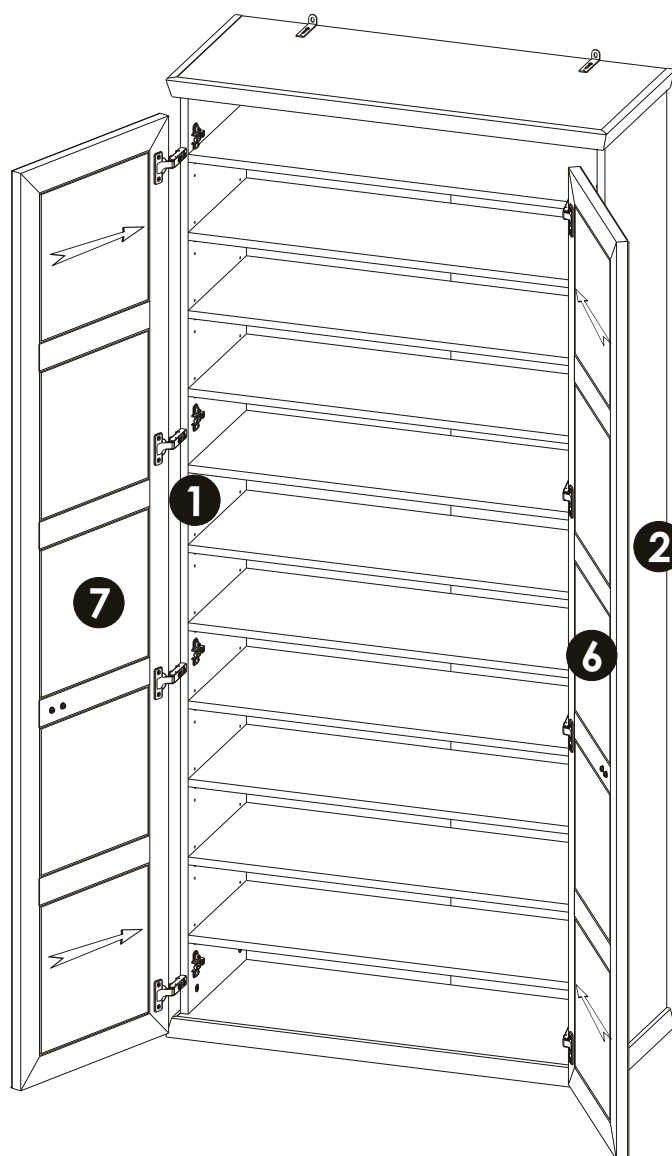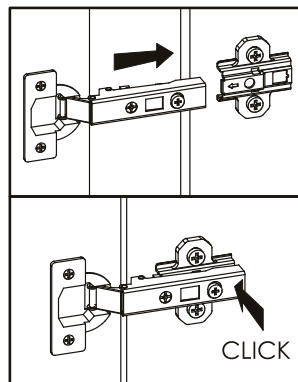

18▶

