
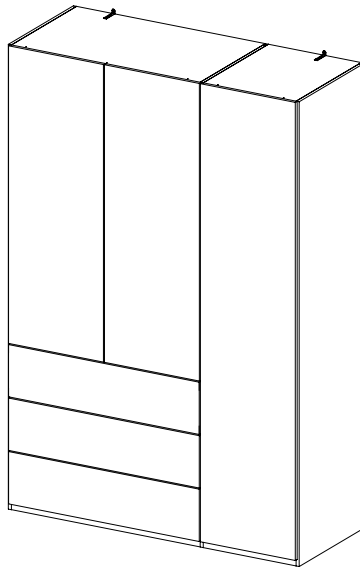
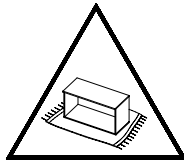


1.

MD216_01











rauch

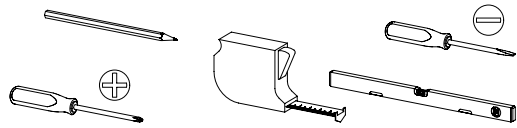

MD216



3.

2.

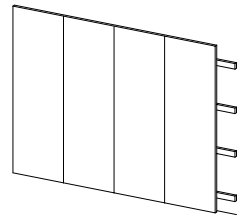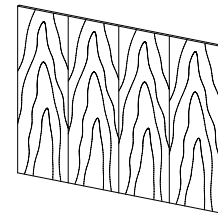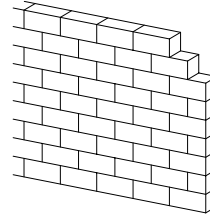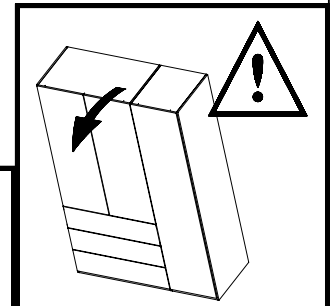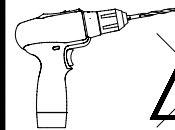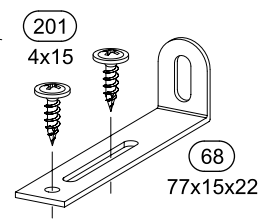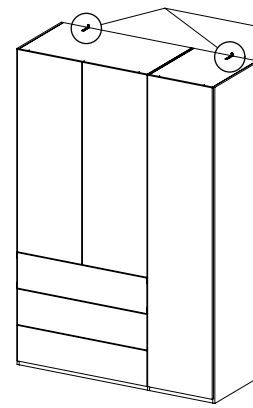

MD216


4.

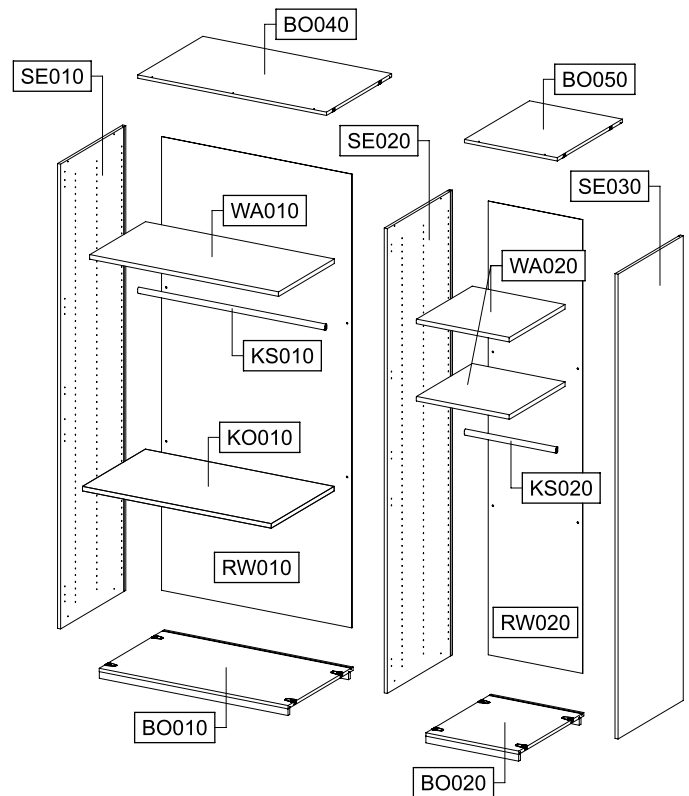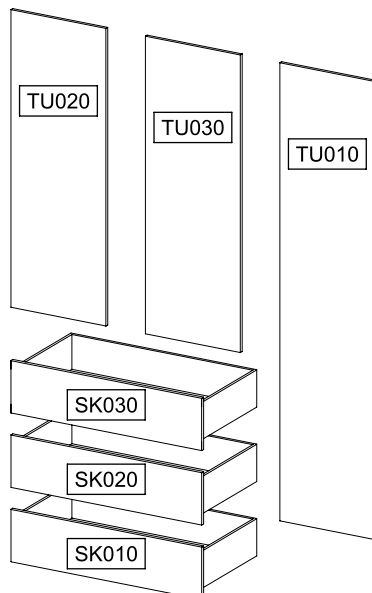

MD216

MD216


5.

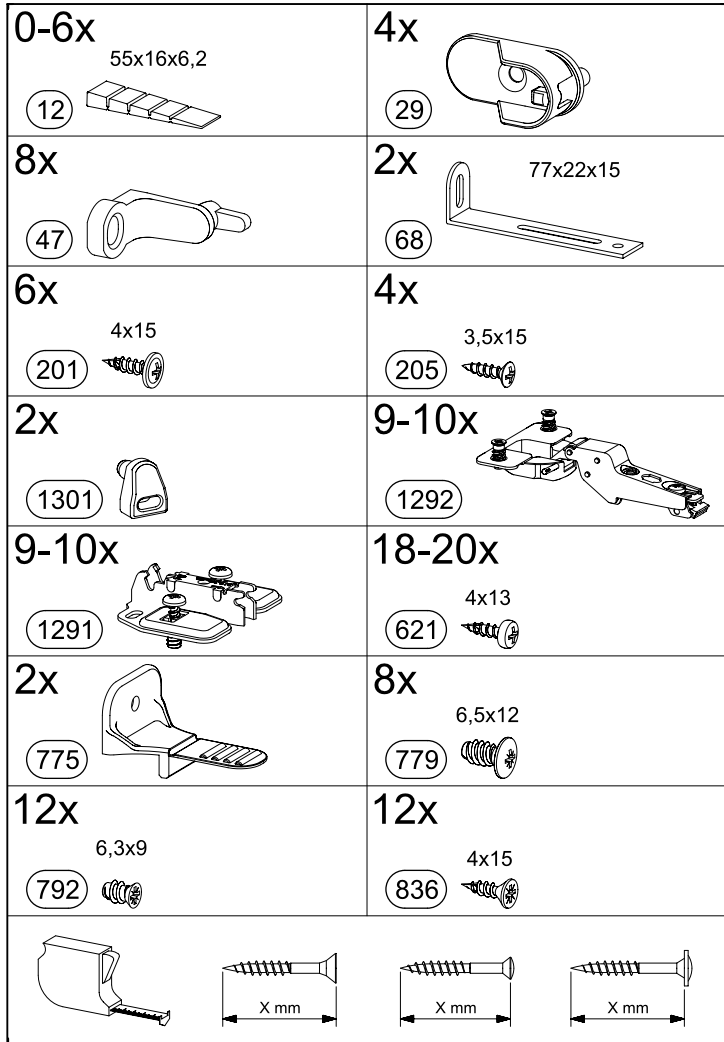

MD216


7.

6.

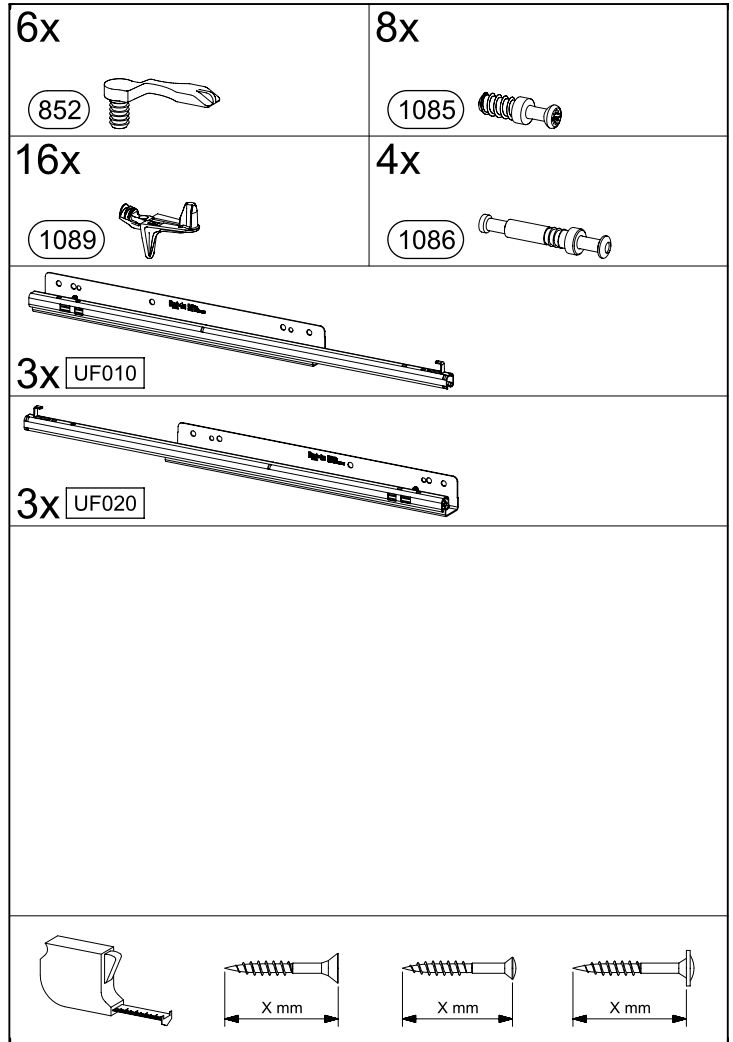


MD216


8.

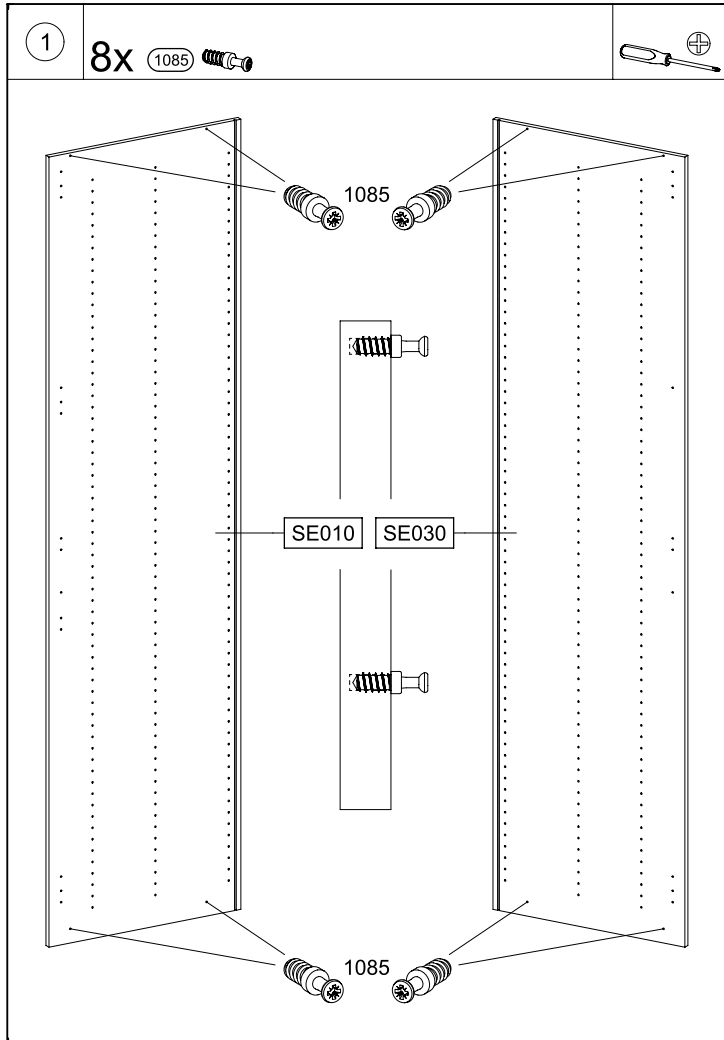

MD216

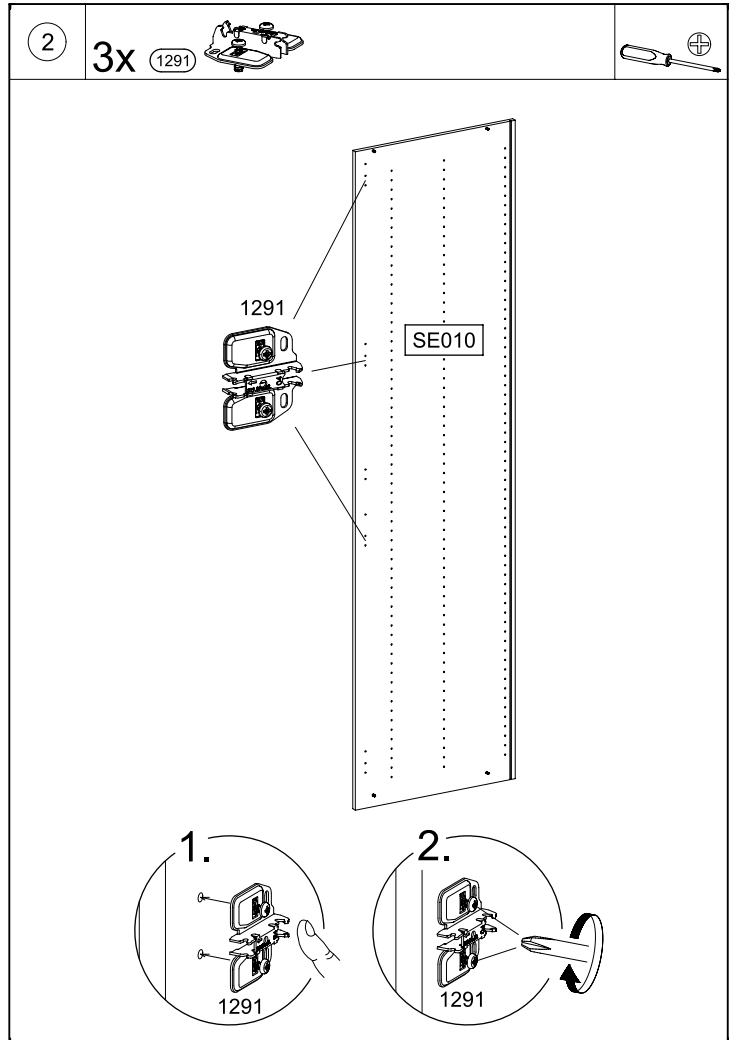


MD216

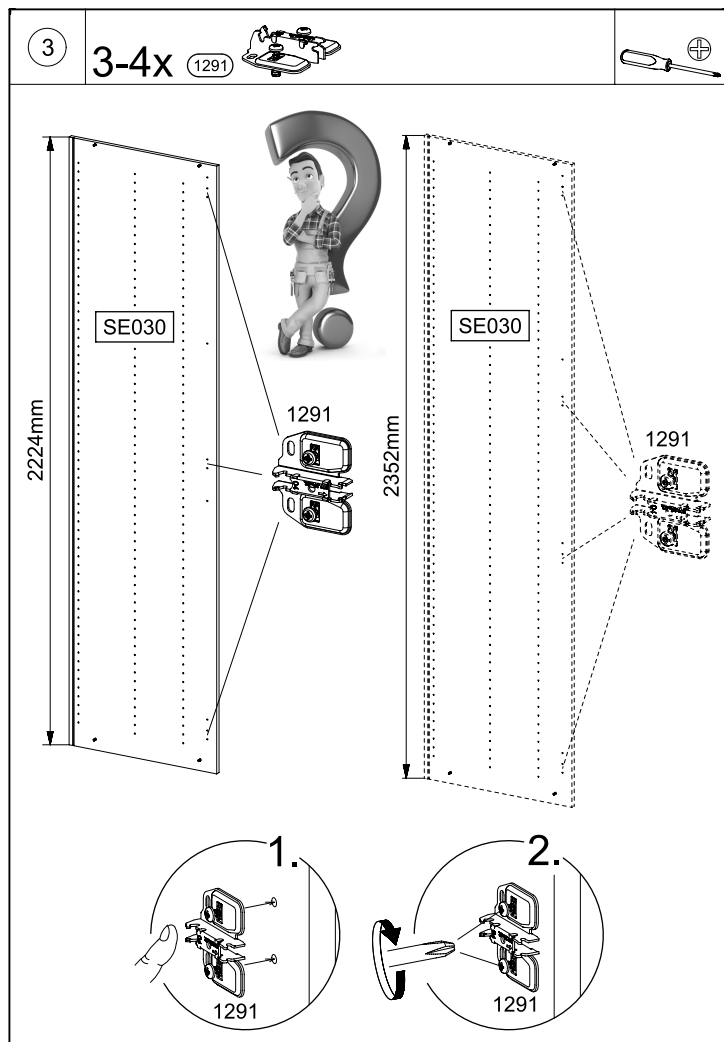


MD216

11.

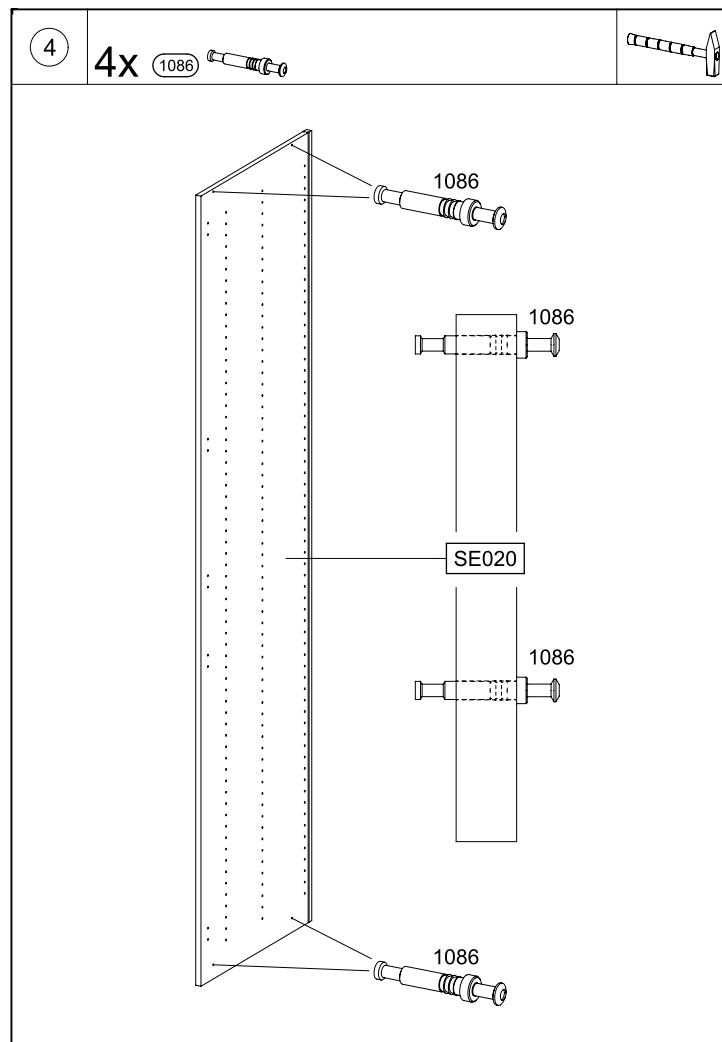


MD216


12.

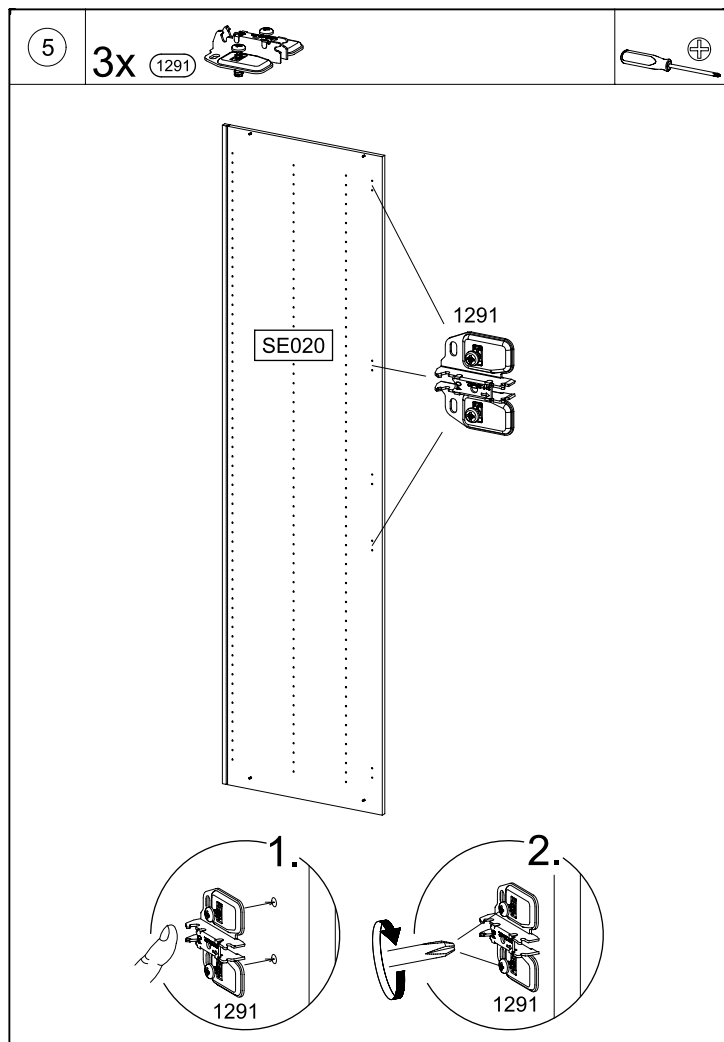


MD216

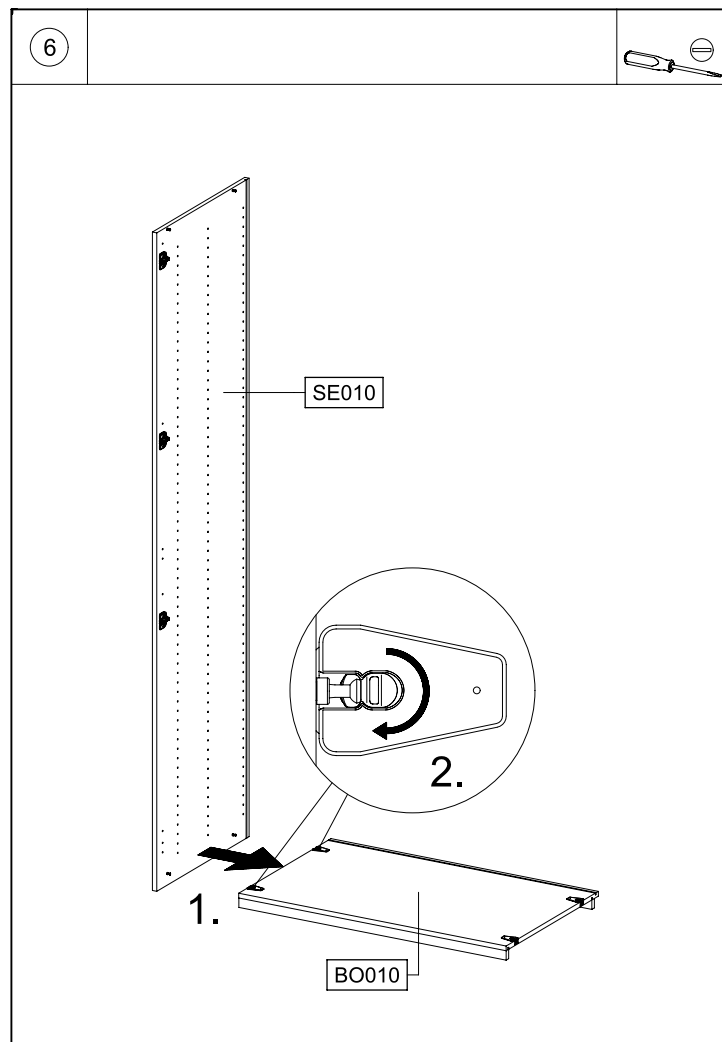


MD216

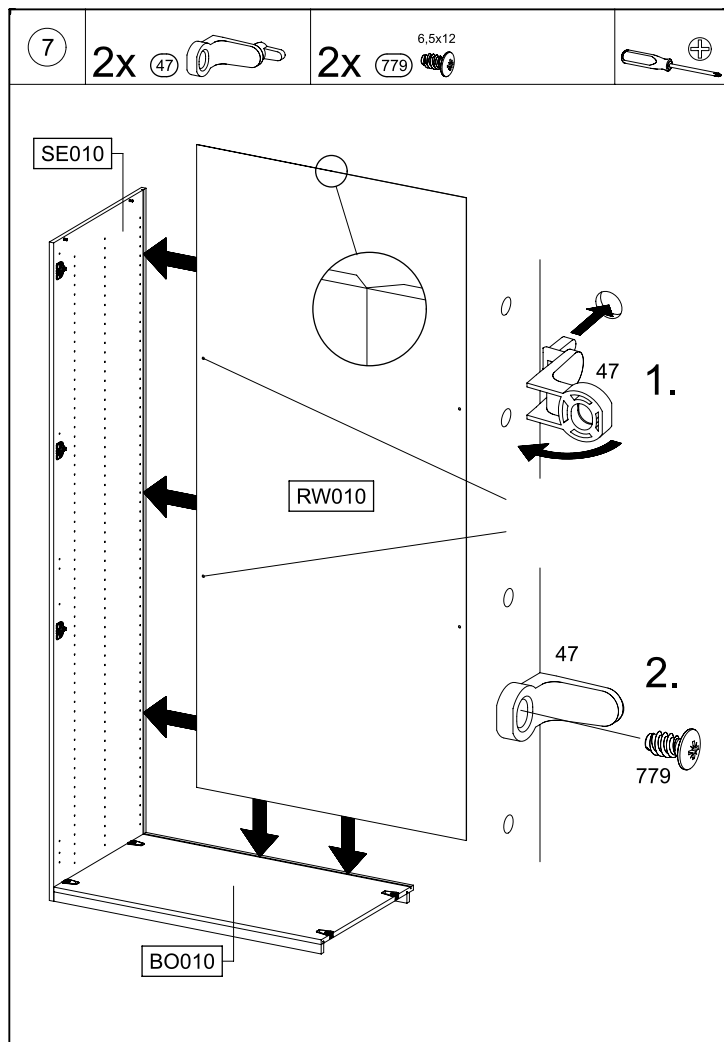


MD216

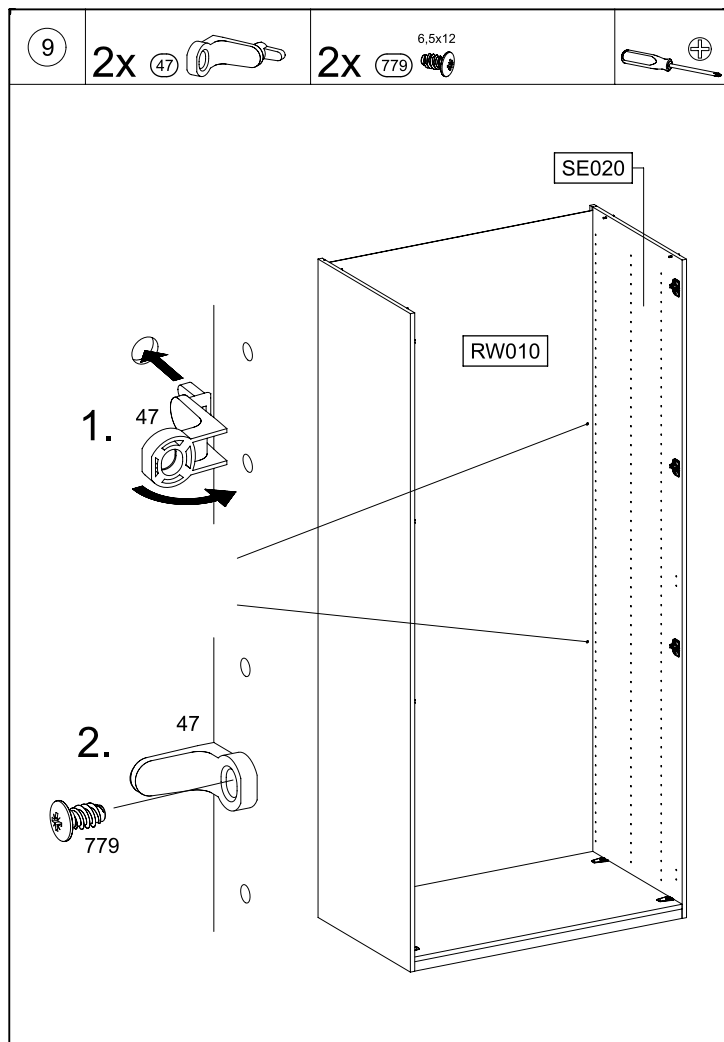


MD216

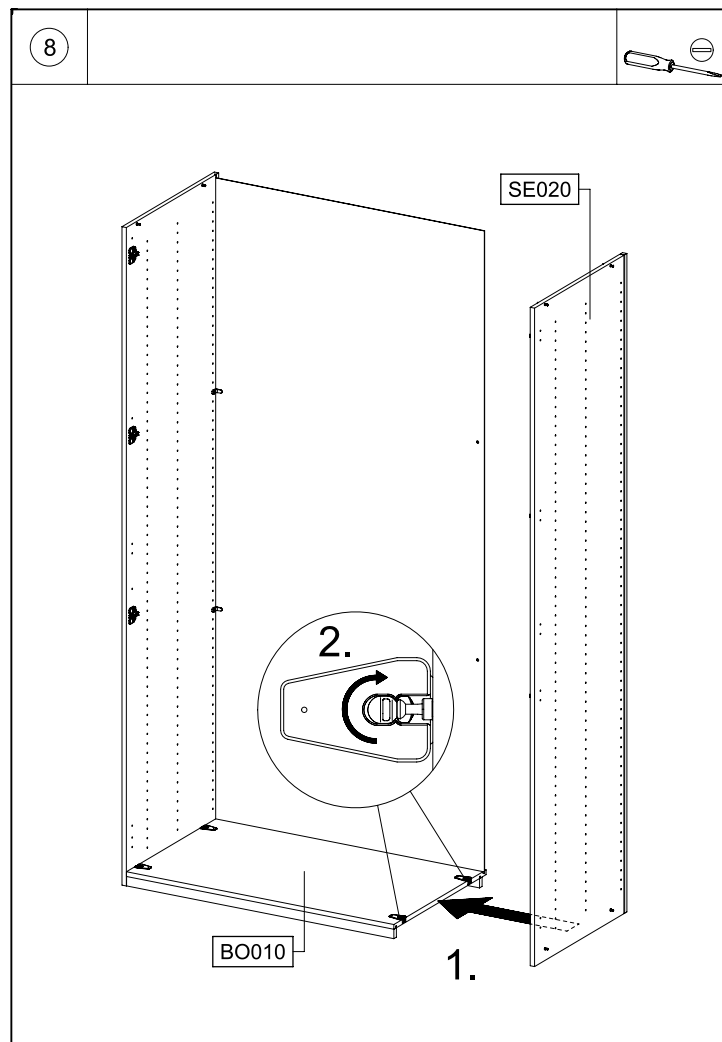


MD216

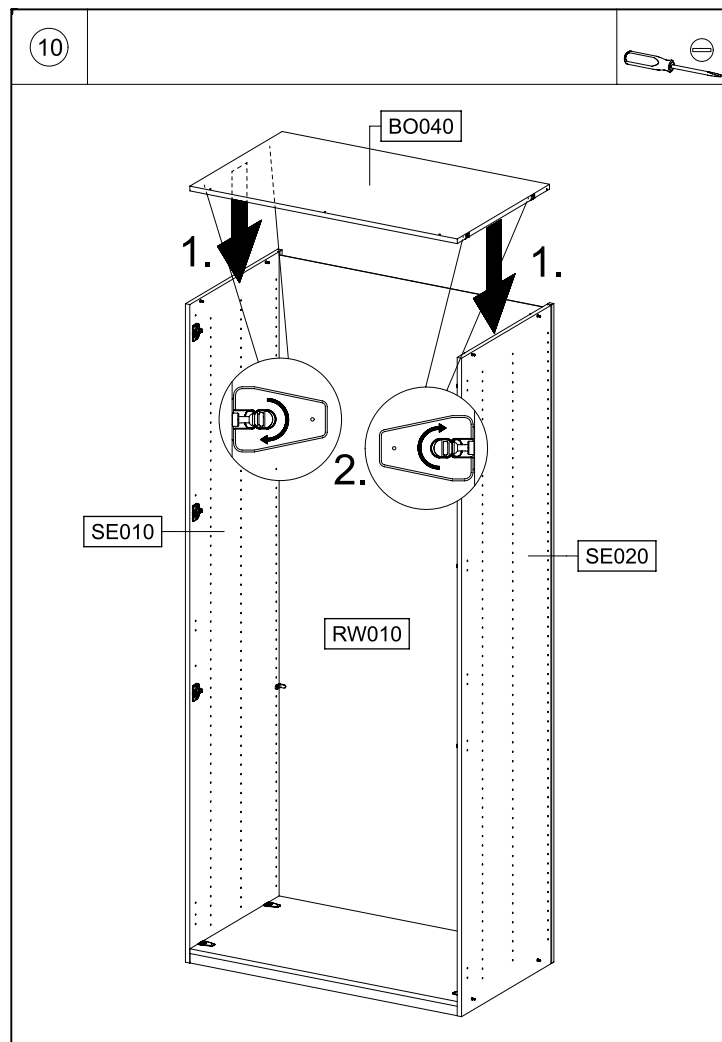


MD216

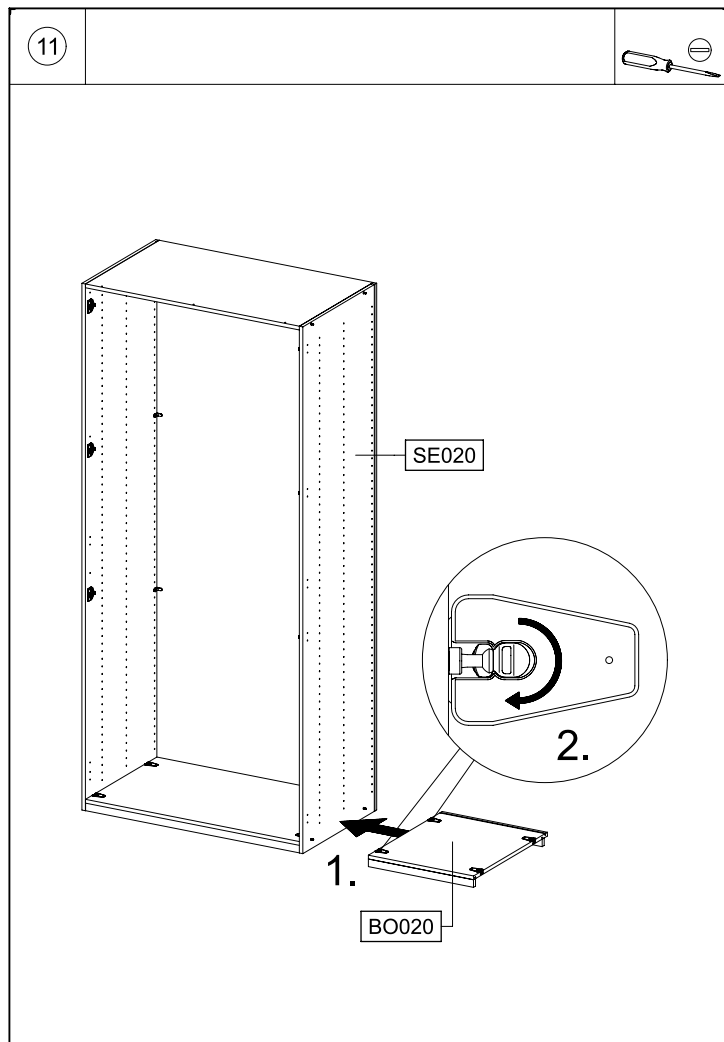


MD216

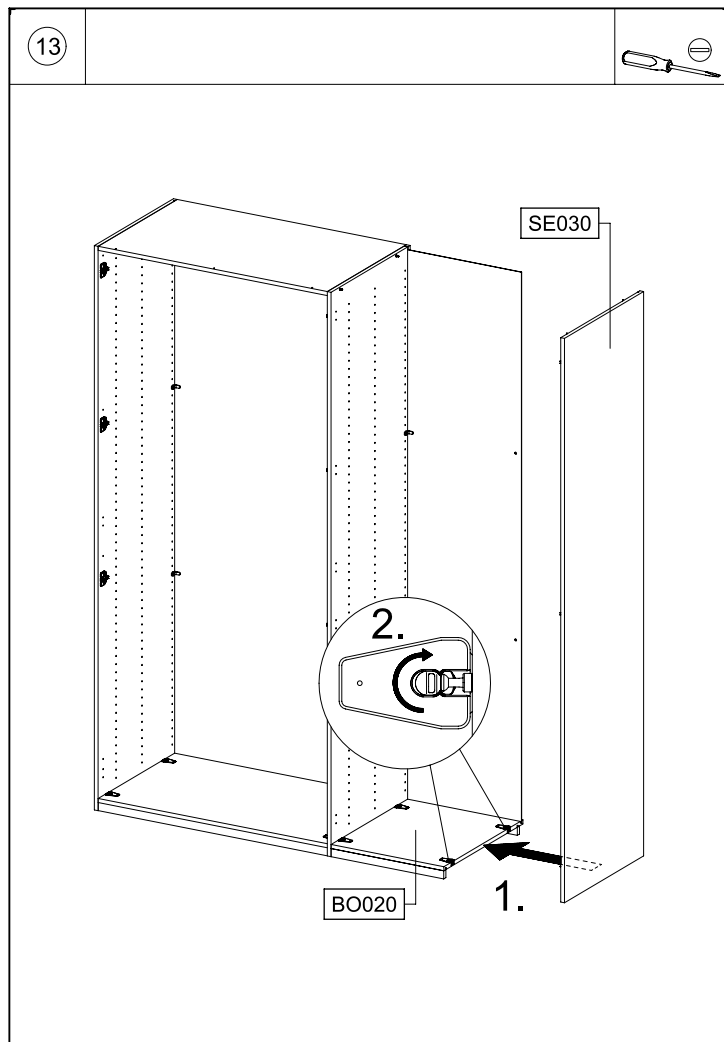





MD216

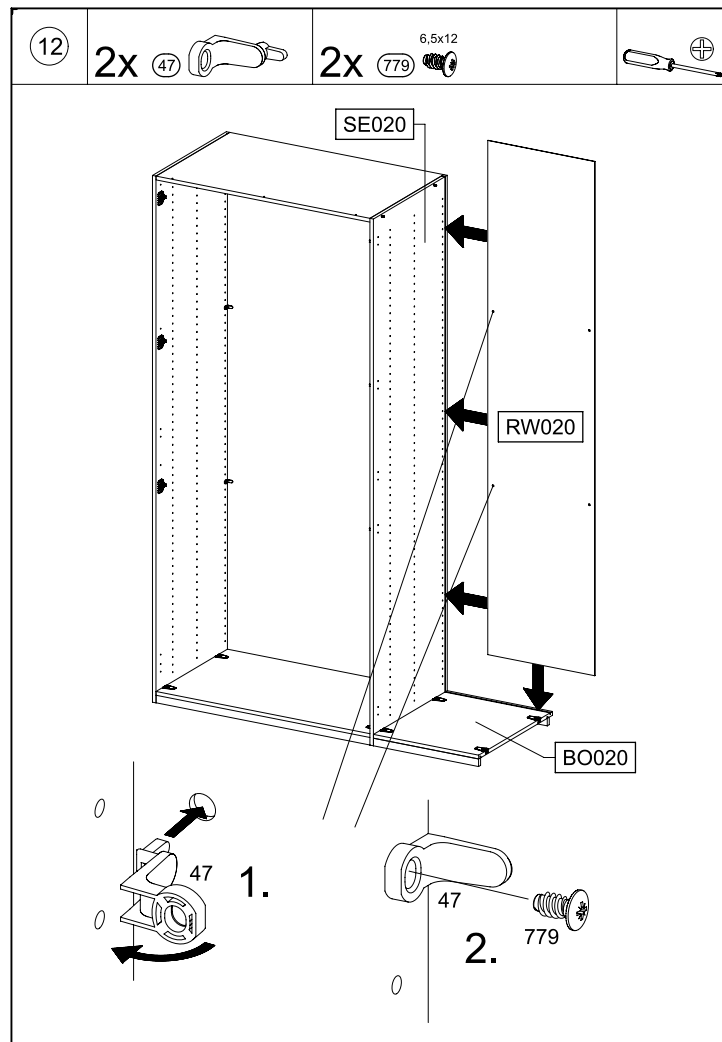


MD216

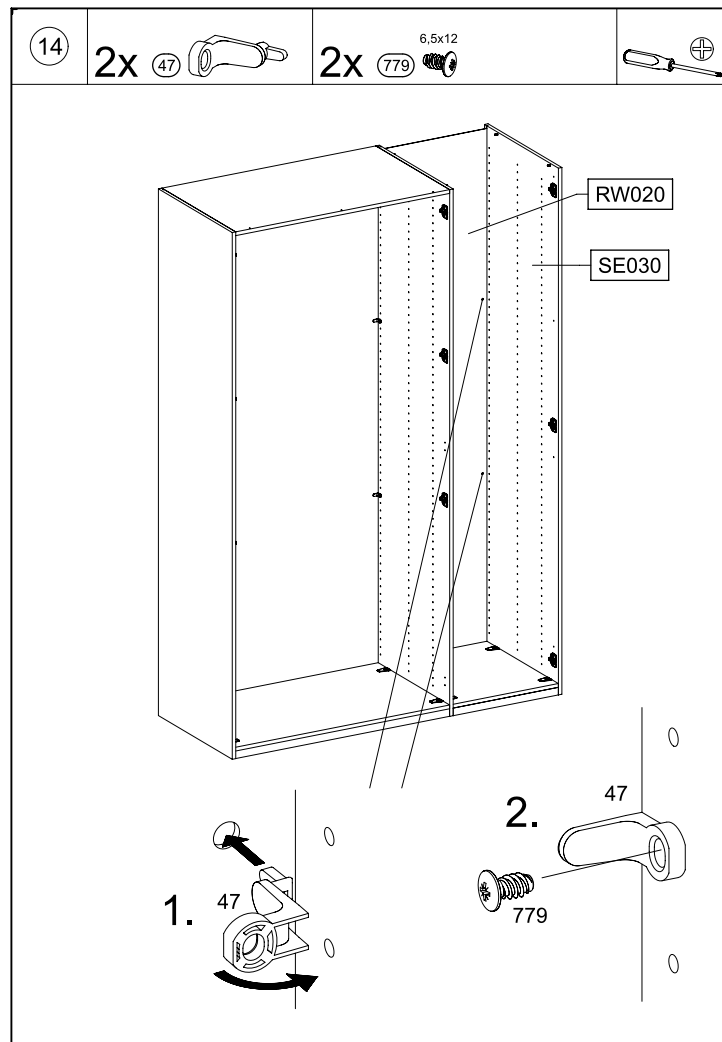


MD216

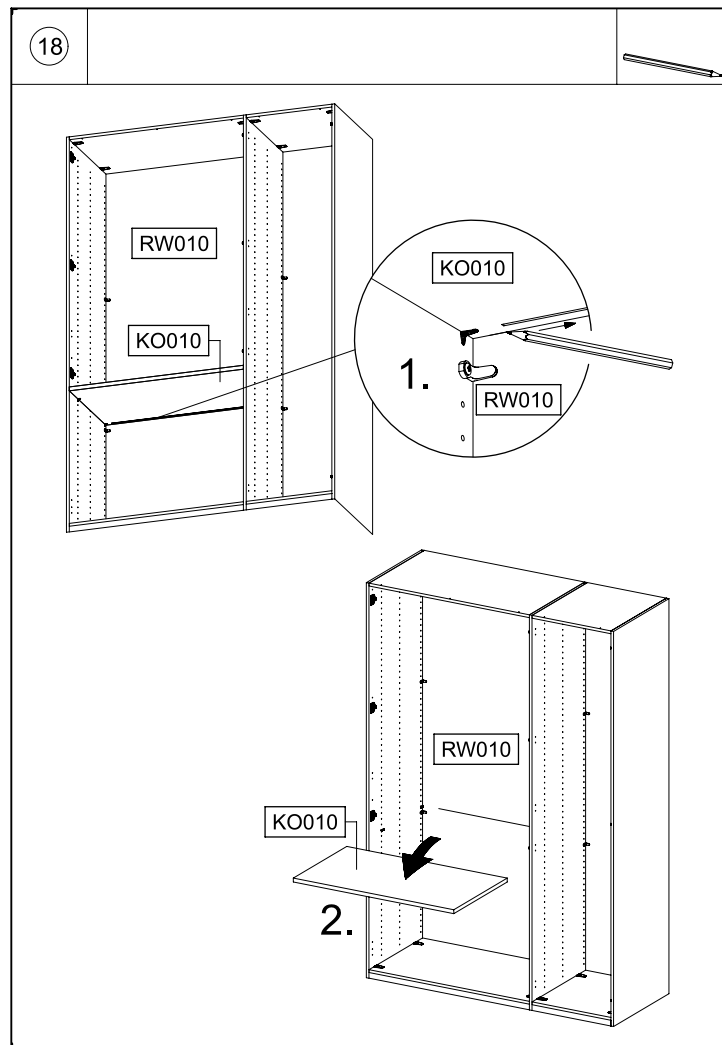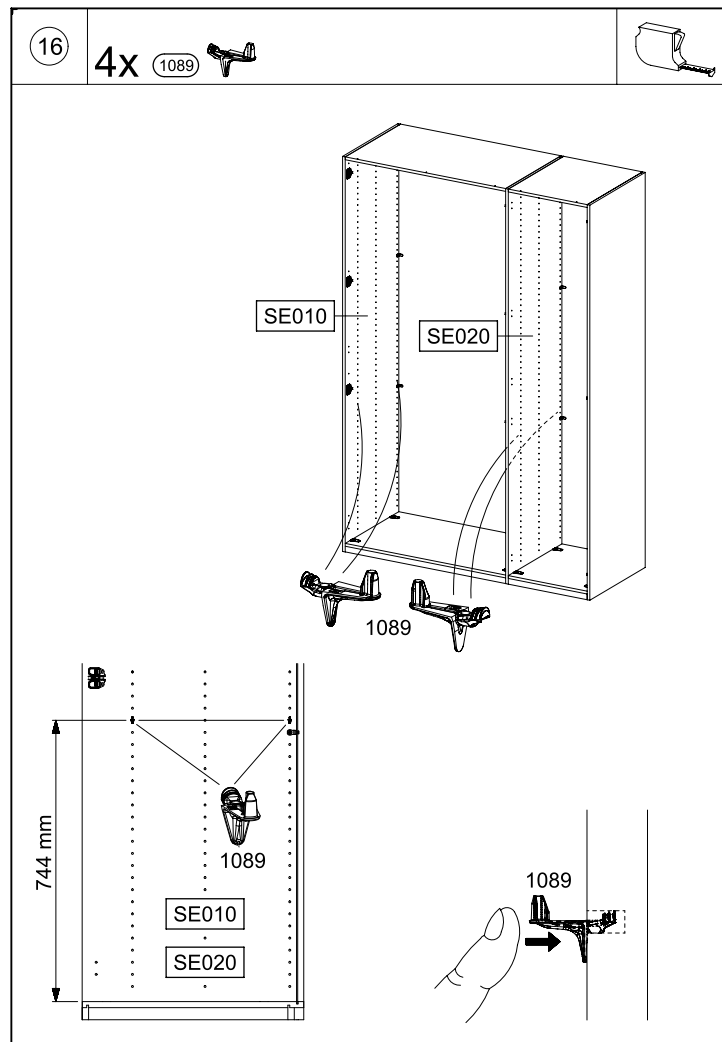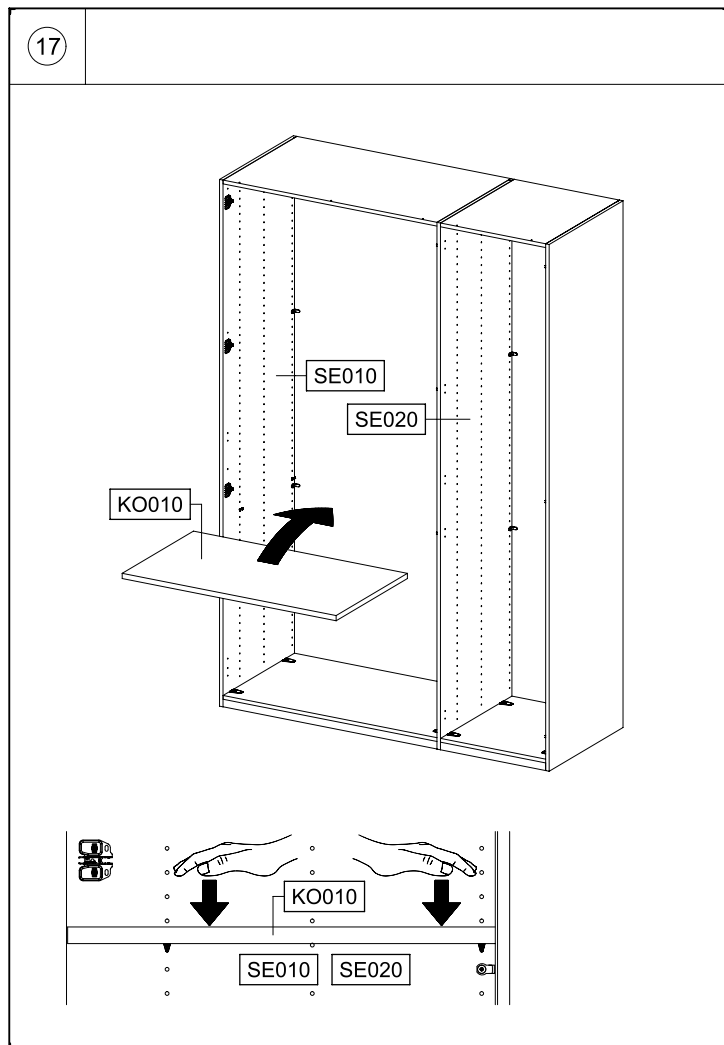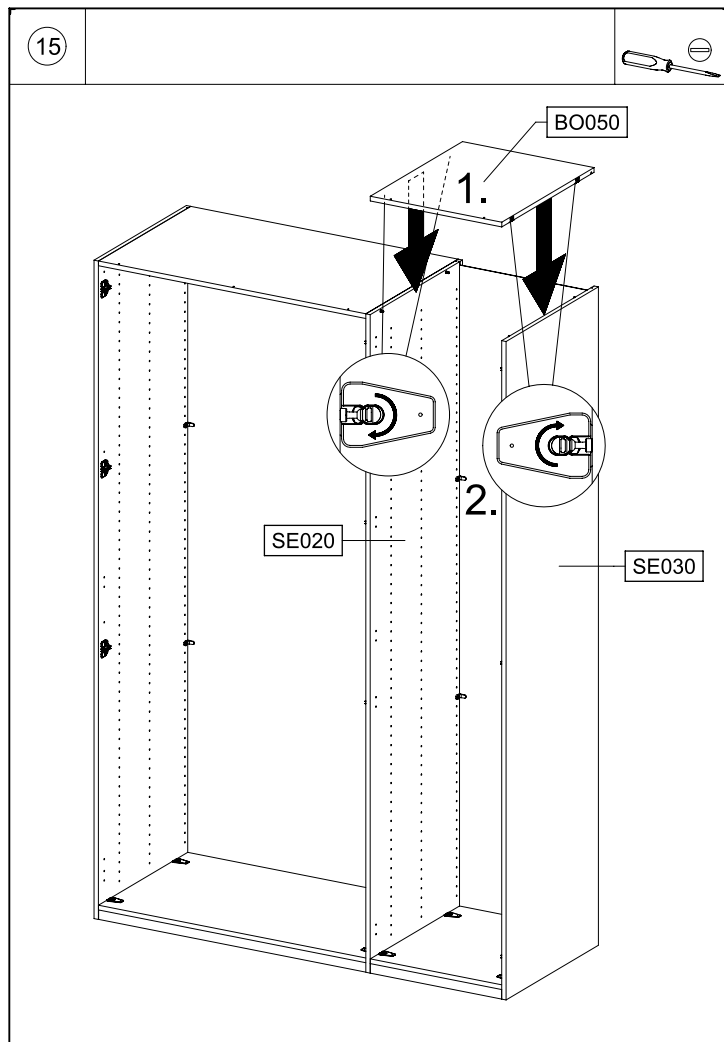


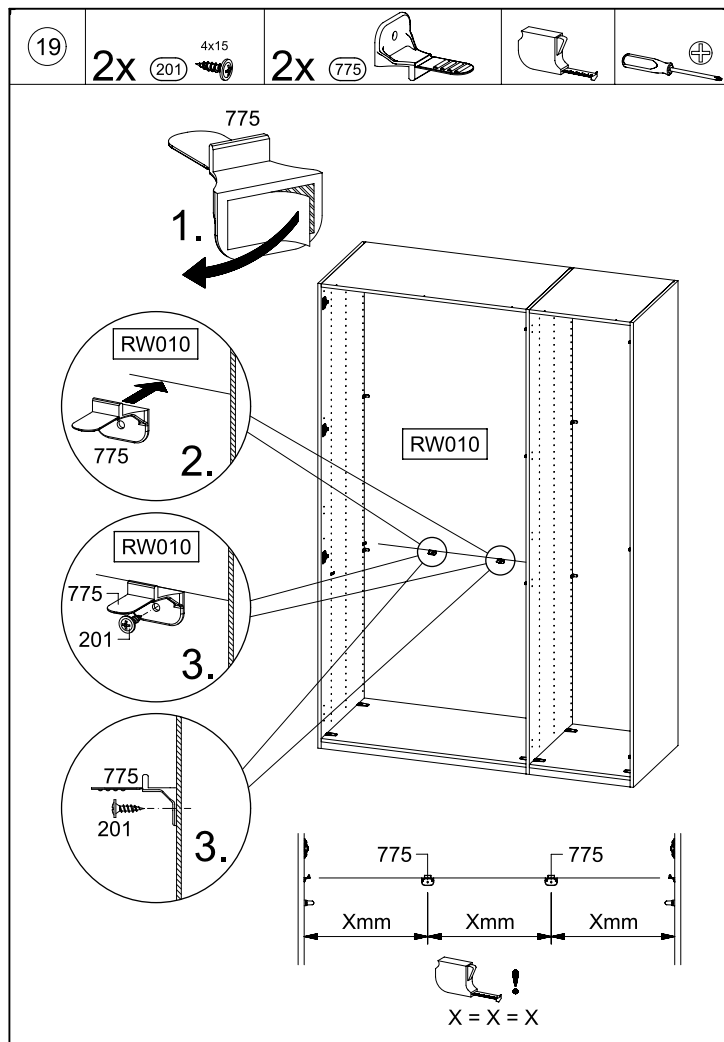


MD216

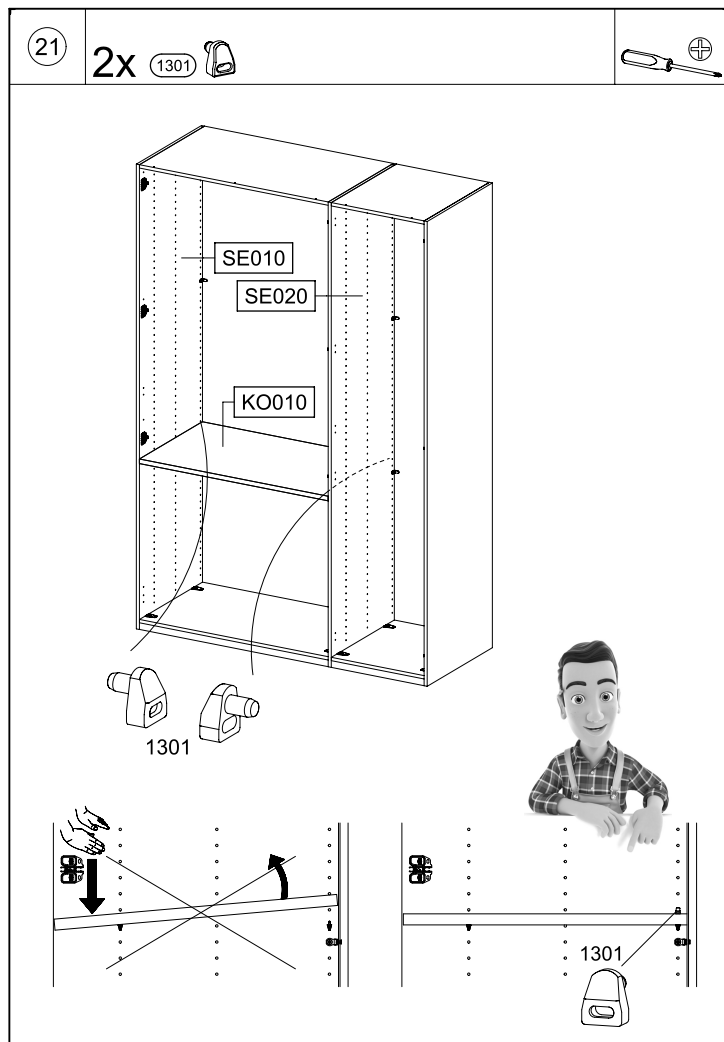


MD216

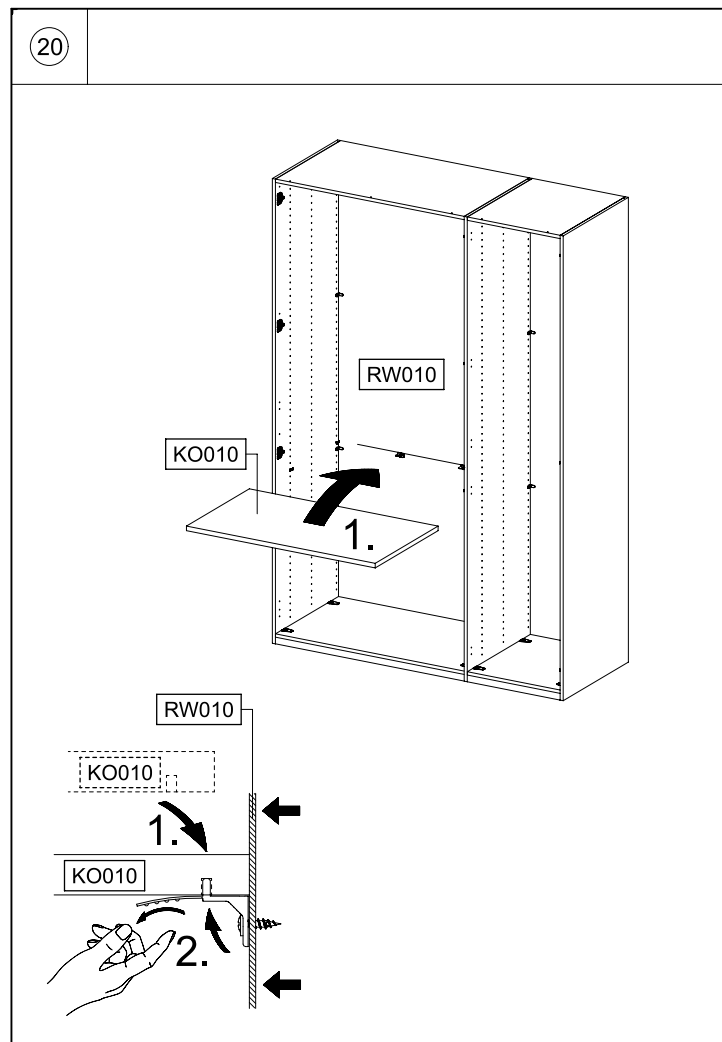


MD216

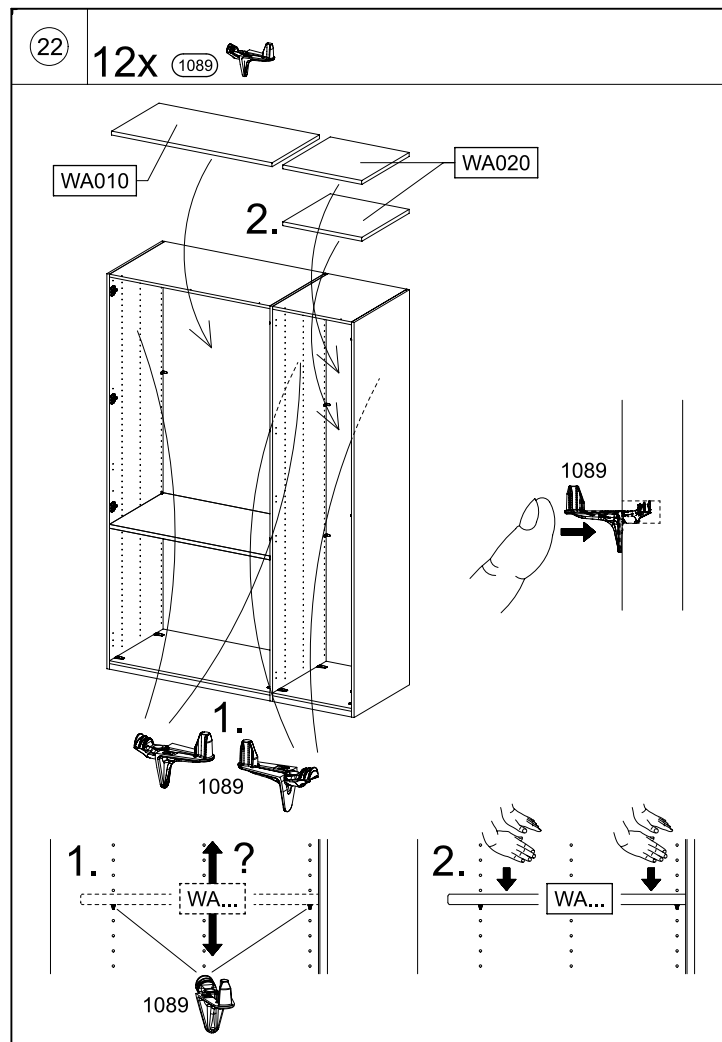


MD216

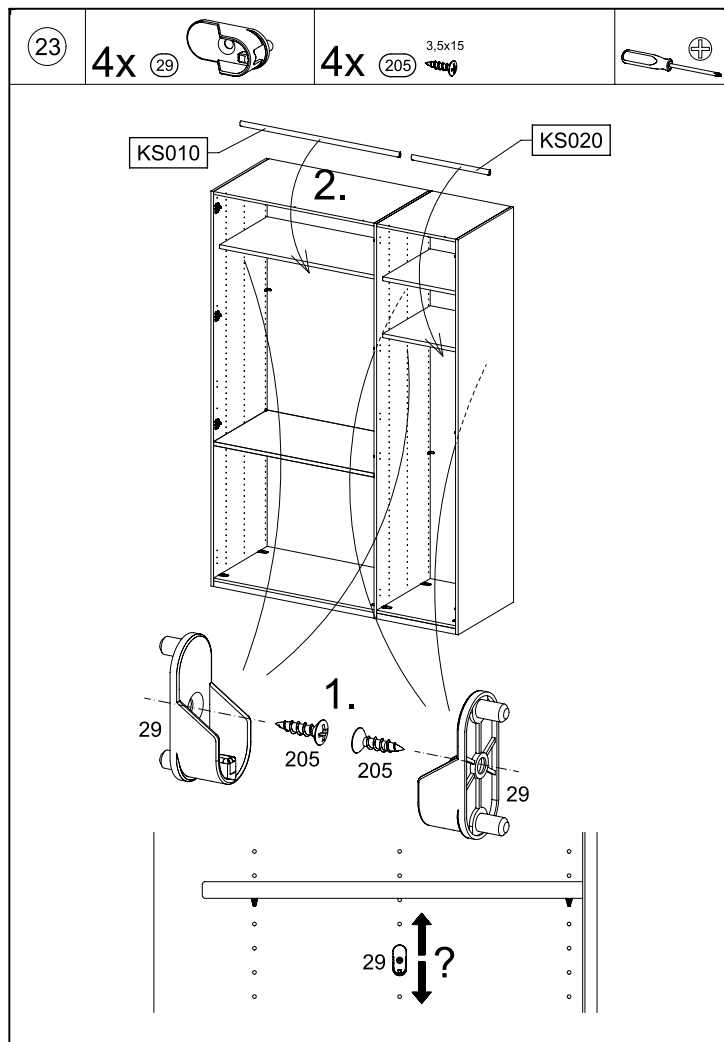


MD216

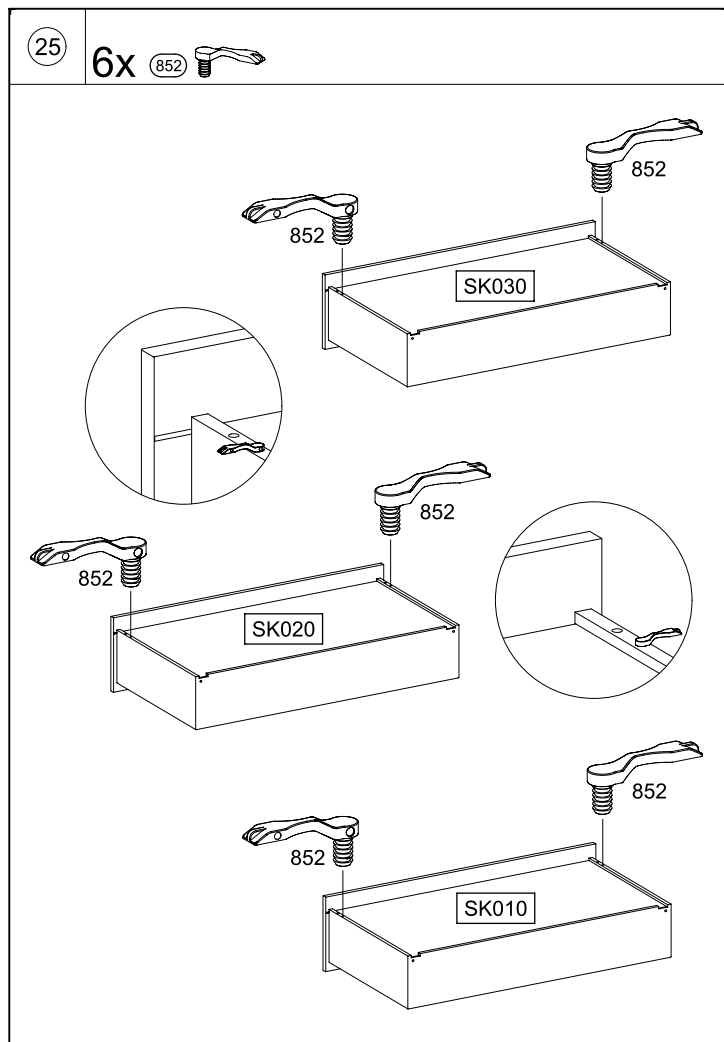


MD216

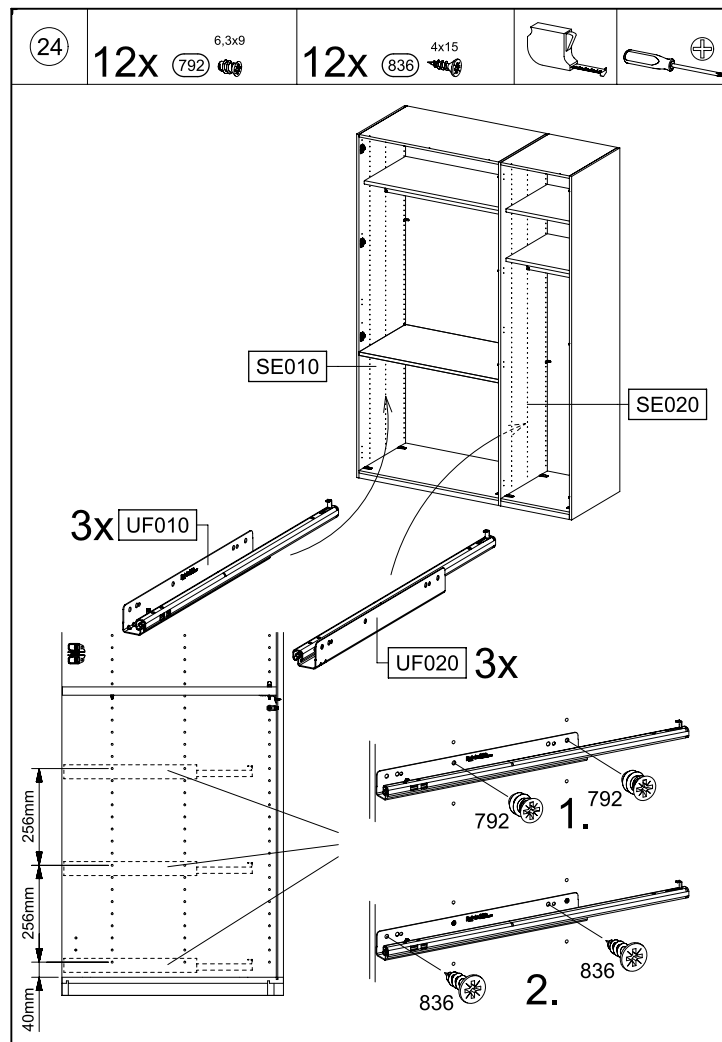


MD216

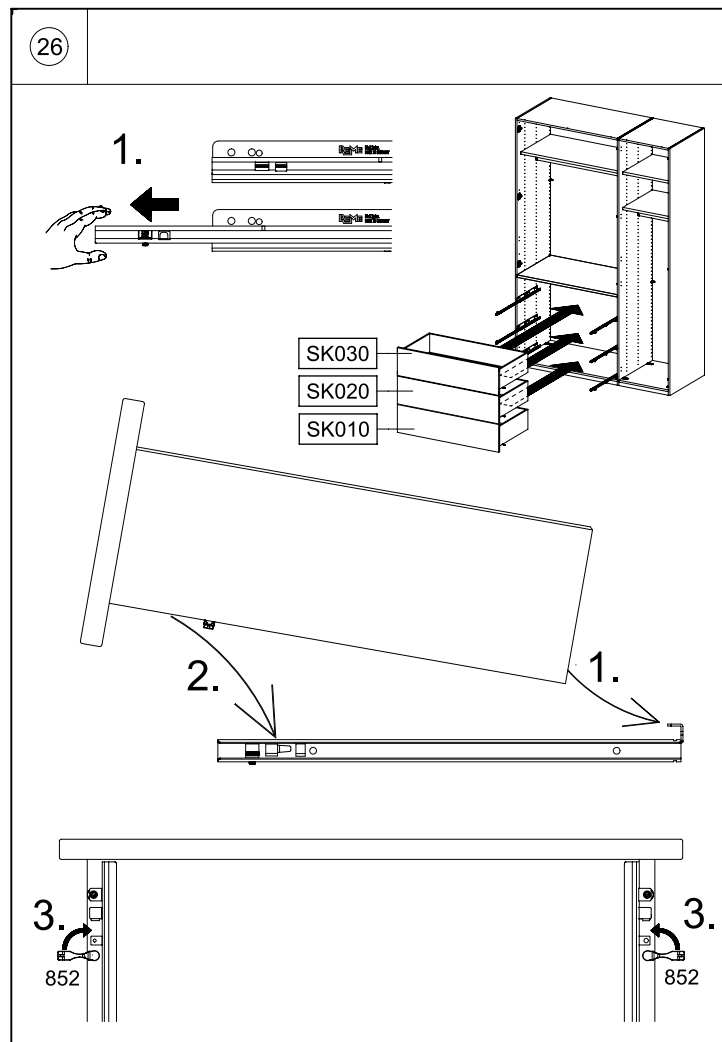


MD216

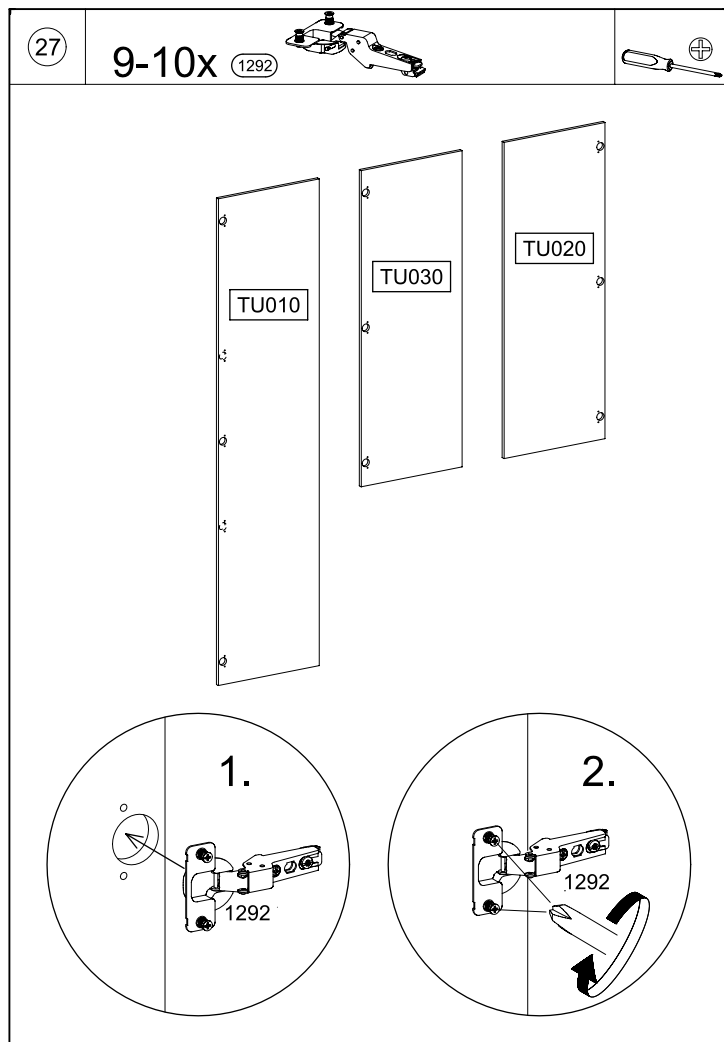


MD216

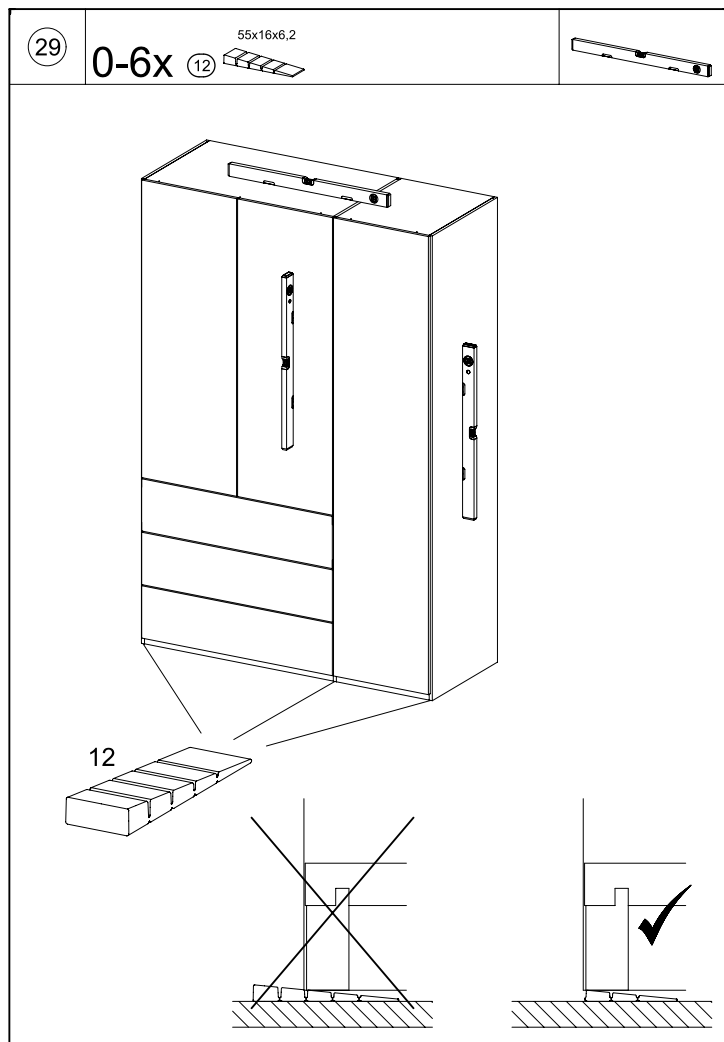





MD216

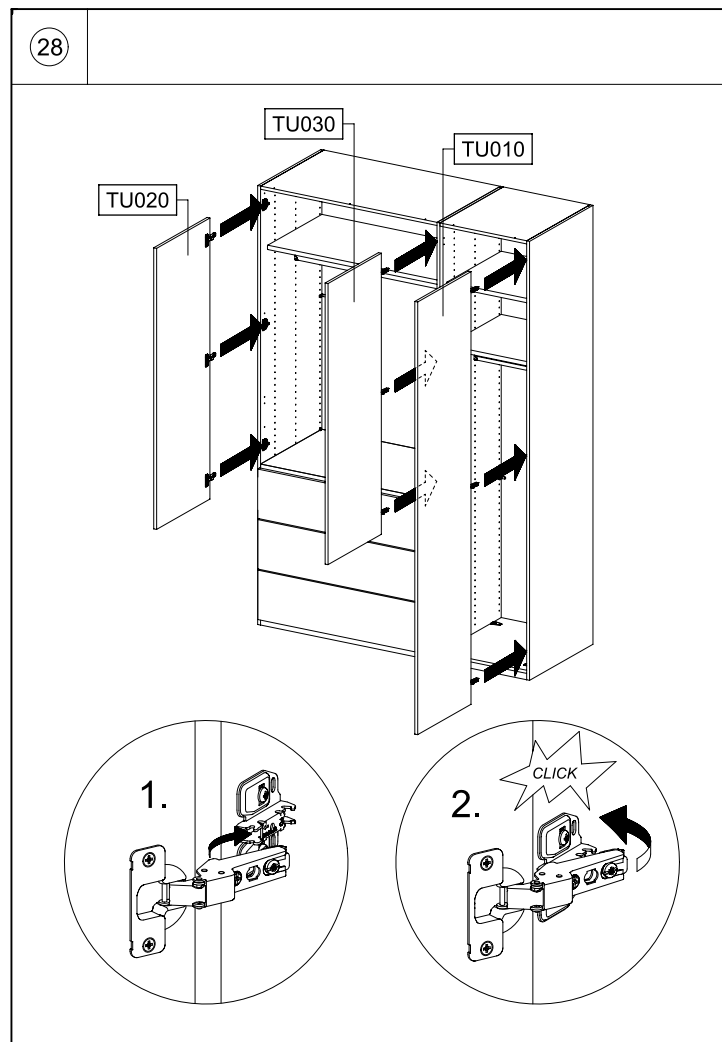

MD216

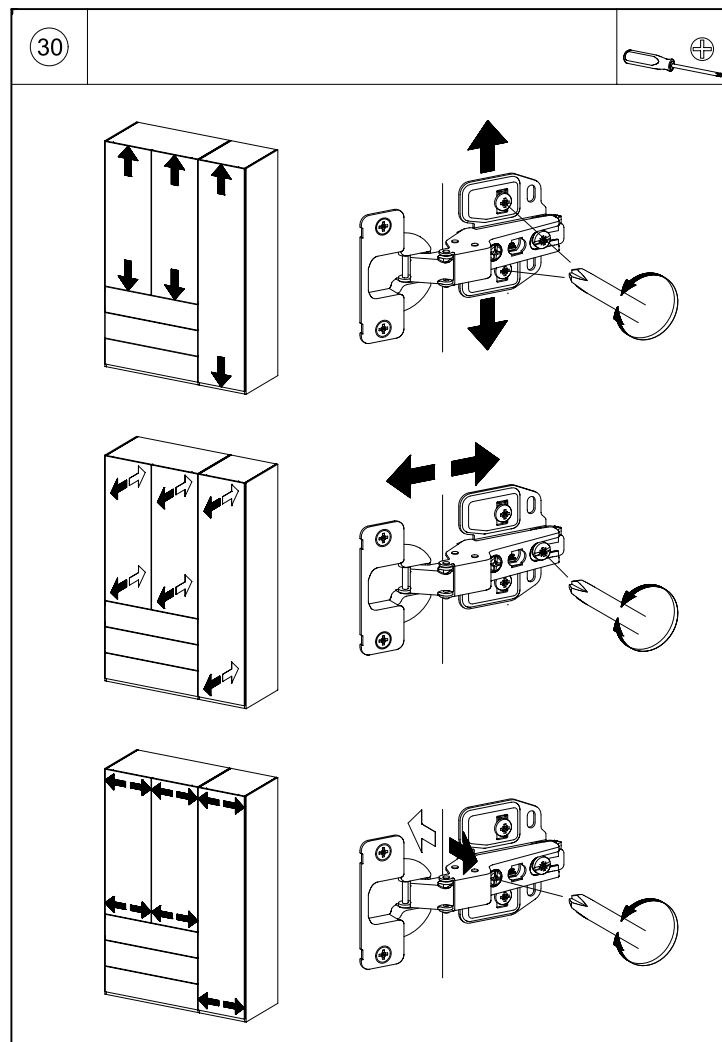


MD216

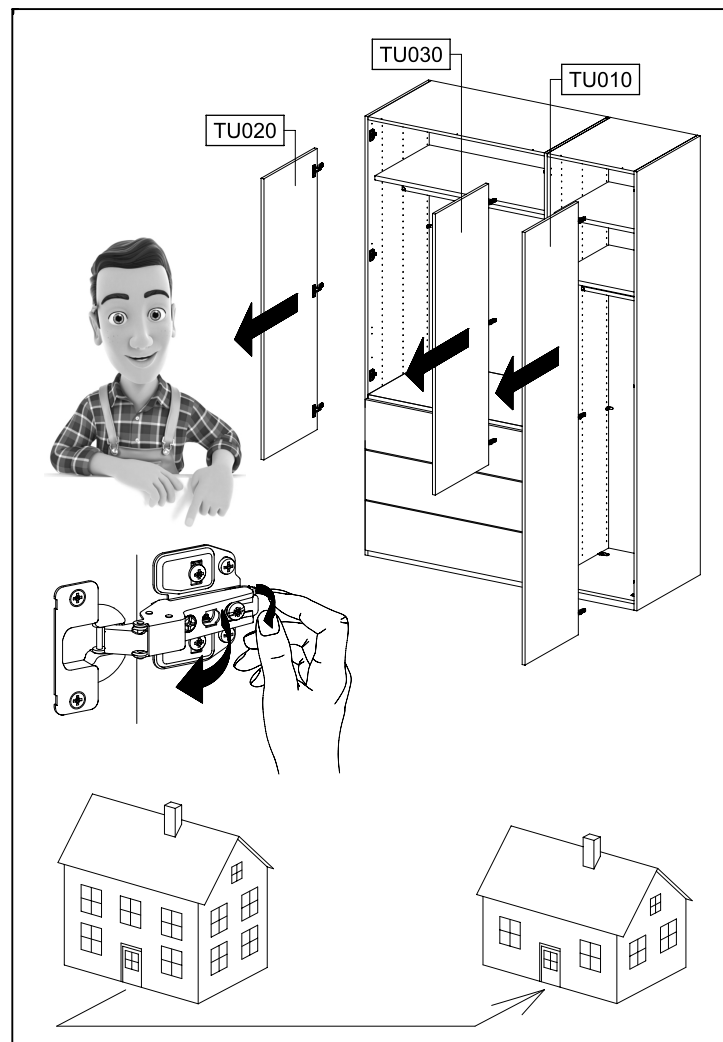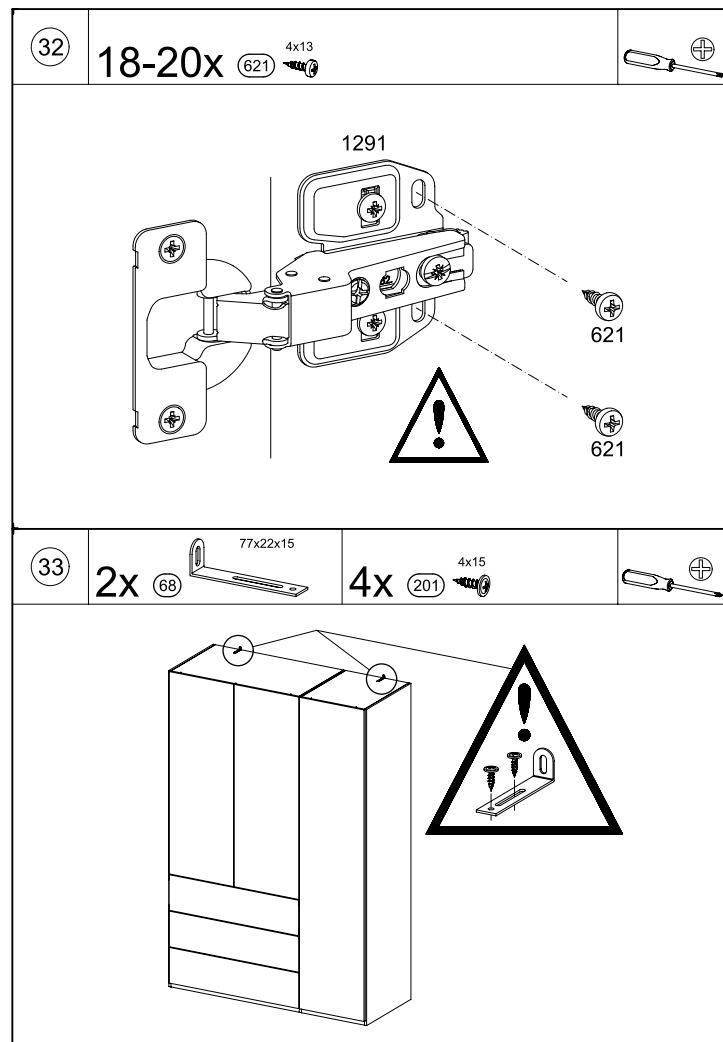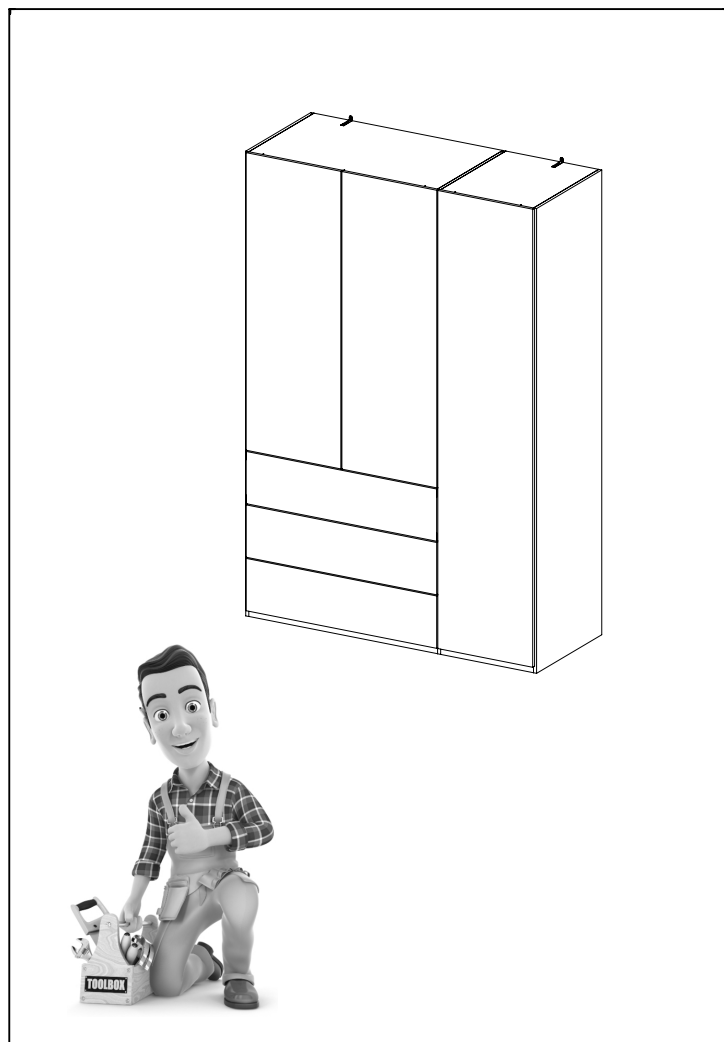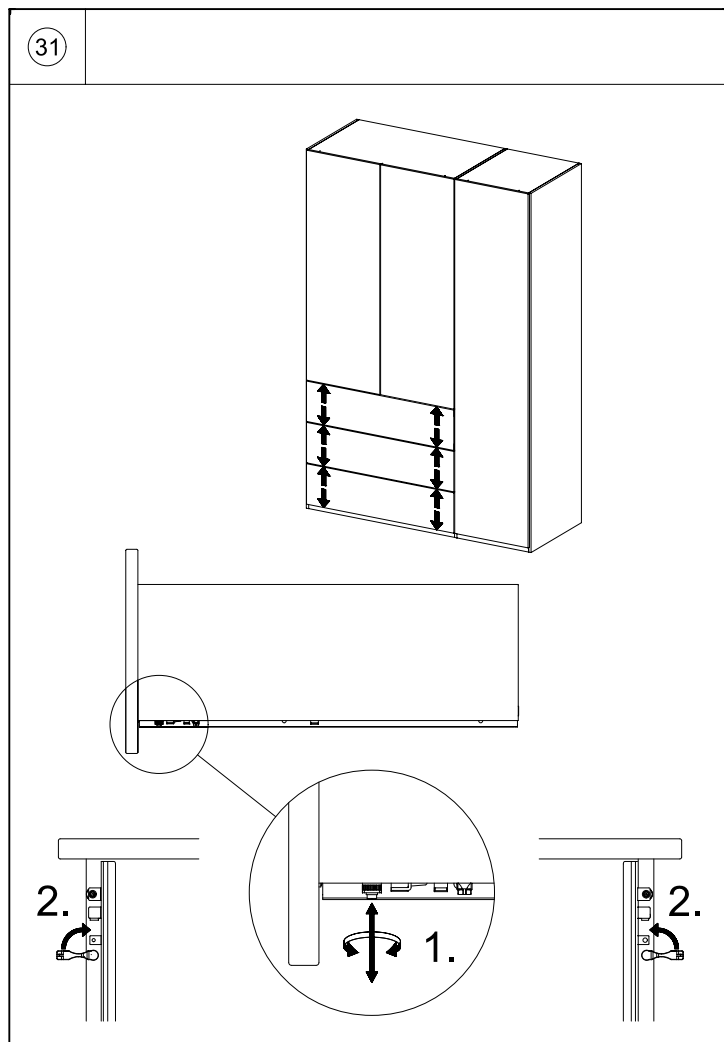



Montageanleitung / Mounting Instruction

Zuerst Türeinstellung vornehmen / Make door adjustments first



1

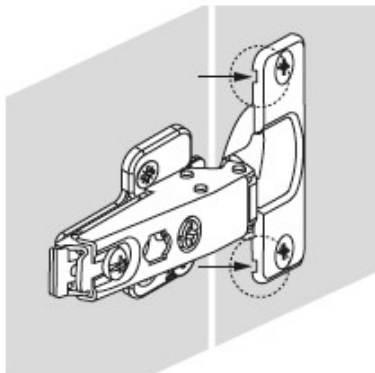

2

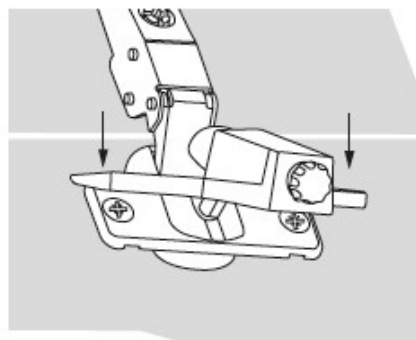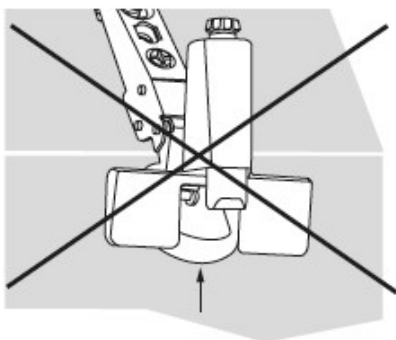

3

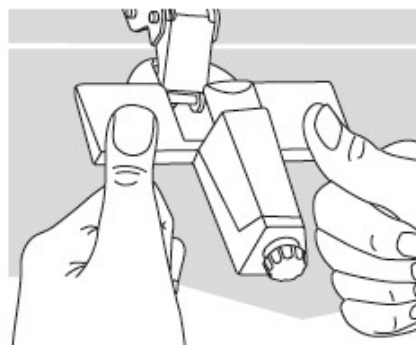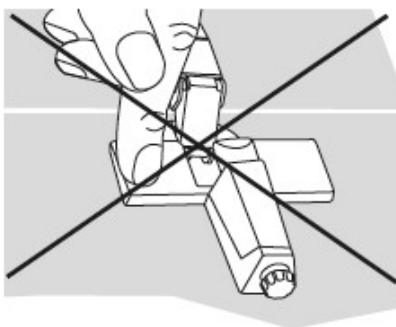

4

