




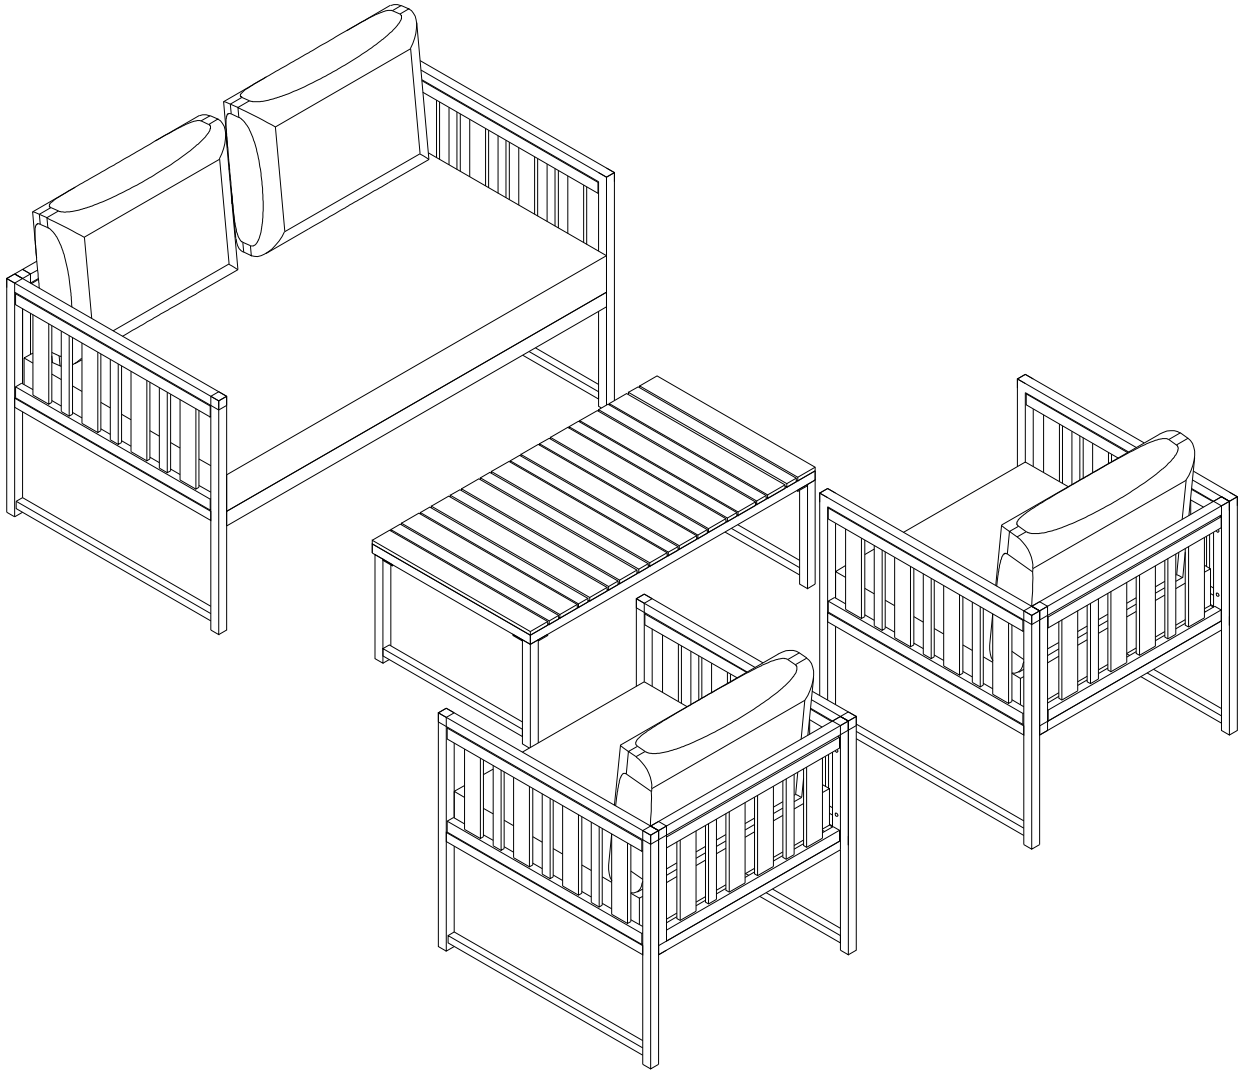


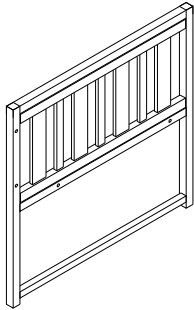


AX3

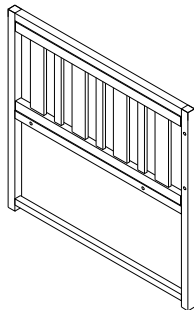


BX3

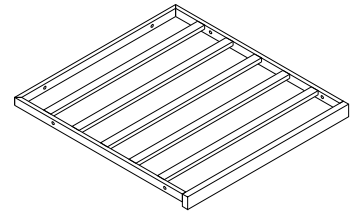


CX2

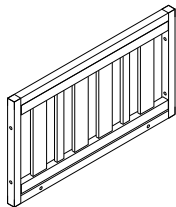


DX2

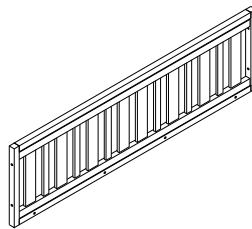


EX1

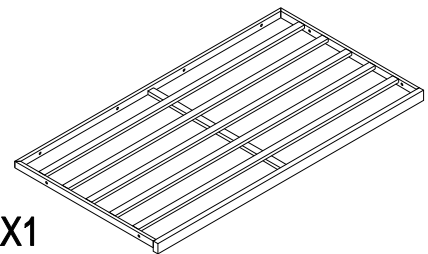


FX1

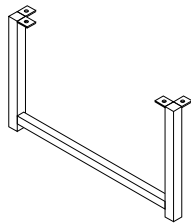


GX2

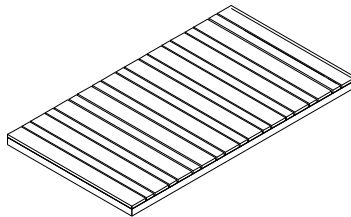


HX1

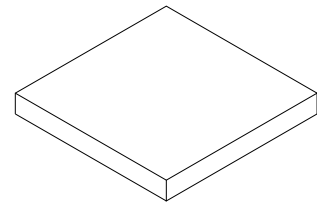


IX2

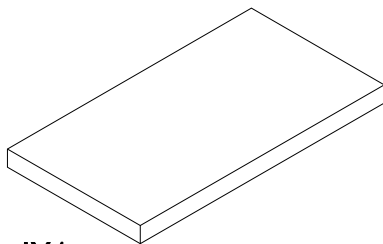


JX1

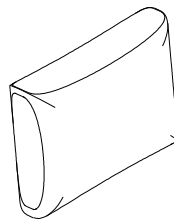


KX4

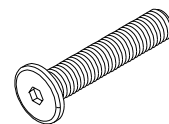

1- BOLT 6X40 :12




2- WASHER : 46




3- BOLT 6X30 : 26



4- BOLT 6X15 : 32





5- PAT : 12

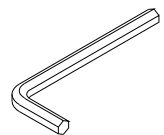

6- ALLEN KEY : 2



STEP 1

x2

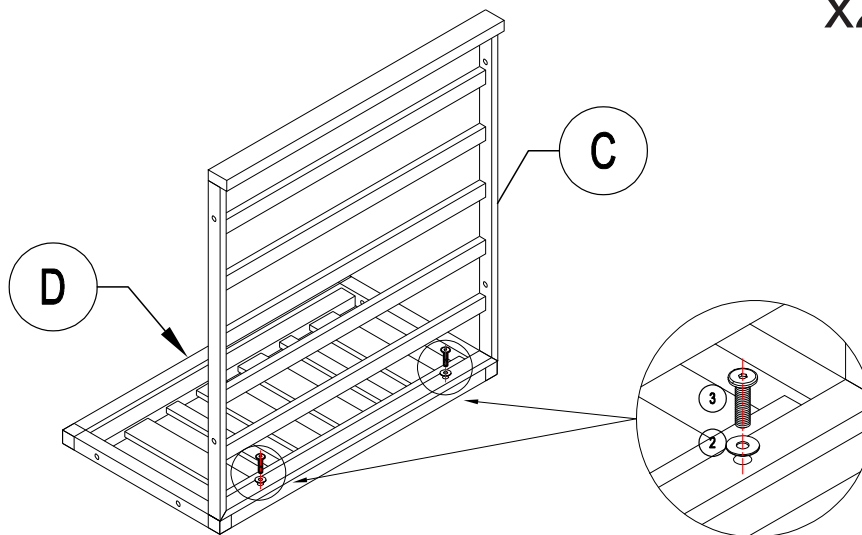



STEP 2

x2

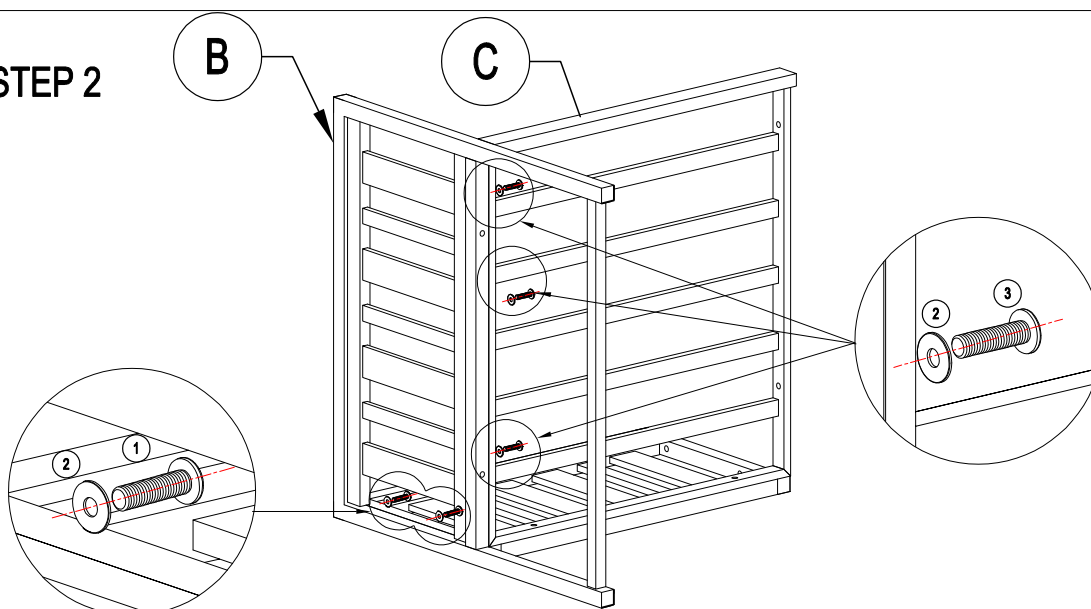



STEP 3

x2

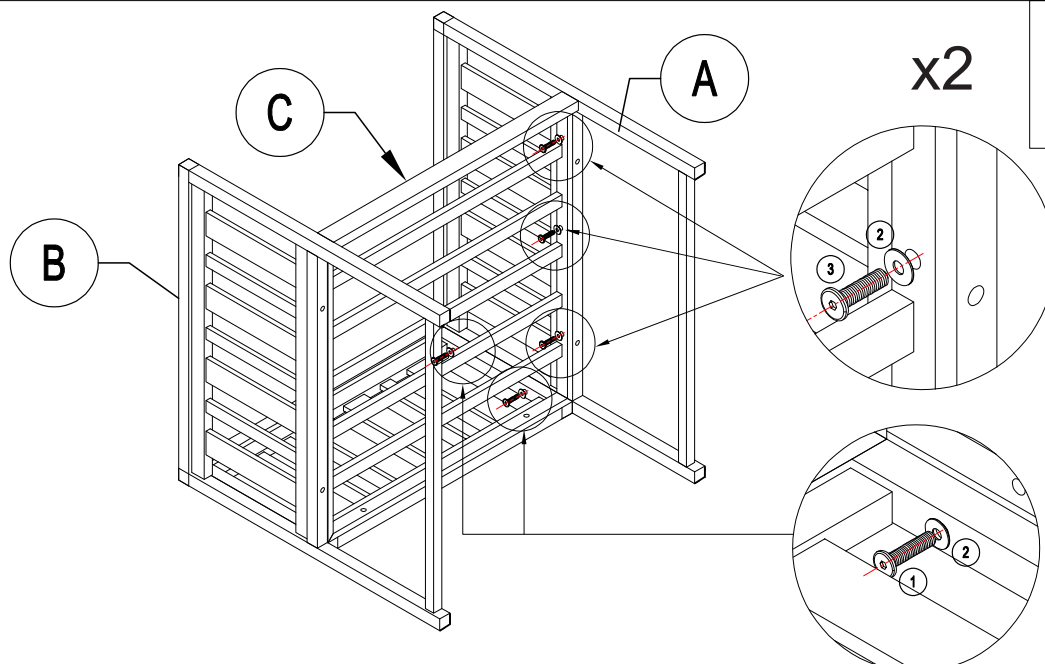



STEP 4

x2

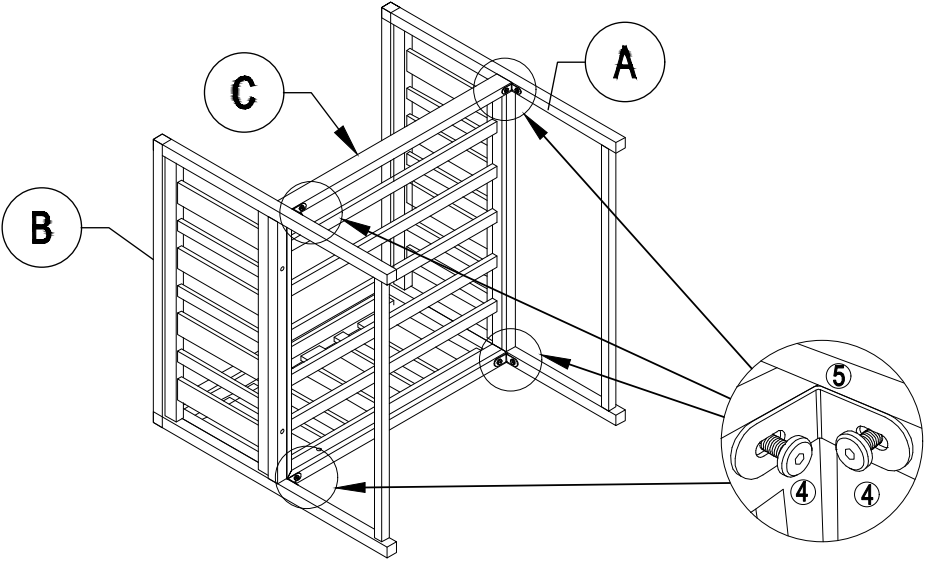


STEP 5

x2

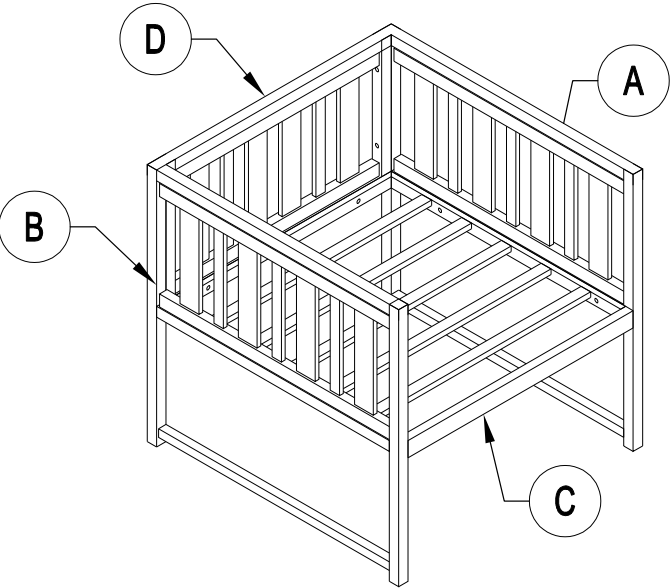



STEP 6



x2

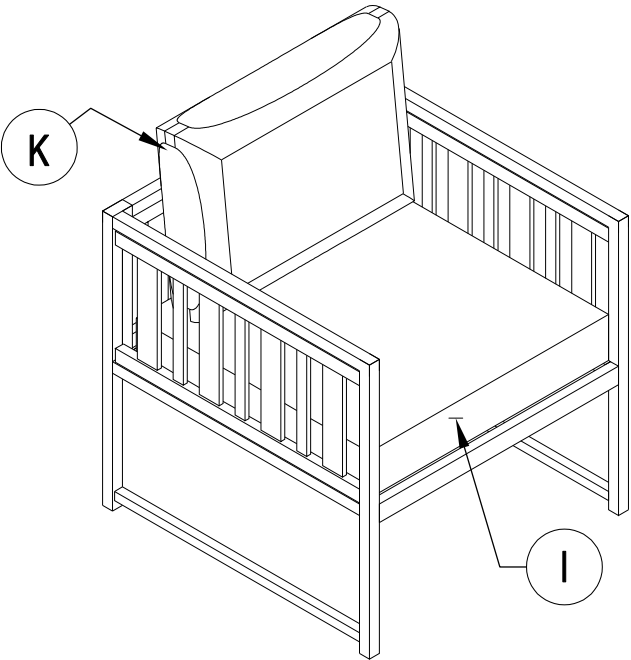



STEP 7

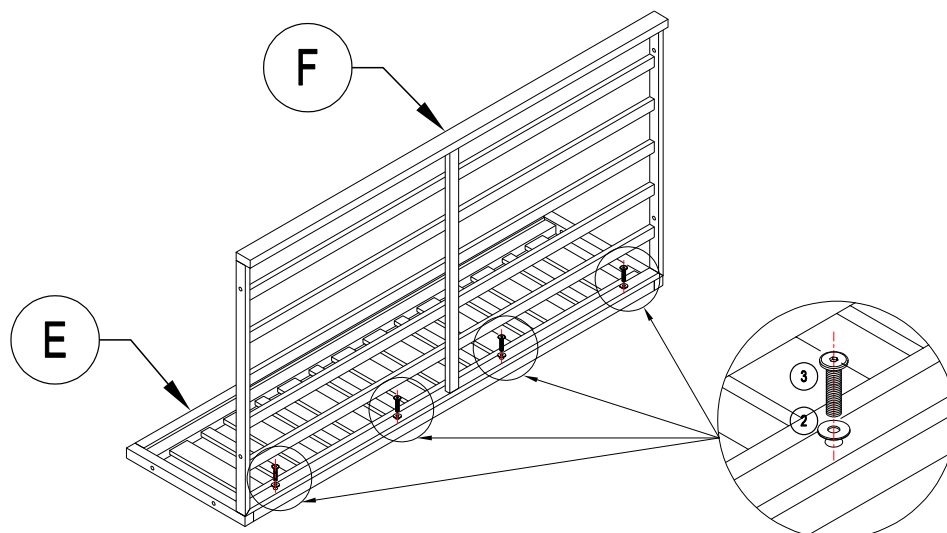


STEP 8

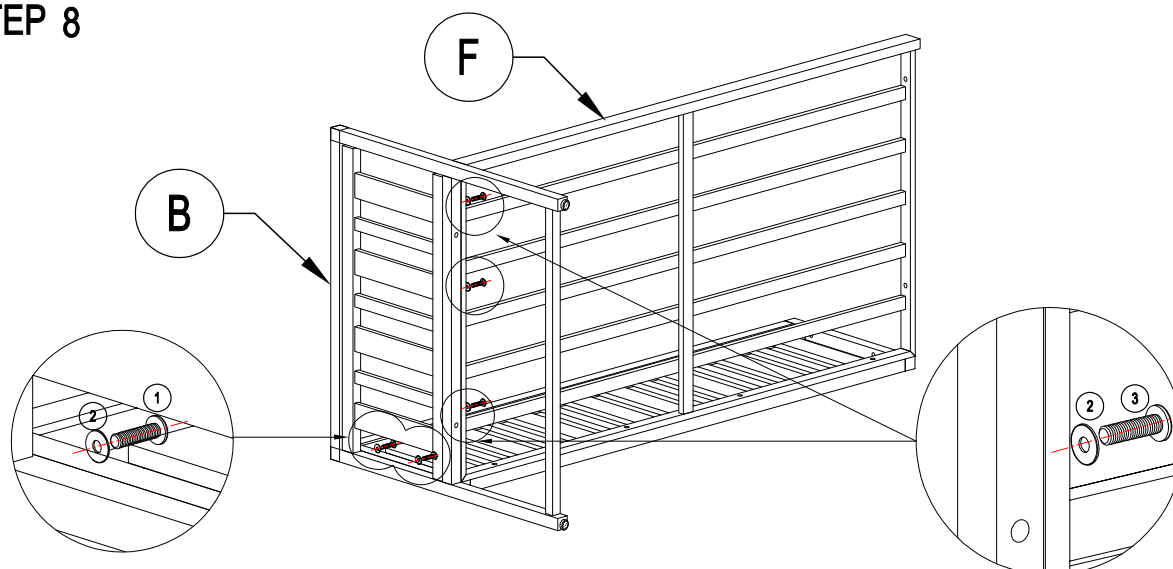


STEP 9

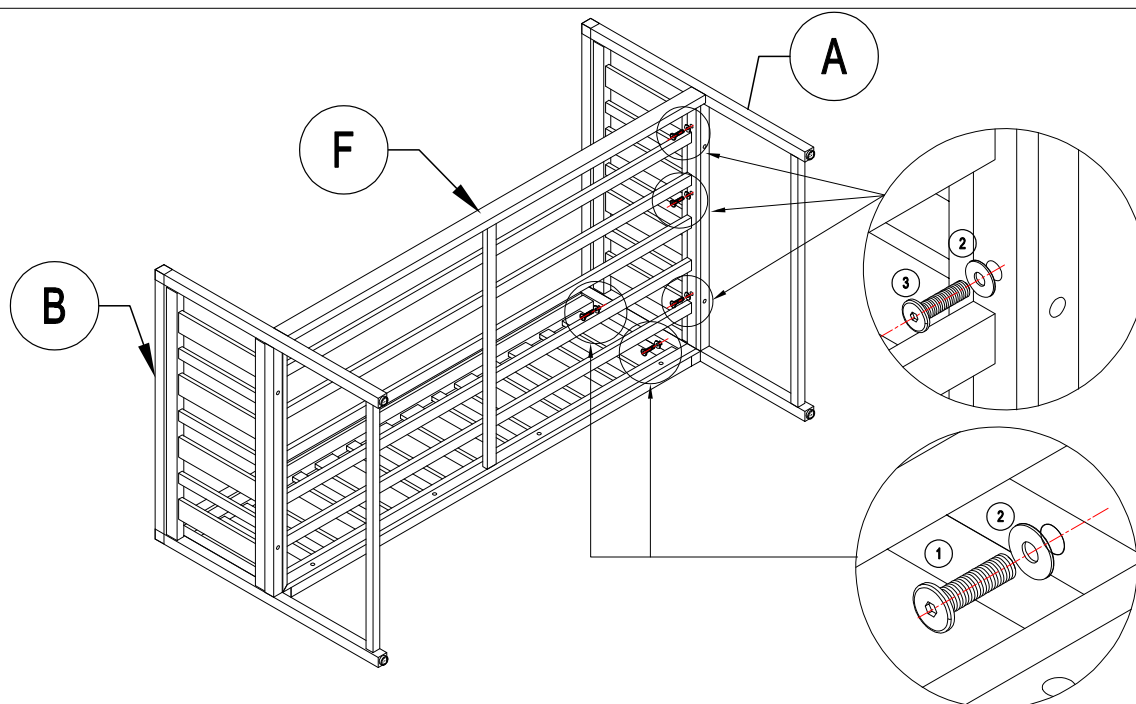


STEP 10

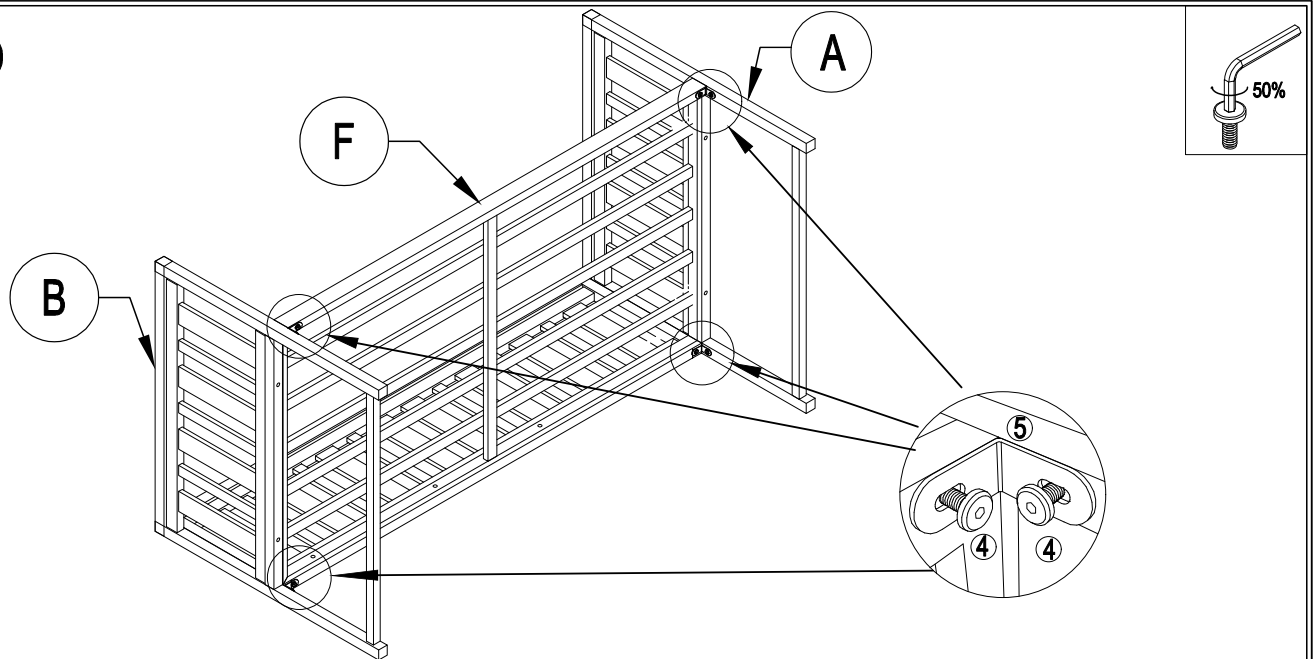


STEP 11

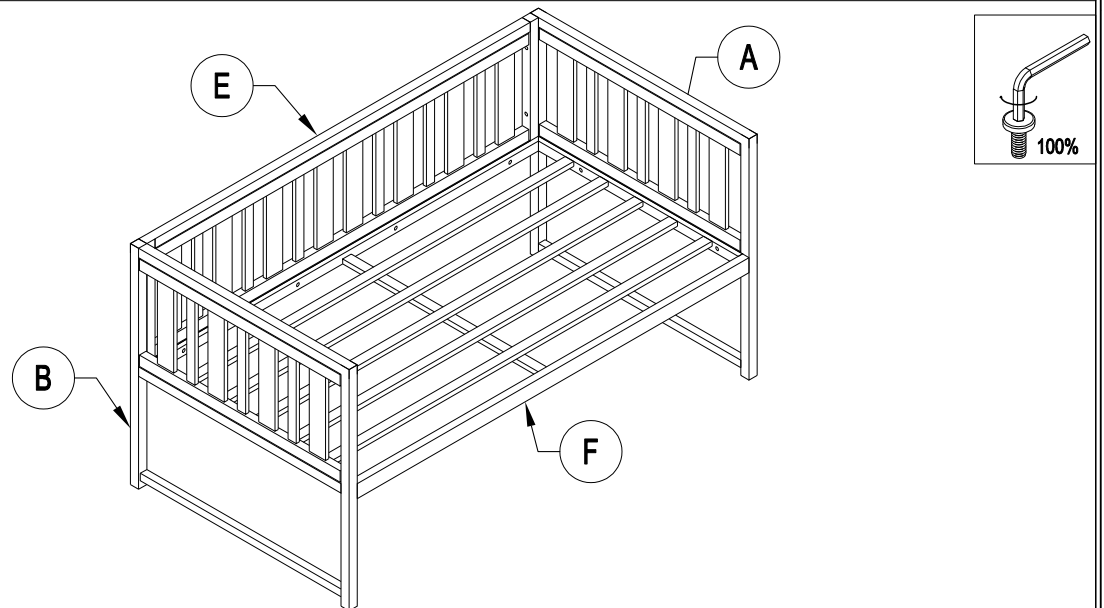

STEP 12

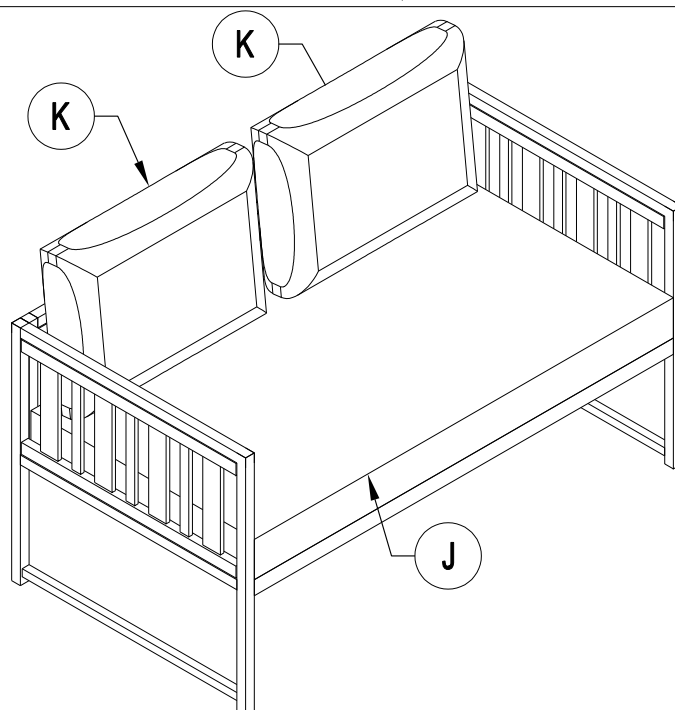

STEP 10

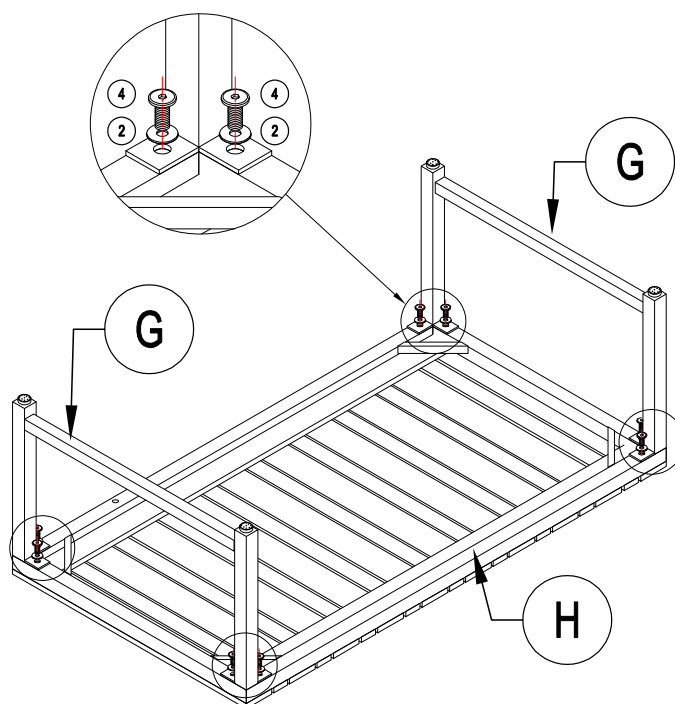

STEP 11

