

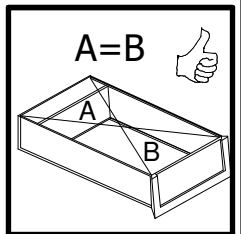
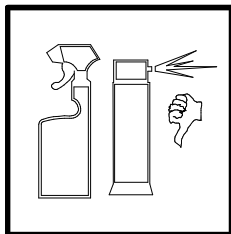
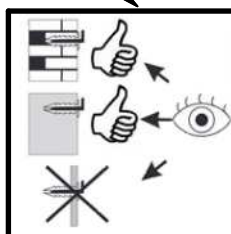
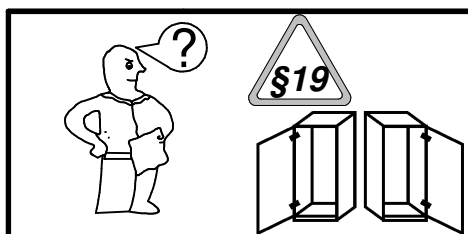
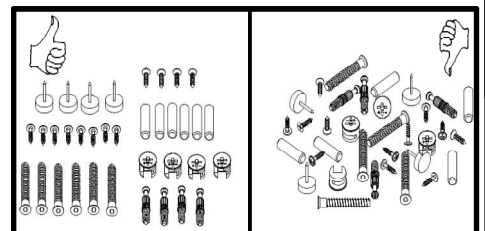
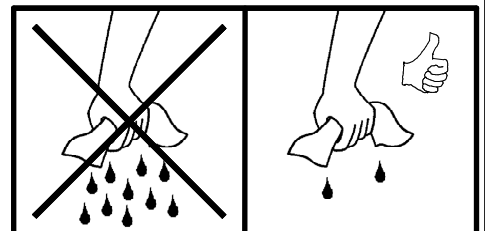
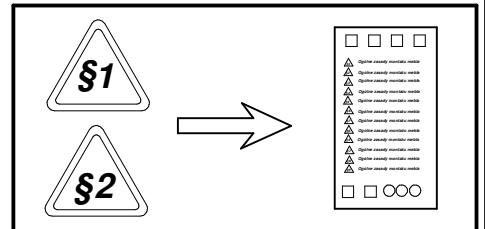
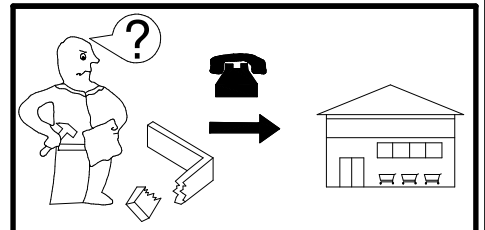
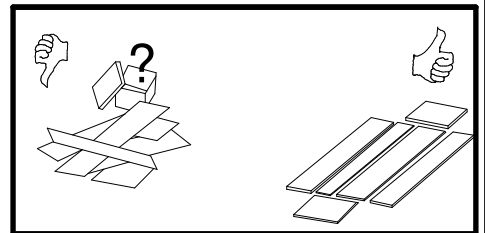
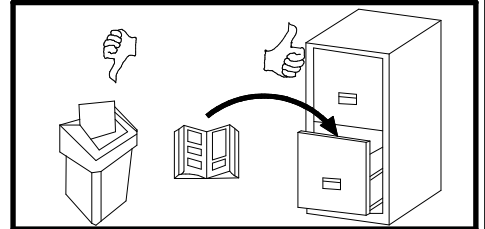
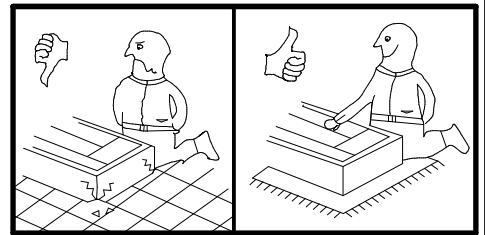
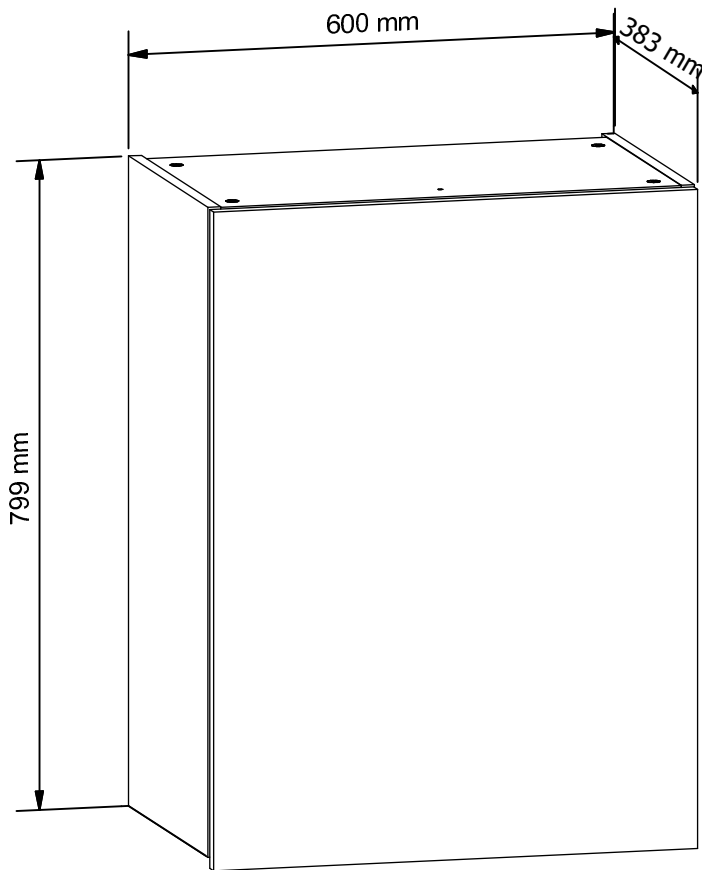



K49-G1D/60/80

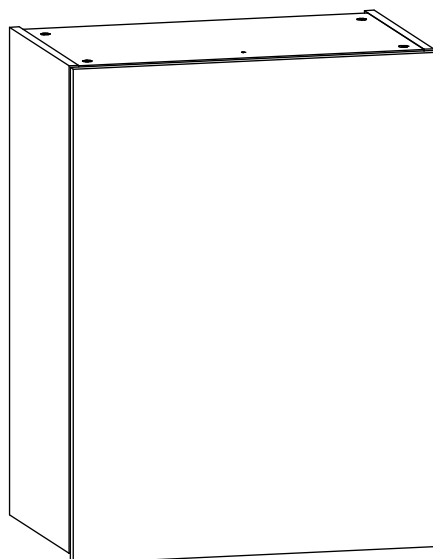

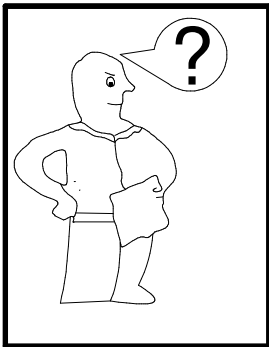


A

G1D_60_80



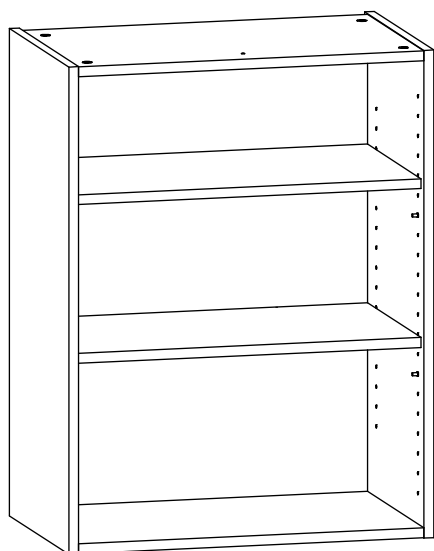


B

G1DO_60_80

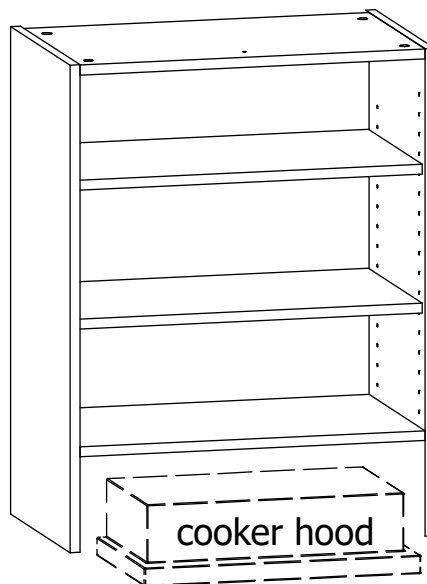

A	B	C	D
1	K49-0004	797	597
2	K49-1001	786	365
3	K49-1002	786	365
4	K49-3005	568	345
5	K49-3006	567	329
6	K49-3012	568	345
7	K49-9003	781	578

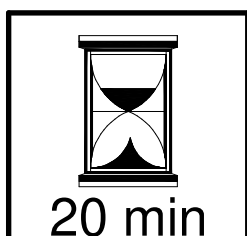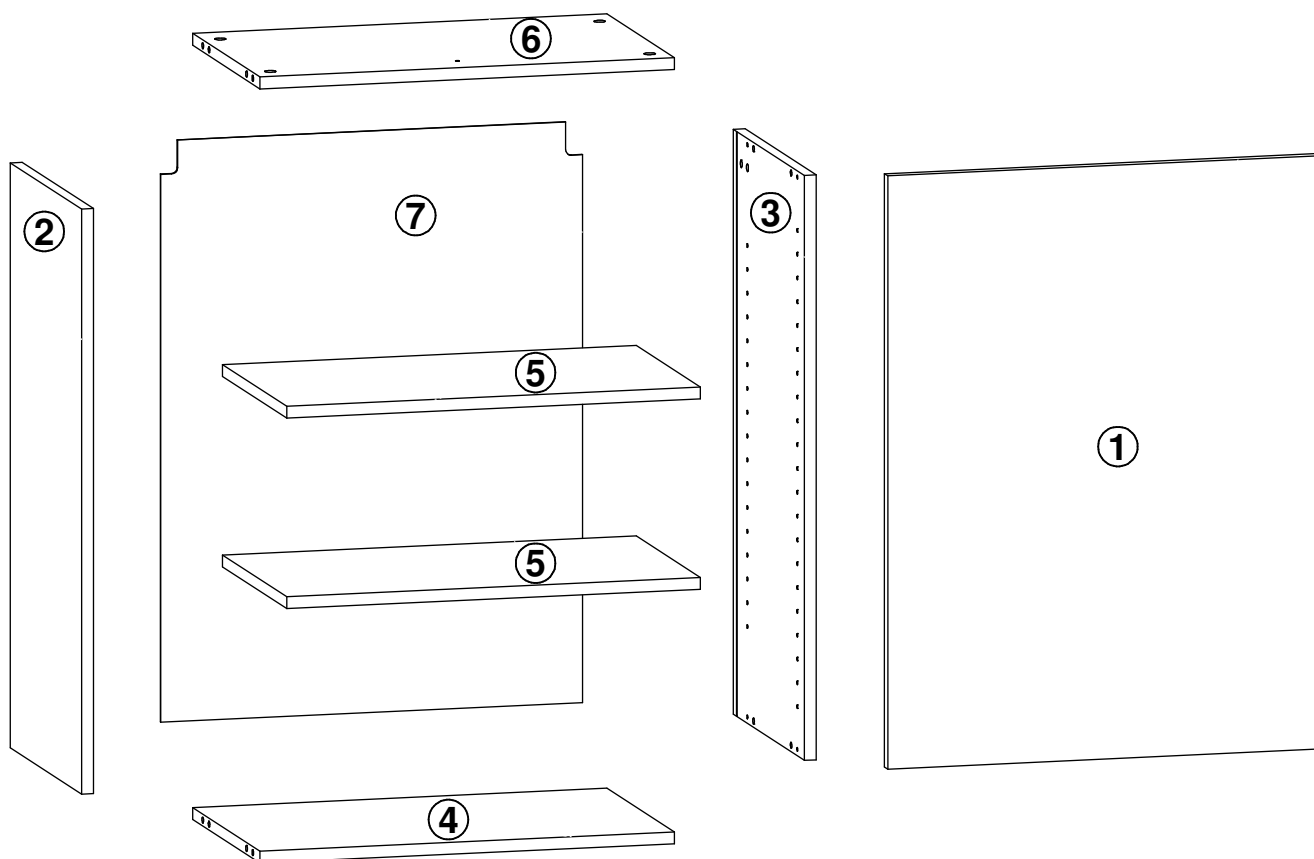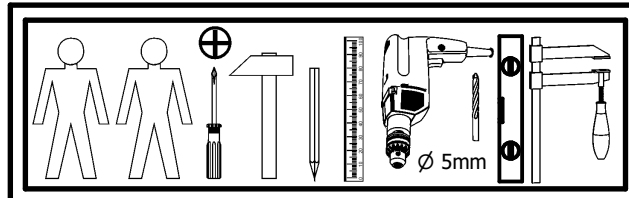

2x hamulec a204 Ø35	2x b90 Ø2	8x Ø5x17 mm d1	8x Ø8x30 mm f1	4x M4x12 mm j45\1	2x Ø5x23 mm j45\2	8x 2.5x22mm I96	1x n165\P	1x n165\L
4x Ø4x30 mm p21	4x Ø3.5x15 mm p51	8x Ø15x12 mm #16 r1	8x 20\11 r42	2x silikon Ø12,7x3,5 mm s50	4x Ø 20mm s68	1x qc35\LP		

1

8x

Ø5x17 mm

d1

1x

n165\L

1x

n165\P

4x

Ø4x30 mm











p21

8x








20/11

r42




§2

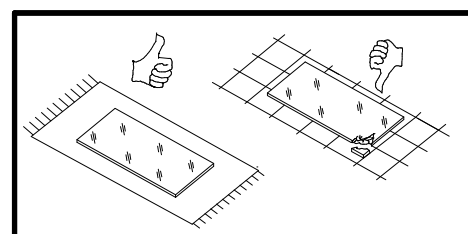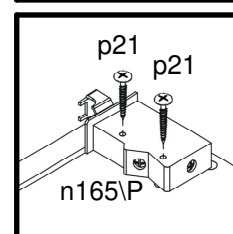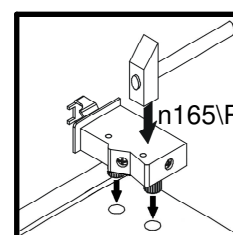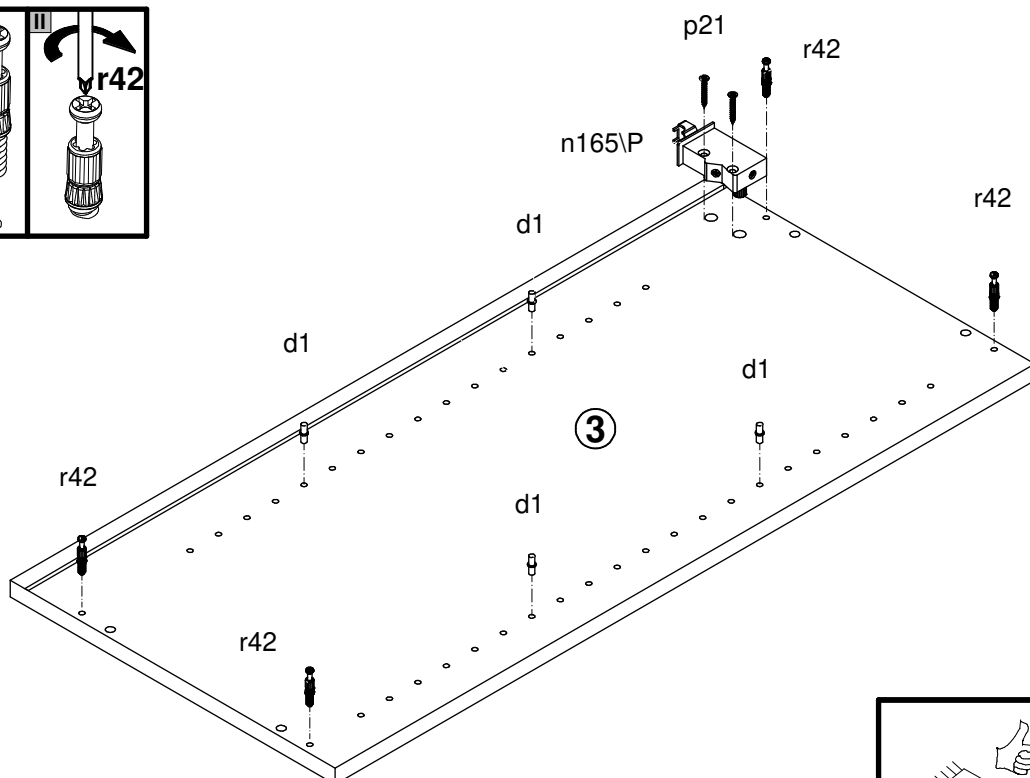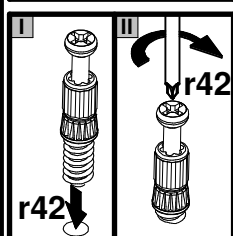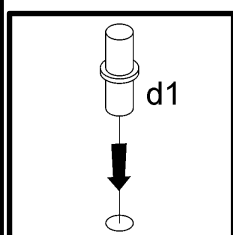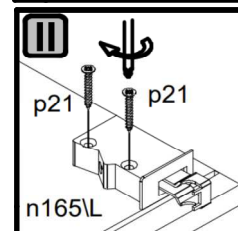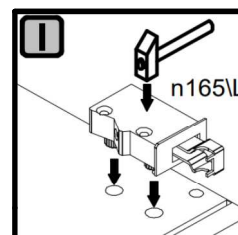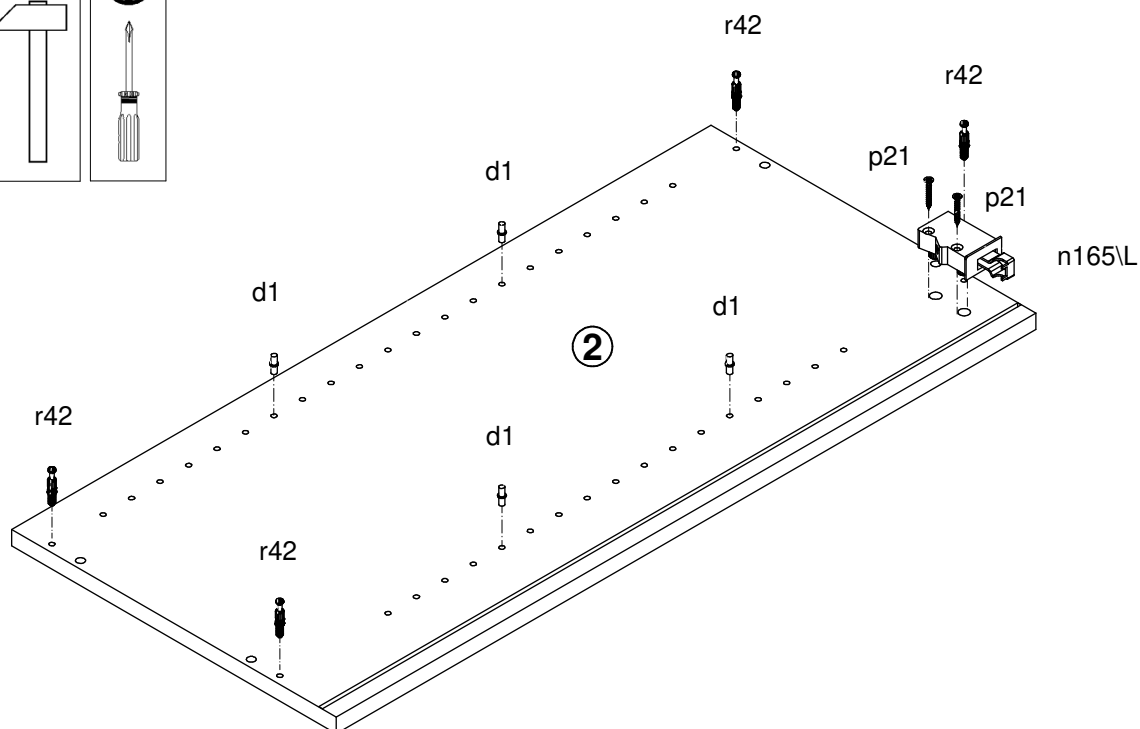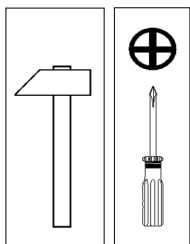




2

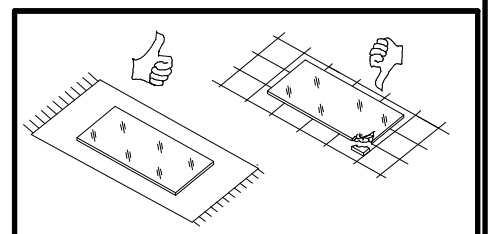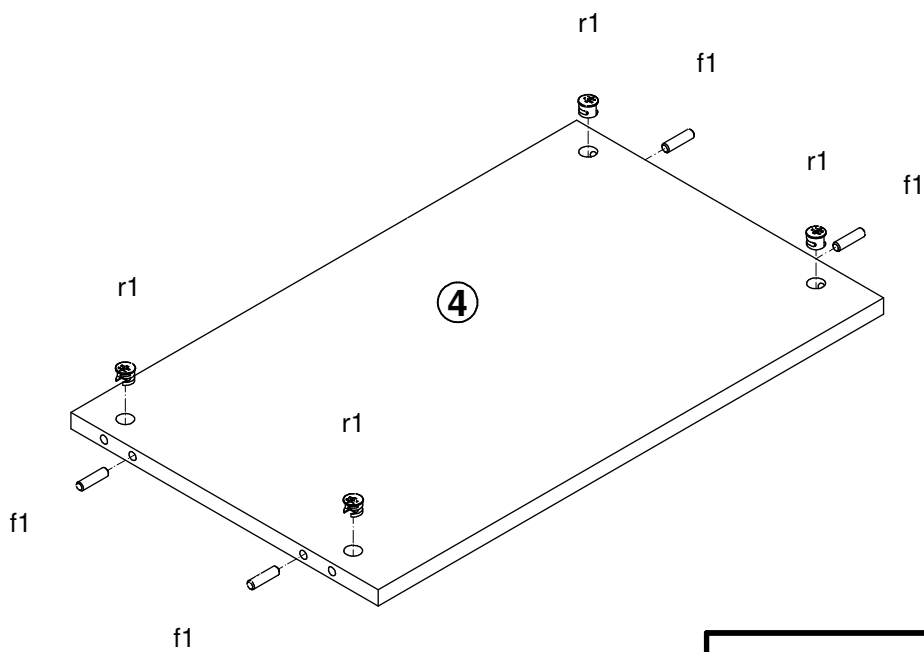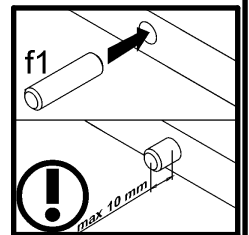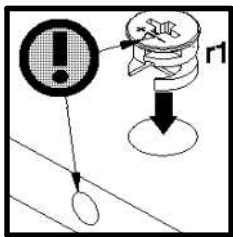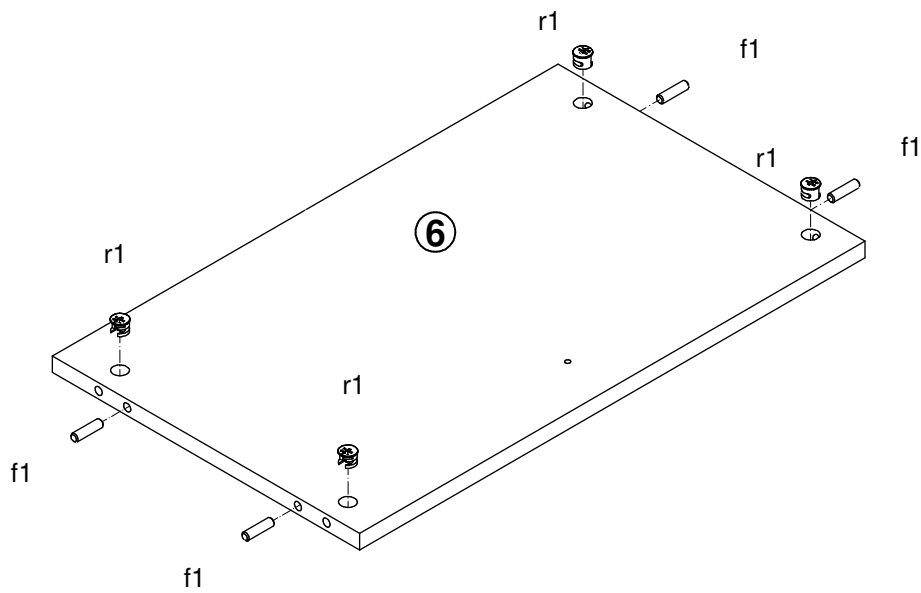





3

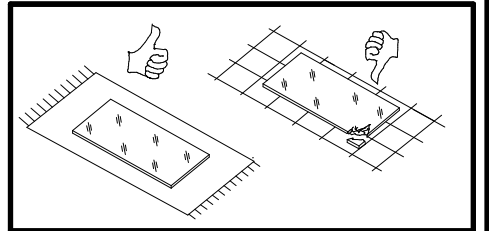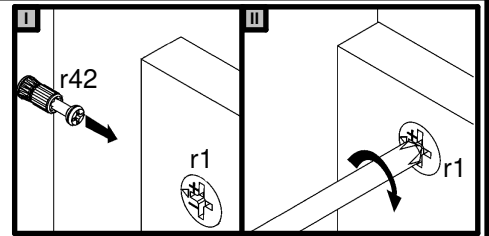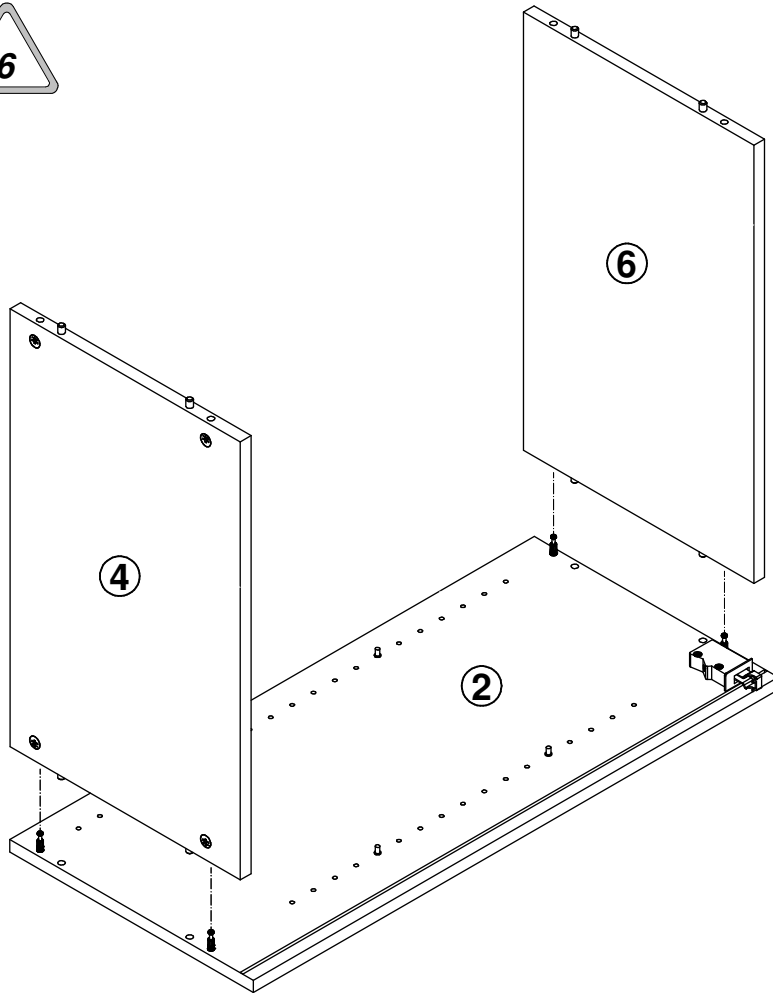

4

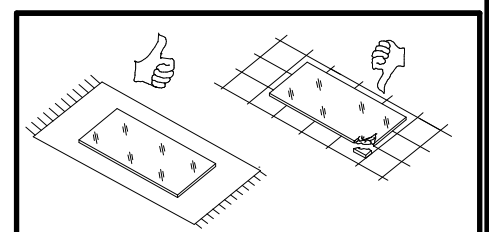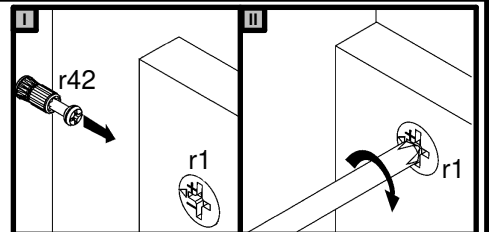
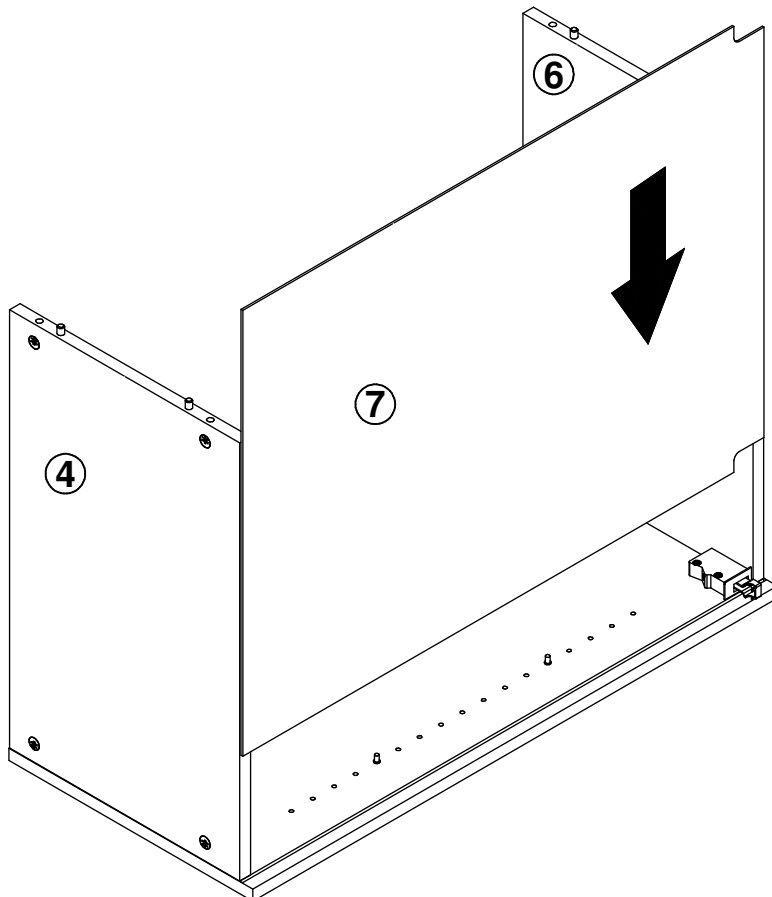


5

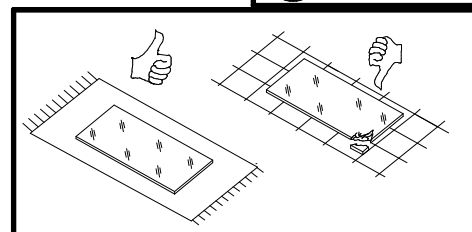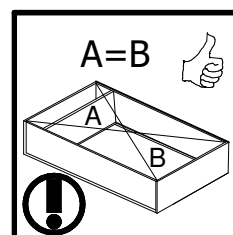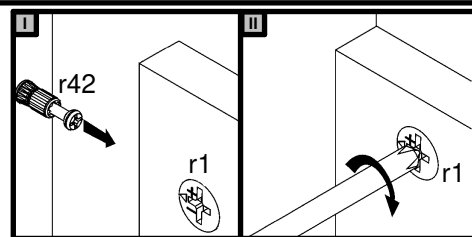
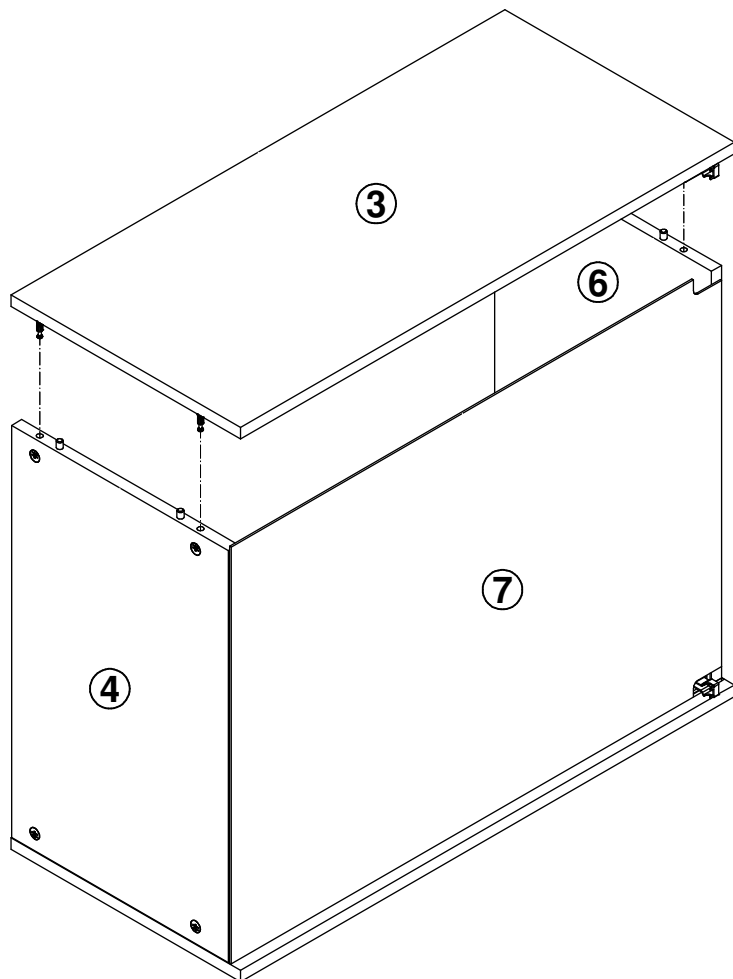


6








8x
2.5x22mm I96

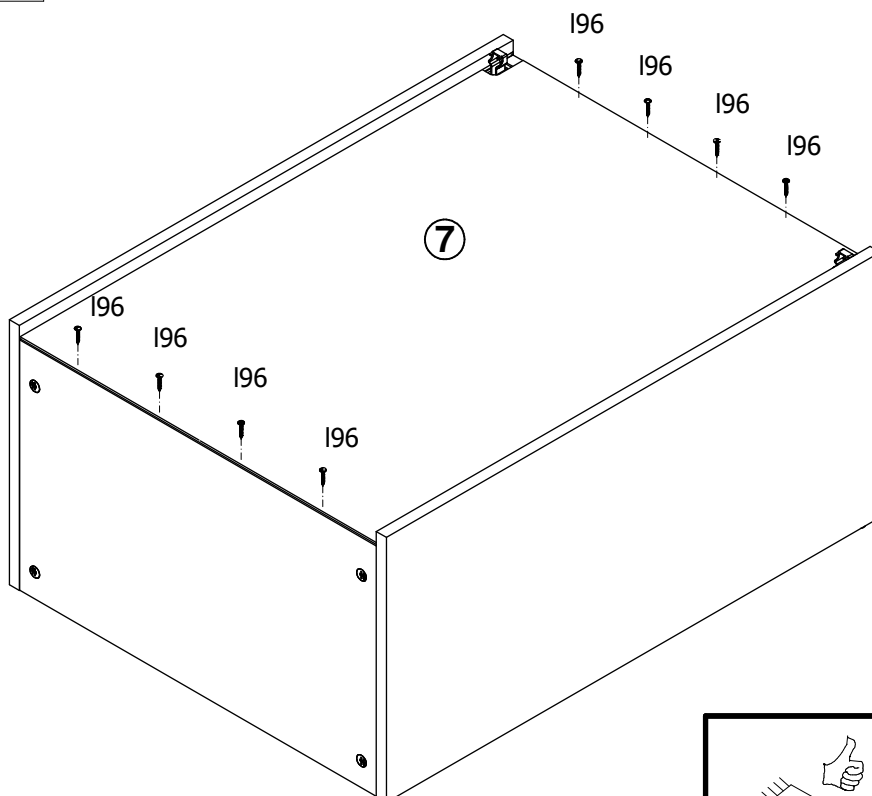

§2

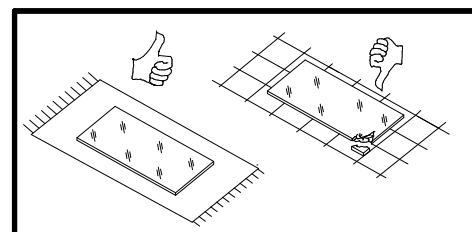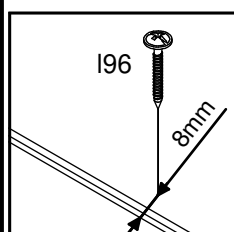











Due to the wide diversity of wall or partition types, we cannot provide you with suitable attachment fixtures. To determine which attachment fixtures to use, you will need to identify the type of wall to which you will be fixing this product. Here are some examples of attachment fixtures recommended for:

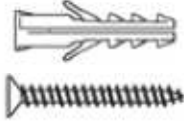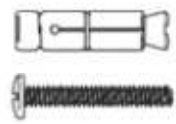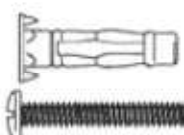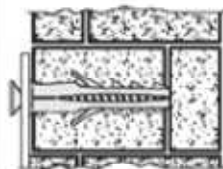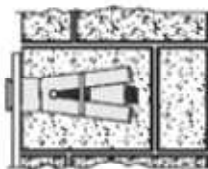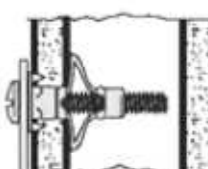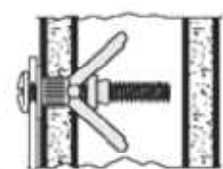BLIND WALLS		STUDDED WALLS		
"FISCHER" Nylon plug	Metal Wall plug	Nylon winged Wall plug	Metal expansion plug	"MOLLY" plug
				
				



Use a drill bit that is compatible in size with the hardware used and the type of wall.

Da es eine große Vielfalt an Arten von Wänden oder Trennwänden gibt, können wir Ihnen leider keine Wanddübel zur Verfügung stellen. Bitte prüfen Sie die Eigenschaft der Wand, an der Sie das Möbelstück befestigen wollen, um den dafür passenden Wanddübel zu ermitteln. Ziehen sie ggf. eine Fachkraft zurate. Hier einige Beispiele für Wände und dafür passende Dübel:

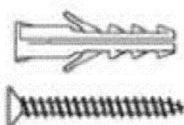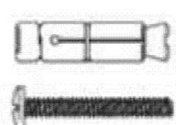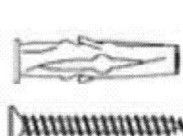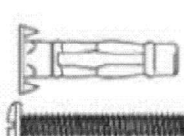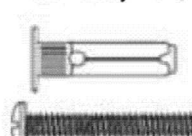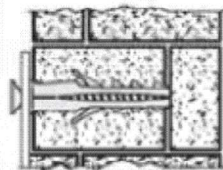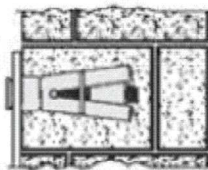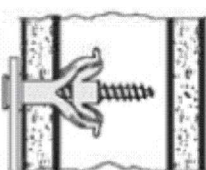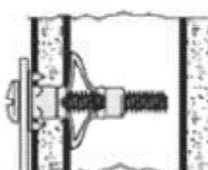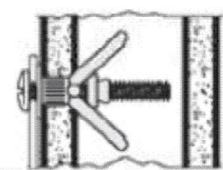Massivwände		Hohlwände		
Kunststoffdübel	Metall Wanddübel	Hohlraum Kunststoffdübel	Hohlraum Metalldübel	Hohlraumdübel "Molly"
				
				










Verwenden Sie einen an die Wandbeschaffenheit und Dübelgröße angepassten Bohrer.



ATTENTION! Fixez le segment au mur. L'opération est à réaliser après le montage complet du meuble. La non-exécution de fixation ou une fixation inadéquate présente un risque de renversement (déchirement) lors du montage et utilisation du meuble. La fixation du meuble au mur ne peut être réalisée que par un personnel compétent. Avant de fixer le meuble au mur, assurez-vous qu'il est bien adapté pour la fixation des meubles, choisissez une cheville appropriée, vérifiez la charge et la qualité de fixation.

NOTE! Attach unit to wall when completely assembled. Improperly attached furniture may break free and fall while being mounted or used. The unit may only be attached to the wall by a qualified person. Check that the wall is suitable for having furniture attached to it beforehand. Choose a suitable anchor bolt and check the strength and quality of the attachment.

7

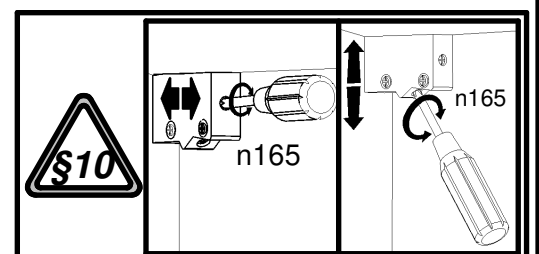
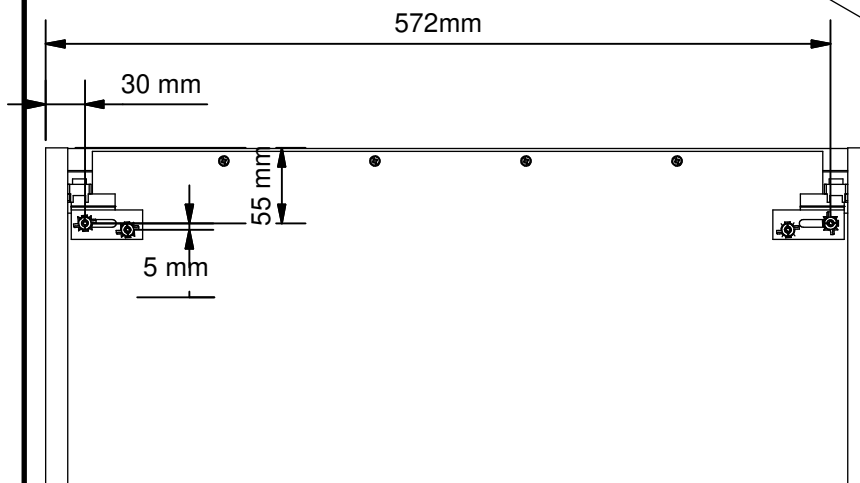
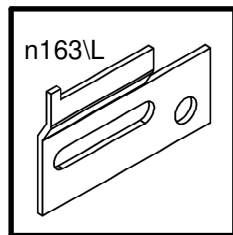
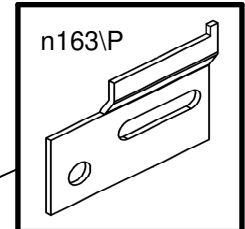
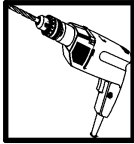
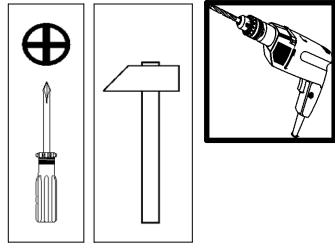
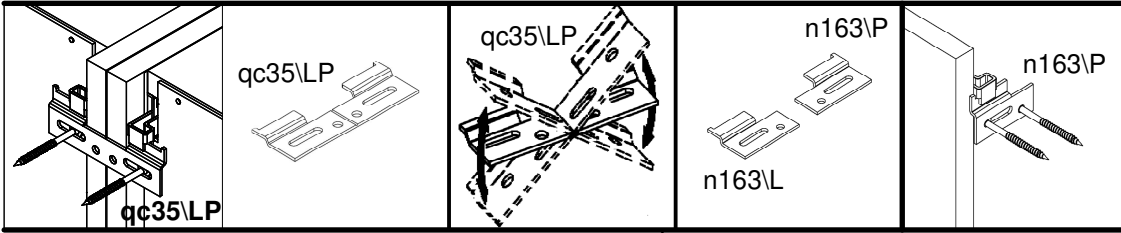


8





4x
M4x12 mm
j45\1

2x
Ø5x23 mm
j45\2






§6

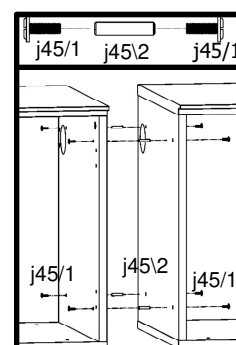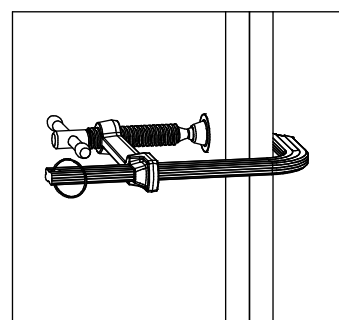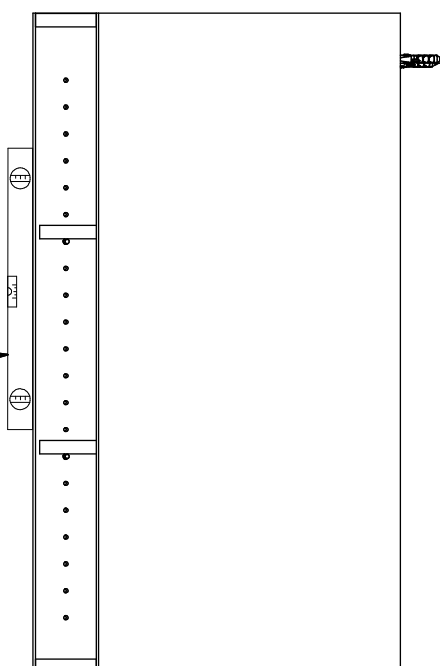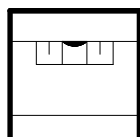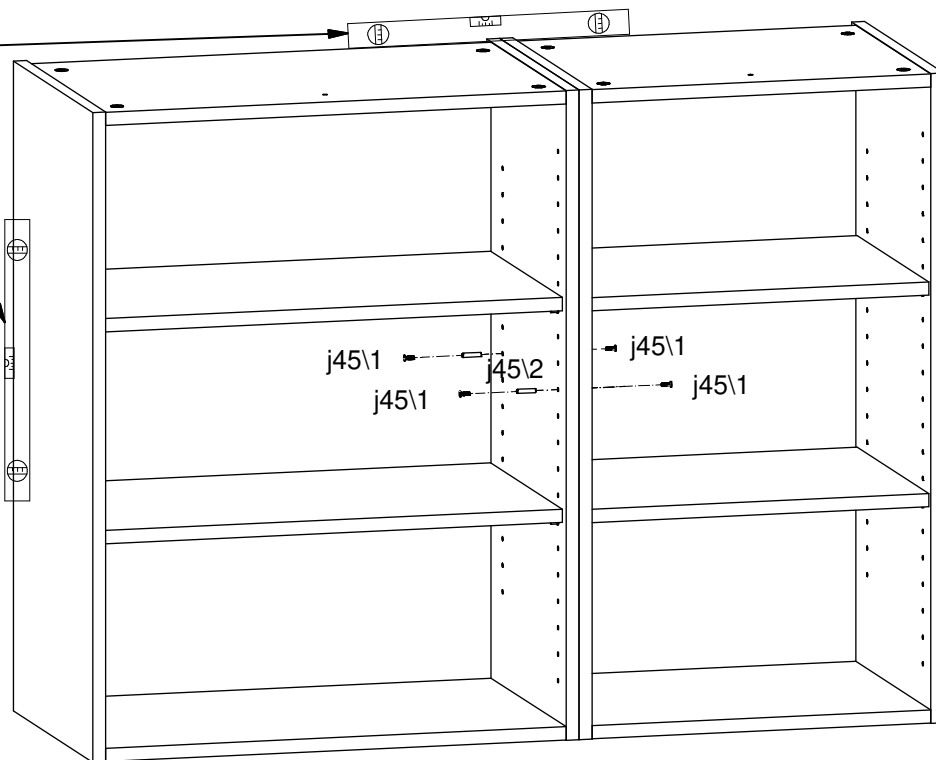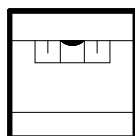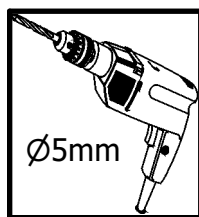


9

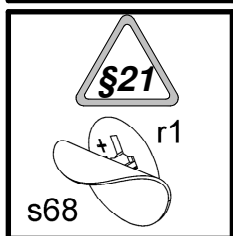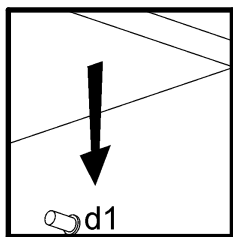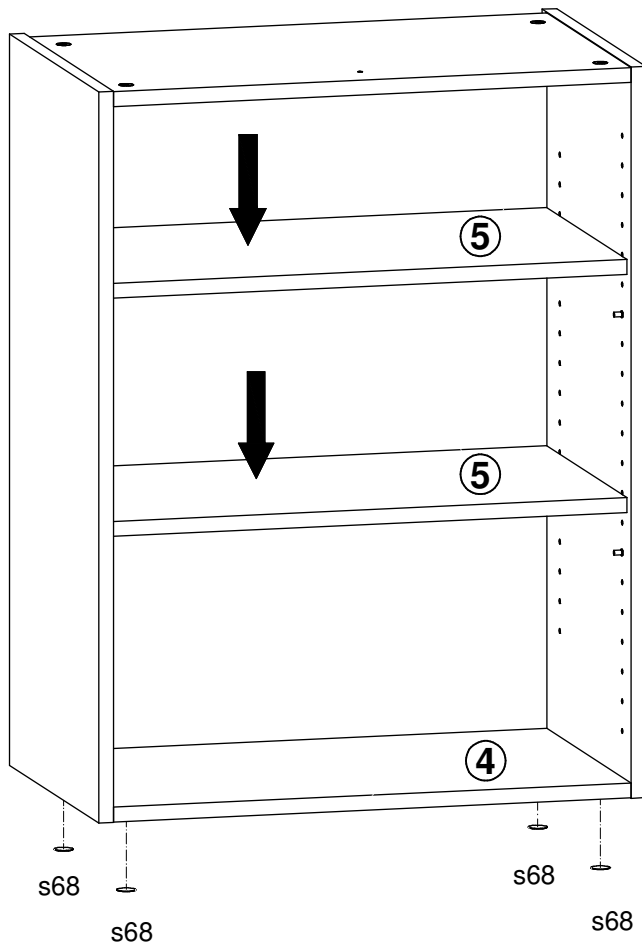

10

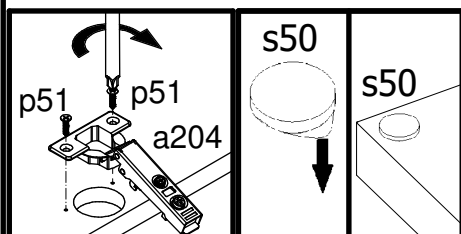
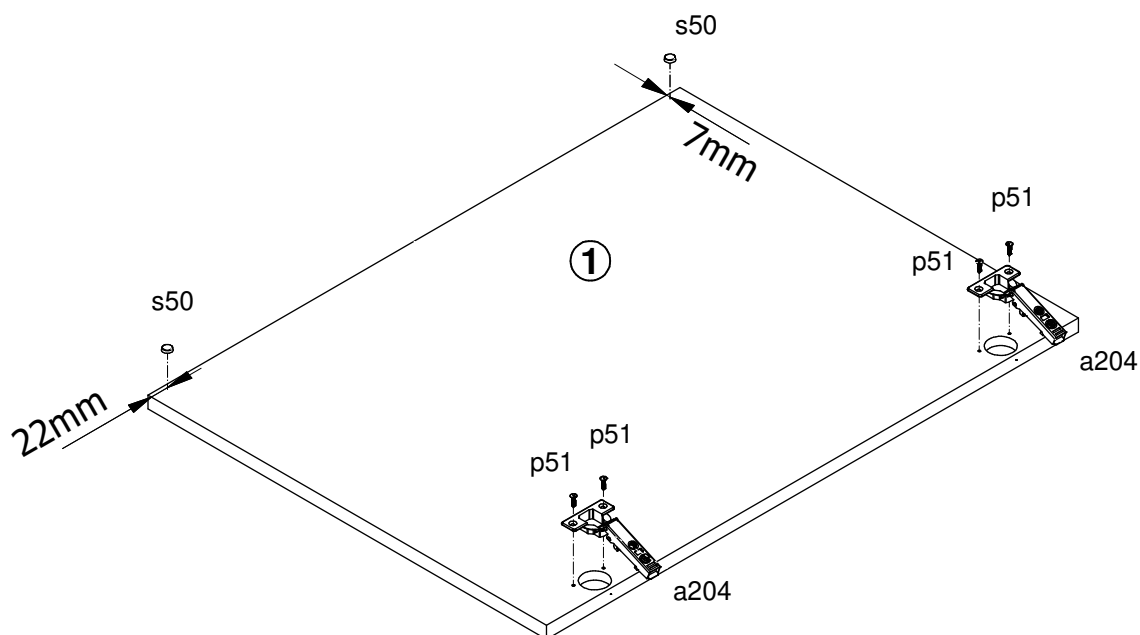






11

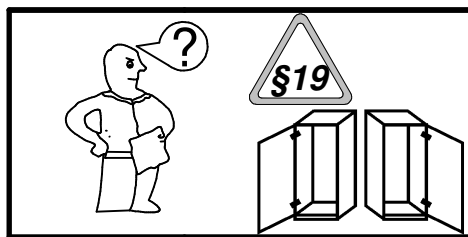

L

P

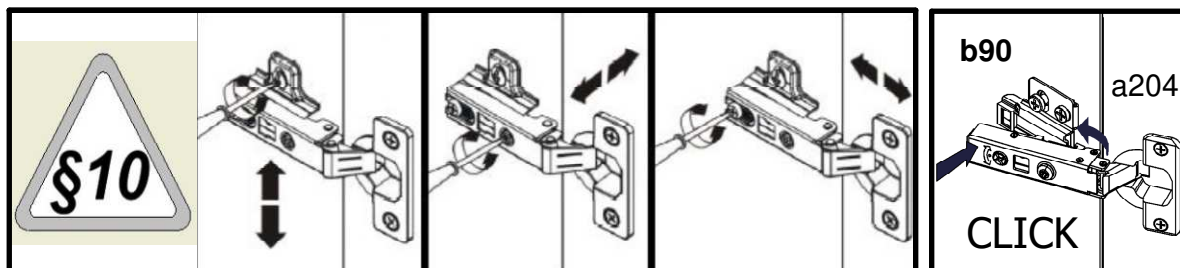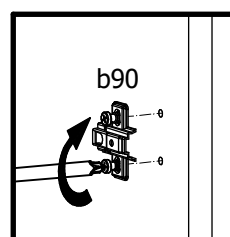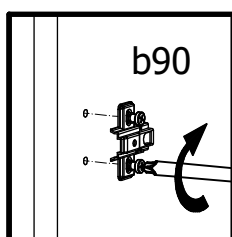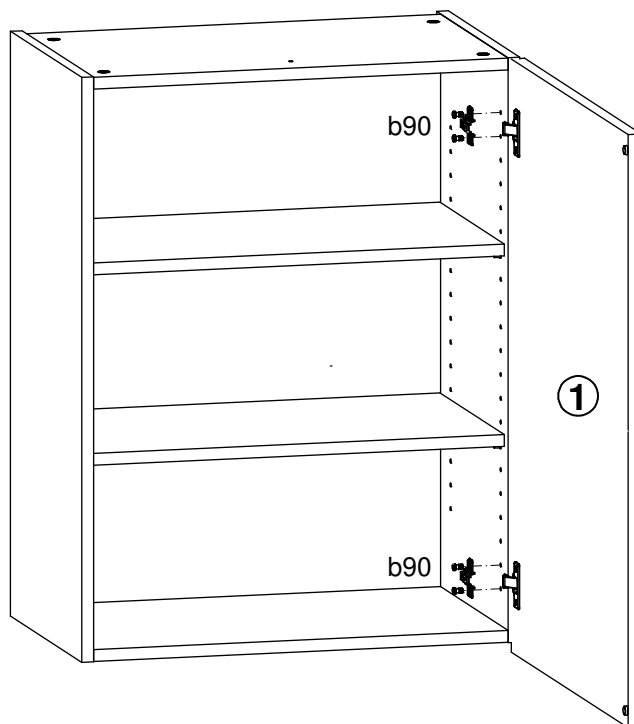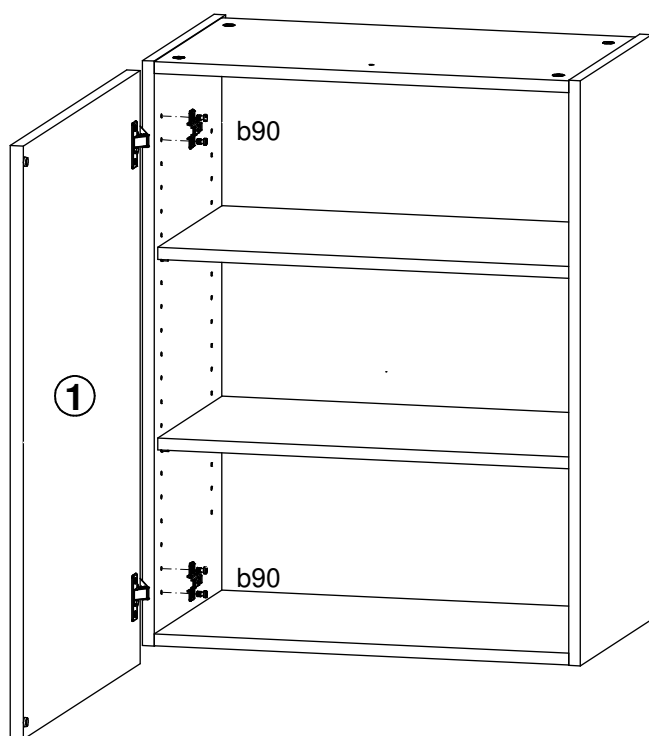

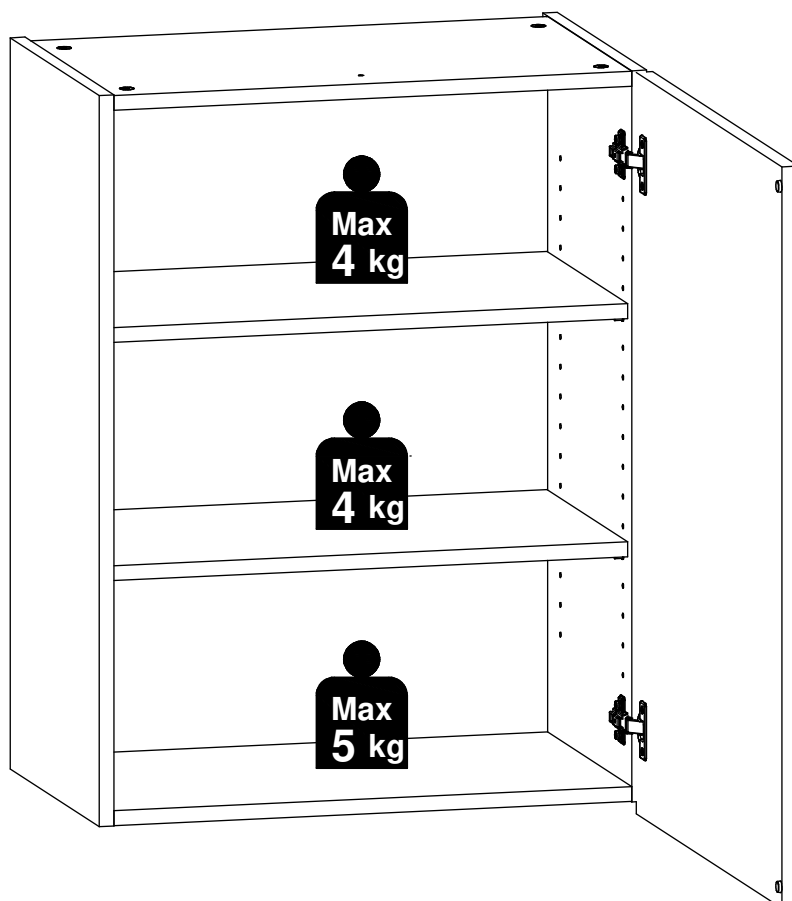

- NE JAMAIS UTILISER
DEPRODUITS ABRASIFS:
POUDRE, LAINE D'ACIER, SOLVANTS.
- NE PAS MOUILLER



- NEVER USE ABRASIVE PRODUCTS
OR SOLVENTS.
DO NOT APPLY EXCESSIVE PRESSURE
WHEN USING THE DAMP CLOTH.


	PAPER DECOR	SURFACES STRATIFIÉES	SURFACES LAQUÉES	BOIS VERNIS	TEXTILE CUIR
EAU SAVONNEUSE (SAVON NEUTRE)	●	●	●	●	●
EAU ADDITIONNÉE DE DÉTERGENT		●	●		
ENTRETIEN SPÉCIFIQUE FABRICANT					●

	PAPER DECOR	LAMINATED SURFACES	LACQUERED SURFACE	VARNISHED WOOD	LEATHER TEXTILE
SOAPY WATER (NEUTRAL SOAP)	●	●	●	●	●
WATER WITH DETERGENT		●	●		
SPECIFIC SUPPLIER CLEANING					●




A

K49-G1DO_60_80

A	B	C	D
1	K49-0020	797	597
2	K49-1001	786	365
3	K49-1002	786	365
4	K49-3005	568	345
5	K49-3006	567	329
6	K49-3012	568	345
7	K49-9003	781	578

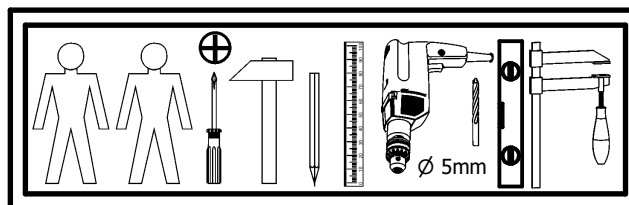

B

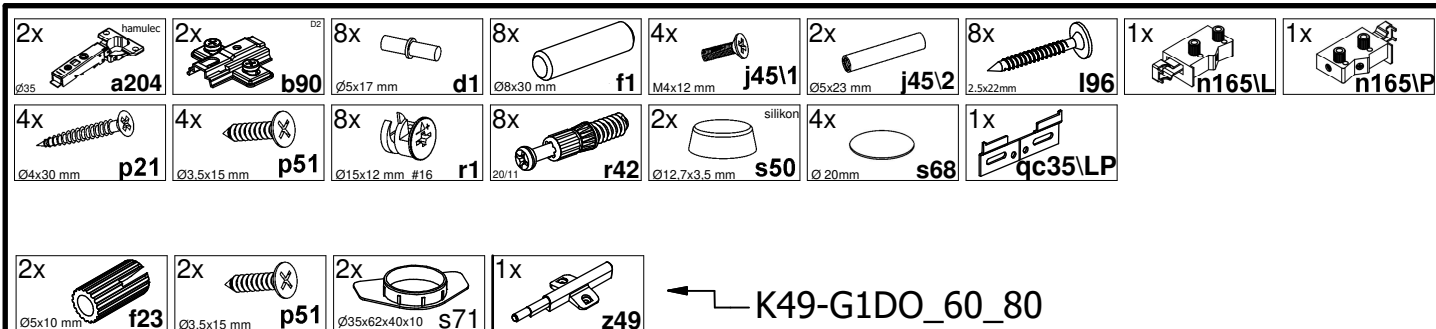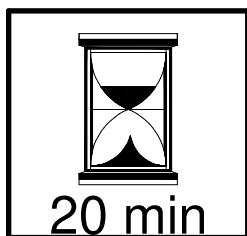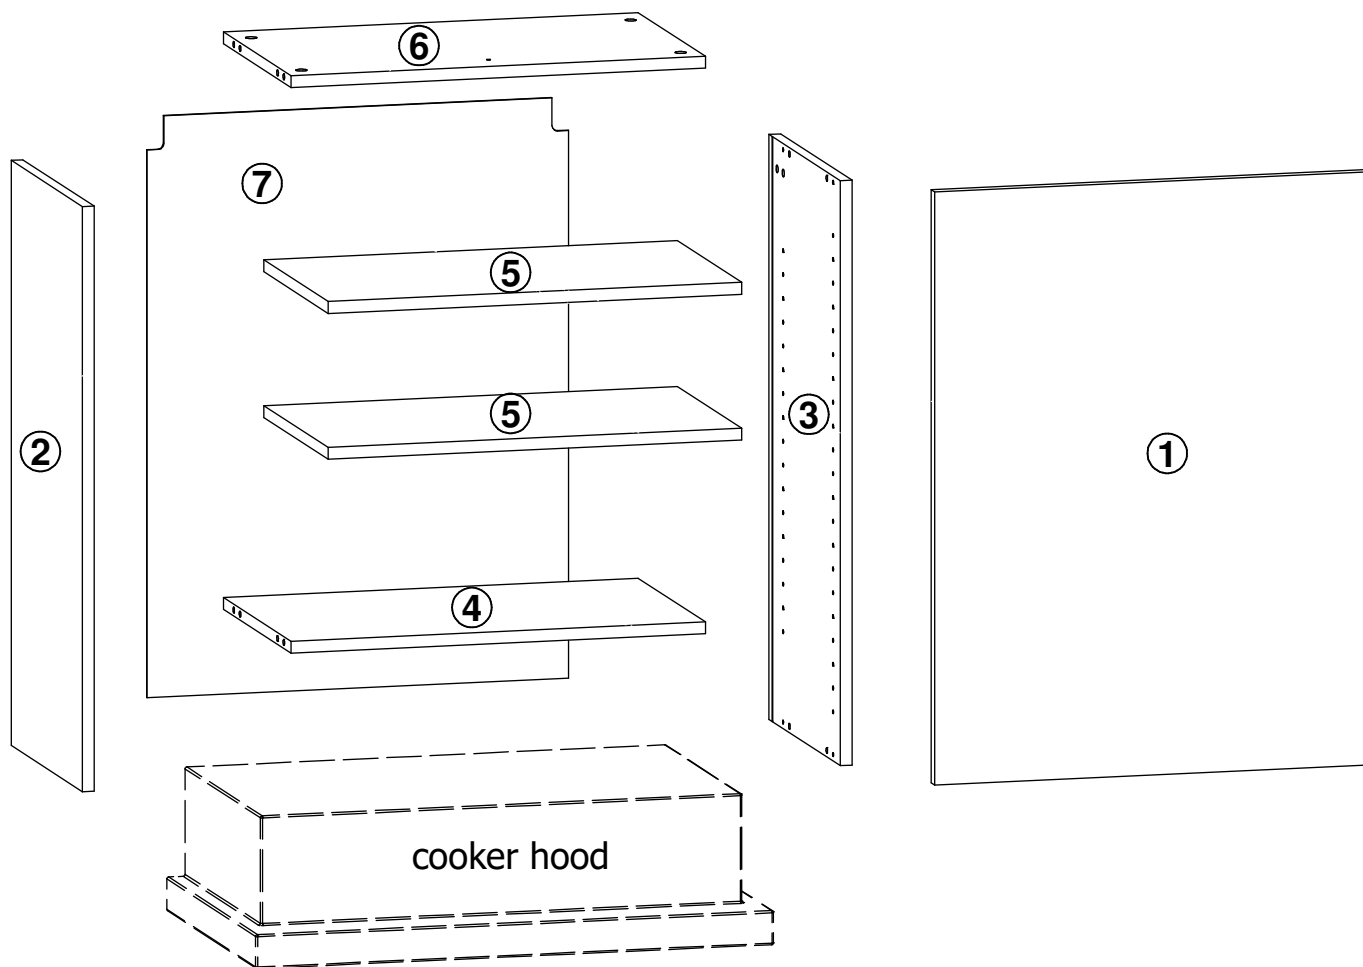

K49-G1DO_60_80

1











8x
Ø5x17 mm
d1

1x
n165\L








1x
n165\P

4x
Ø4x30 mm
p21




8x
r42

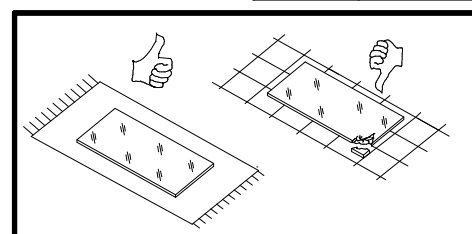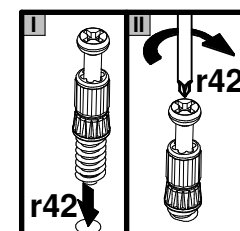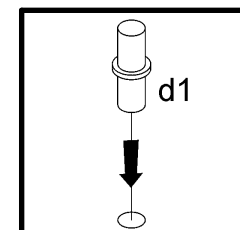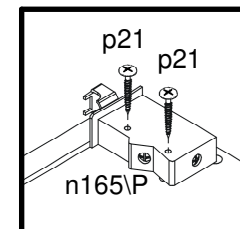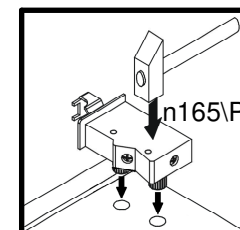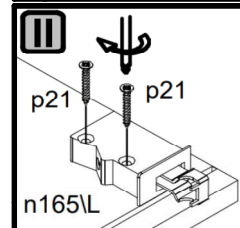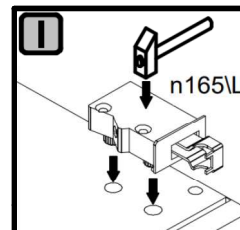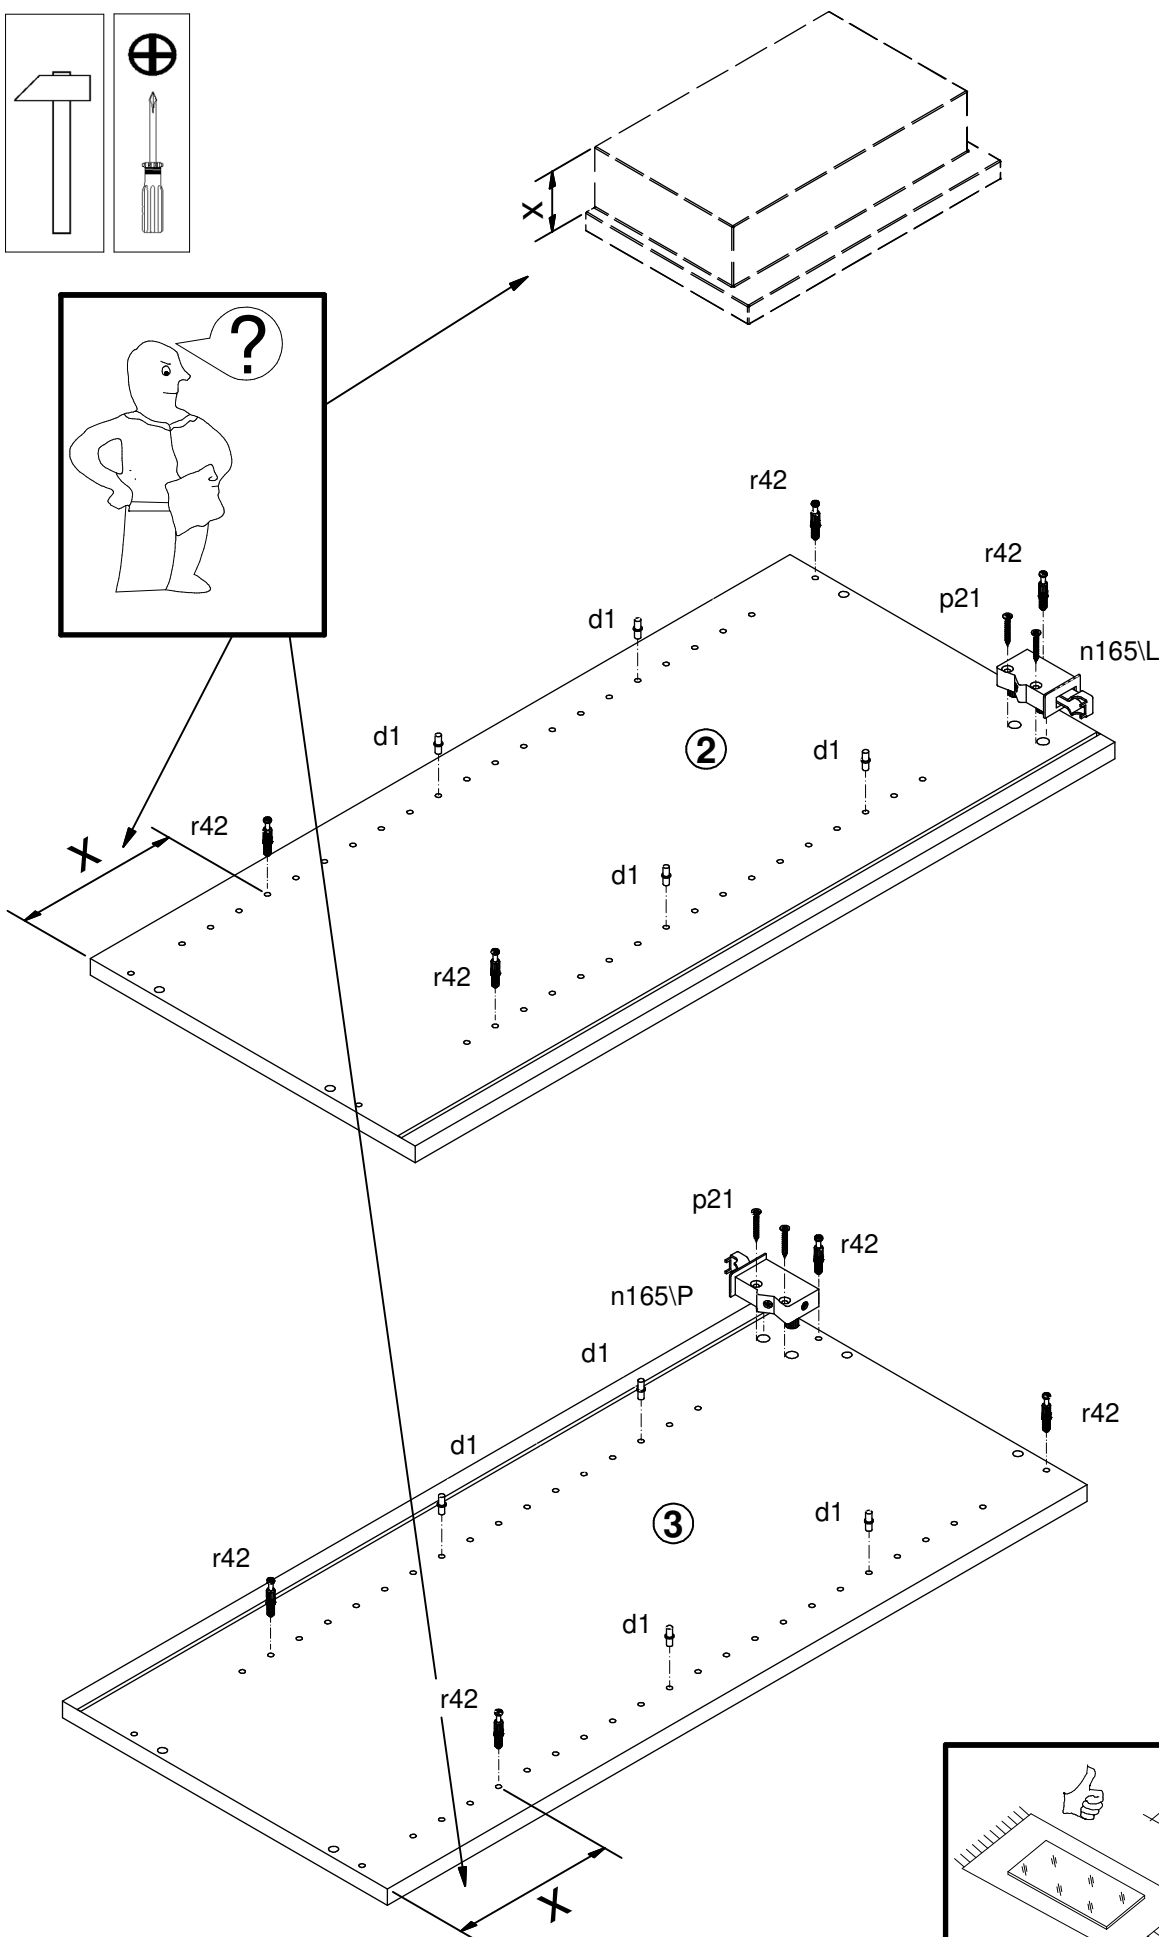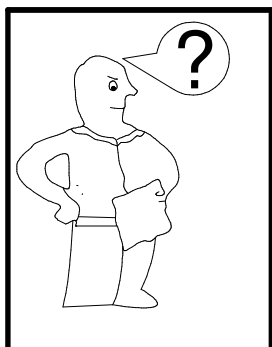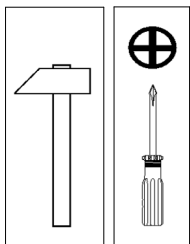




2

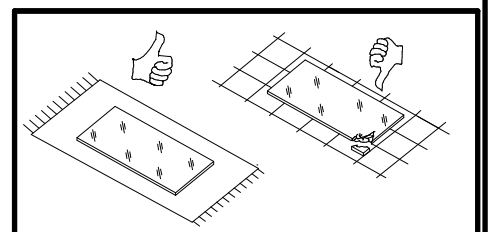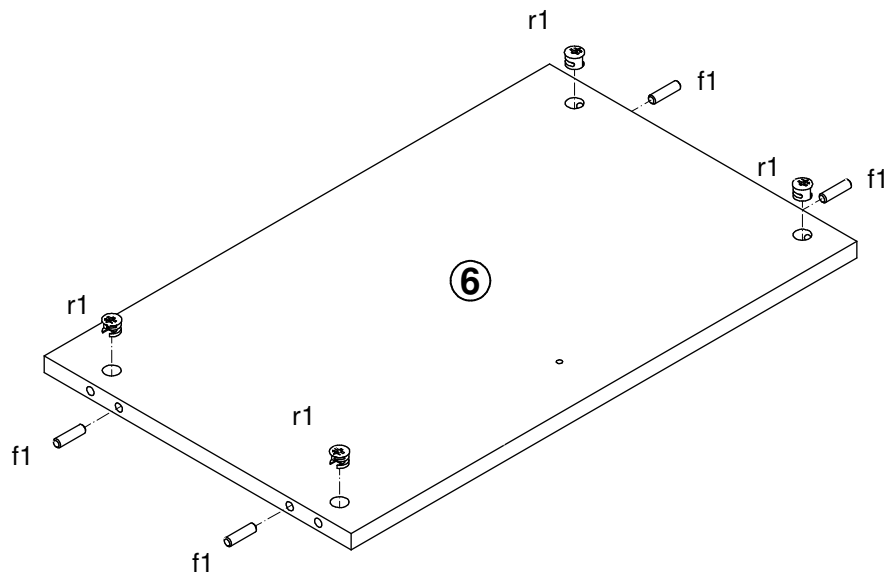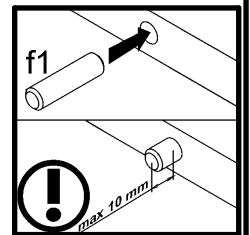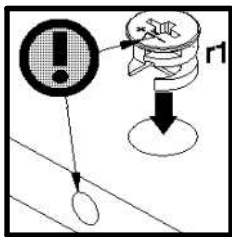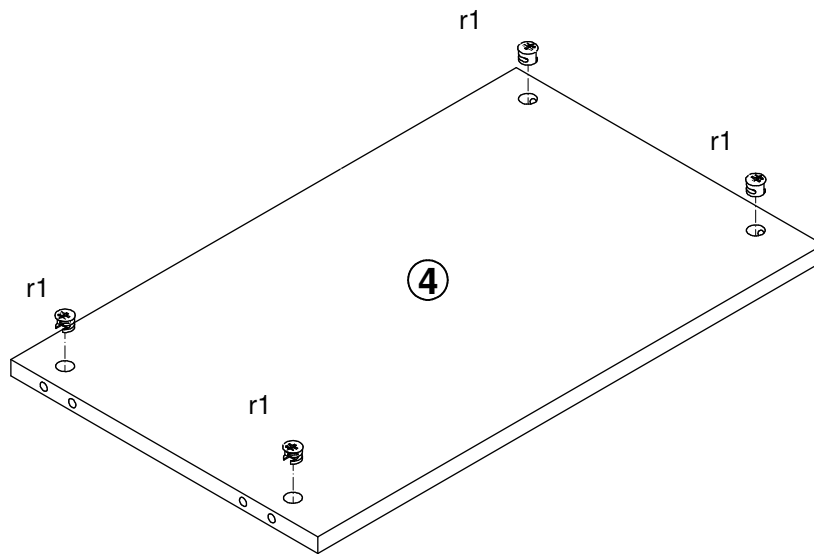





3

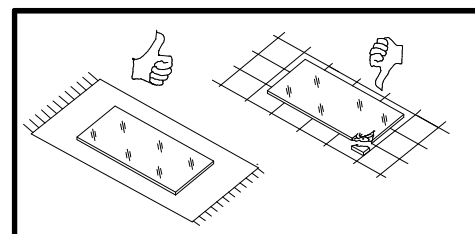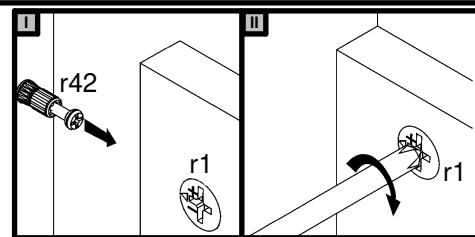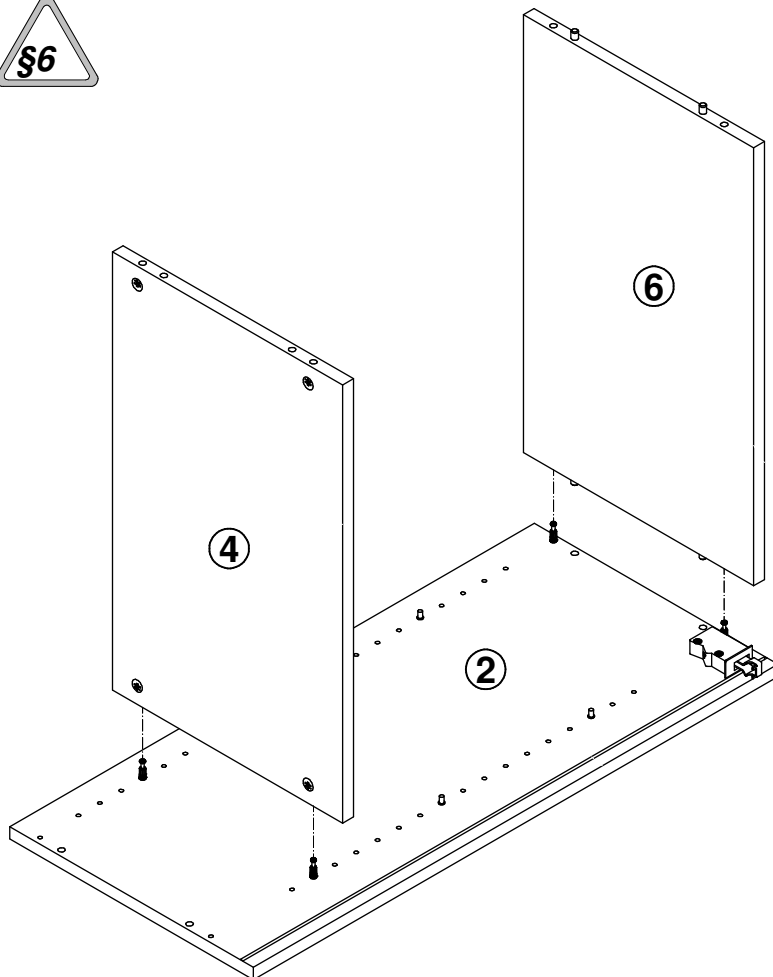

4



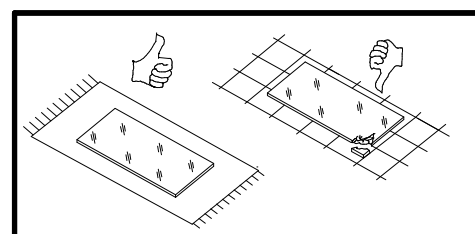
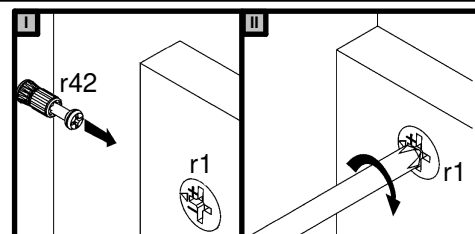
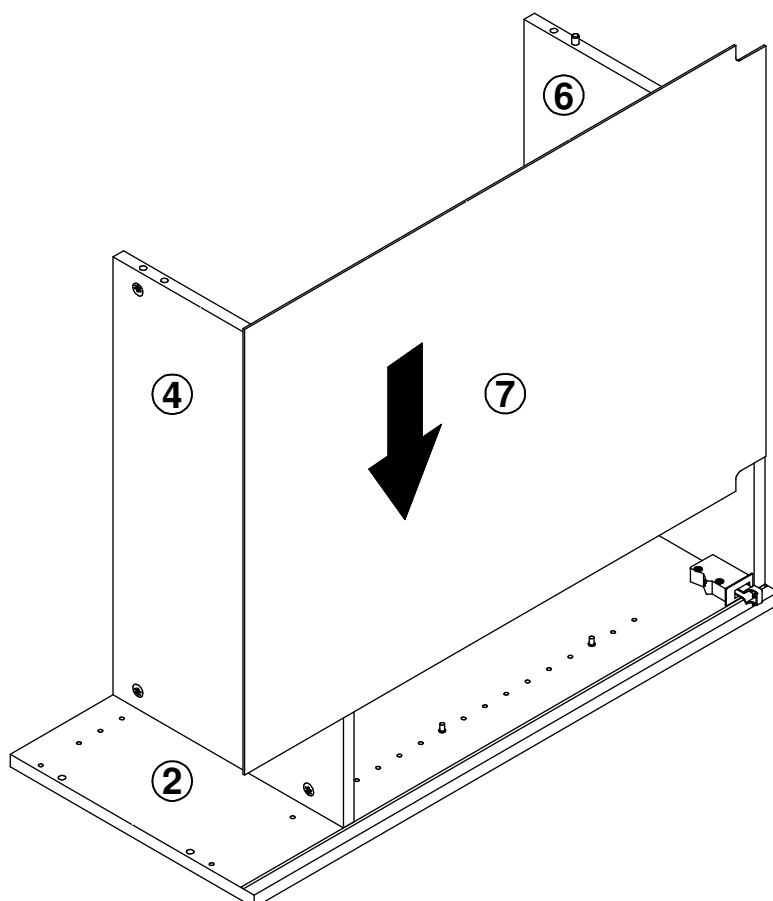


5

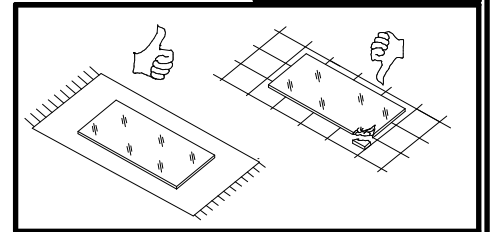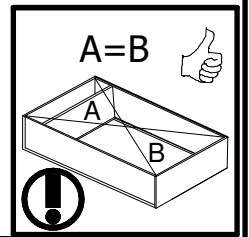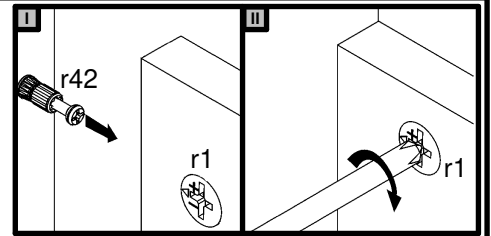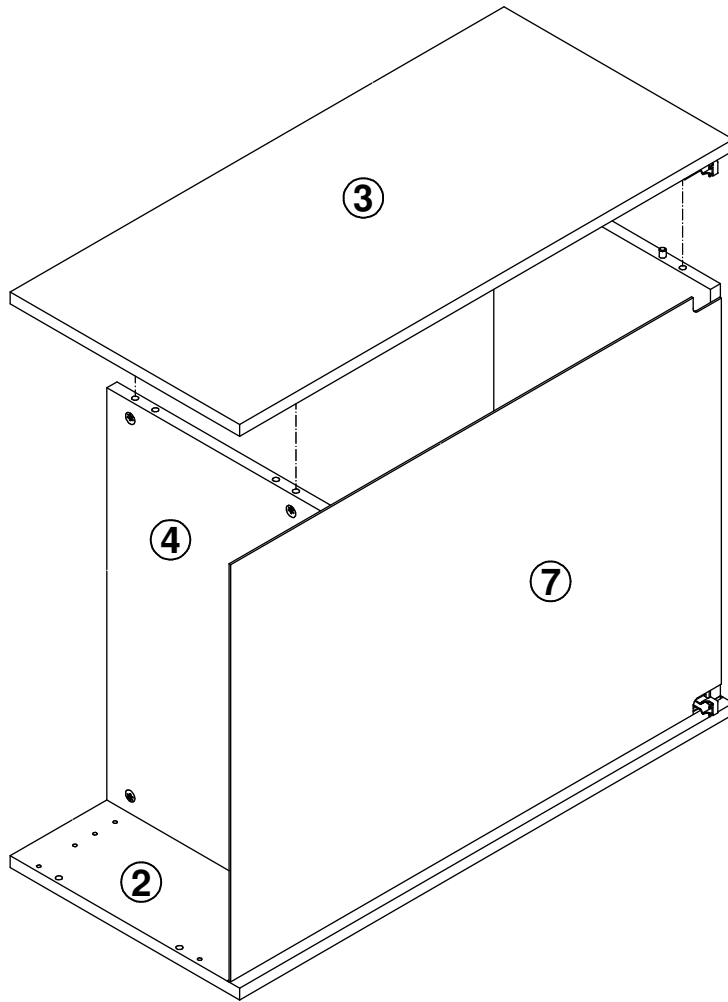

6

8x
2.5x22mm I96

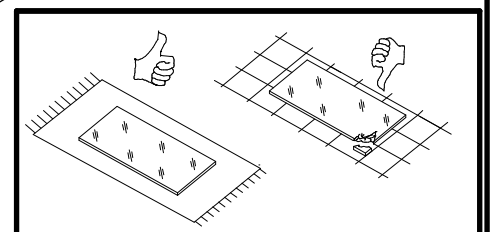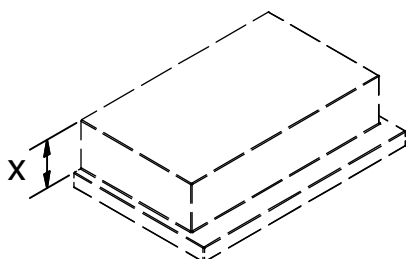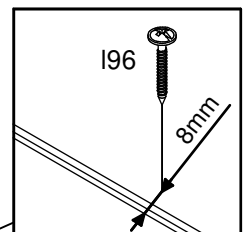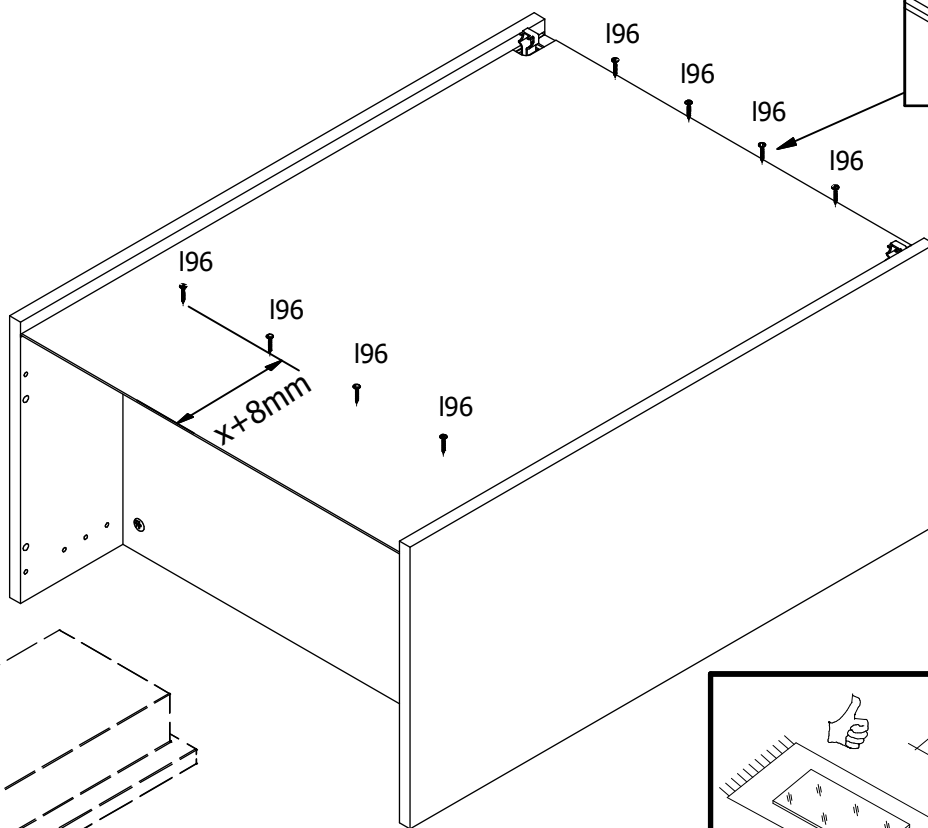

Due to the wide diversity of wall or partition types, we cannot provide you with suitable attachment fixtures. To determine which attachment fixtures to use, you will need to identify the type of wall to which you will be fixing this product. Here are some examples of attachment fixtures recommended for:

BLIND WALLS		STUDDED WALLS		
"FISCHER" Nylon plug	Metal Wall plug	Nylon winged Wall plug	Metal expansion plug	"MOLLY" plug

Use a drill bit that is compatible in size with the hardware used and the type of wall.

Da es eine große Vielfalt an Arten von Wänden oder Trennwänden gibt, können wir Ihnen leider keine Wanddübel zur Verfügung stellen. Bitte prüfen Sie die Eigenschaft der Wand, an der Sie das Möbelstück befestigen wollen, um den dafür passenden Wanddübel zu ermitteln. Ziehen sie ggf. eine Fachkraft zurate. Hier einige Beispiele für Wände und dafür passende Dübel:

Massivwände		Hohlwände		
Kunststoffdübel	Metall Wanddübel	Hohlraum Kunststoffdübel	Hohlraum Metalldübel	Hohlraumdübel "Molly"

Verwenden Sie einen an die Wandbeschaffenheit und Dübelgröße angepassten Bohrer.










ATTENTION! Fixez le segment au mur. L'opération est à réaliser après le montage complet du meuble. La non-exécution de fixation ou une fixation inadéquate présente un risque de renversement (déchirement) lors du montage et utilisation du meuble. La fixation du meuble au mur ne peut être réalisée que par un personnel compétent. Avant de fixer le meuble au mur, assurez-vous qu'il est bien adapté pour la fixation des meubles, choisissez une cheville appropriée, vérifiez la charge et la qualité de fixation.

NOTE! Attach unit to wall when completely assembled. Improperly attached furniture may break free and fall while being mounted or used. The unit may only be attached to the wall by a qualified person. Check that the wall is suitable for having furniture attached to it beforehand. Choose a suitable anchor bolt and check the strength and quality of the attachment.

7

1x
qc35\LP

§4

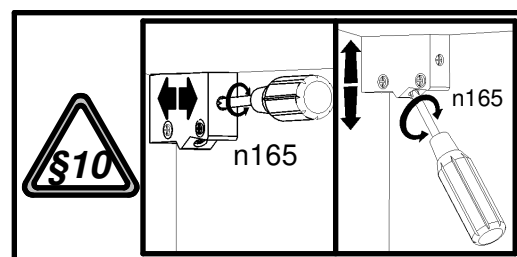
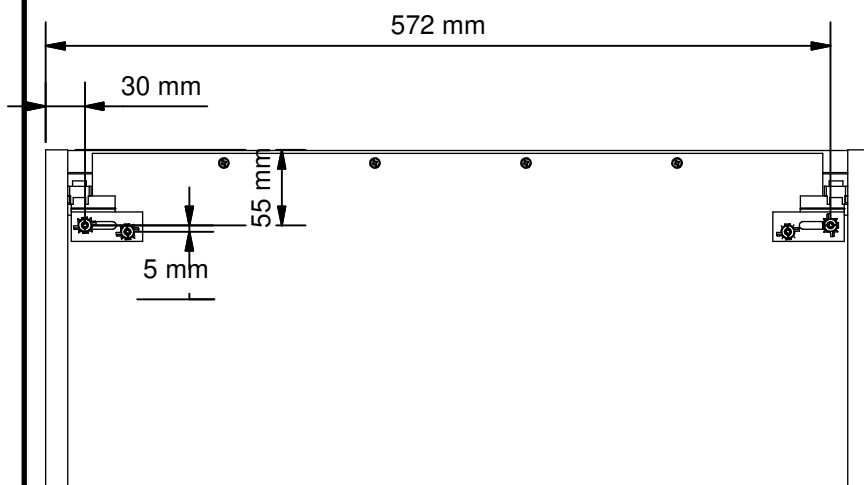
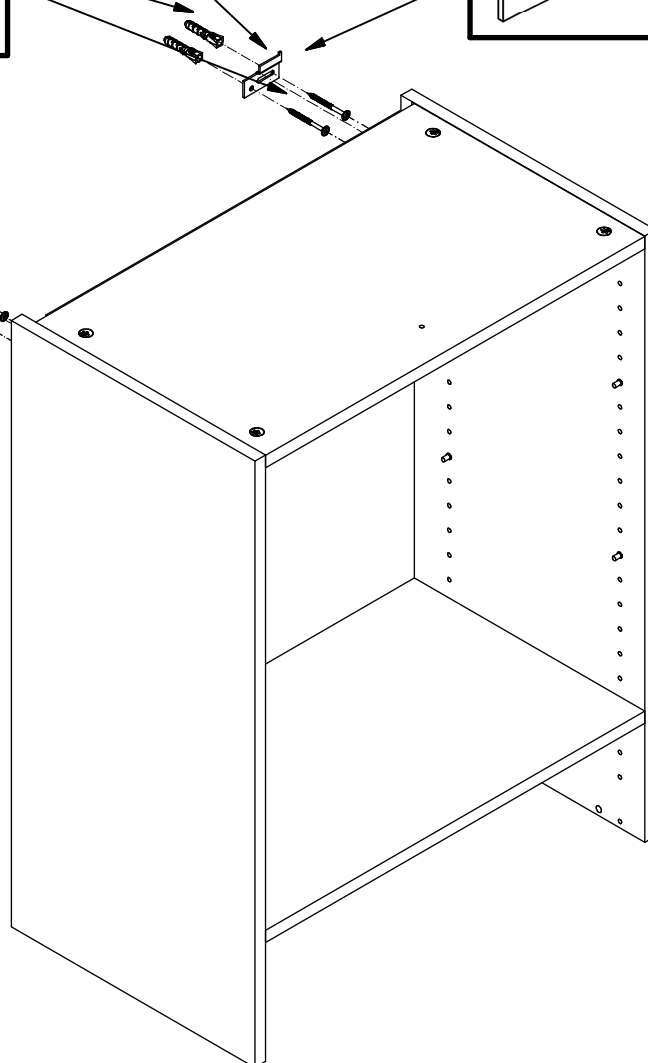
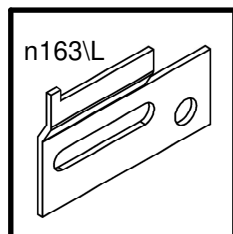
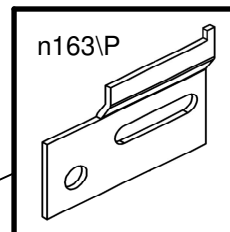

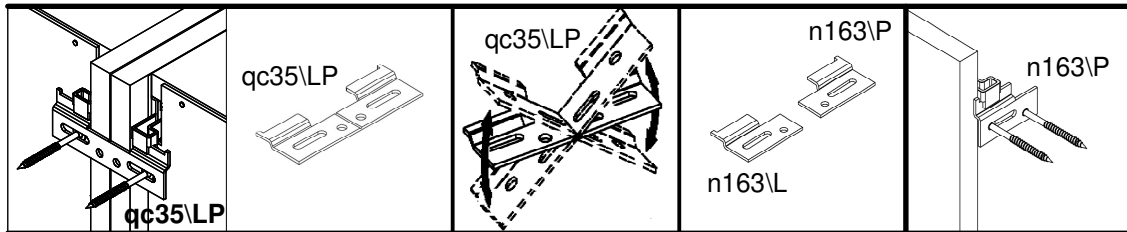


8



4x
M4x12 mm
j45\1

2x
Ø5x23 mm
j45\2


§6

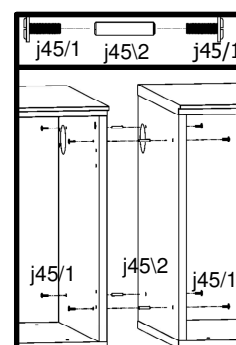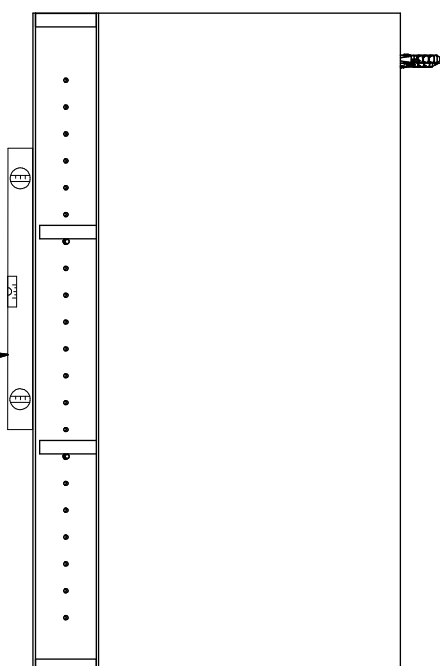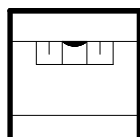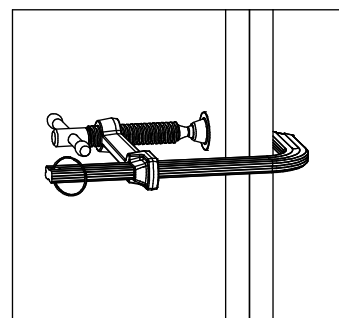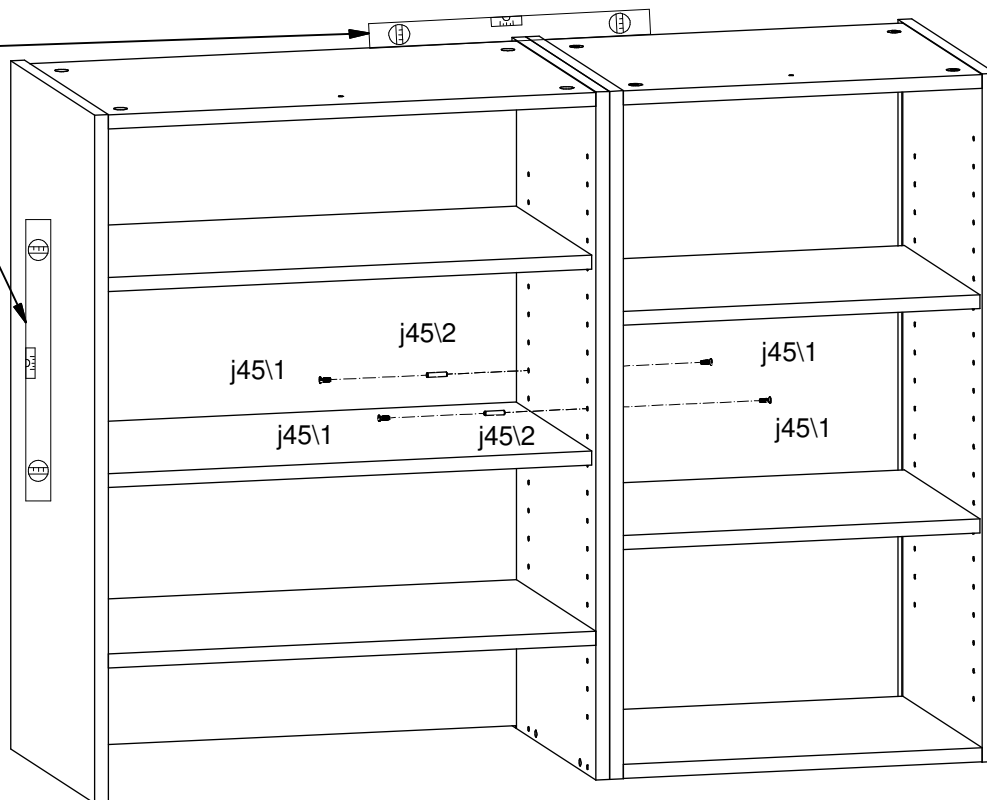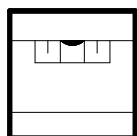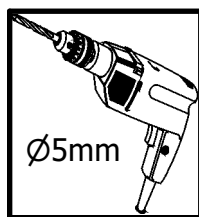






9

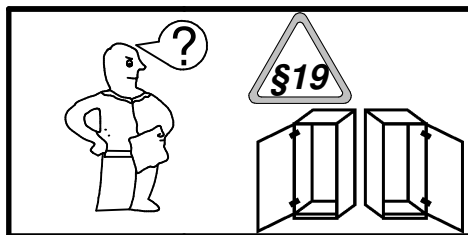






L

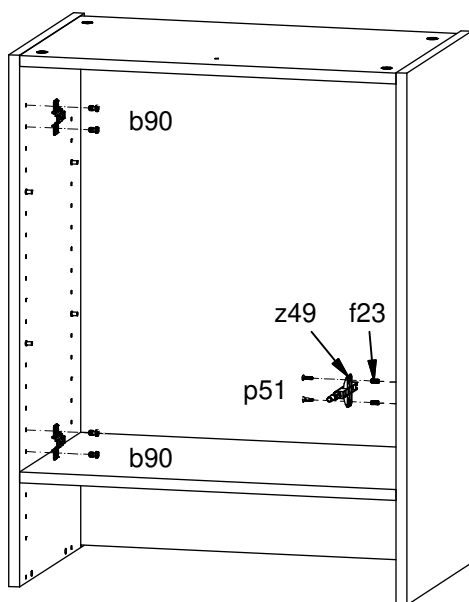

P

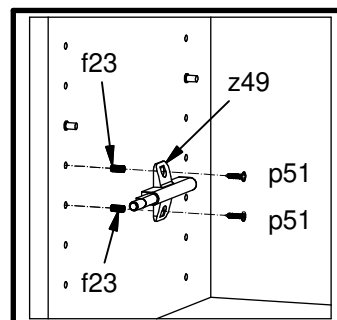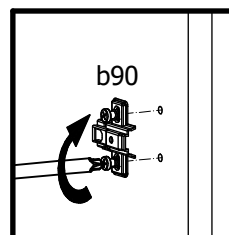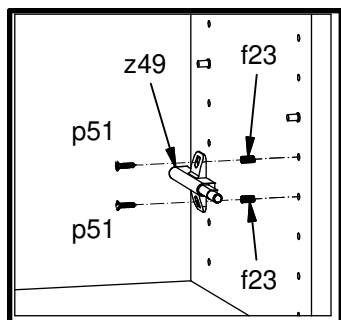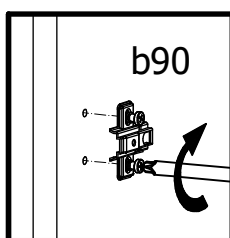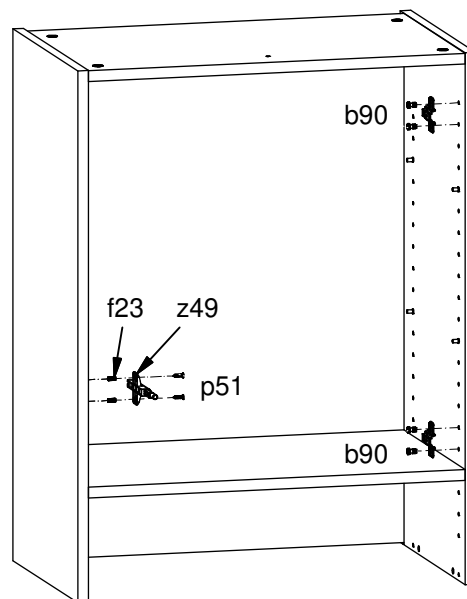





10

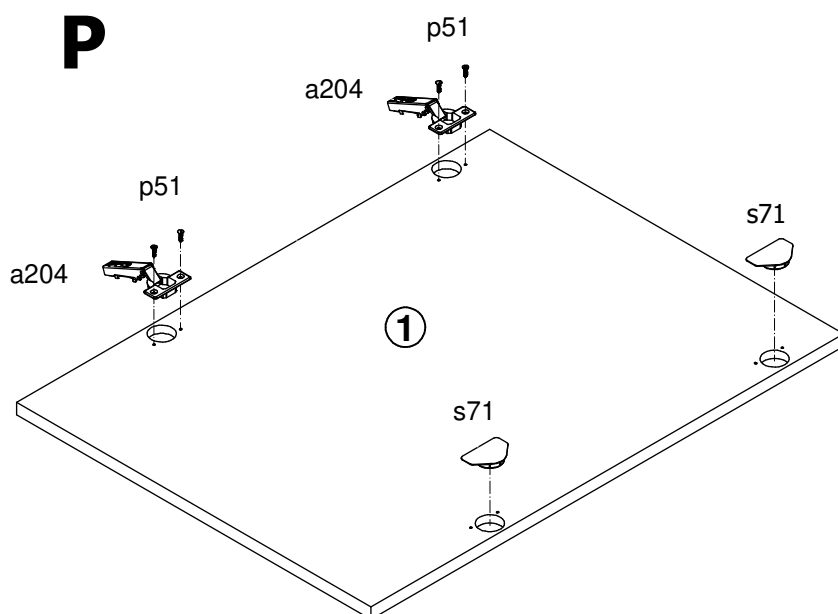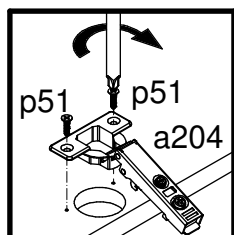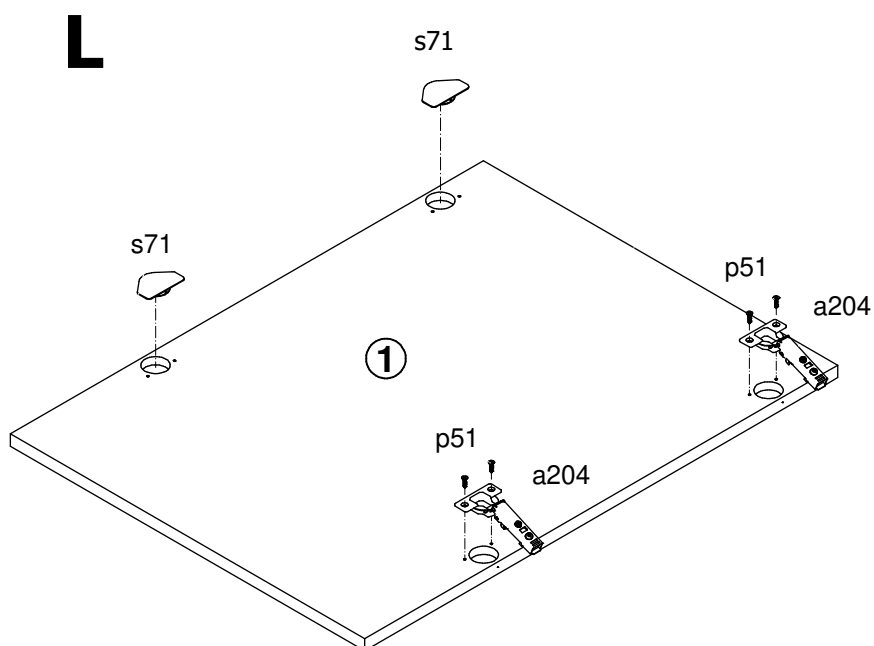


11

4x
Ø 20mm
s68

§6

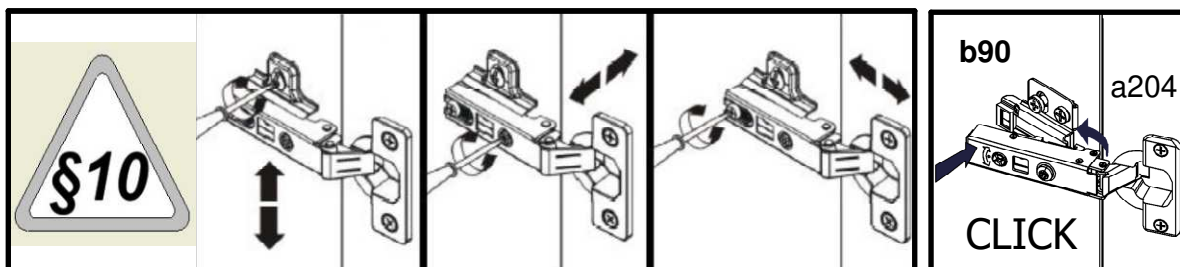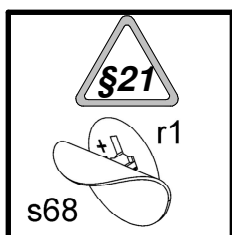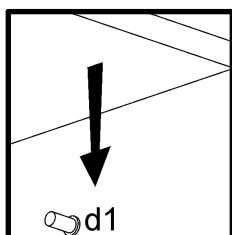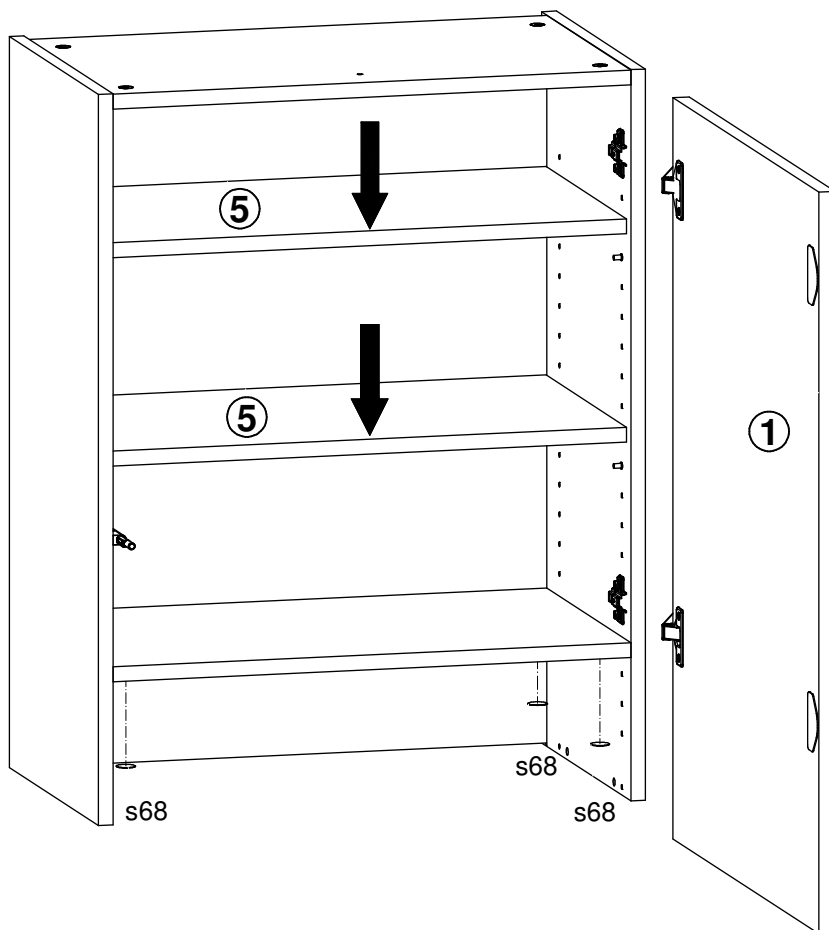

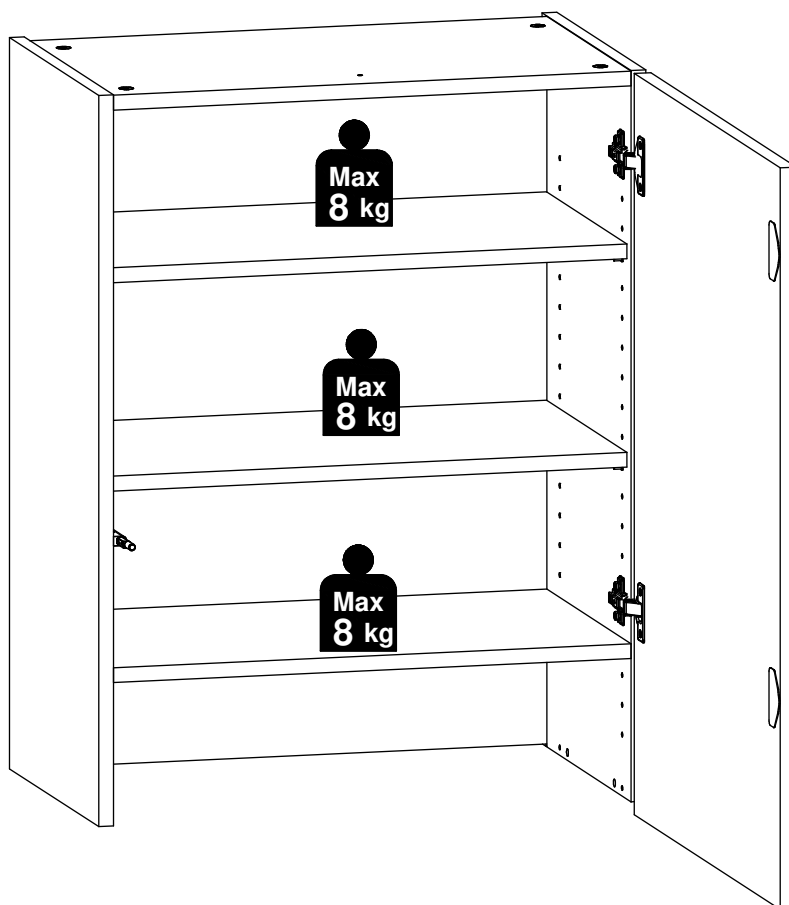

- NE JAMAIS UTILISER
DEPRODUITS ABRASIFS:
POUDRE, LAINE D'ACIER, SOLVANTS.
- NE PAS MOUILLER



- NEVER USE ABRASIVE PRODUCTS
OR SOLVENTS.
DO NOT APPLY EXCESSIVE PRESSURE
WHEN USING THE DAMP CLOTH.

	PAPER DECOR	SURFACES STRATIFIÉES	SURFACES LAQUÉES	BOIS VERNIS	TEXTILE CUIR
EAU SAVONNEUSE (SAVON NEUTRE)	●	●	●	●	●
EAU ADDITIONNÉE DE DÉTERGENT		●	●		
ENTRETIEN SPÉCIFIQUE FABRICANT					●

	PAPER DECOR	LAMINATED SURFACES	LACQUERED SURFACE	VARNISHED WOOD	LEATHER TEXTILE
SOAPY WATER (NEUTRAL SOAP)	●	●	●	●	●
WATER WITH DETERGENT		●	●		
SPECIFIC SUPPLIER CLEANING					●