


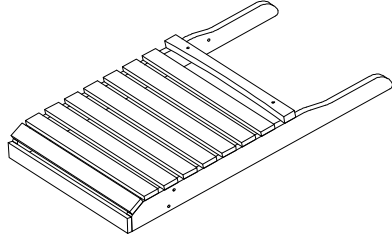
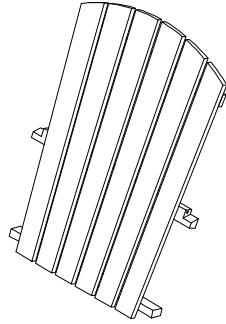

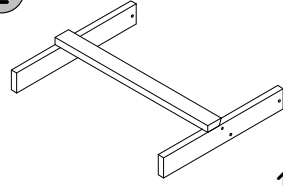






ASSEMBLY INSTRUCTIONS - 12540070/01

**ambia.** GARDEN


XXXLutz KG  
Roemerstrasse 39  
AT-4600 Wels, Austria




# ASSEMBLY INSTRUCTIONS - 12540070/01

| No | Name of Hardware | Fig   | Q.ty | A  | B   | C   | E   |   |    |    |
|----|------------------|---|------|--|---|---|---|---|----|----|
| 1  | Bolt M6x35       |  | 10   |  |  |  |  |   |    |    |
| 2  | Sleeve Nut 6x13  |  | 10   |  |   |   |   | 1x  | 1x |    |
| 3  | Bolt M6x70       |  | 2    |  |   |    |  |  |    |    |
| 4  | Screw M6x30      |  | 2    |  |   |   |   |   | 1x | 2x |
| 5  | Allen Key        |   | 2    |  |   |   |   |   |    |    |


**Step 1:**

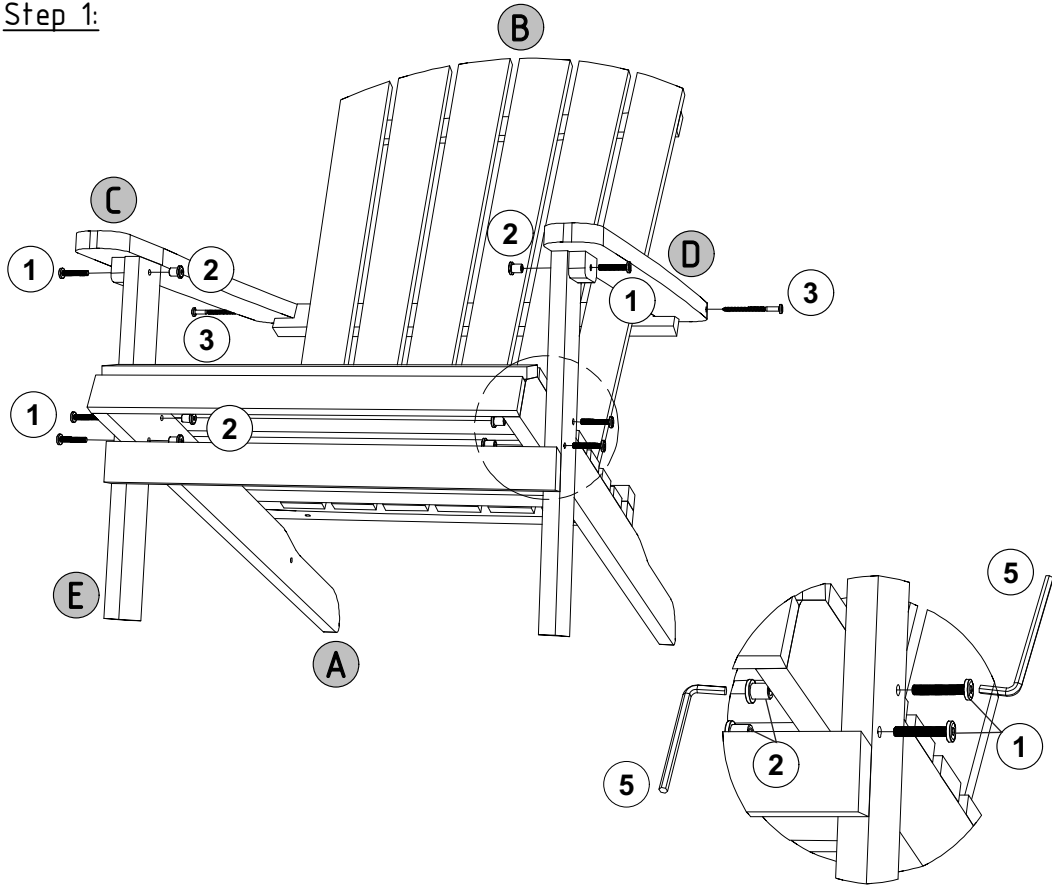

**Step 2:**

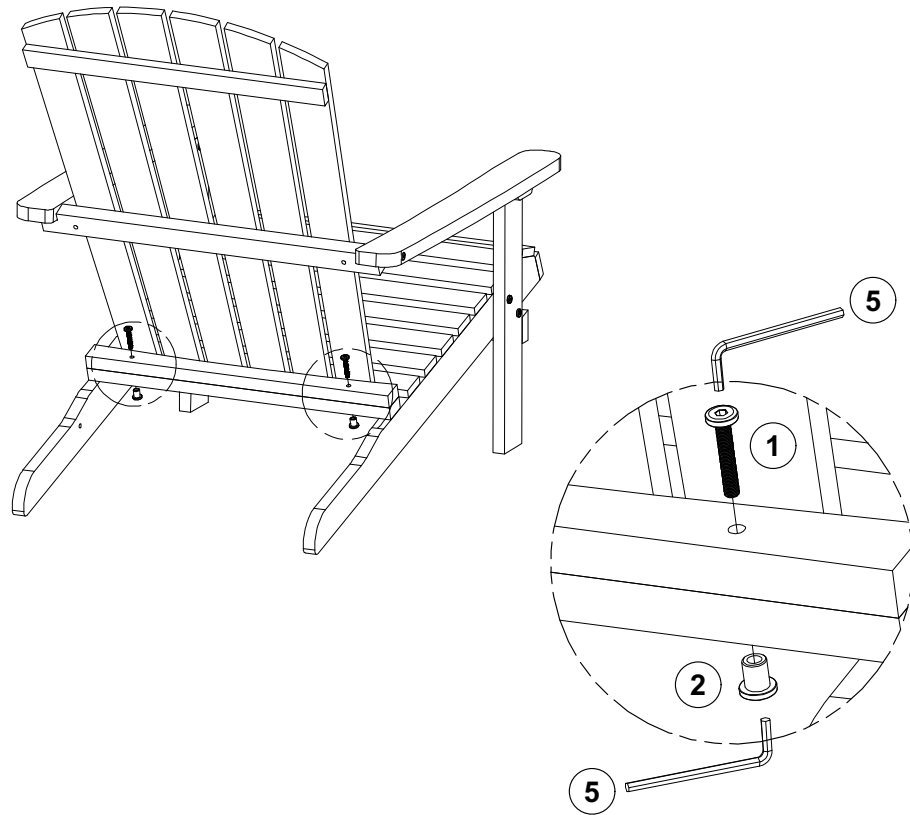

Step 3:

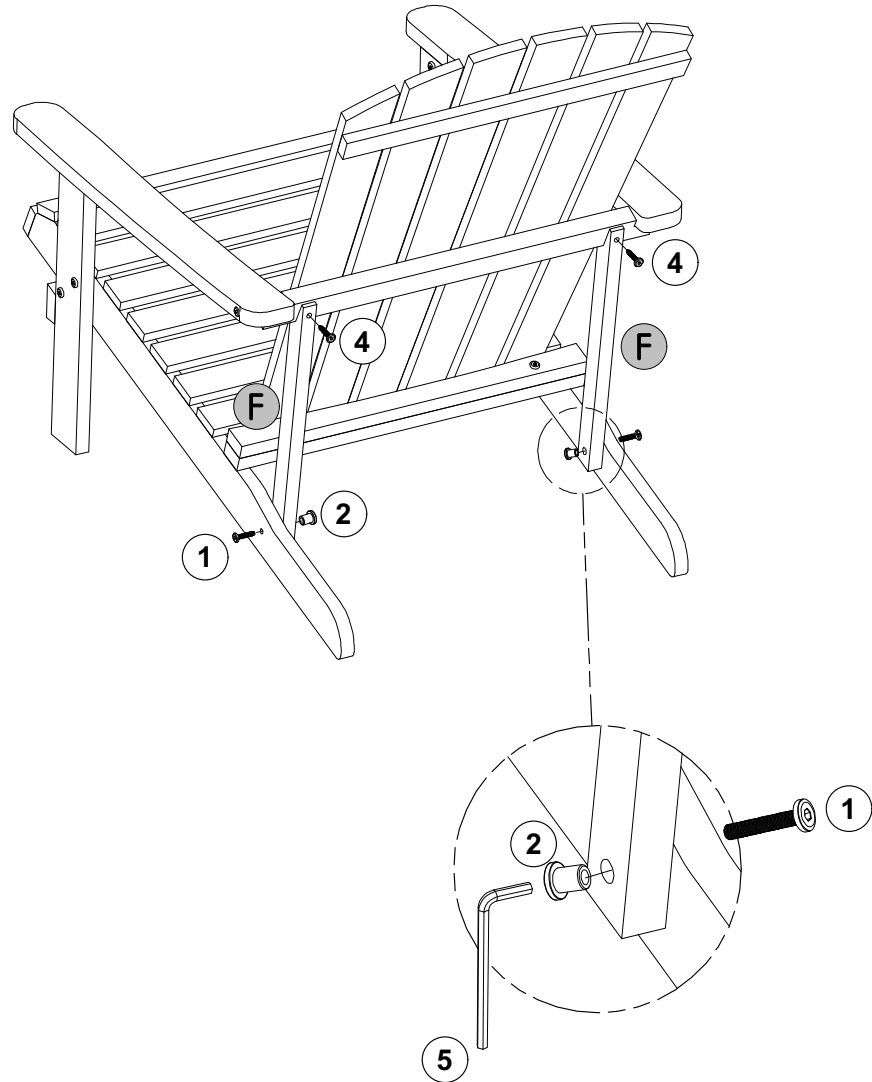

Step 4:

