
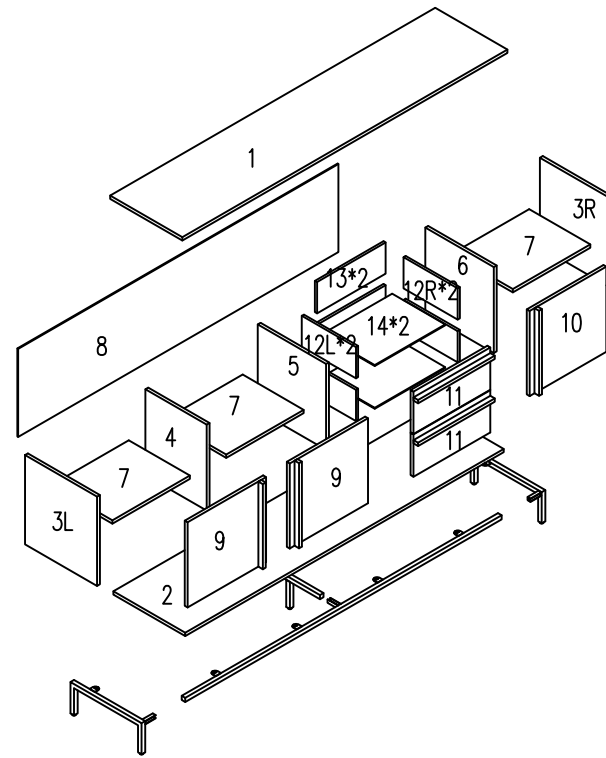


E3GT01

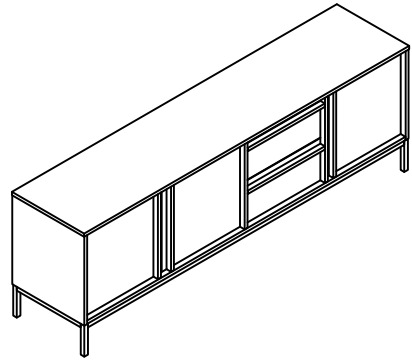

NO.	SIZE	QTY
1	1800*400*16	1
2	1764*398*16	1
3	428*399*16	2
4	412*339*16	1
5	412*379*16	1
6	412*379*16	1
7	429*338*16	3
8	1774*422*5	1
9	408*434*16	2
10	408*425*16	1
11	425*203*16	2
12	300*150*12	4
13	380*150*12	2
14	390*294*5	2


A M6*40 20pcs	B $\phi 15 \times 11.5$ 20pcs	C $\phi 8 \times 30$ 20pcs
D $\phi 12 \times 10mm$ 8set	E M4*14 24pcs	F M4*30 8pcs
G M6*12 7pcs	I M4*20mm 15pcs	Q / 8pcs
O 4# 1pcs	R M6*16 6pcs	K 10" 2set
M big bend 6pcs	N / 12pcs	J L=423 2pcs
H L=406 3pcs	Z $\phi 20$ 20pcs	

STEP 1:


O 4# 1pcs	R M6*16 6pcs

STEP 2:

K 10" 2set	E M4*14 12pcs



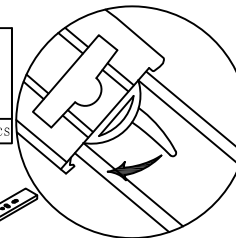


Pull to split the gliders into 2 pcs

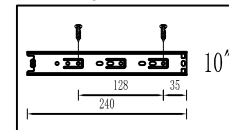


STEP 3:

A M6*40 4pcs	B $\phi 15 \times 11.5$ 4pcs	C $\phi 8 \times 30$ 4pcs

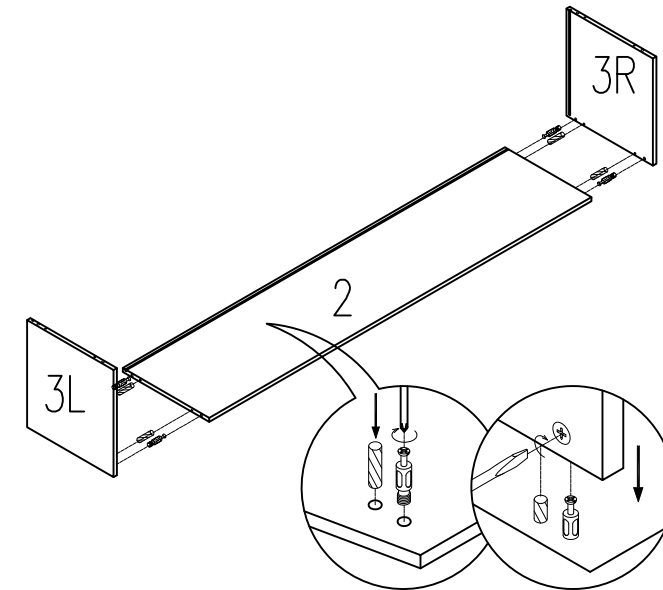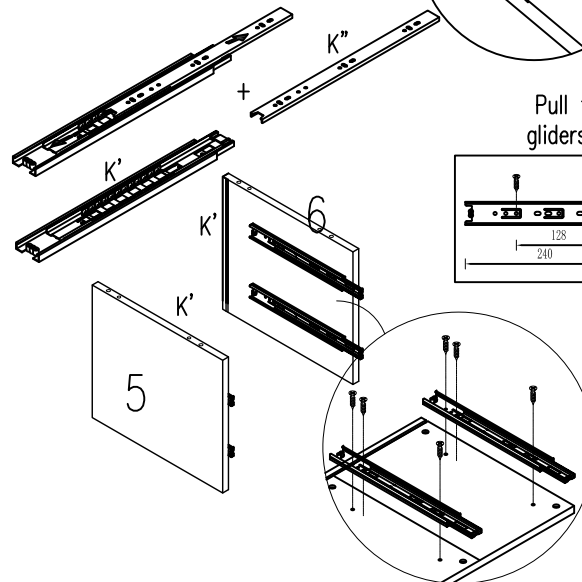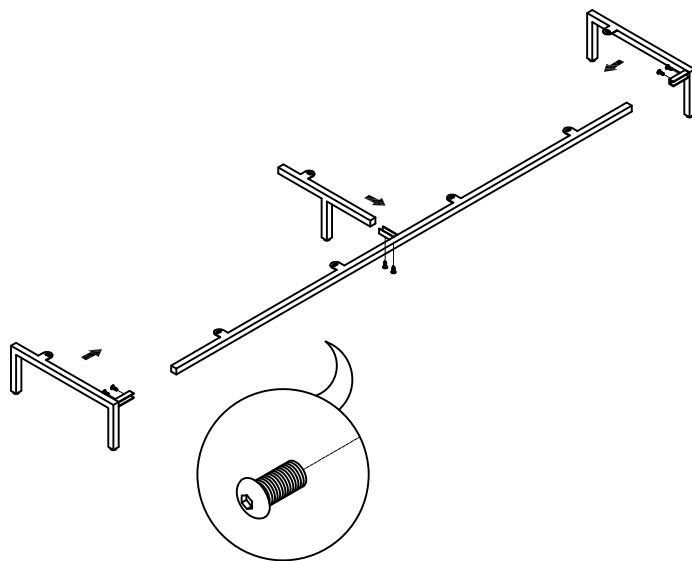


STEP 4:

								
A	M6*40	6pcs	B	φ15*11.5	6pcs	C	φ8*30	6pcs

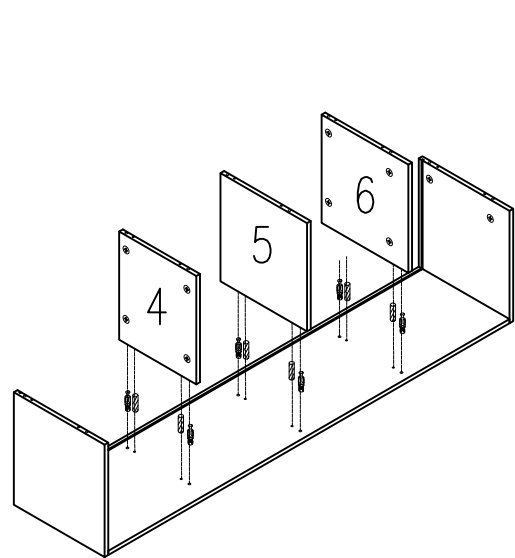


STEP 5:

								
A	M6*40	10pcs	B	φ15*11.5	10pcs	C	φ8*30	10pcs

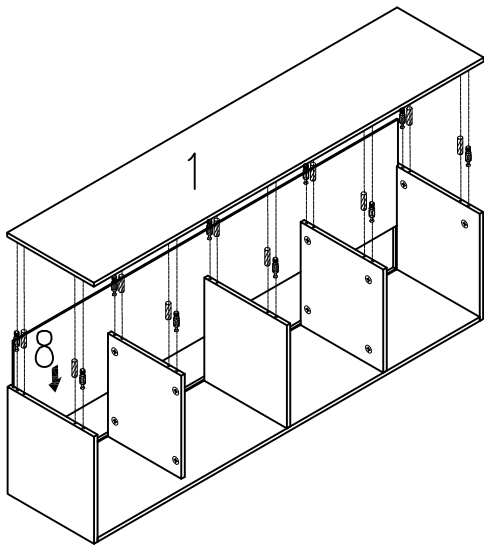


STEP 6:

		
G	M6*12	7pcs

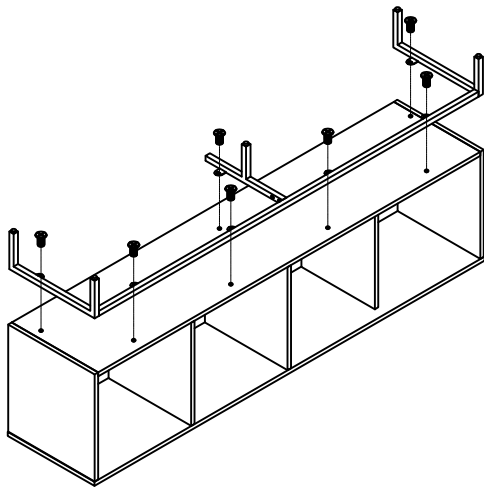


STEP 7:

		
N	/	12pcs

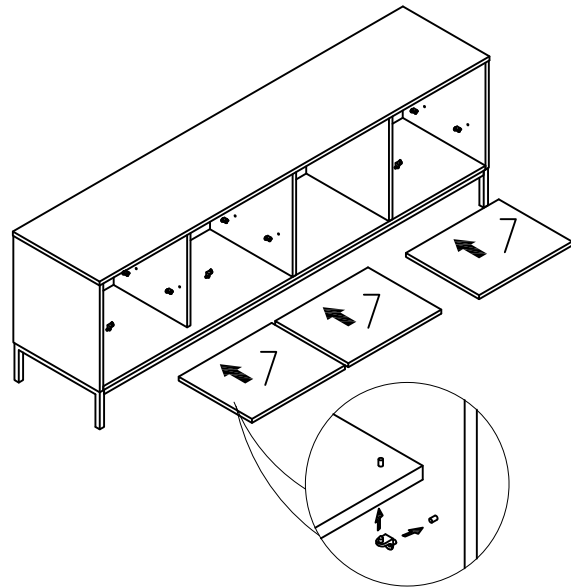


STEP 8:

																				
D	φ12*10	8set	E	M4*14	12pcs	F	M4*30	8pcs	K	10"	2set	I	M4*20mm	6pcs	J	L=423	2pcs			

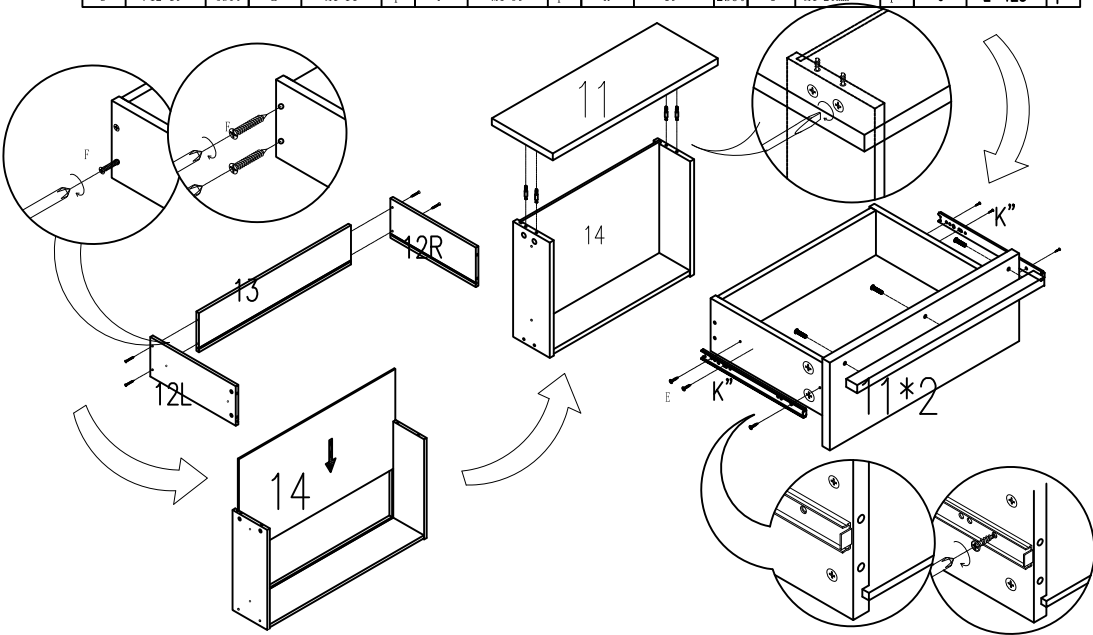


STEP 9:

		
M	big bend	6pcs

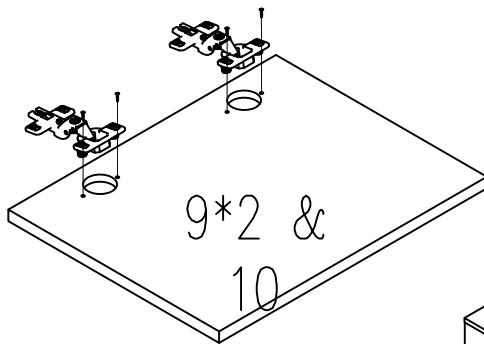


STEP 10:


					
I	M4*20mm	9pcs	H	L=406	3pcs

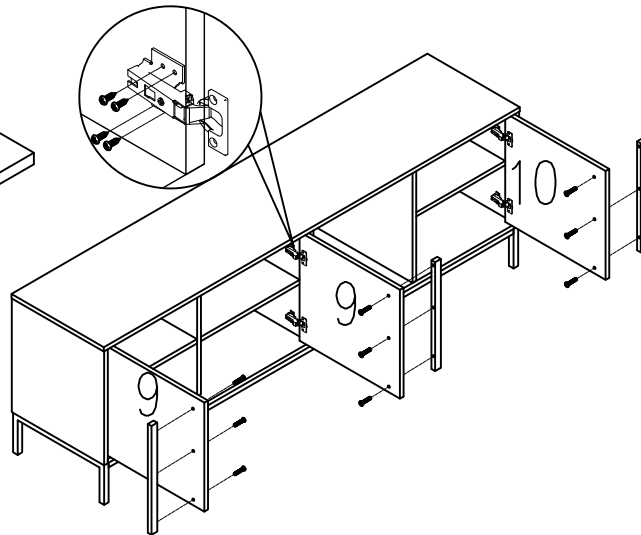




STEP 11:

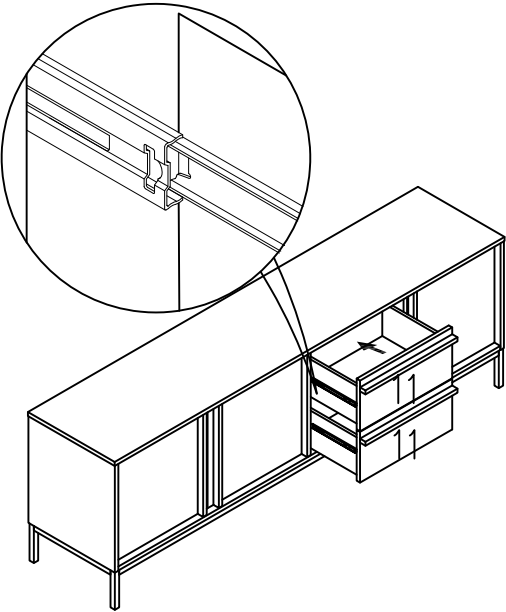

STEP 12:

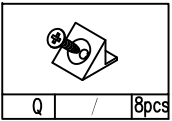

STEP 13:

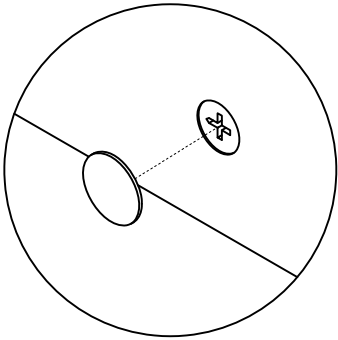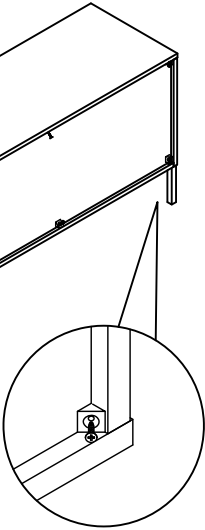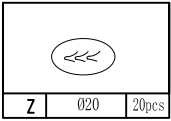

Add the screw covers for those visible cams

