




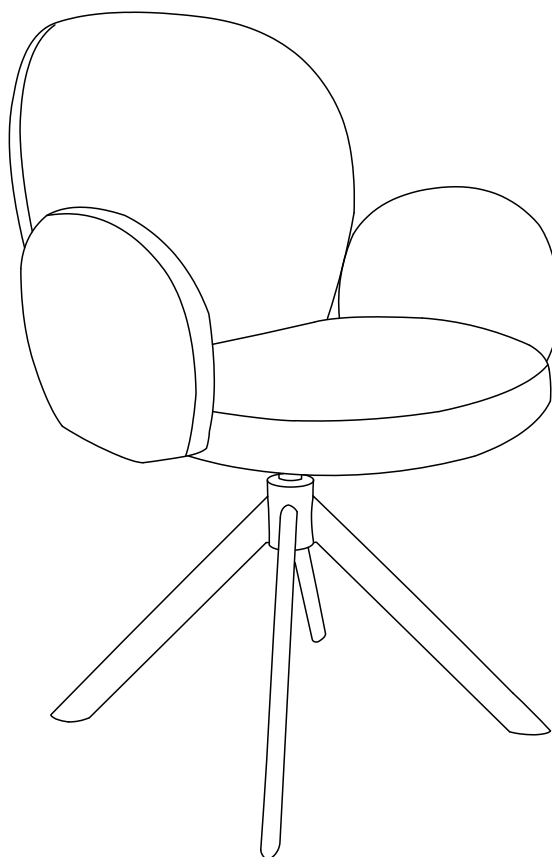


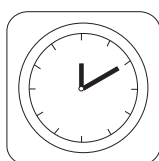



07580150-01/02/03/04/05
MICKEY

BDSK Handels GmbH & Co. KG
Mergentheimer Straße 59
DE-97084 Würzburg, Germany

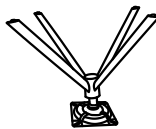novel




A X1 	B X2  ARM-L  ARM-R		C X1 	D X4  PAN HEAD BOLTS M6X20MM
E X8  PAN HEAD BOLTS M6X25MM	F X12  M 6	G X1  M 5		



1


Assemble the Arm(L) to the bottomside of the seat with the 4pc. Bolts(E) and tighten them with the L-key(G). Make sure the arrow on the bottom of arm points to the frontside of the chair.

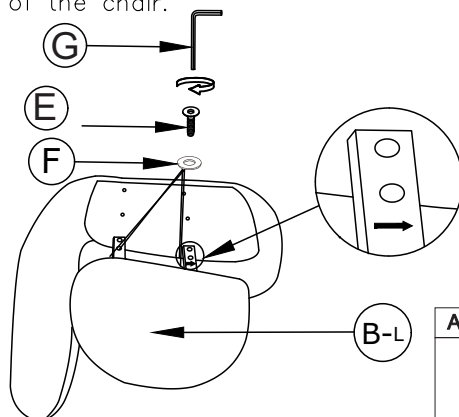

A X1	B X1	E X4	F X4	G X1
	ARM-L	M6X25MM	M6	M5

2


Assemble the Arm(R) to the bottomside of the seat with the 4pc. Bolts(E) and tighten them with the L-key(G). Make sure the arrow on the bottom of arm points to the frontside of the chair.

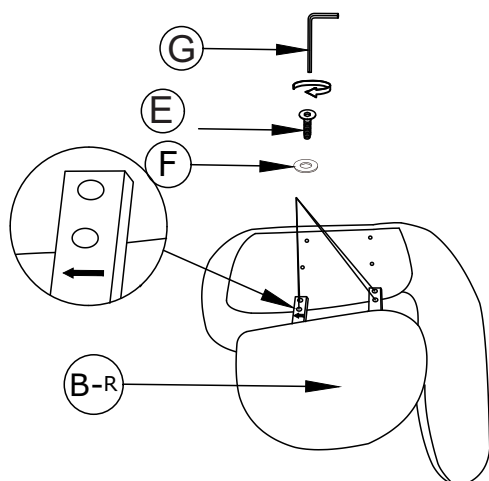

A X1	B X1	E X4	F X4	G X1
	ARM-R	M6X25MM	M6	M5

3

Assemble the frame to the bottomside of the seat with the 4pc. Bolts(D) and tighten them with the L-key(G). Make sure the arrow on the assembly plate points to the frontside of the chair.

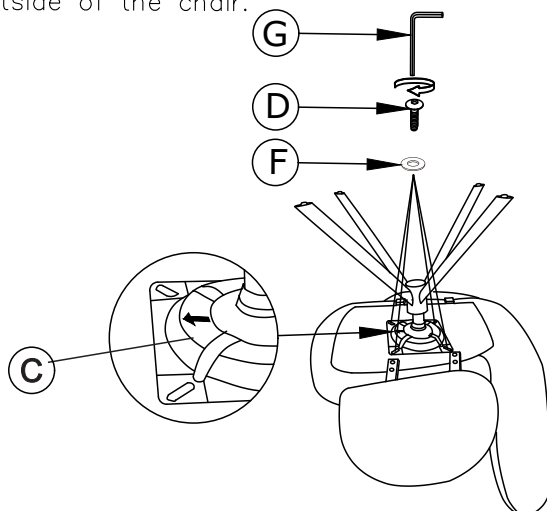

C X1	D X4	F X4	G X1
	M6X20MM	M6	M5

