

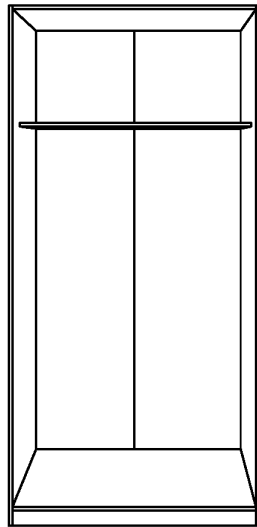
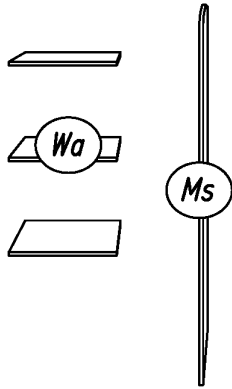
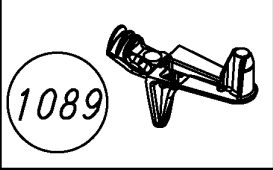


M0323_03



rauch

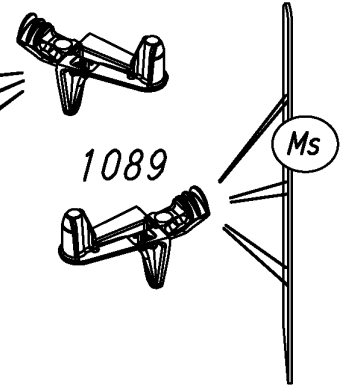


1

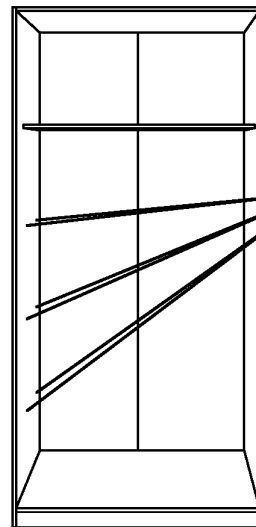

2

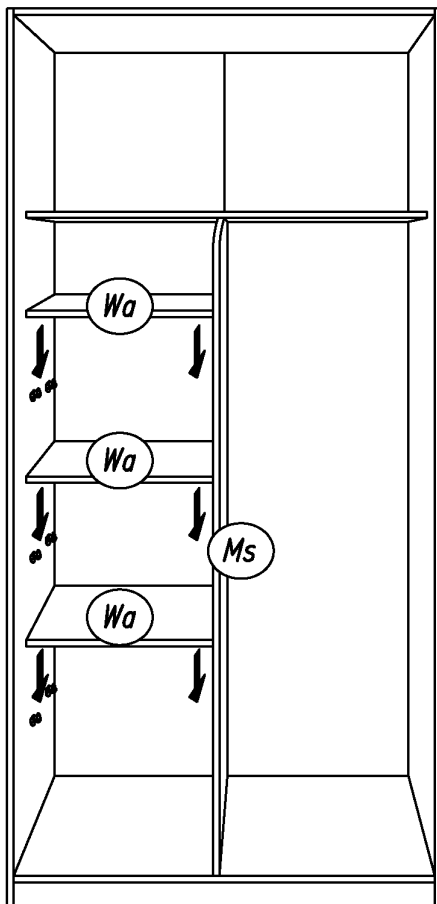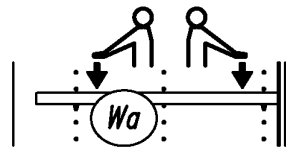





3

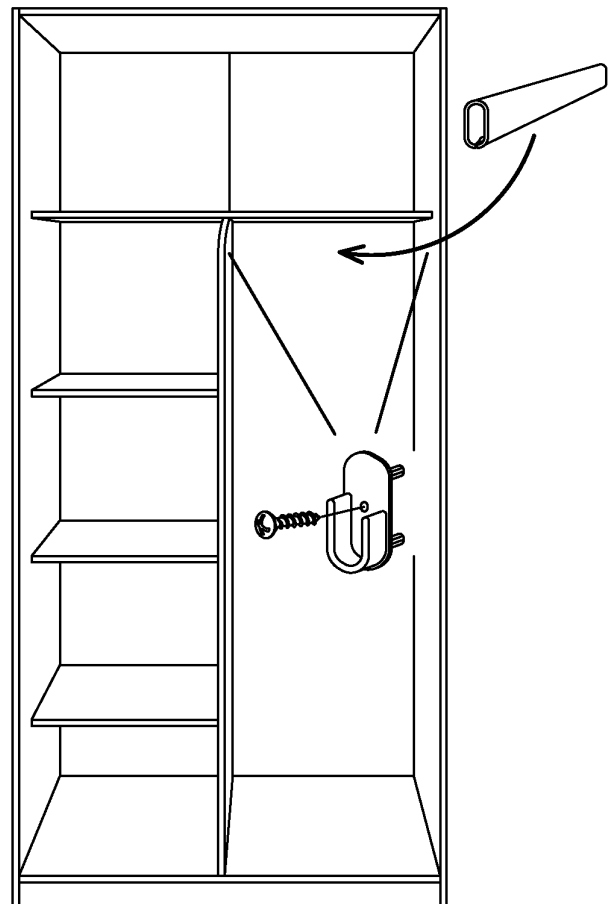

1.


MD106_03

rauch

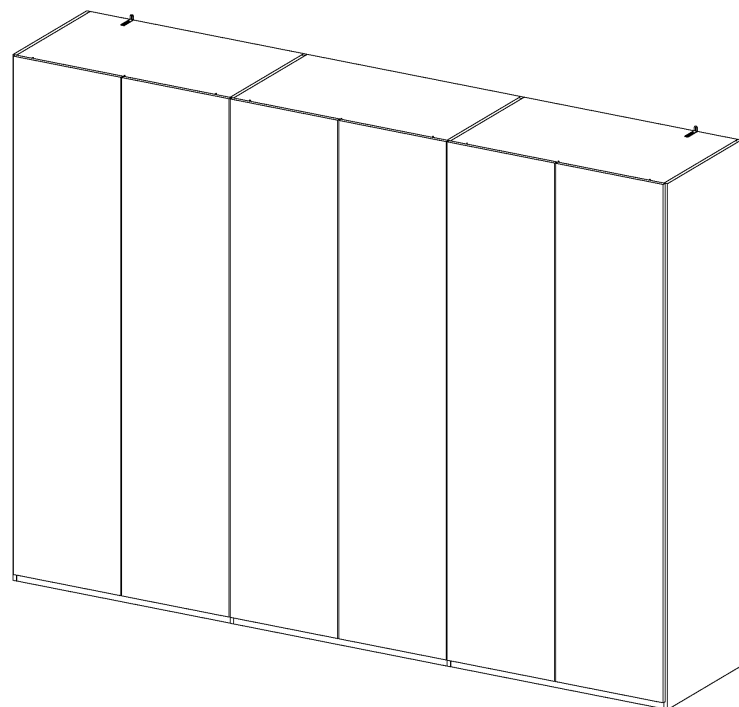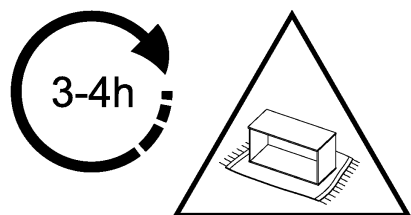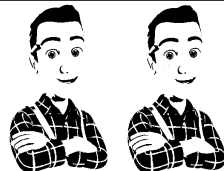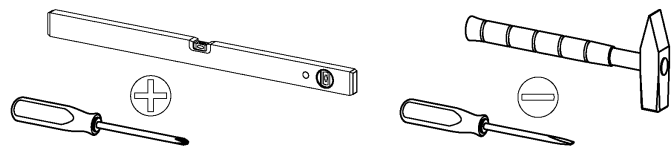

MD106

2.

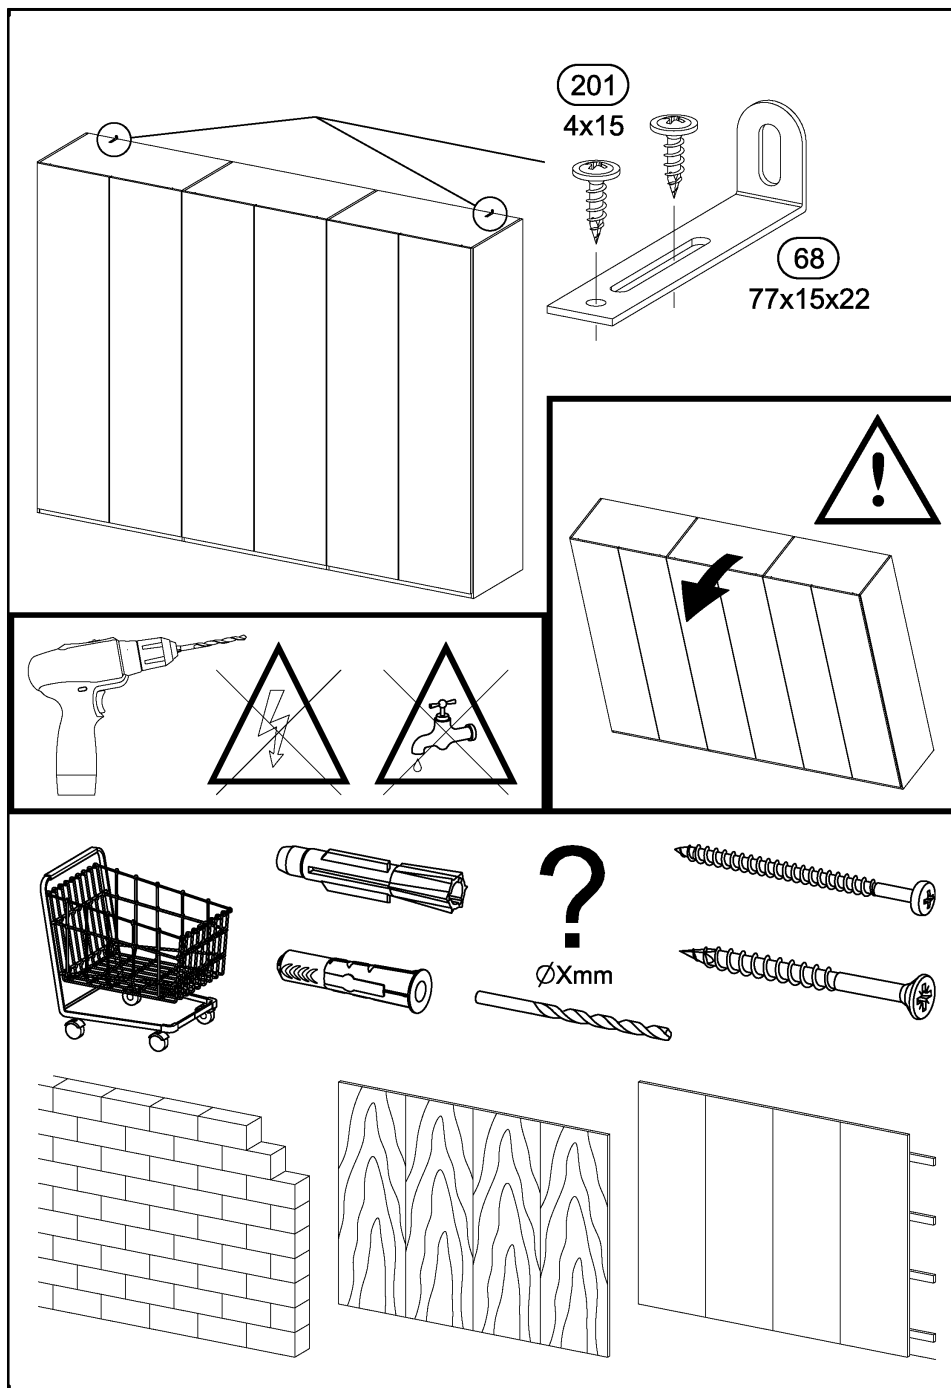


MD106









3.



4.

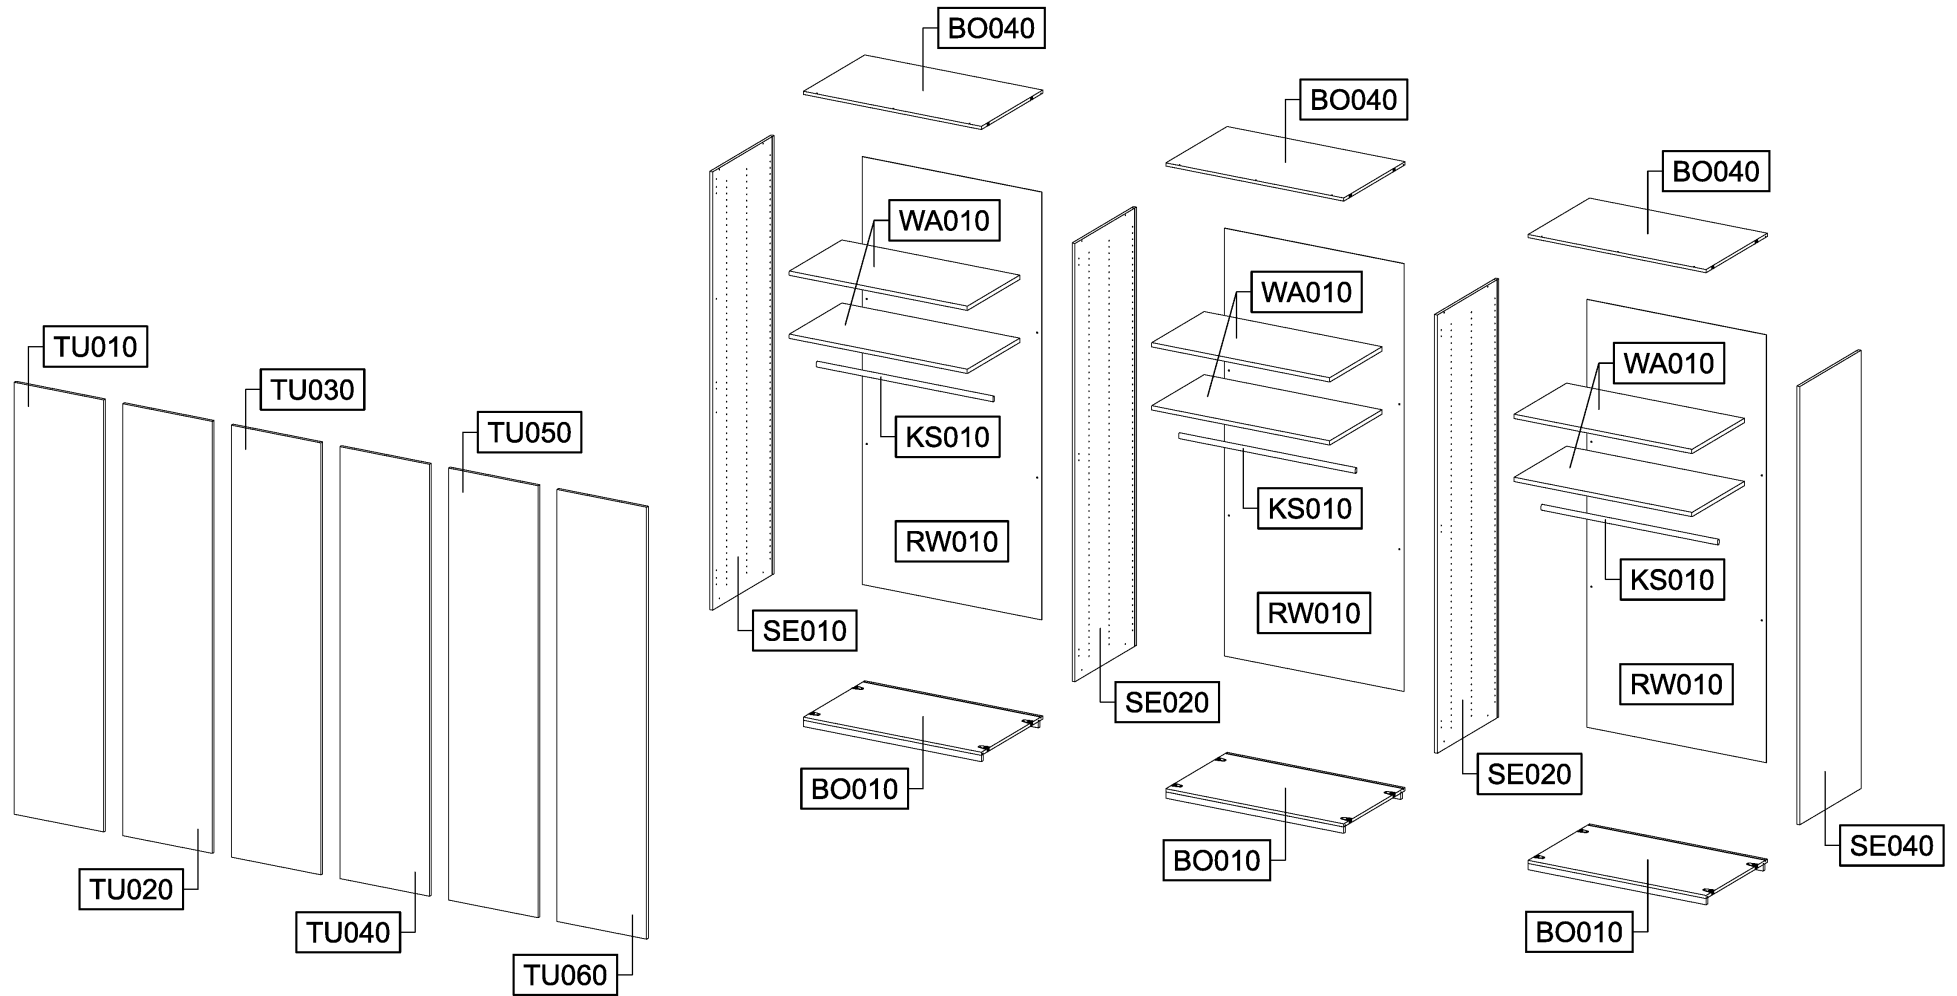


5.

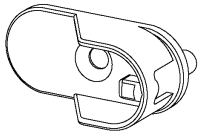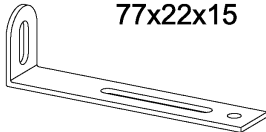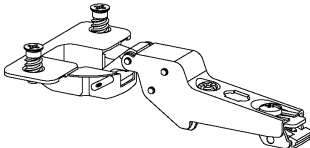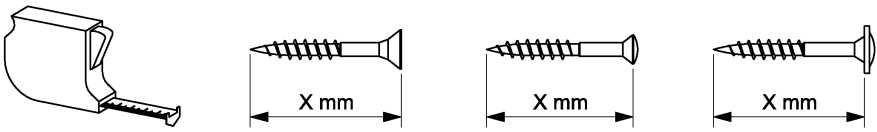8x 55x16x6,2 (12) 	6x (29) 
12x (47) 	2x 77x22x15 (68) 
4x 4x15 (201) 	6x 3,5x15 (205) 
36x 4x13 (621) 	12x 6,5x12 (779) 
8x (1085) 	8x (1086) 
24x (1089) 	18x (1291) 
18x (1292) 	
	

MD106

6.

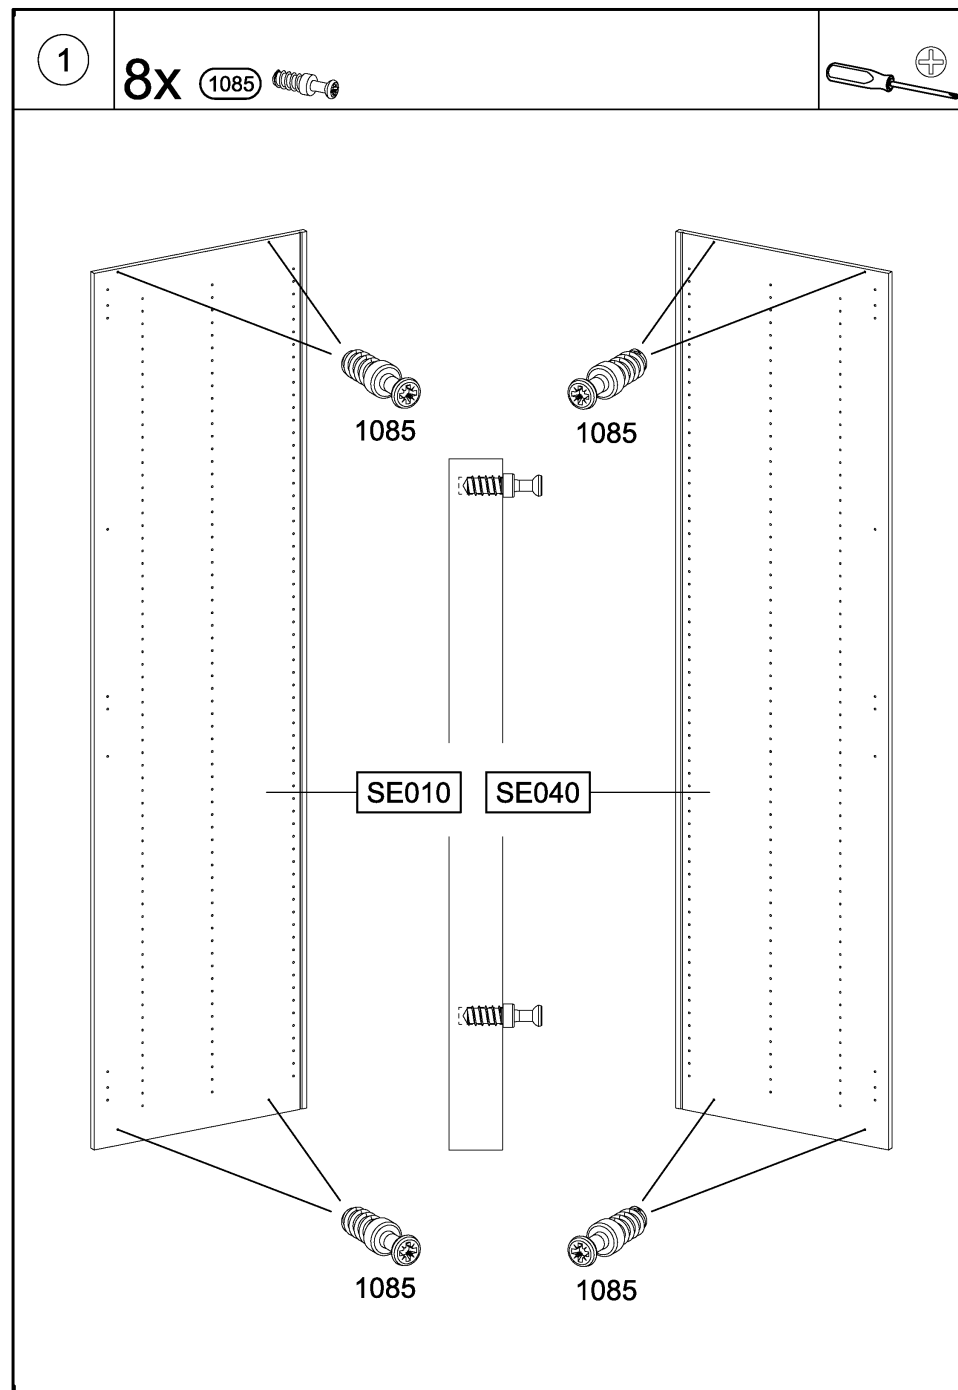



MD106

7.

2

8x


1086

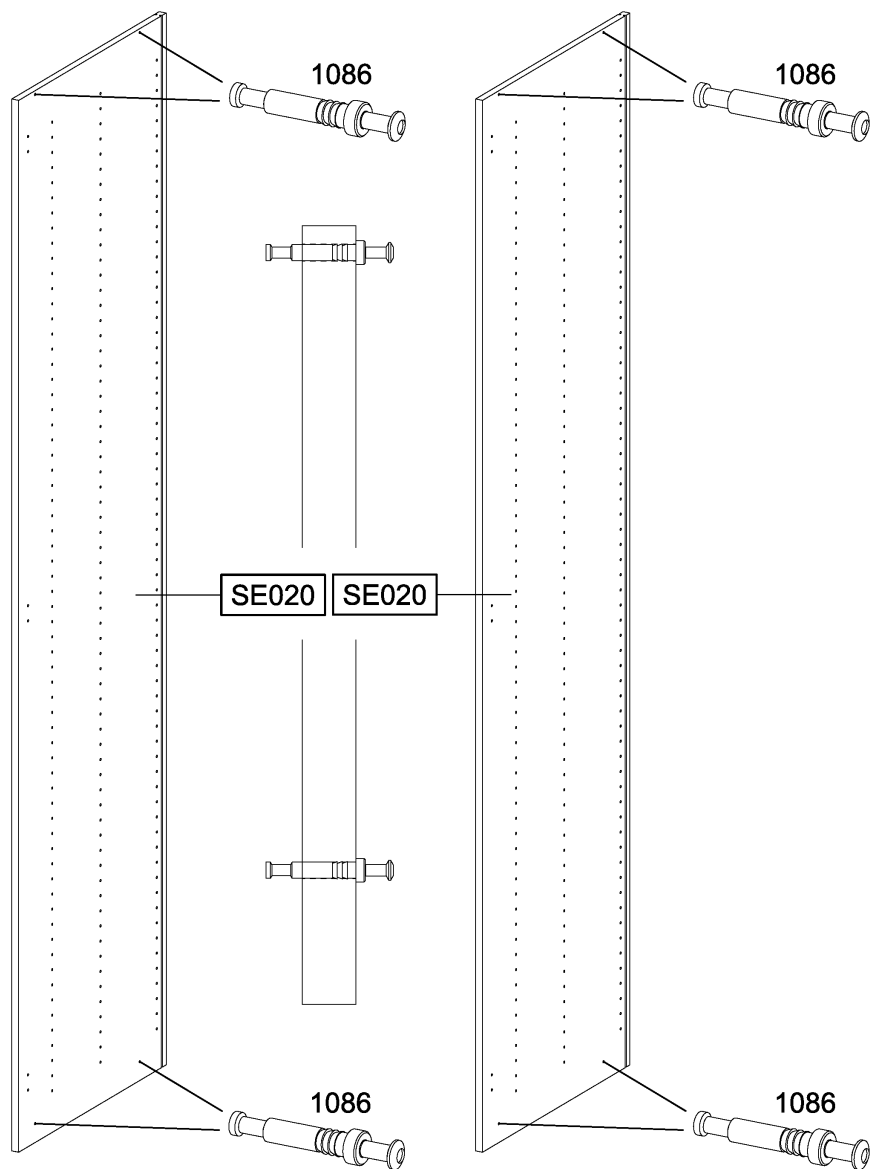

MD106


8.

3

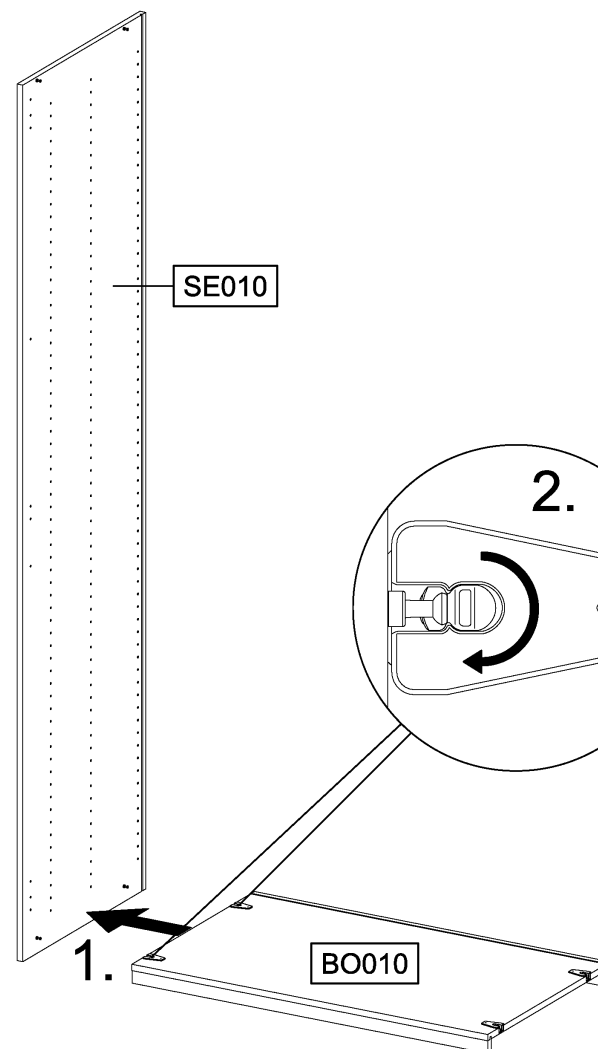


MD106

9.

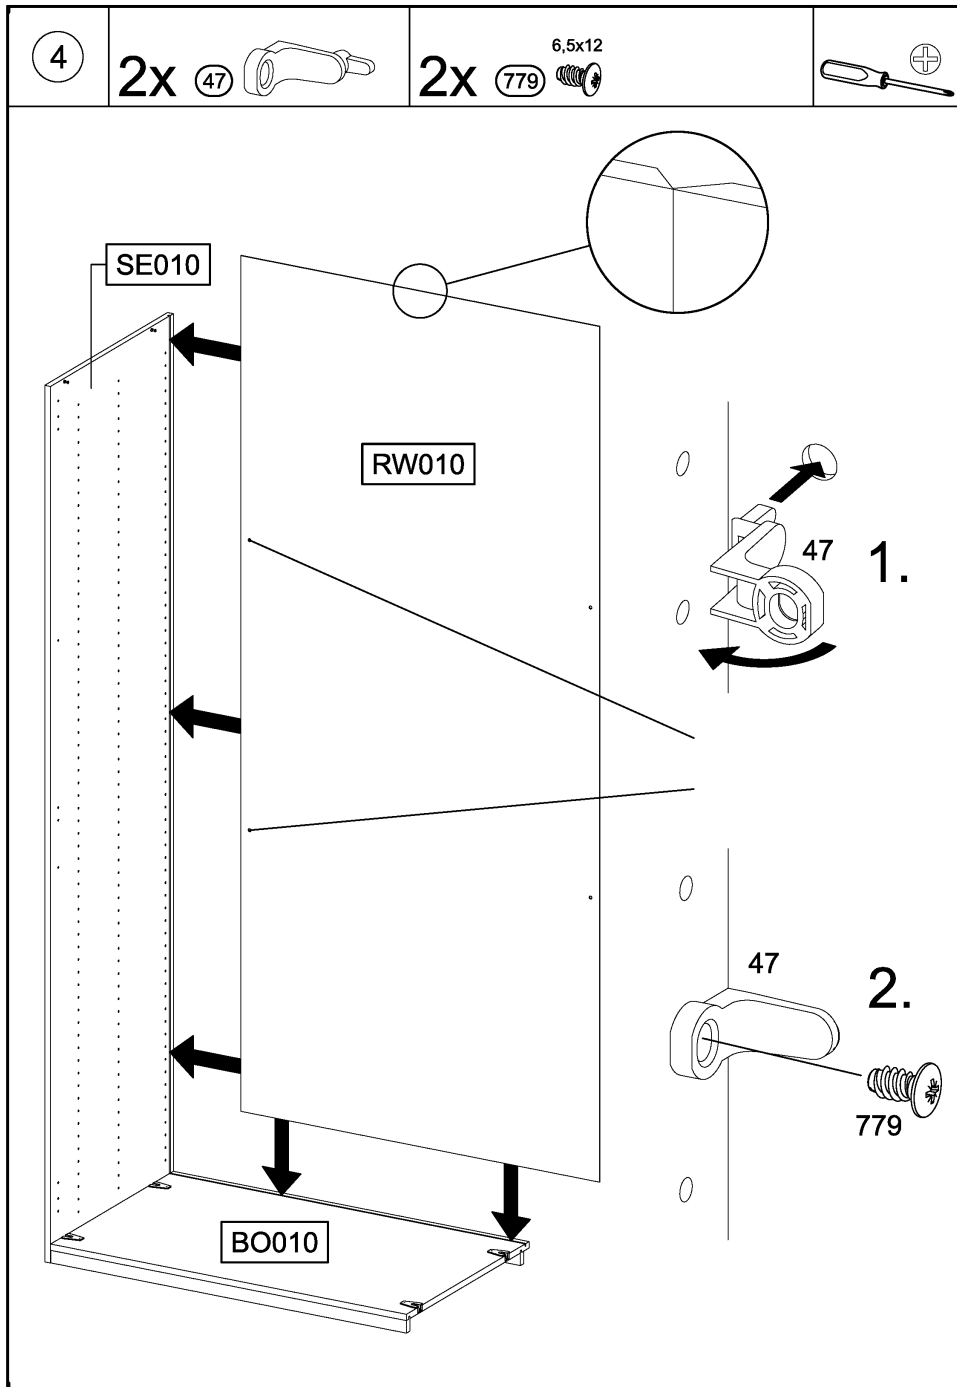


MD106

10.

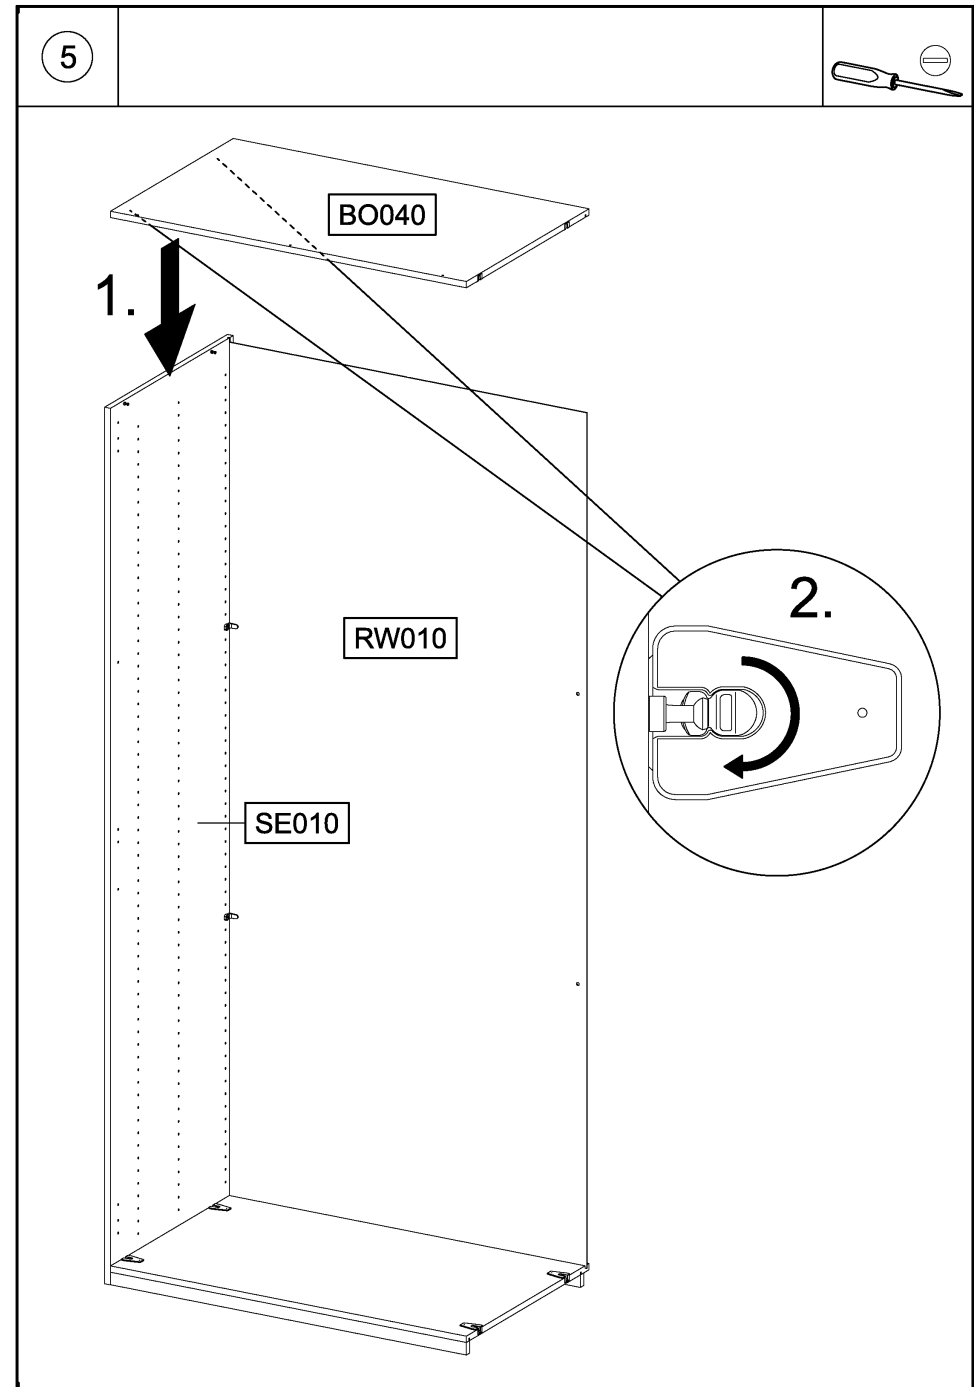


MD106

11.

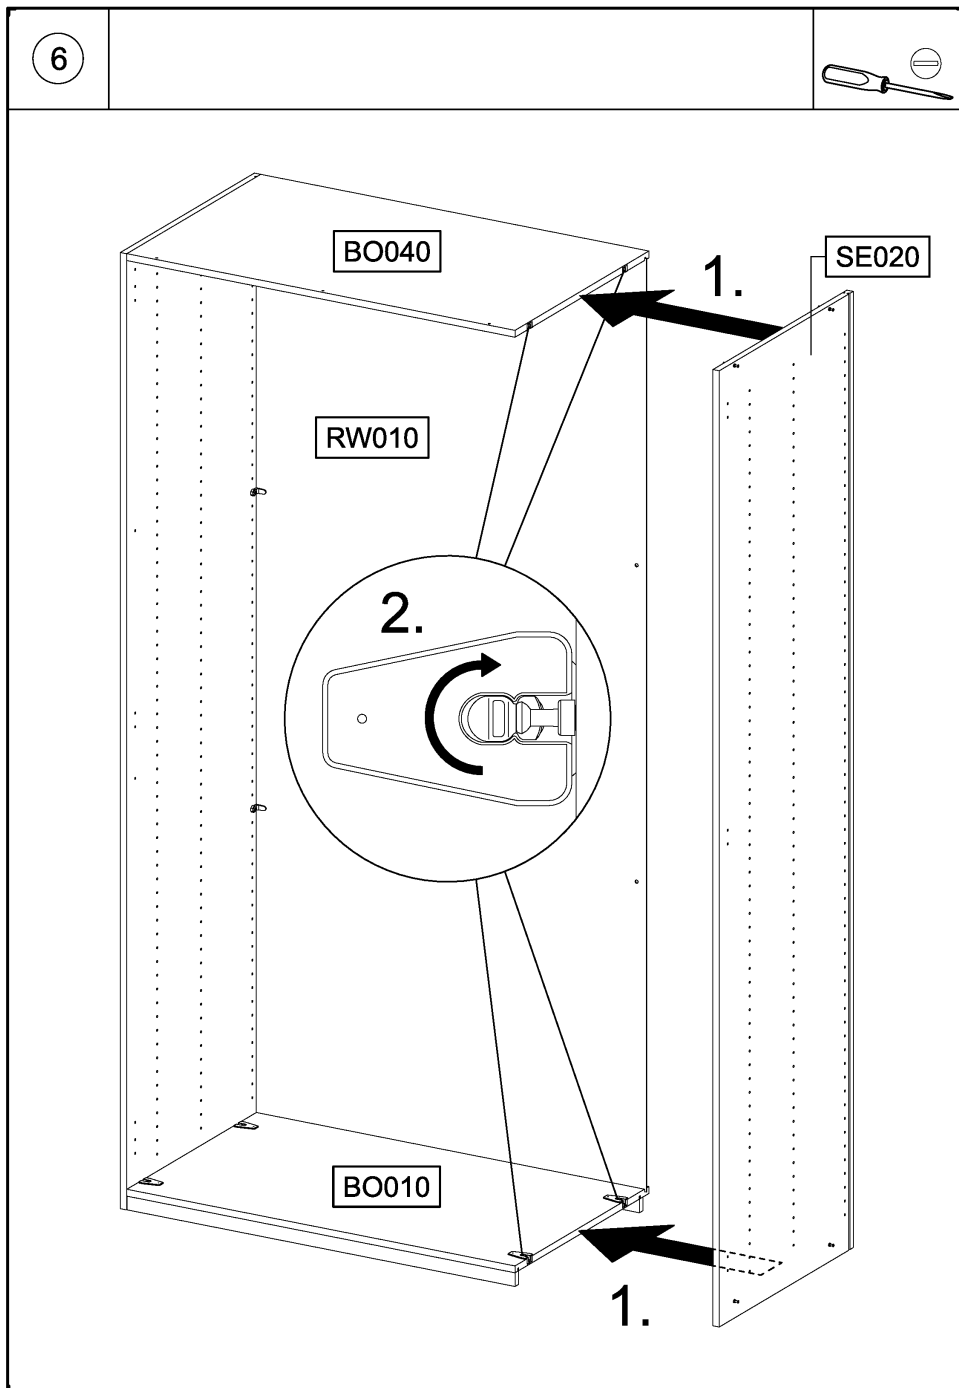


MD106

12.

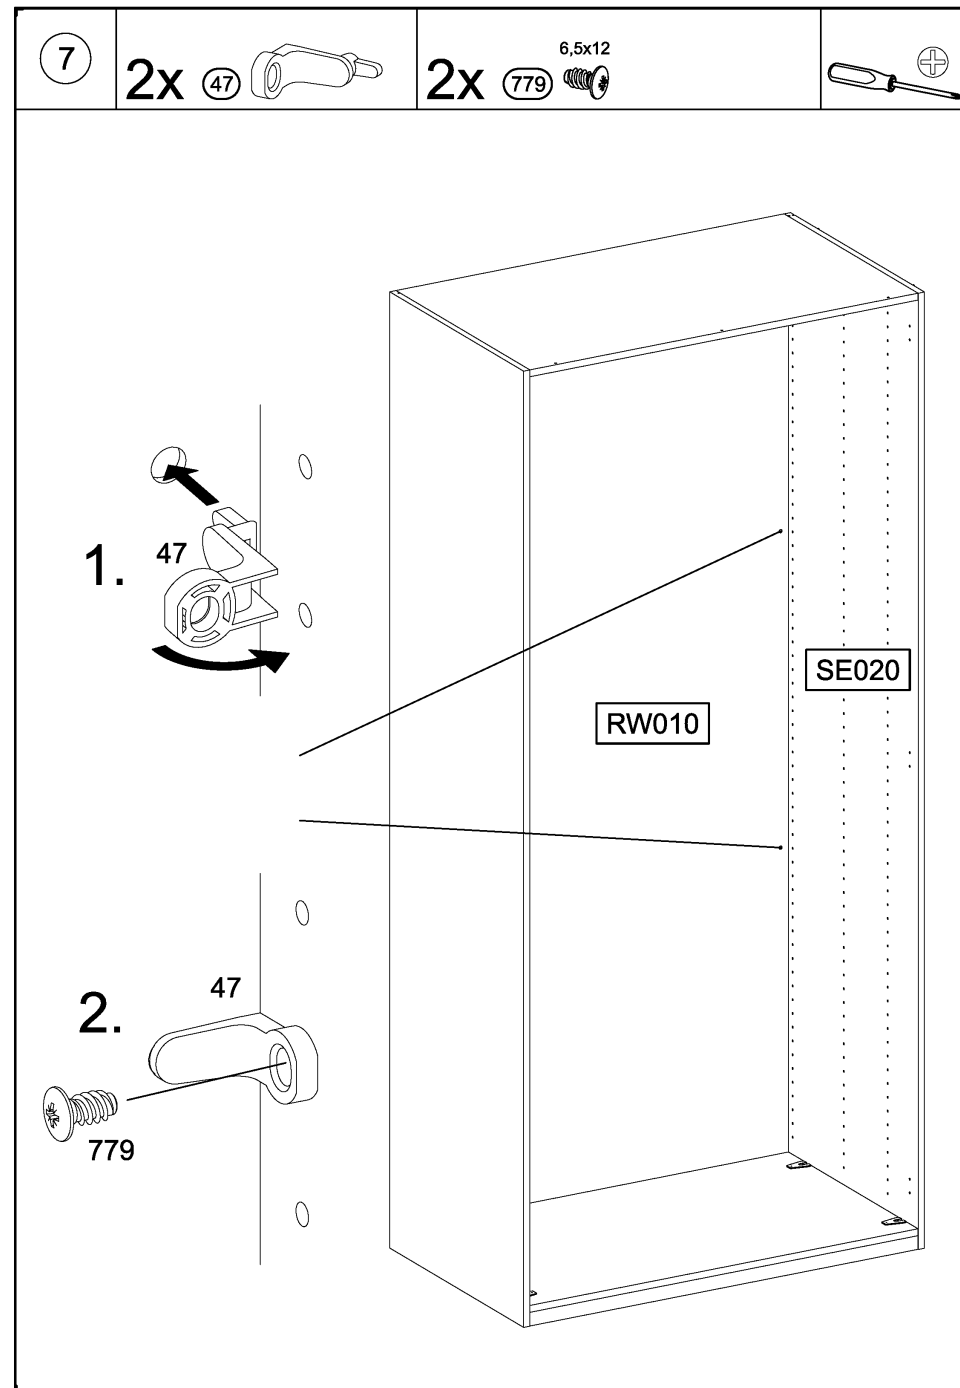


MD106

13.

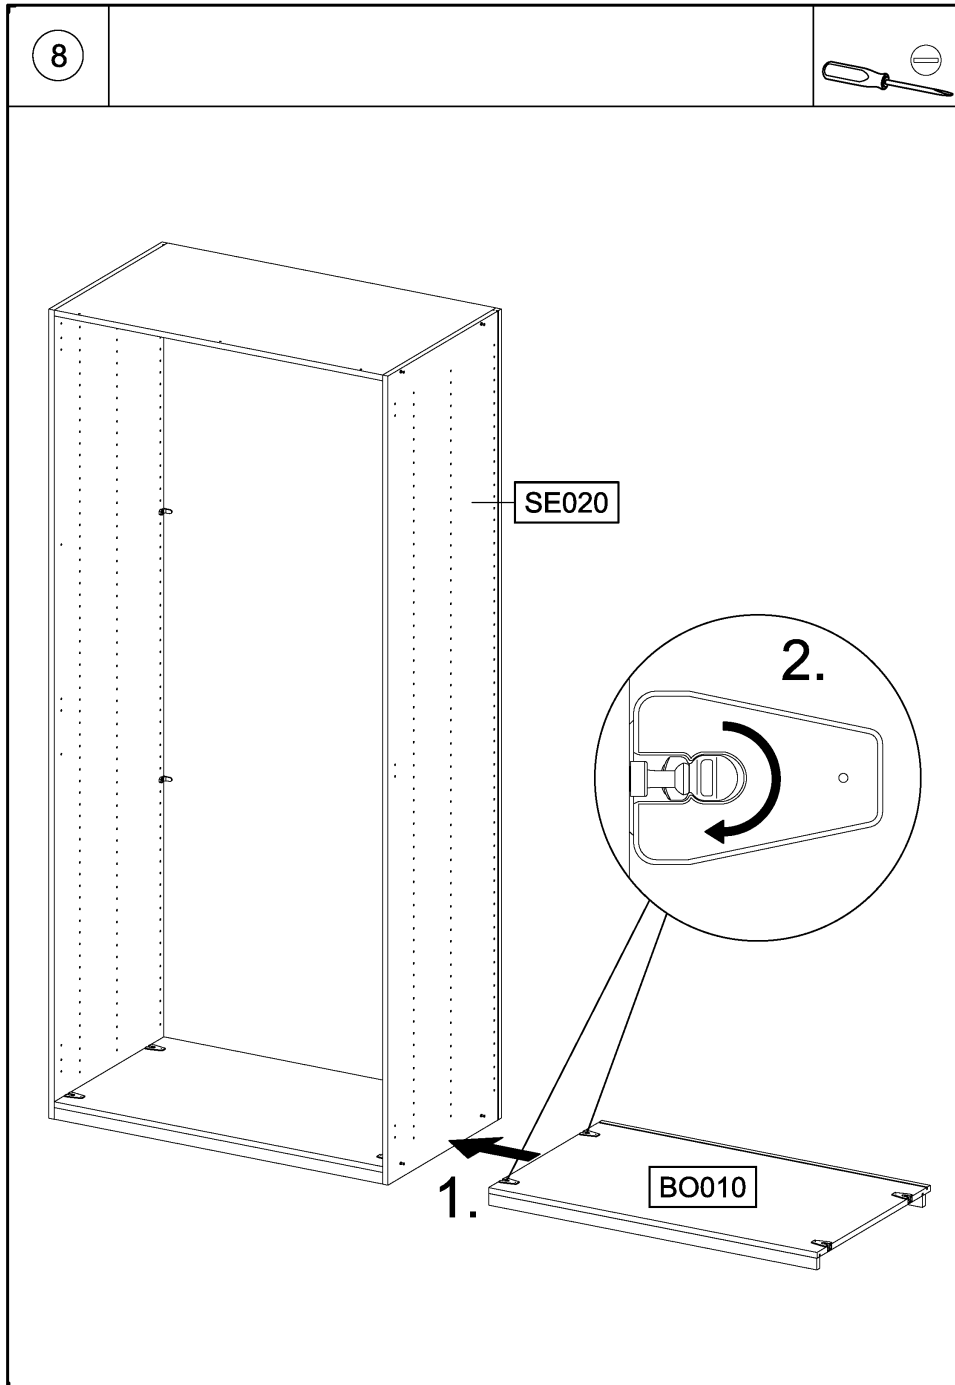


MD106

14.

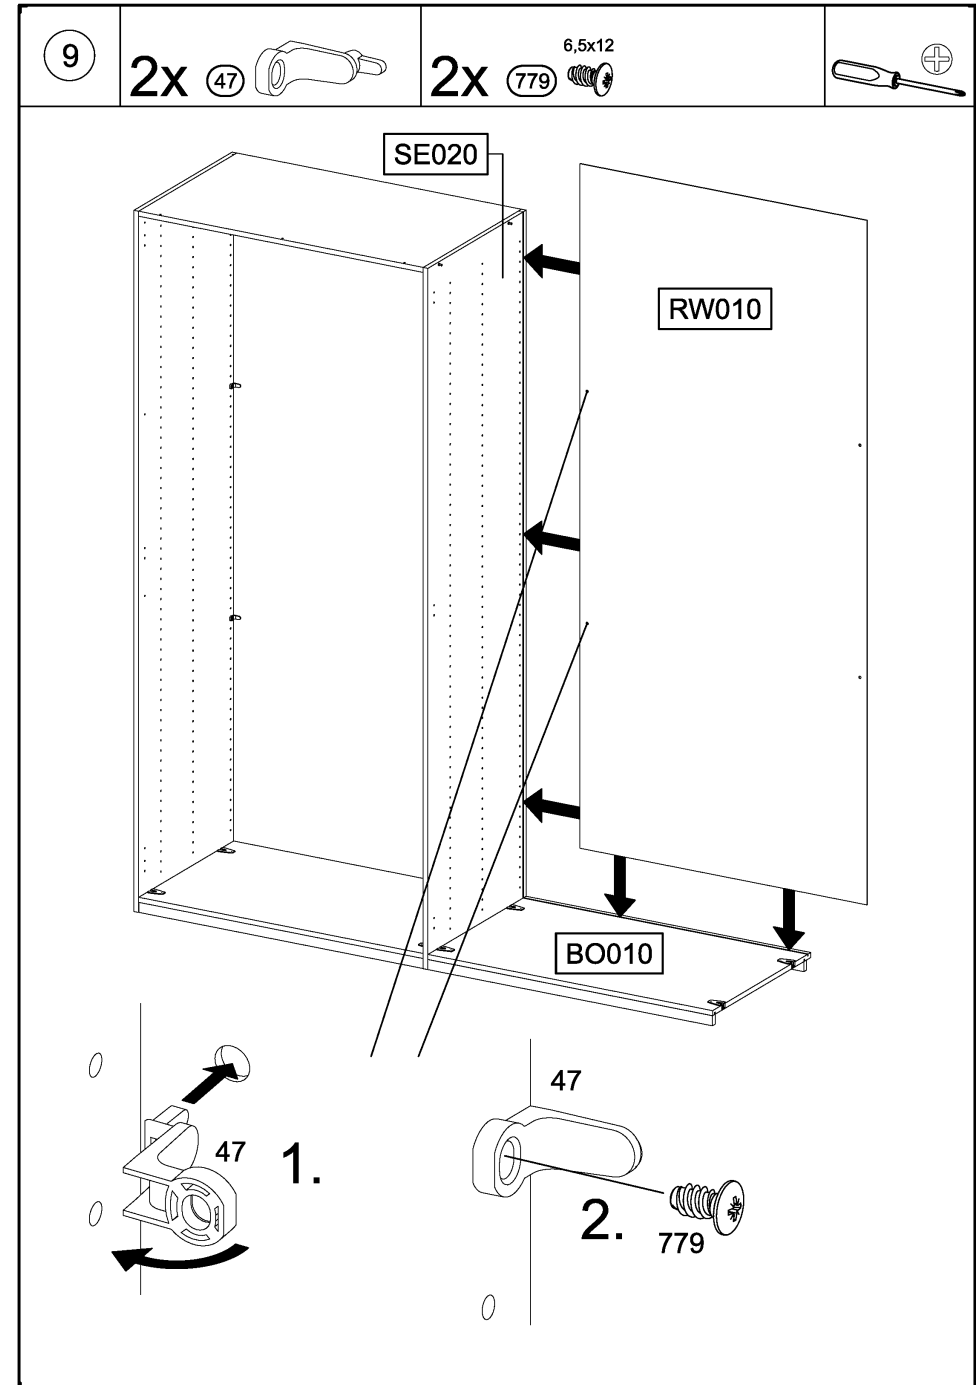


MD106

15.

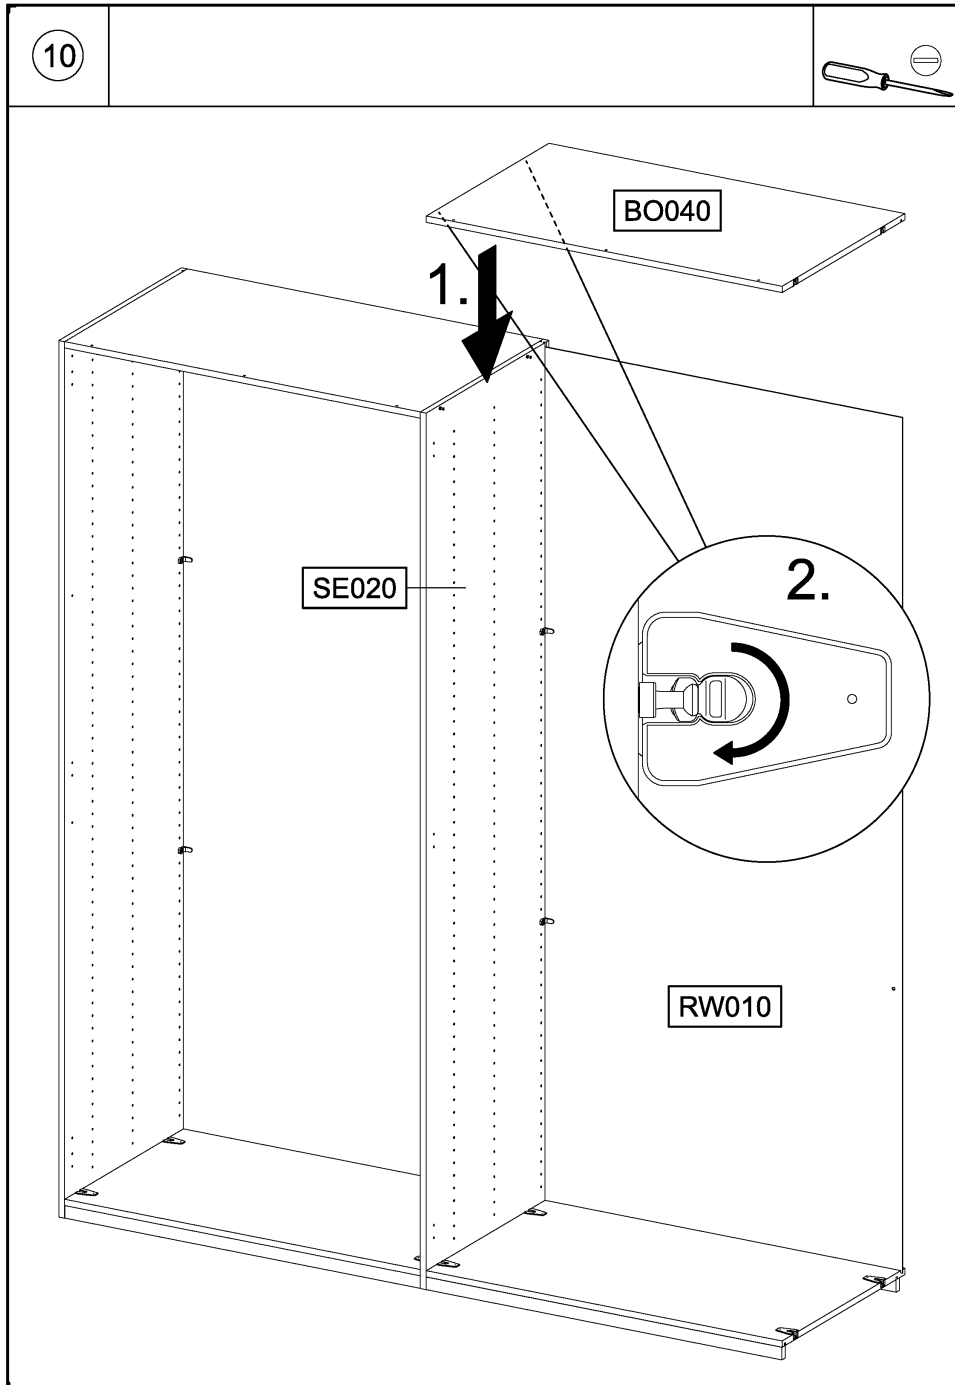

MD106

16.

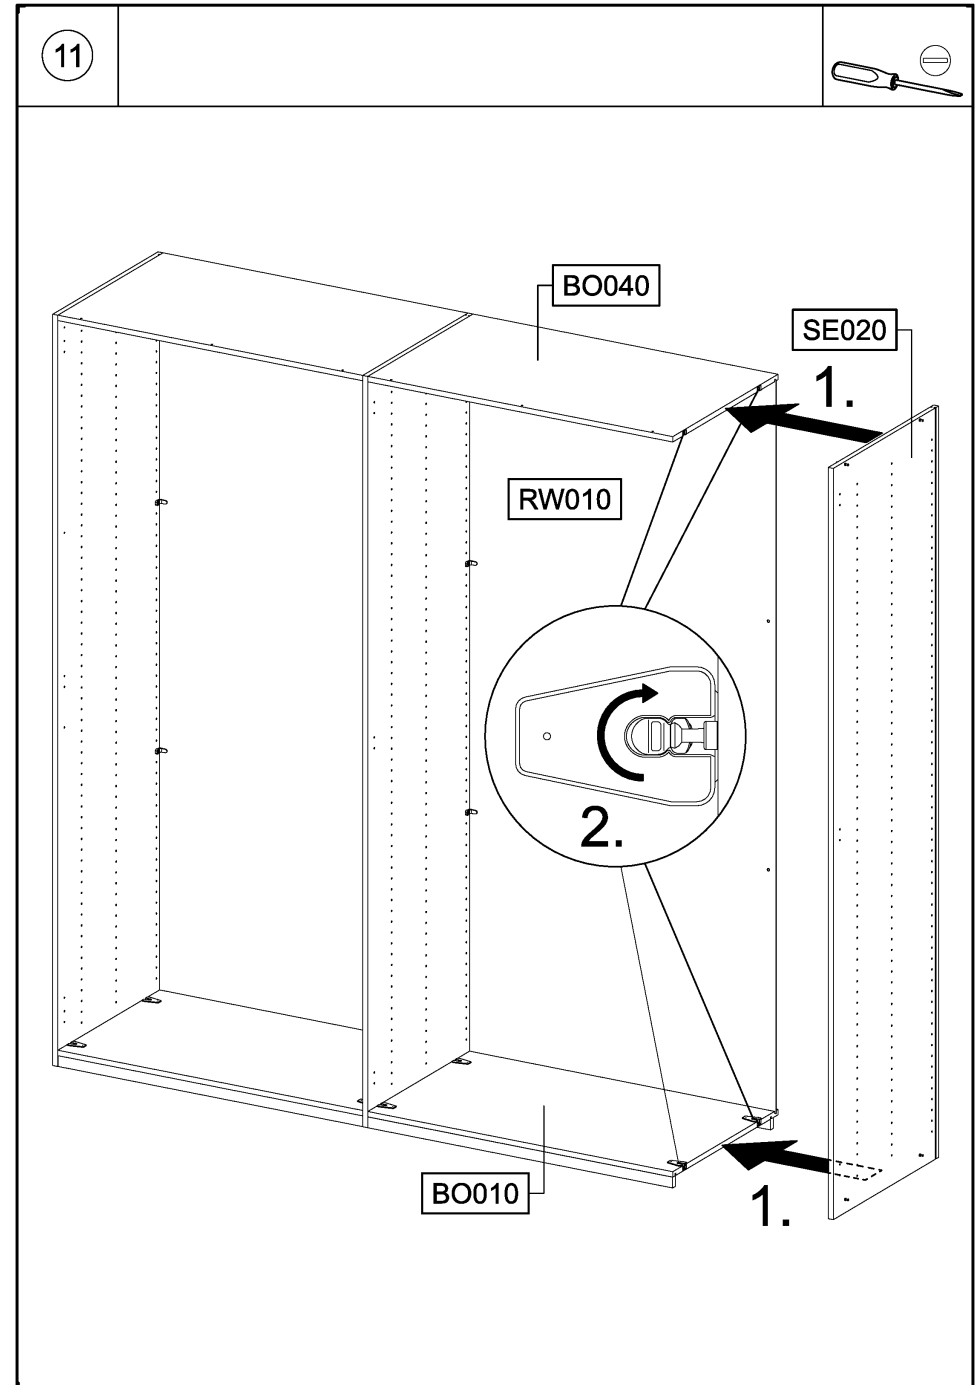

MD106

17.

12

2x

47






2x

779






6,5x12

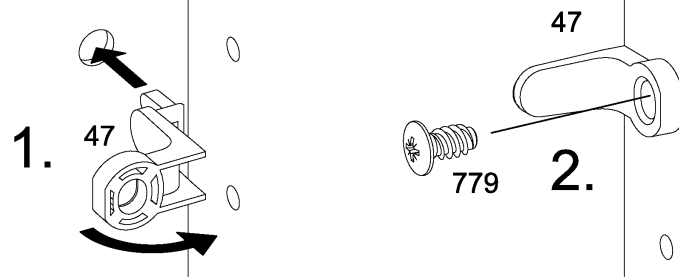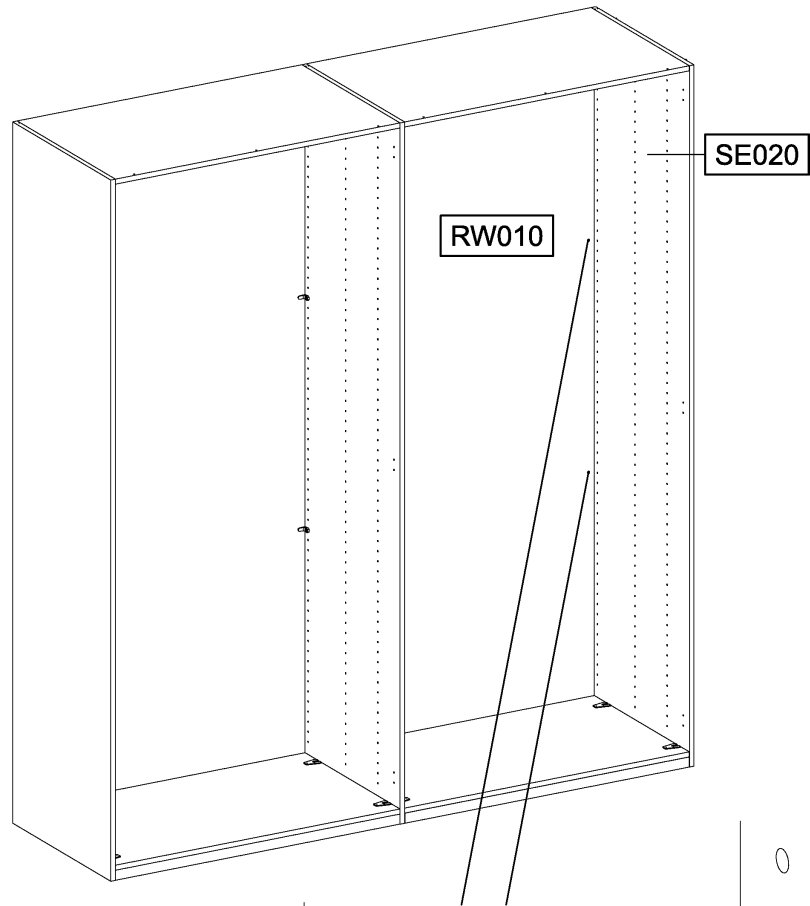

MD106

18.

13

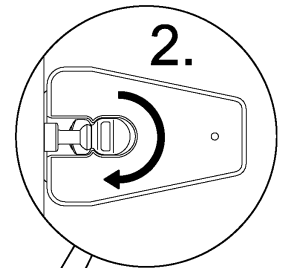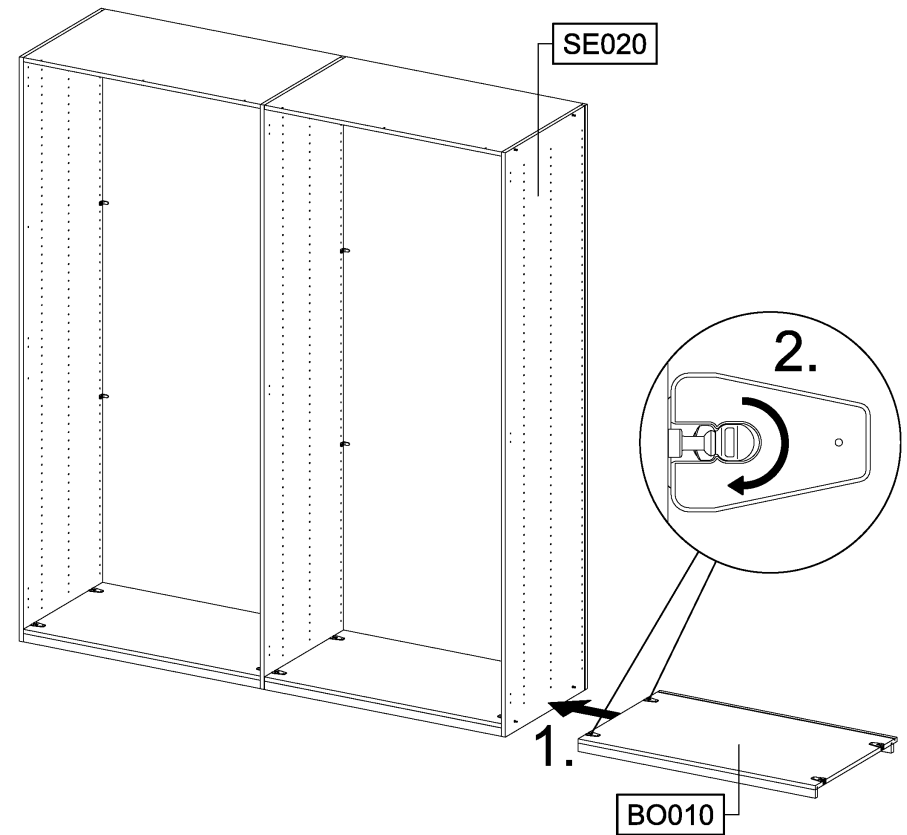

MD106

19.

14

2x

47



2x

779




6,5x12




SE020

RW010

BO010

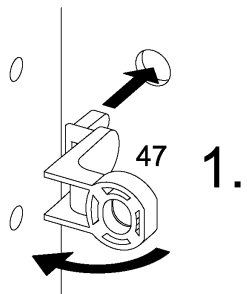

1.

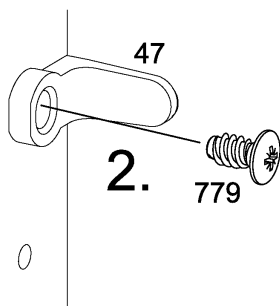


2.

779

MD106

20.

15




BO040

1.

2.


SE020

RW010

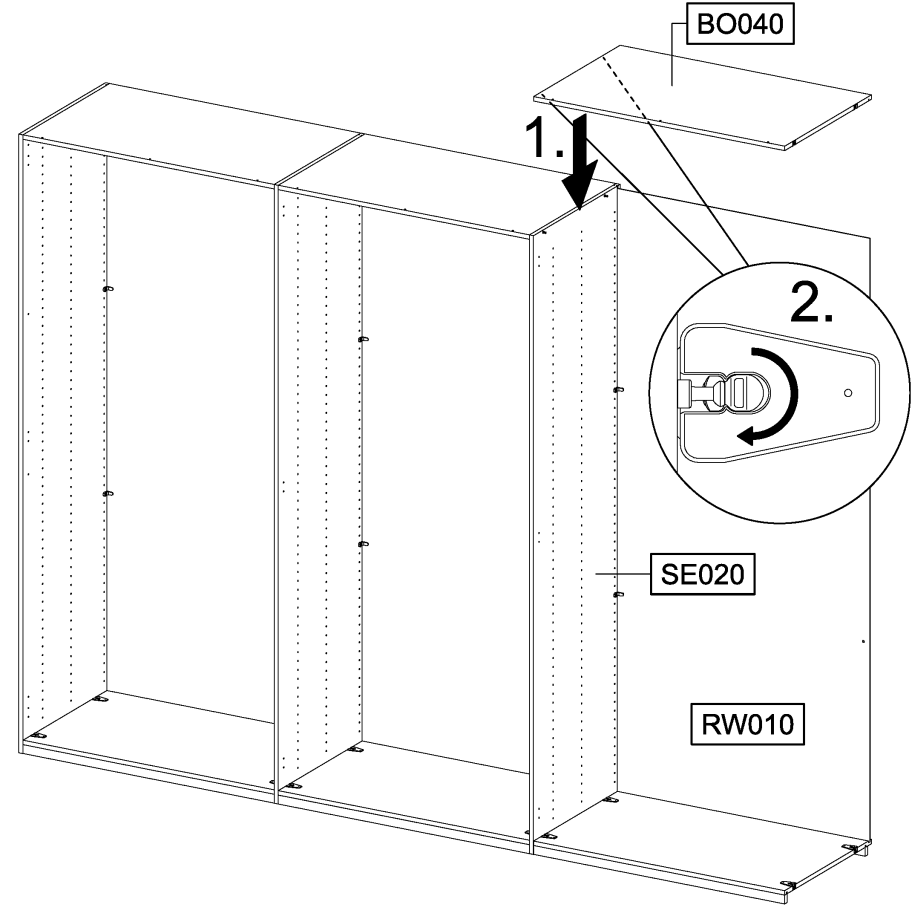


MD106

21.

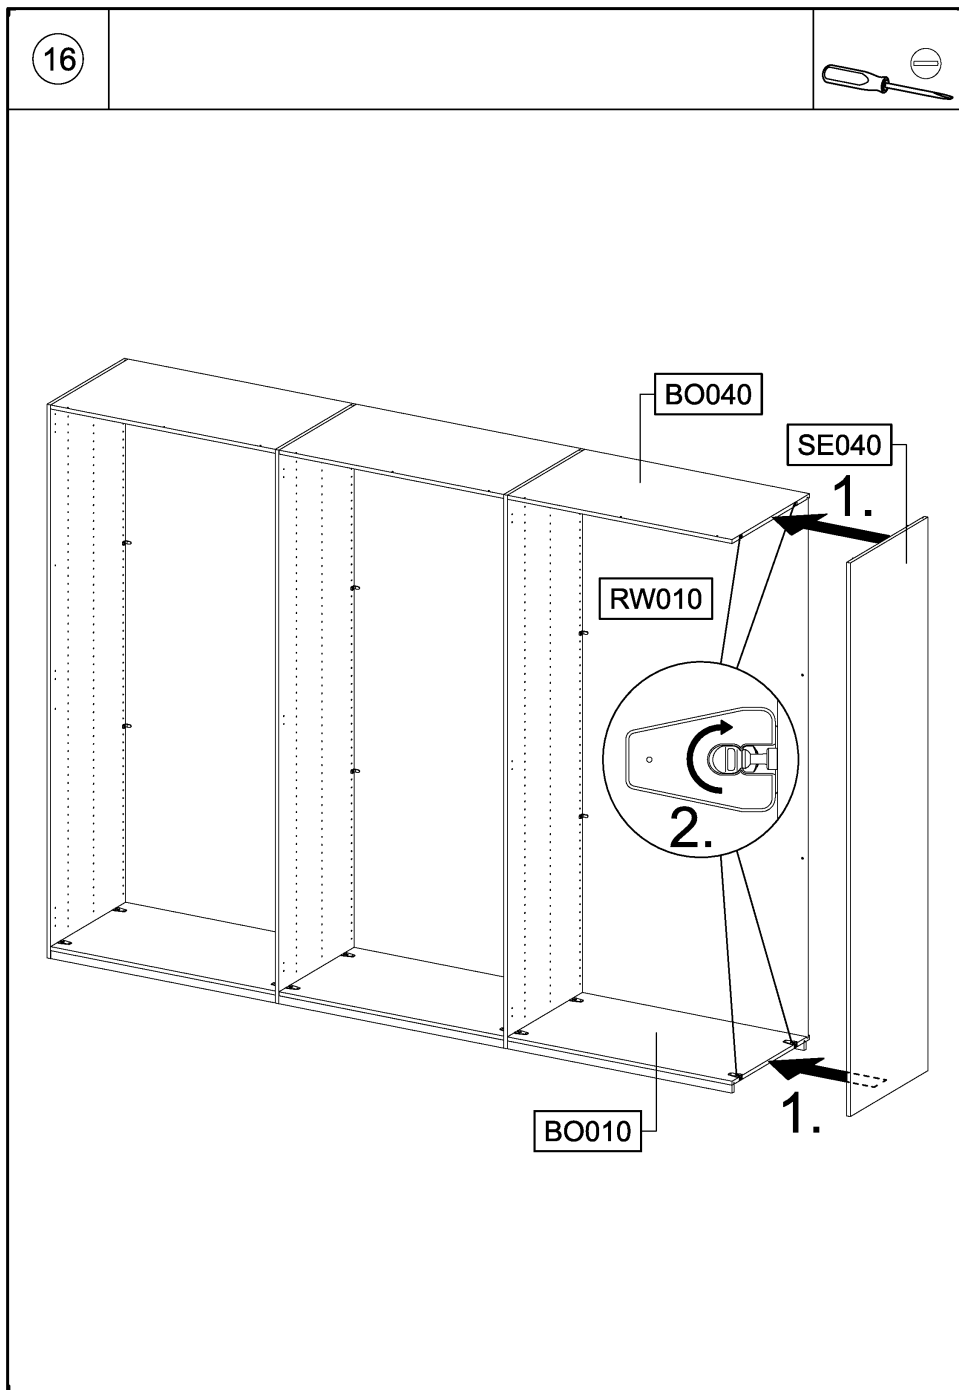

MD106

22.

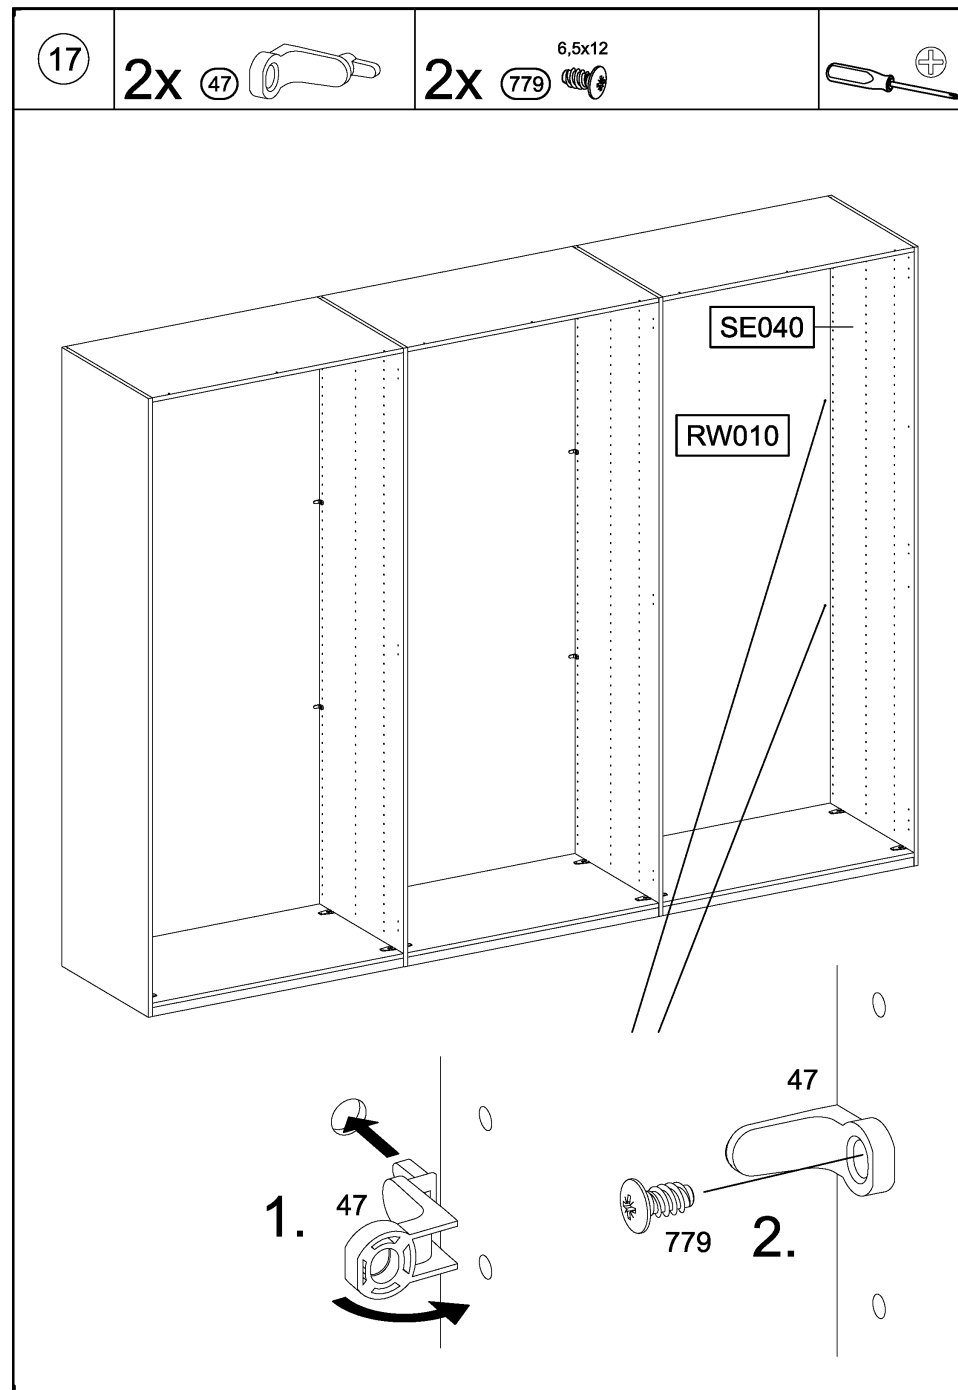



MD106

23.

18

24x

1089

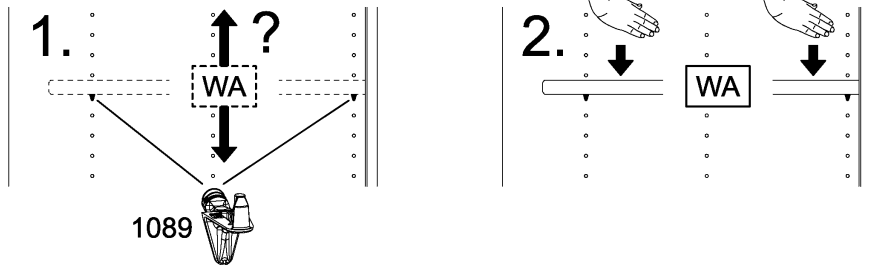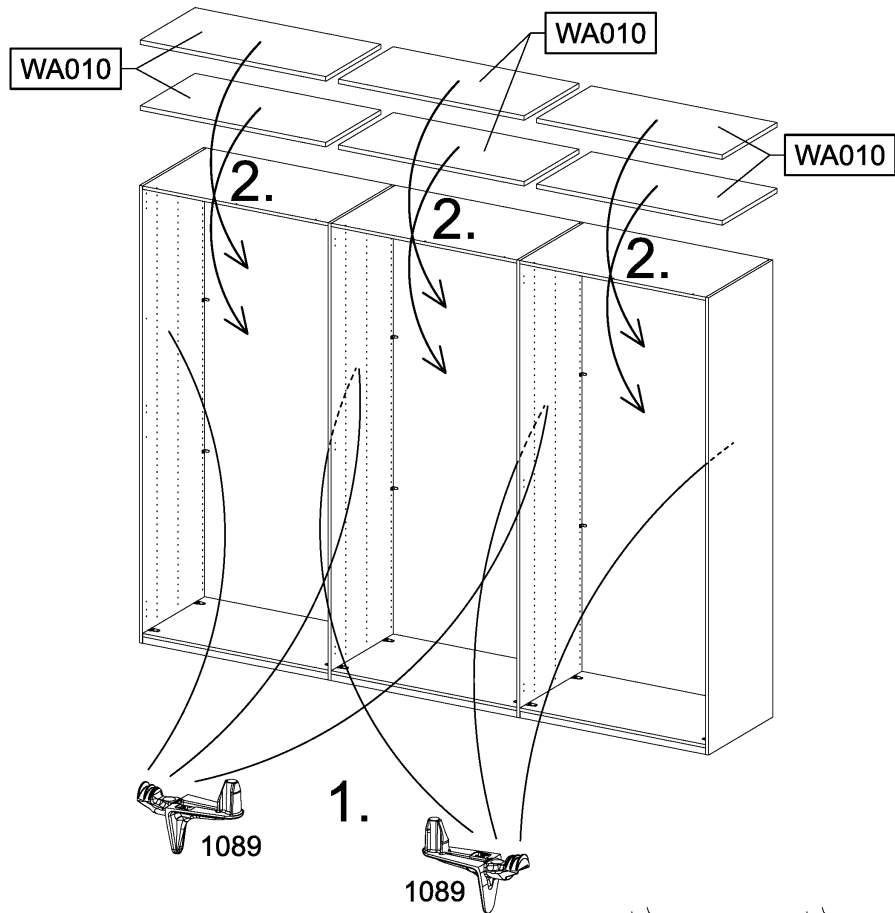


MD106

24.

19

6x




29



6x

205

3,5x15

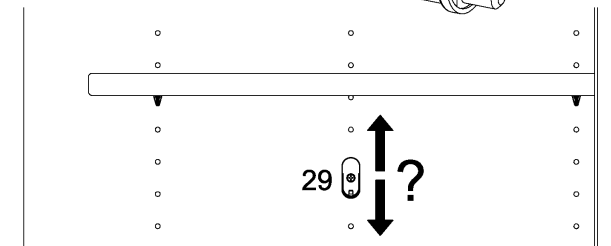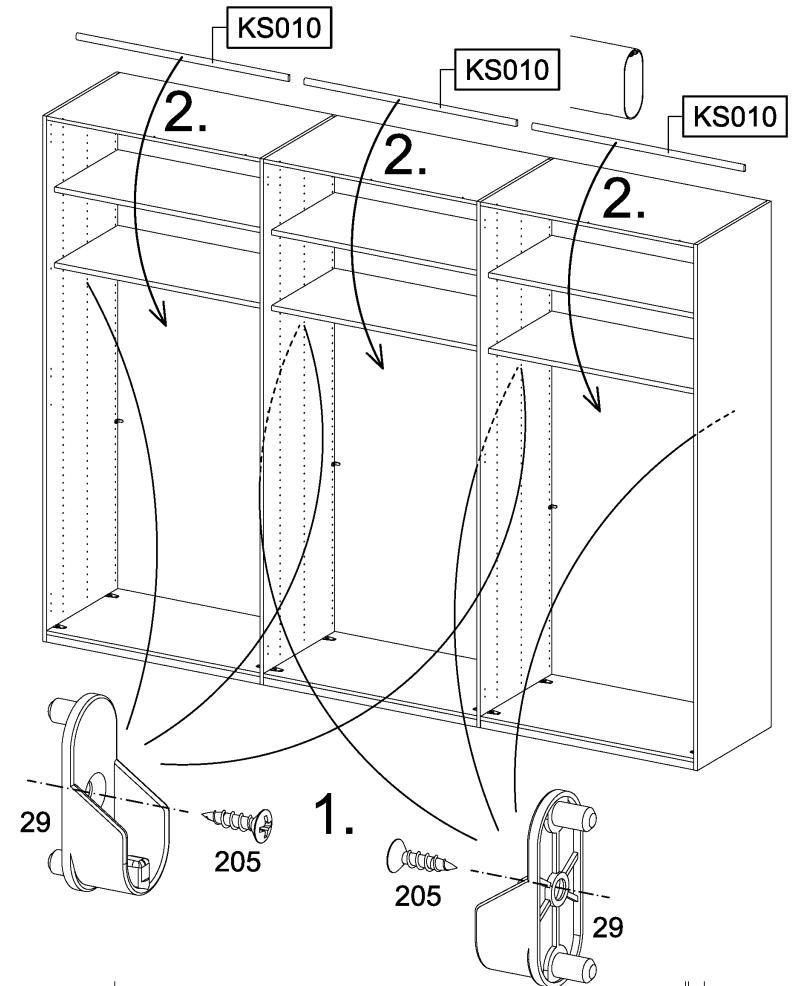




MD106

25.

20

9x

1291

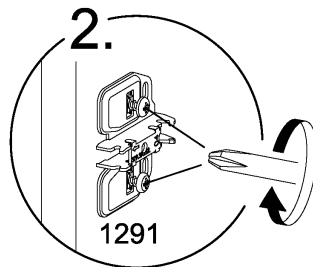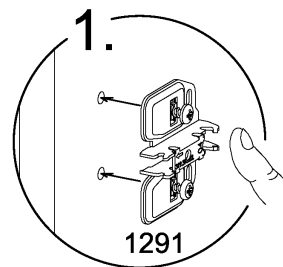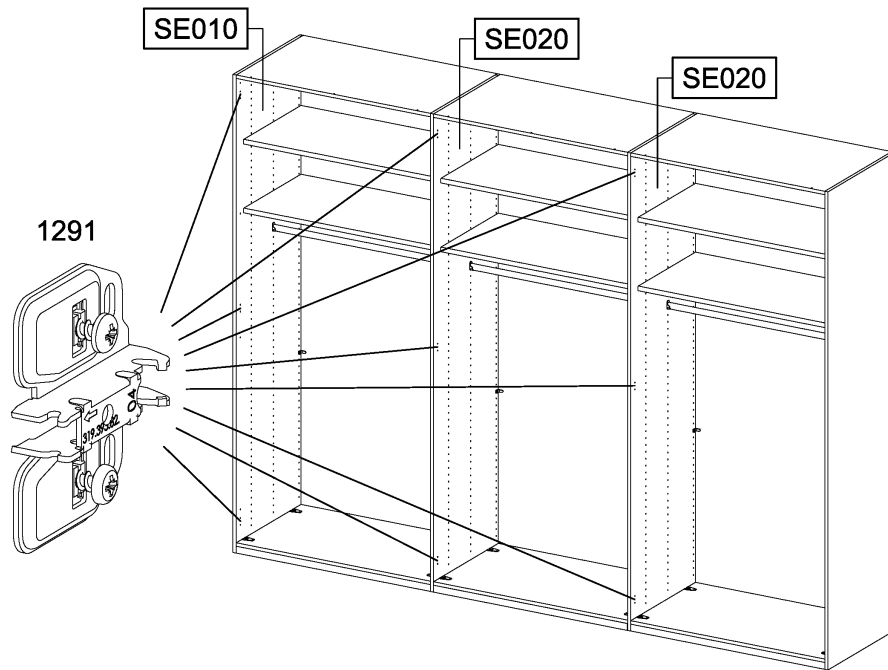





MD106

26.



21

9x

1291

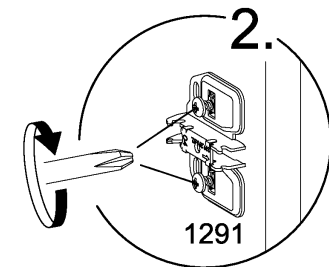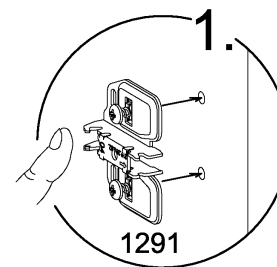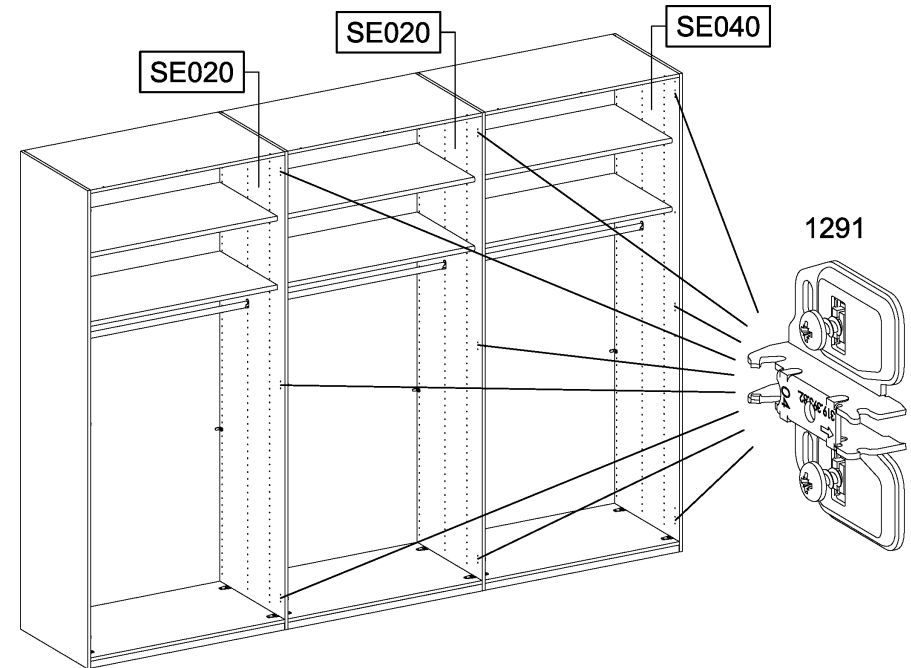


MD106

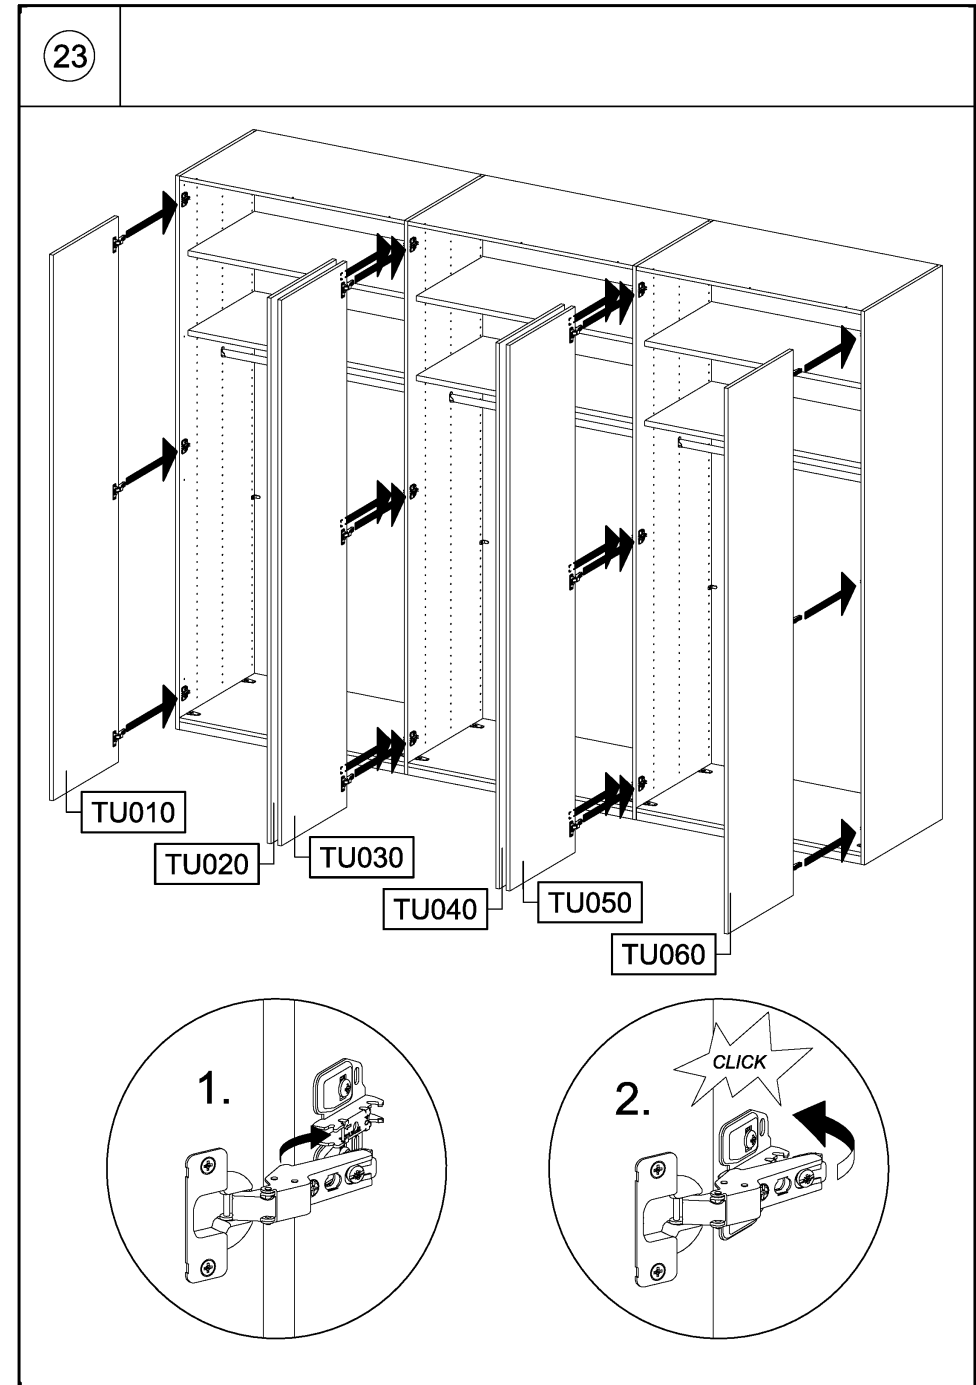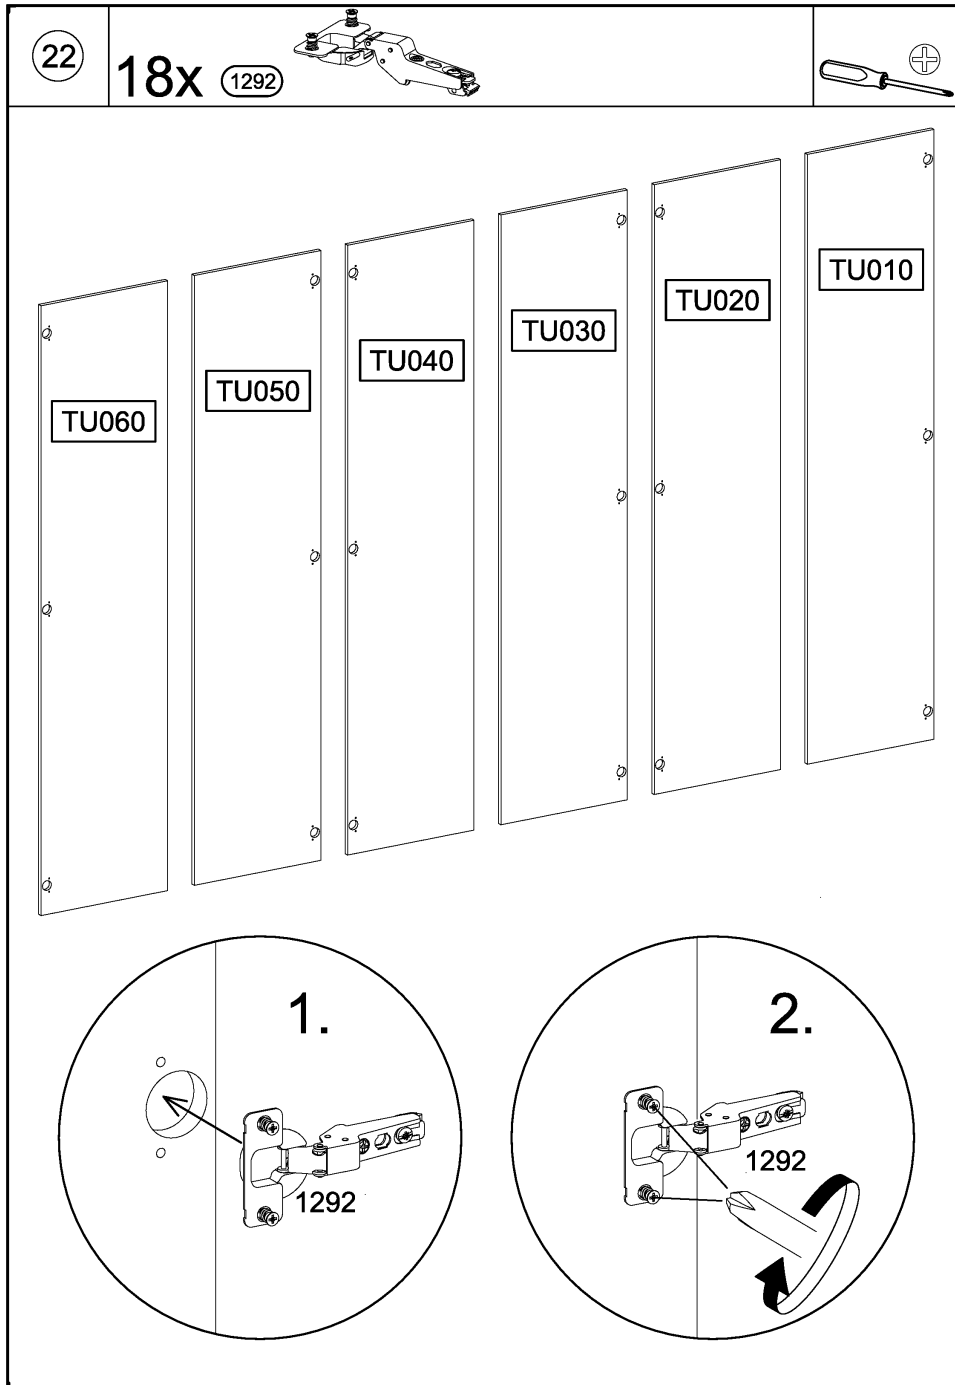








24

0-8x 12


55x16x6,2

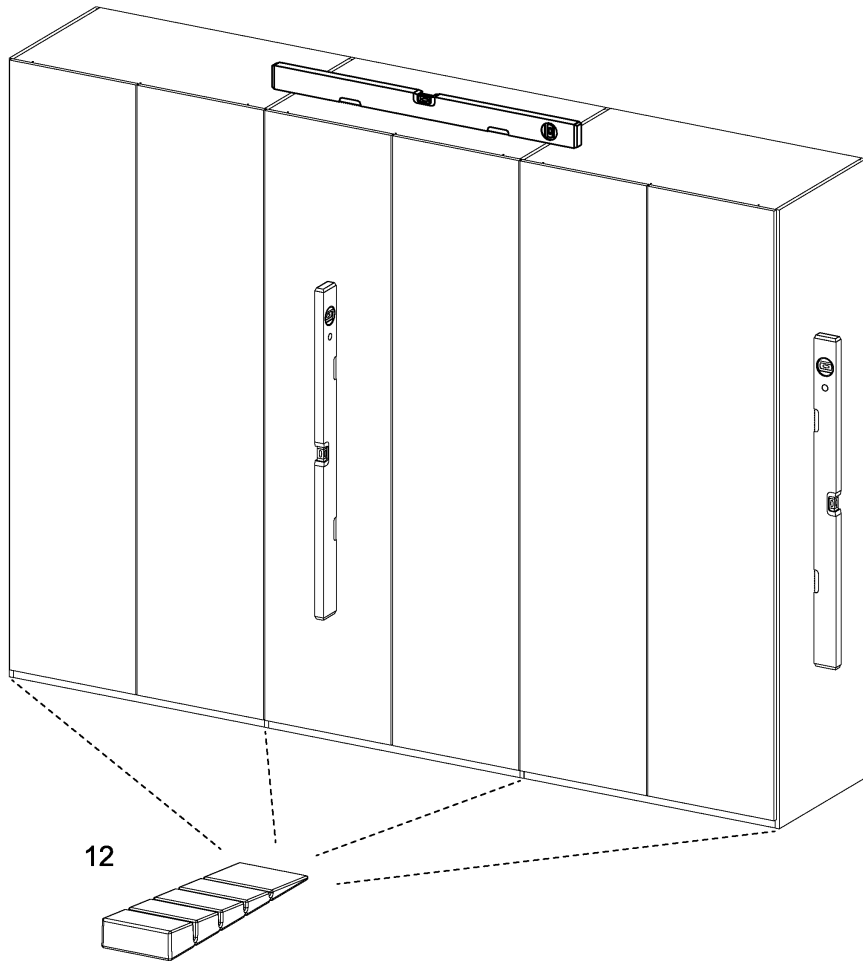

25

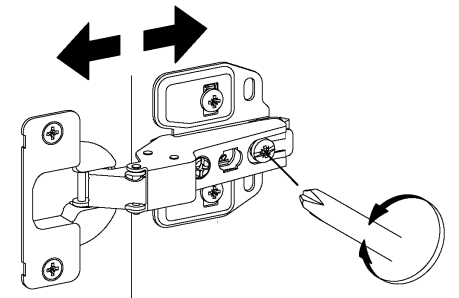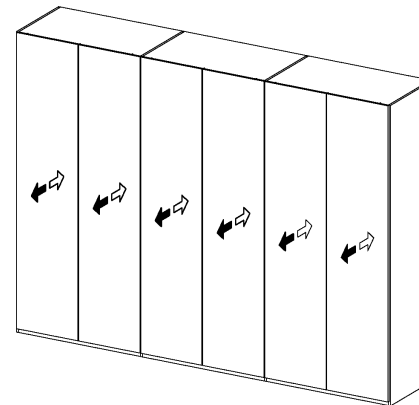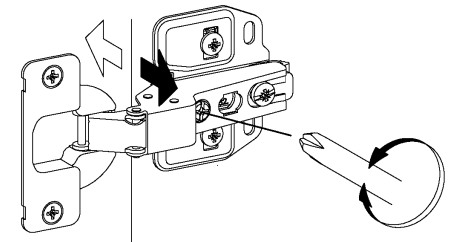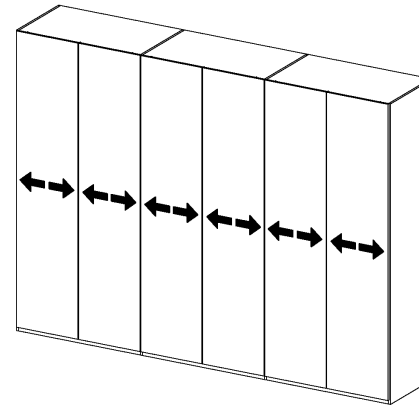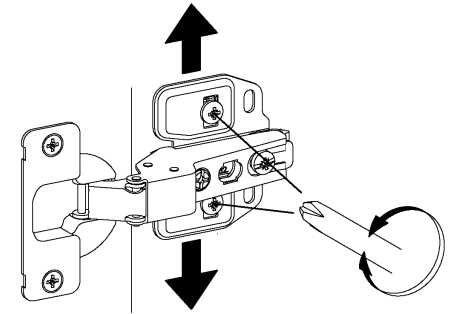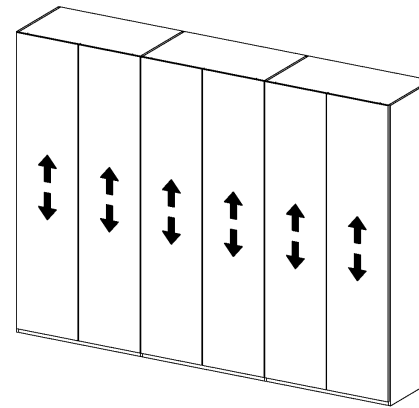


31.



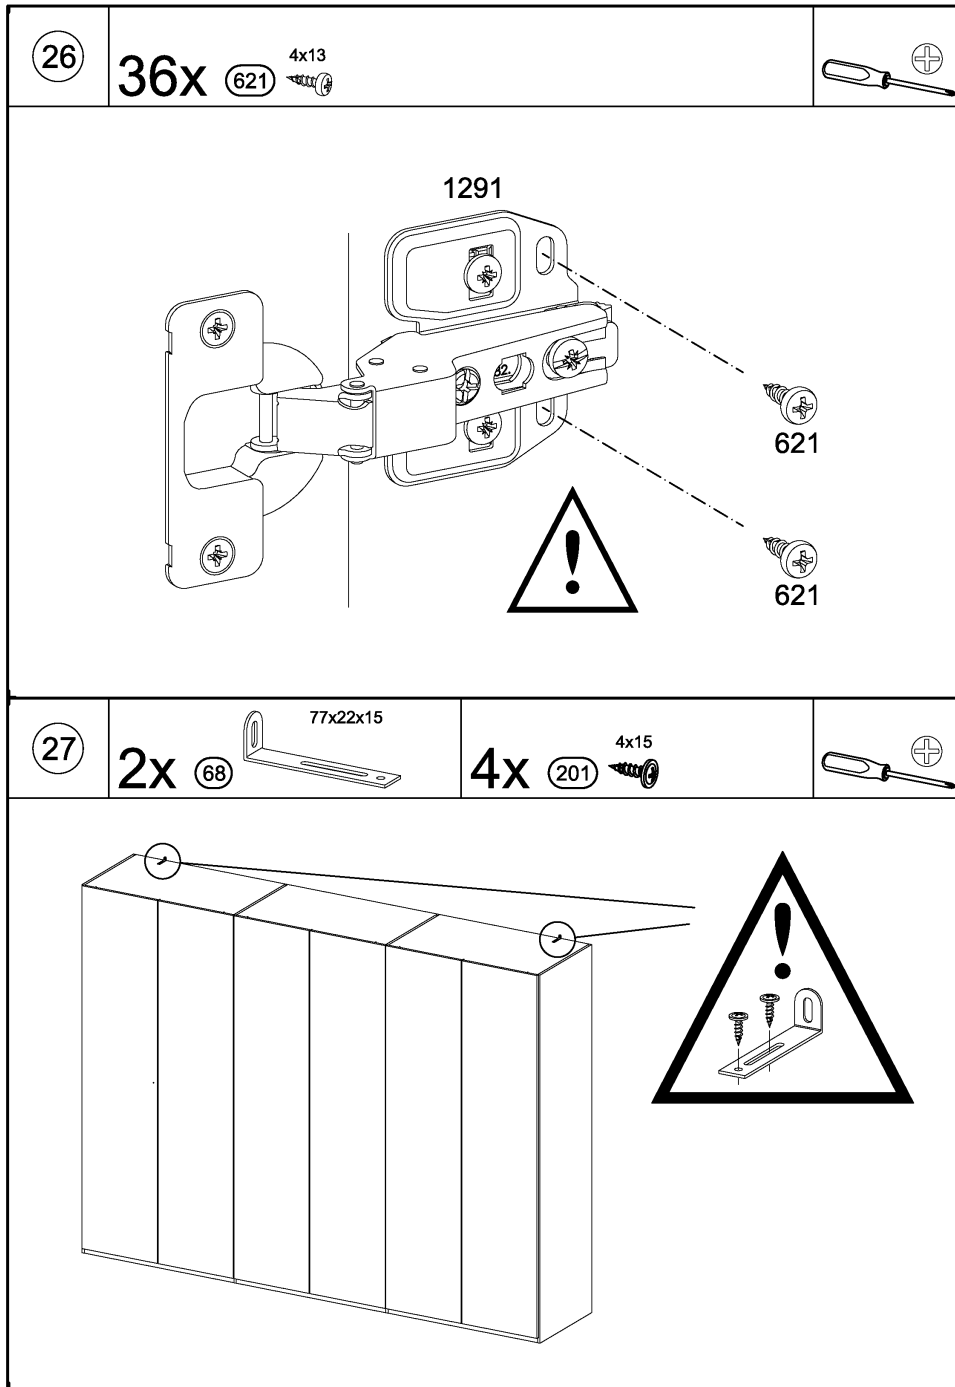


MD106

32.

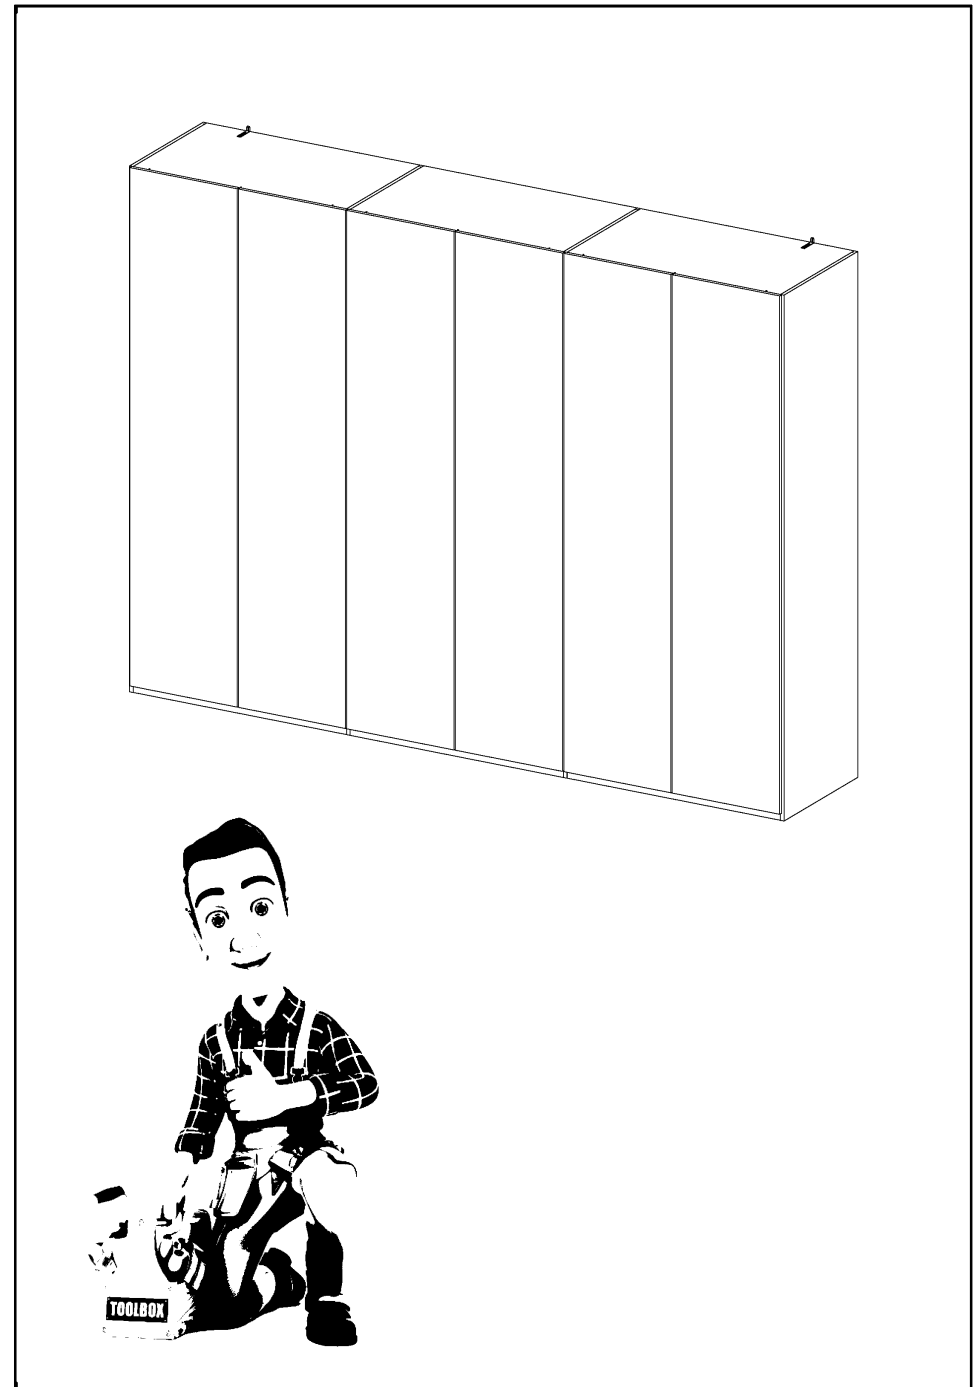



MD106

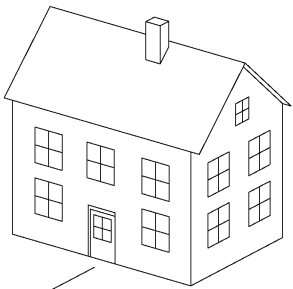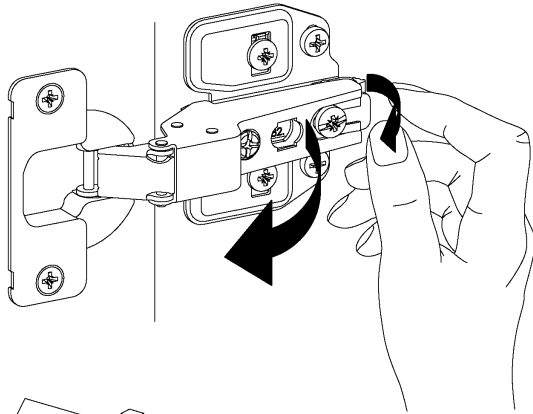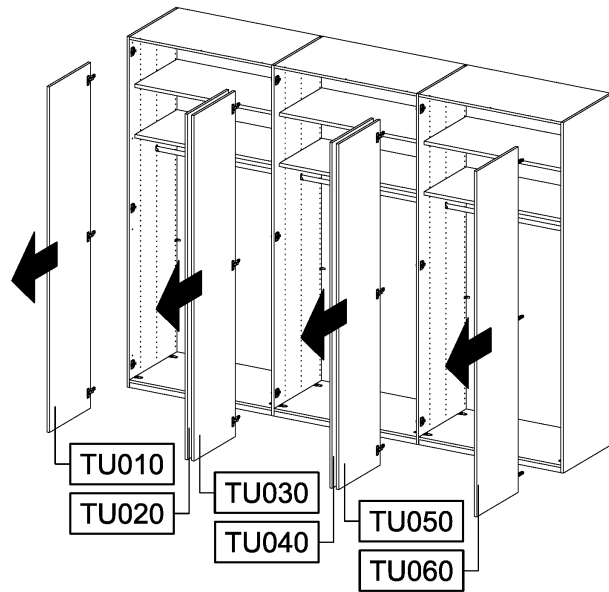

1.

ME190_02

rauch

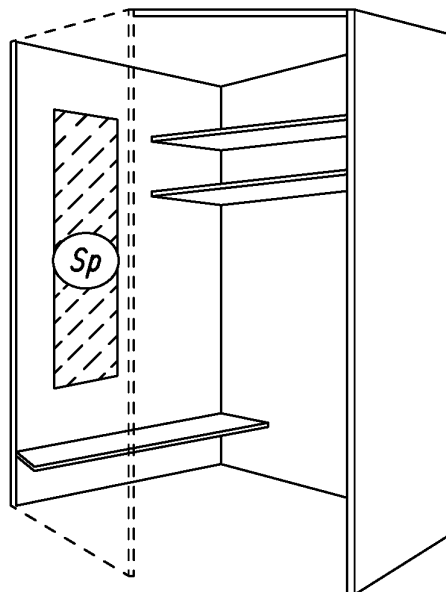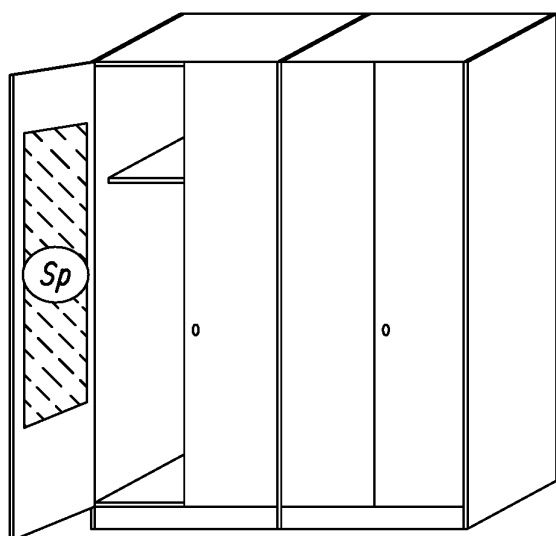

637





492




3x15


1

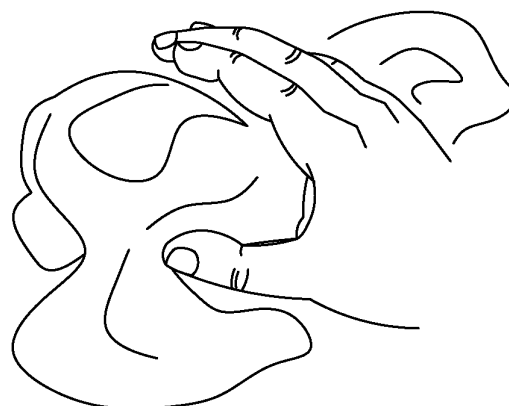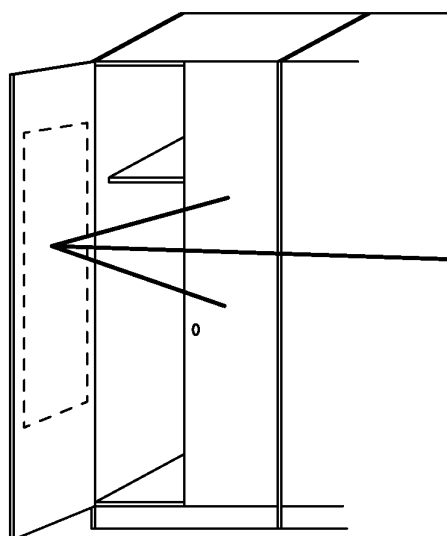


2

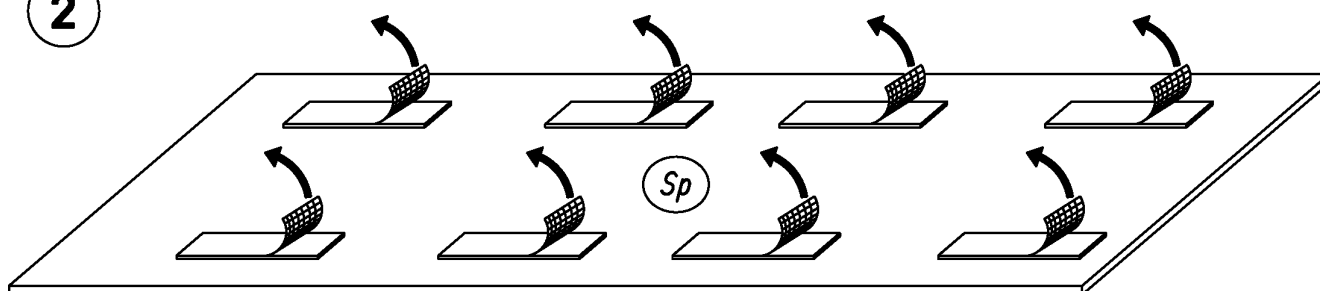



3

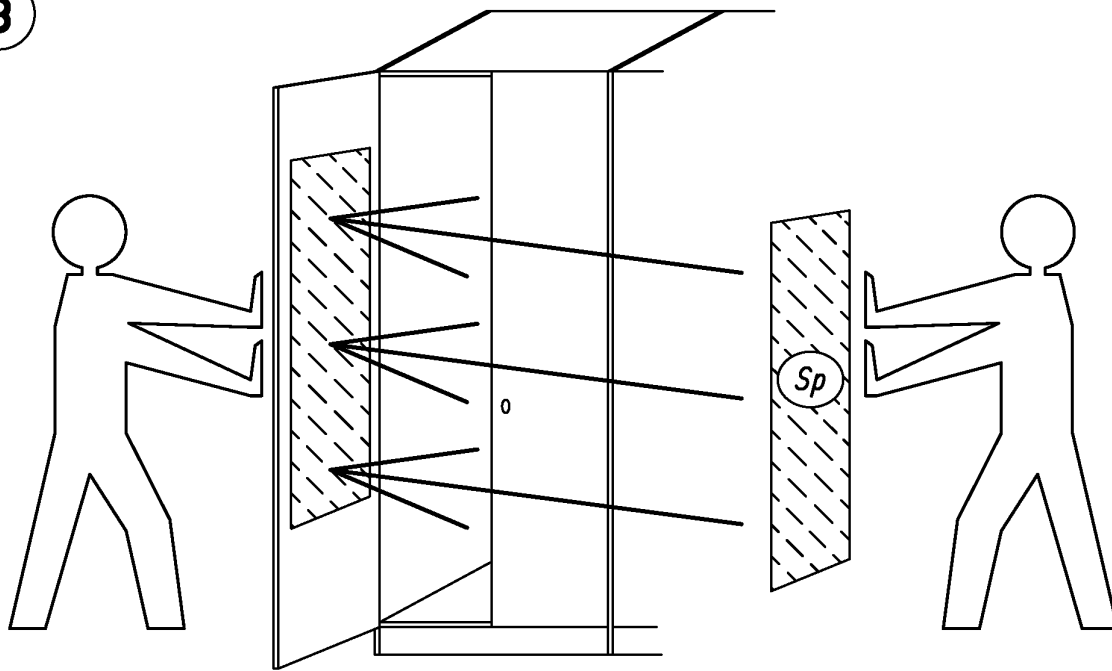


4

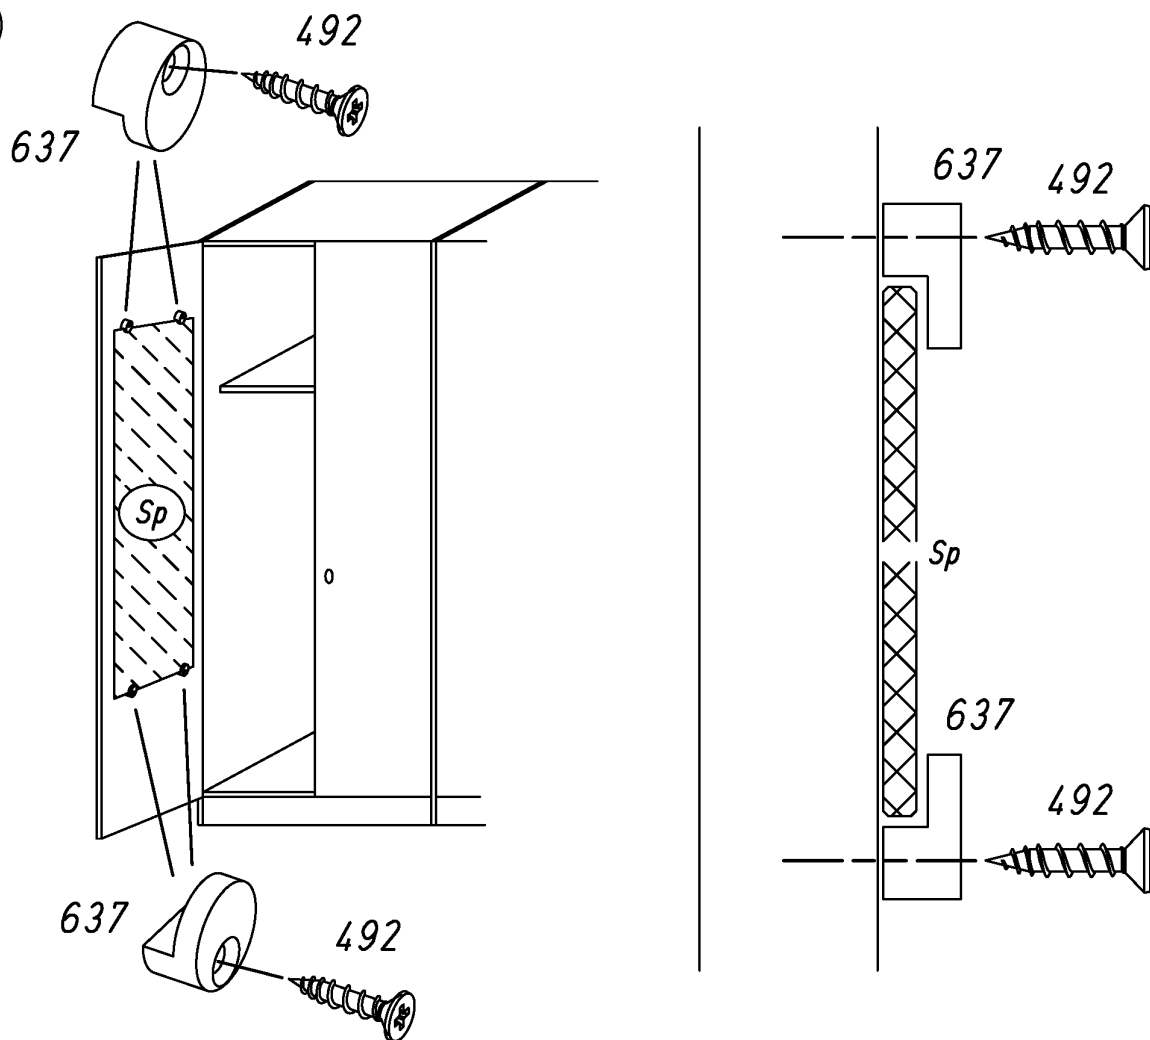

1. ME 442 rauch

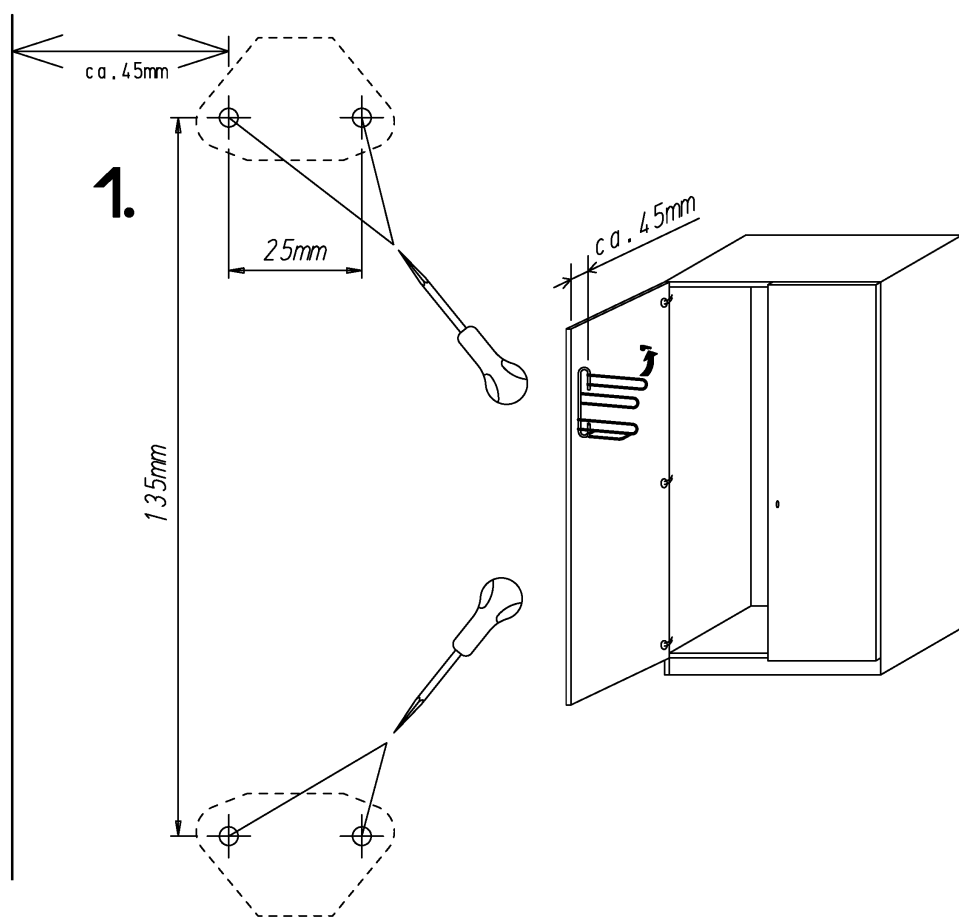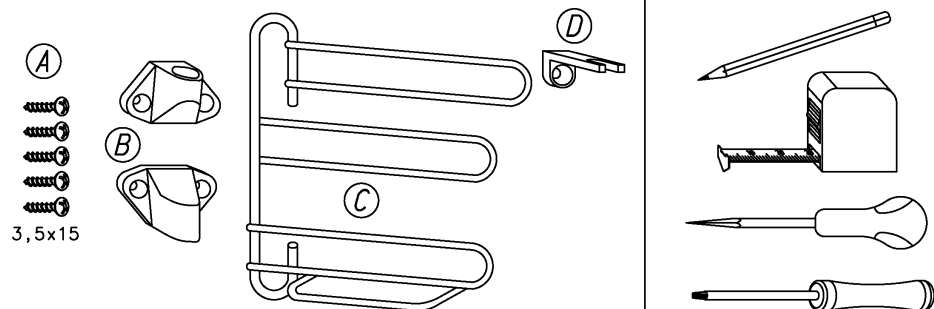

2.

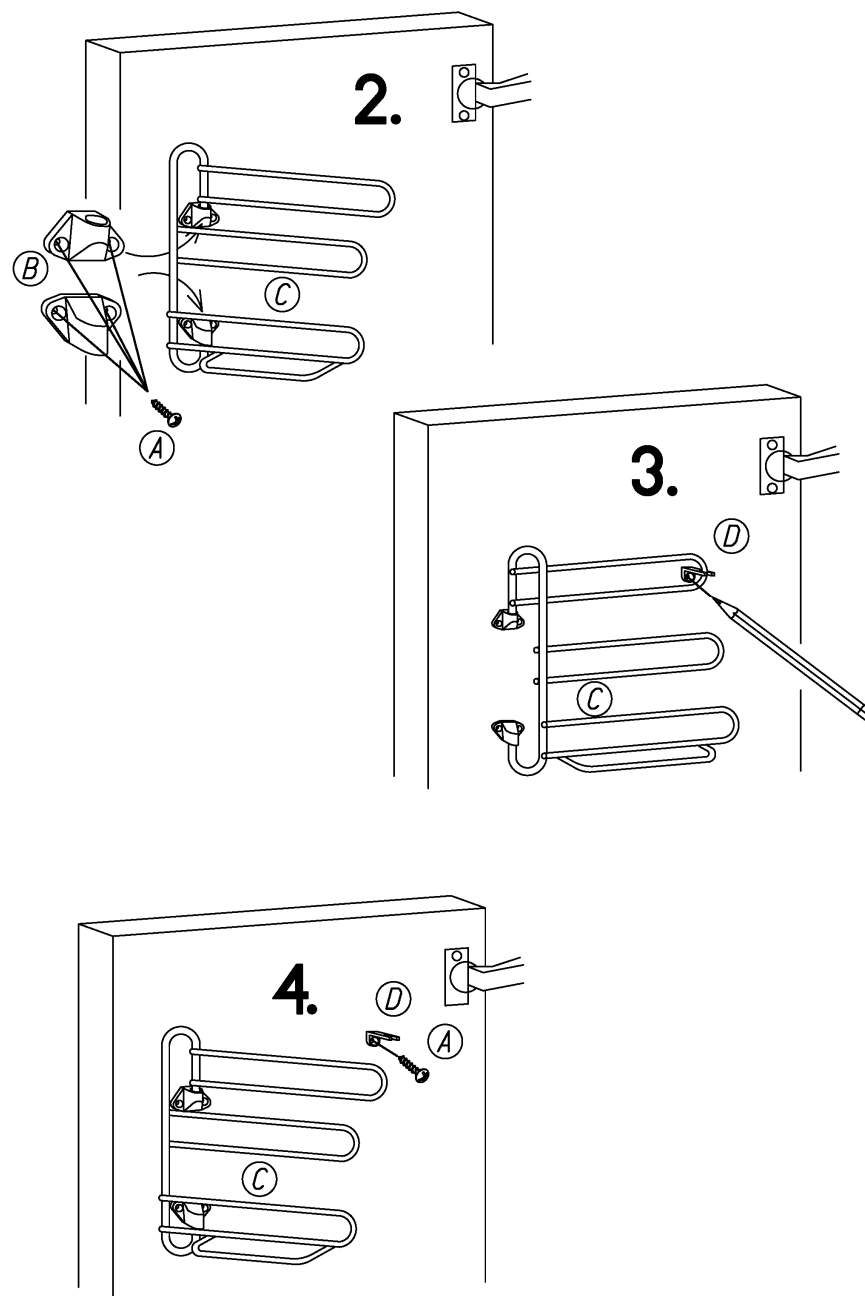

1.

MZ081_01

rauch

Kn




①

1.


Typ I

Typ II

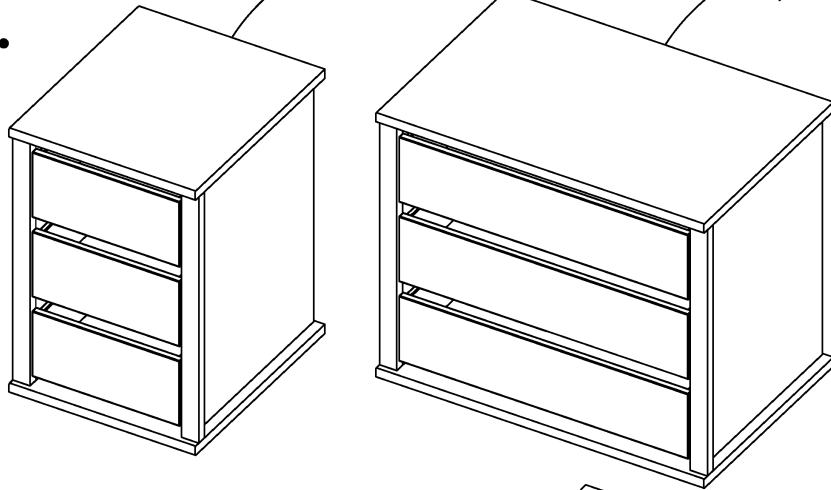



2.

4x



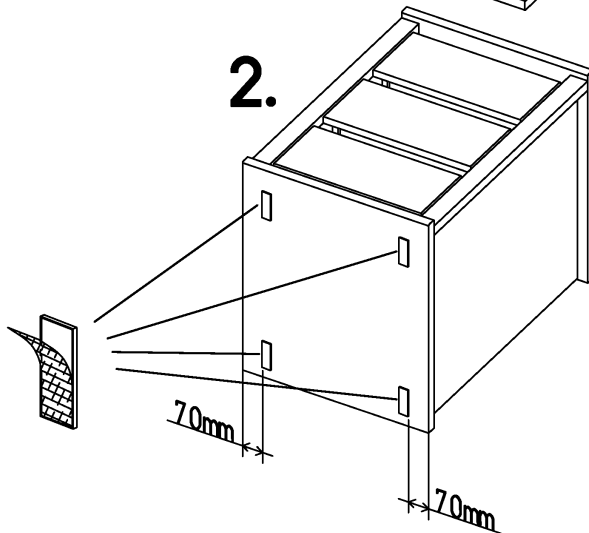


2.



②

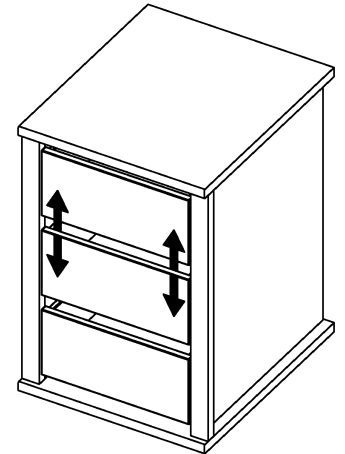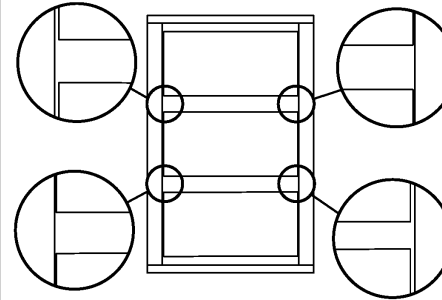




1.

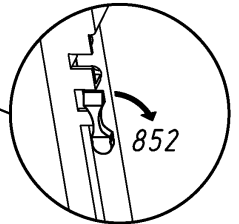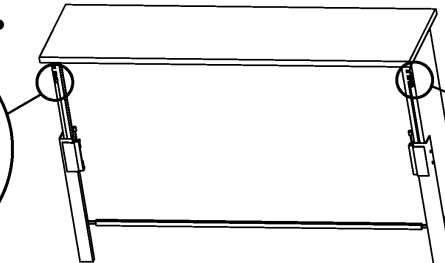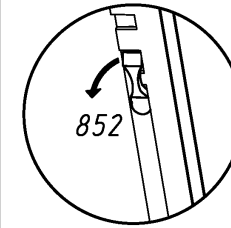

2.

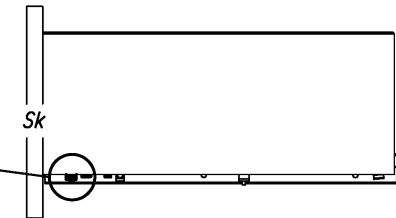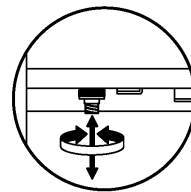

3.

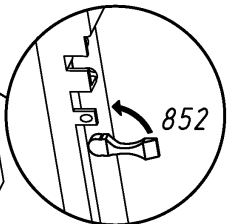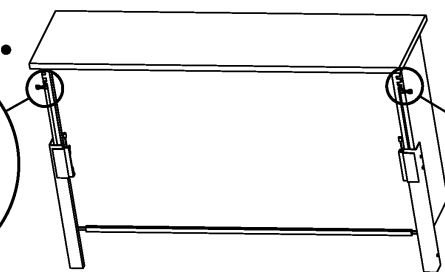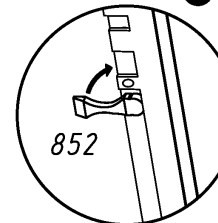


MZ081



Montageanleitung / Mounting Instruction – Nexis für Nexis Bänder / Nexis for Nexis hinges

Zuerst Türeinrichtungen vornehmen / Make door adjustments first



1

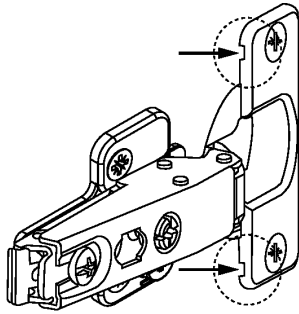

2

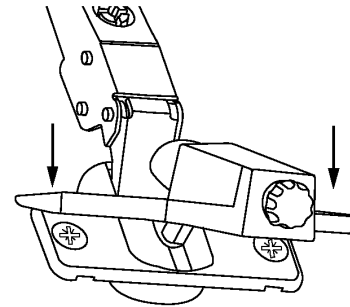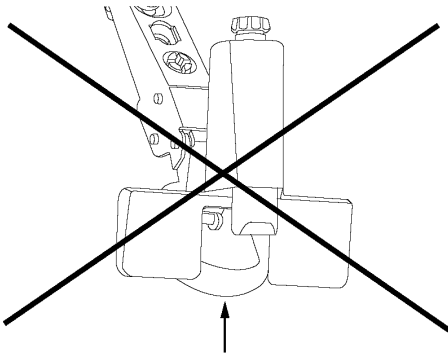

3

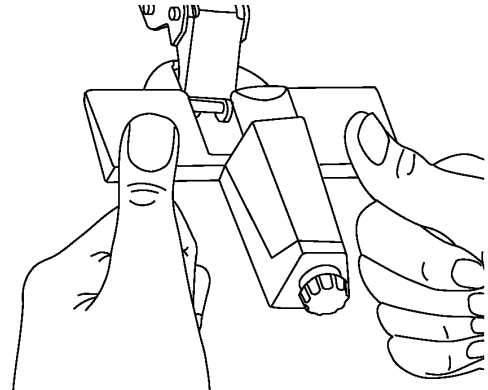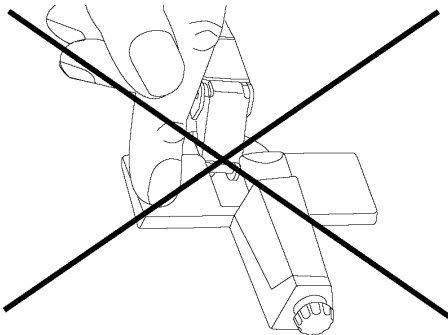

4

