

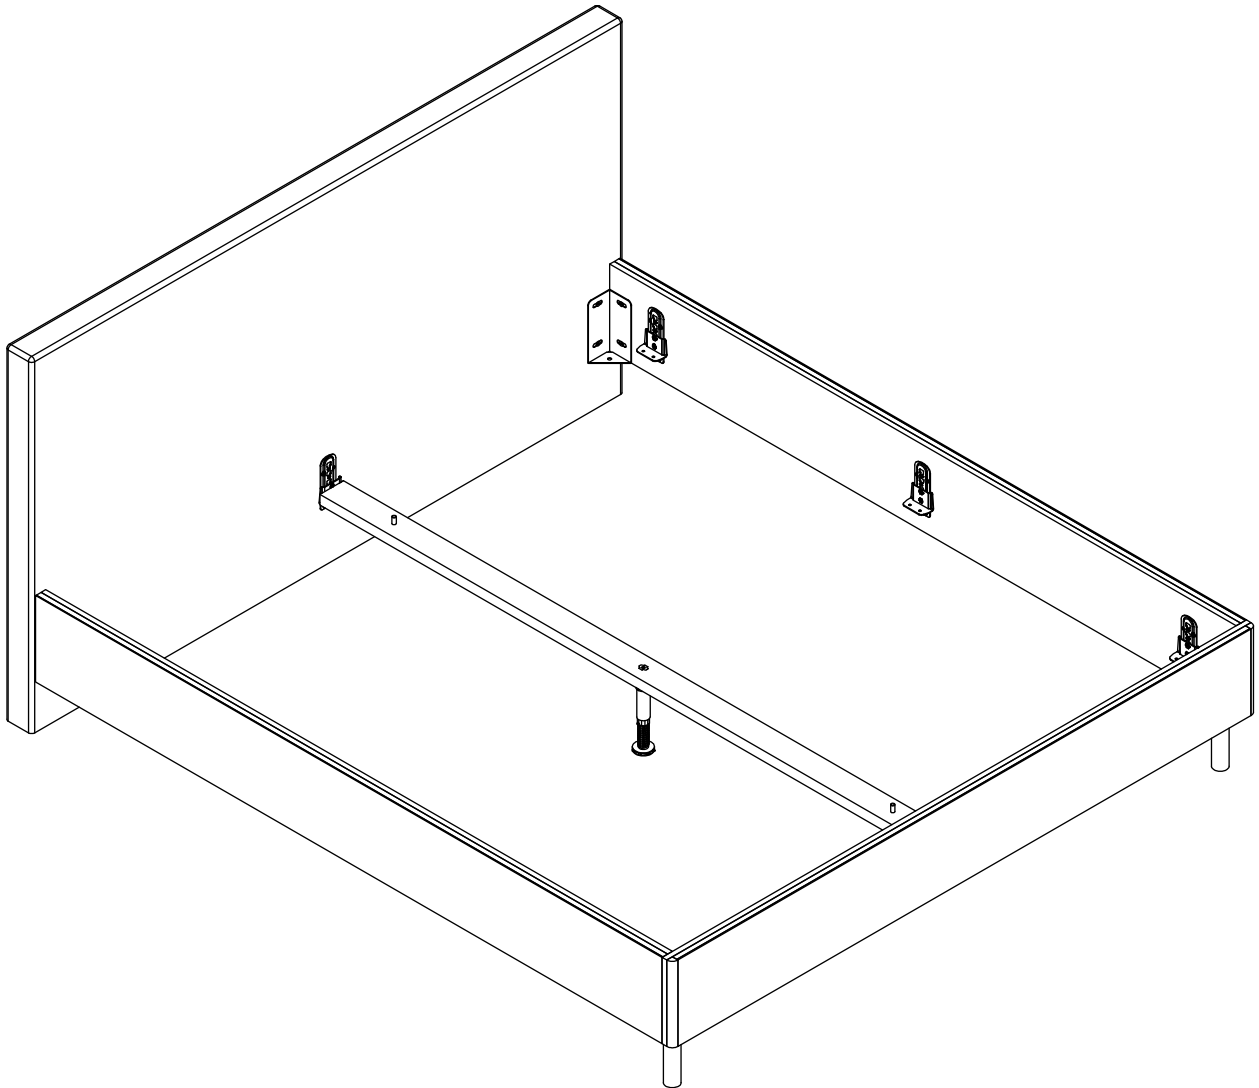
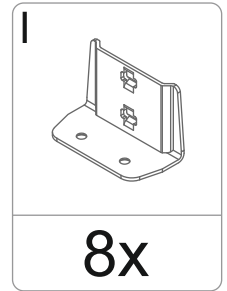
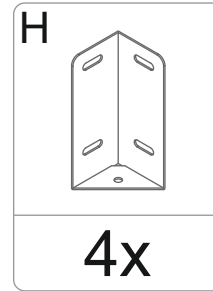
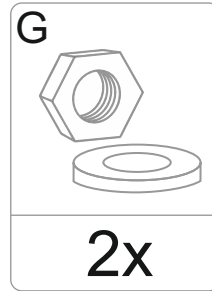
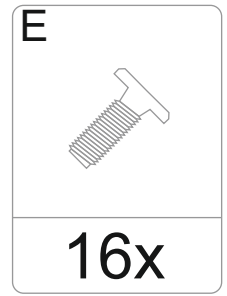
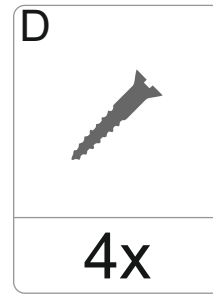
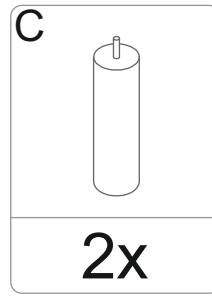
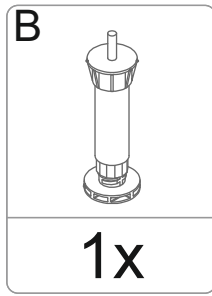
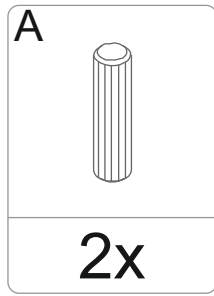


ASSEMBLY INSTRUCTION


UPHOLSTERED FRAME

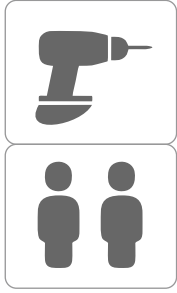

1

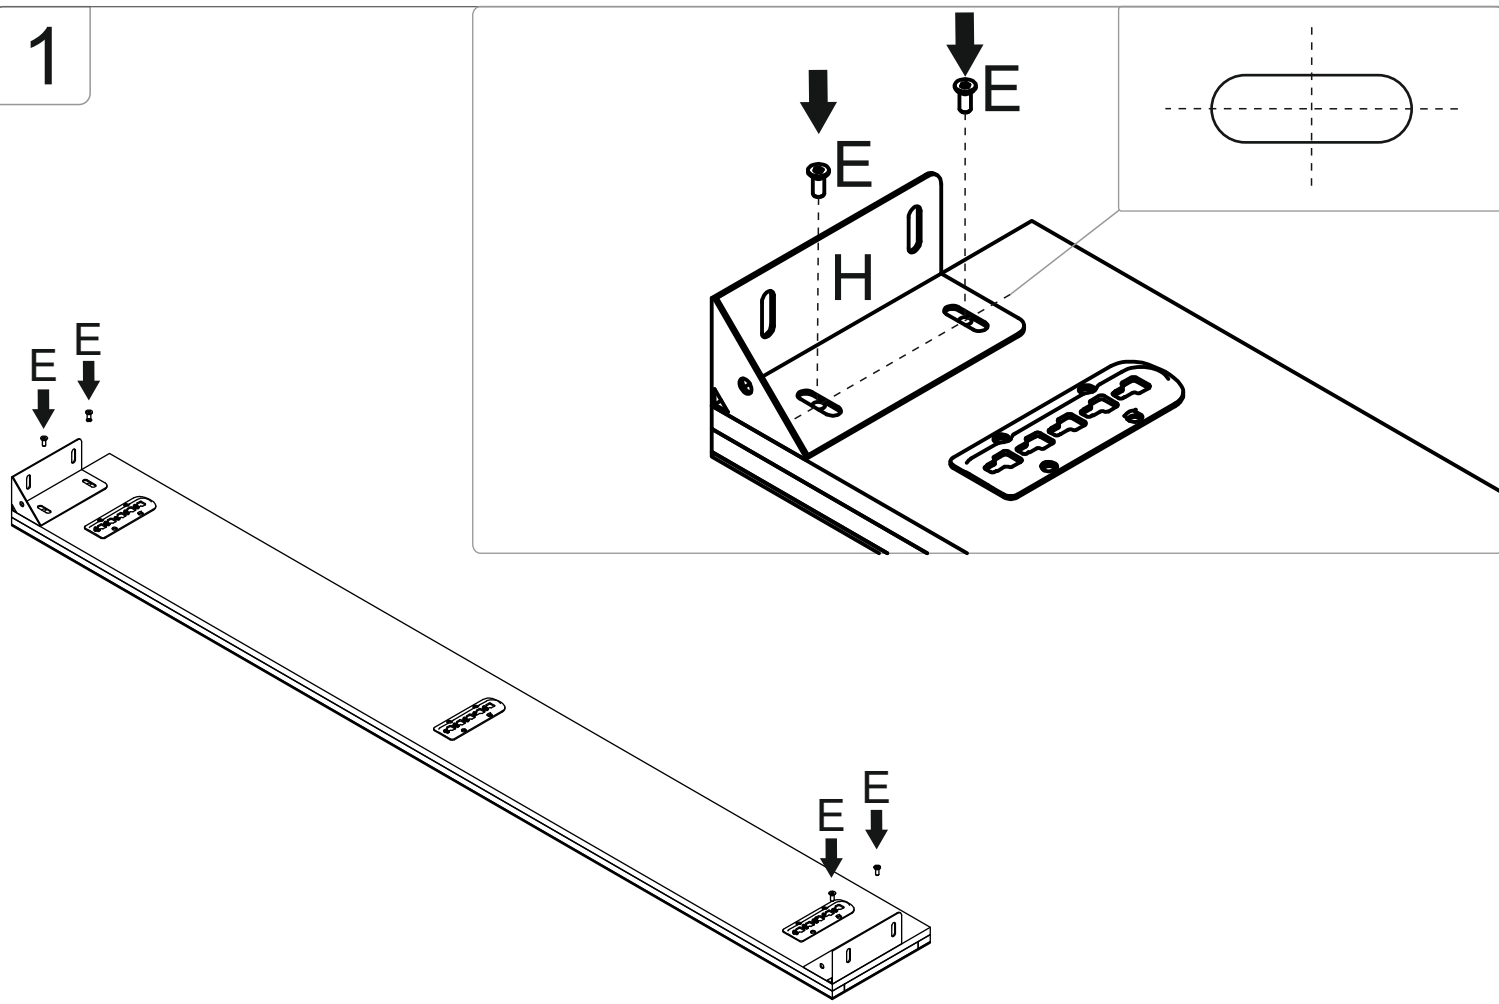



2

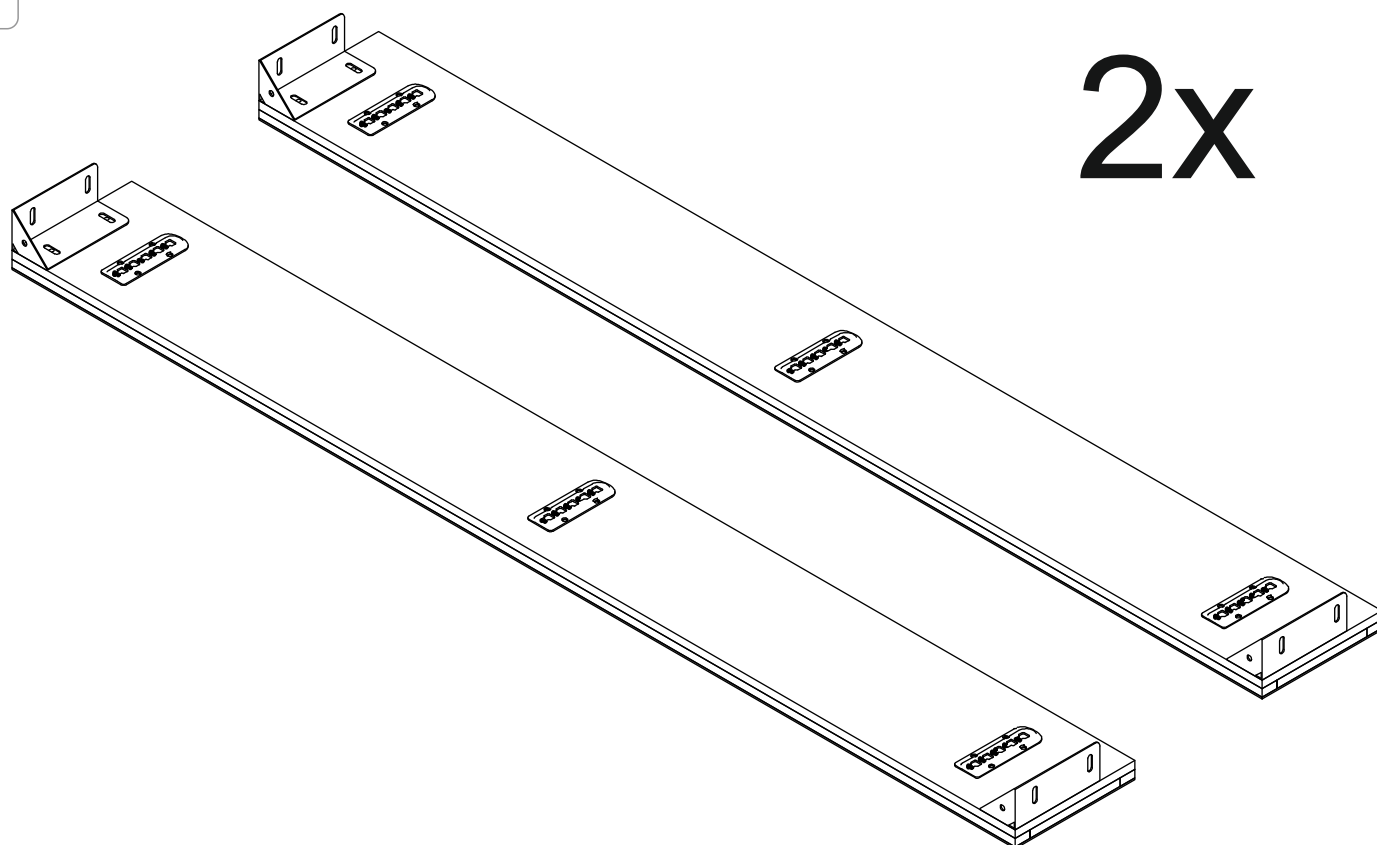

3

Diagram 3 illustrates the process of attaching the side panels to the base. The main view shows a 3D perspective of the base with two side panels being attached. Arrows indicate the panels sliding into the base. A callout shows a close-up of the corner joint where a panel is secured with a screw. Another callout shows a corner bracket (H) being attached to the side panel with a screw (G). A third callout shows a corner bracket (C) being attached to the base with a screw (C).

5

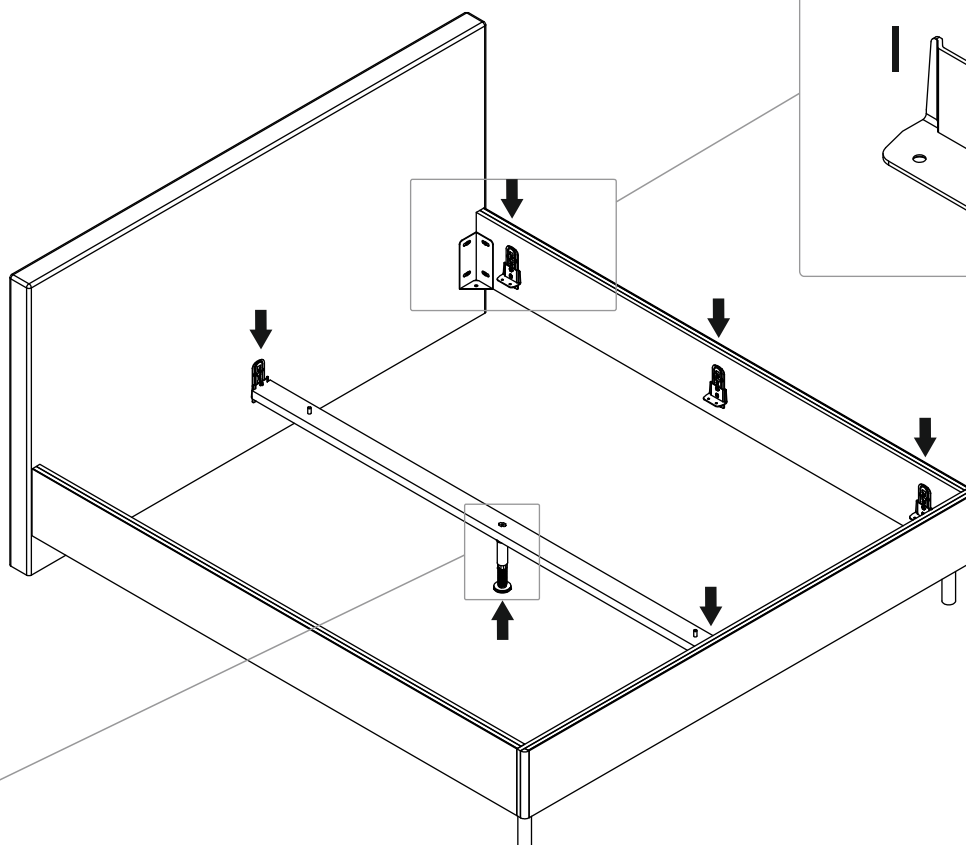

B

6

