

ASSEMBLY INSTRUCTION


DE - MONTAGEANWEISUNG
FR - INSTRUCTIONS DE MONTAGE
DK - MONTAGEVEJLEDNING
CZ - NÁVOD K MONTÁŽI
ES - INSTRUCCIONES DE MONTAJE
FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU
SE - MONTERINGSANVISNING
SI - NAVODILA ZA MONTAŽO
TR - MONTAJ TALIMATI
NO - MONTASJEANVISNING
IT - ISTRUZIONI DI MONTAGGIO

GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
NL - MONTAGE INSTRUCTIE
PT - INSTRUÇÕES DE MONTAGEM
PL - INSTRUKCJA MONTAŻU
HU - SZERELÉSI UTASÍTÁS




10 min

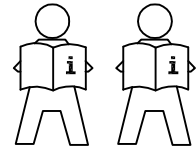

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

0 cm
1
2
3
4
5
6
7
8
9
10
11
12
13
14

① x 4



HW-ST-02-031
(6x45)

② x 2




HW-ST-04-285
(50x30x(t3.0))

③ x 1




HW-ST-18-001
(4X98)

④ x 1

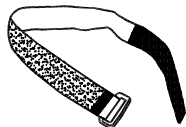


HW-MM-22-083
(400x25)

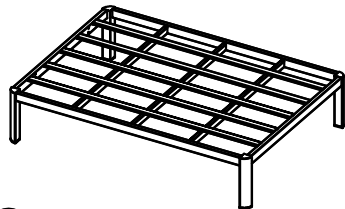




Ⓐ x 1



VSU-SC-MA-0005

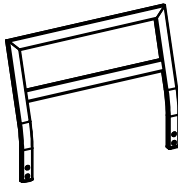


Ⓑ x 1

VSU-SC-BF-0002

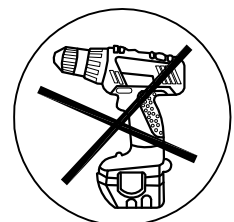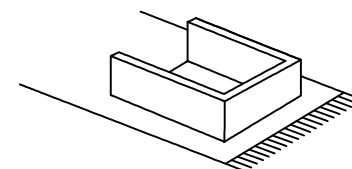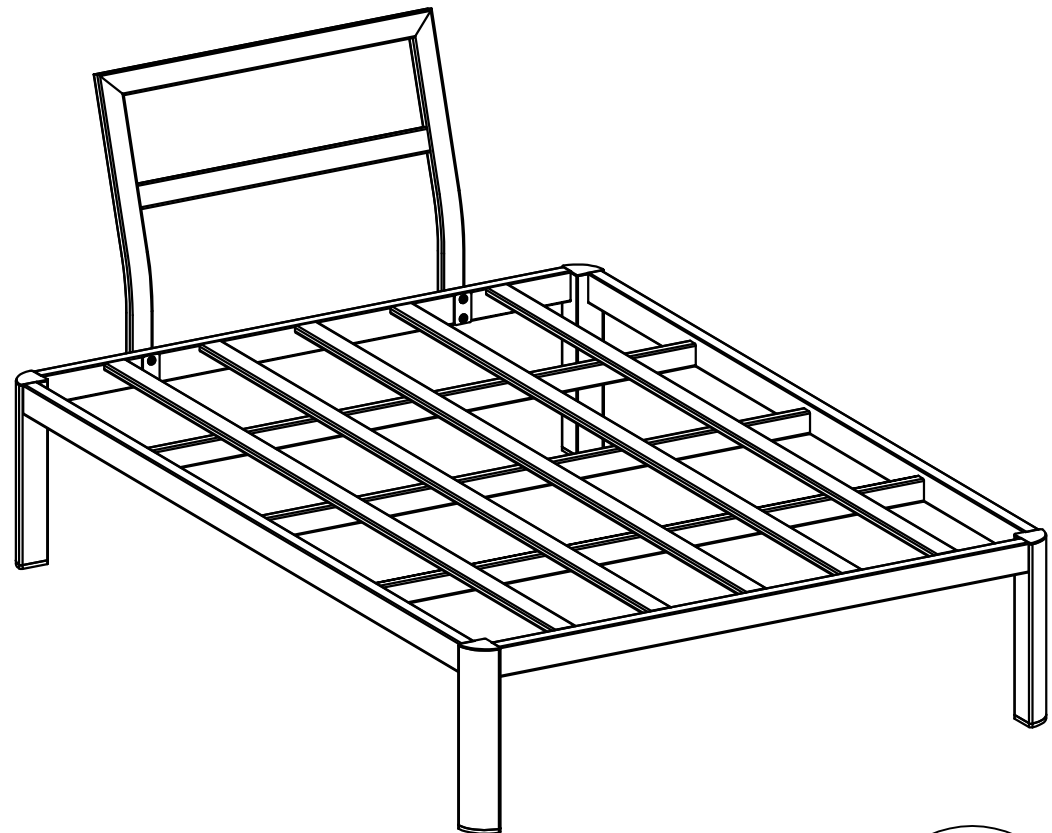

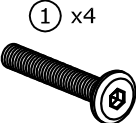 ① x4 HW-ST-02-031 (6x45)	 ② x2 HW-ST-04-285 (50x30x(t3.0))	 ③ x1 HW-ST-18-001 (4x98)
--	---	---

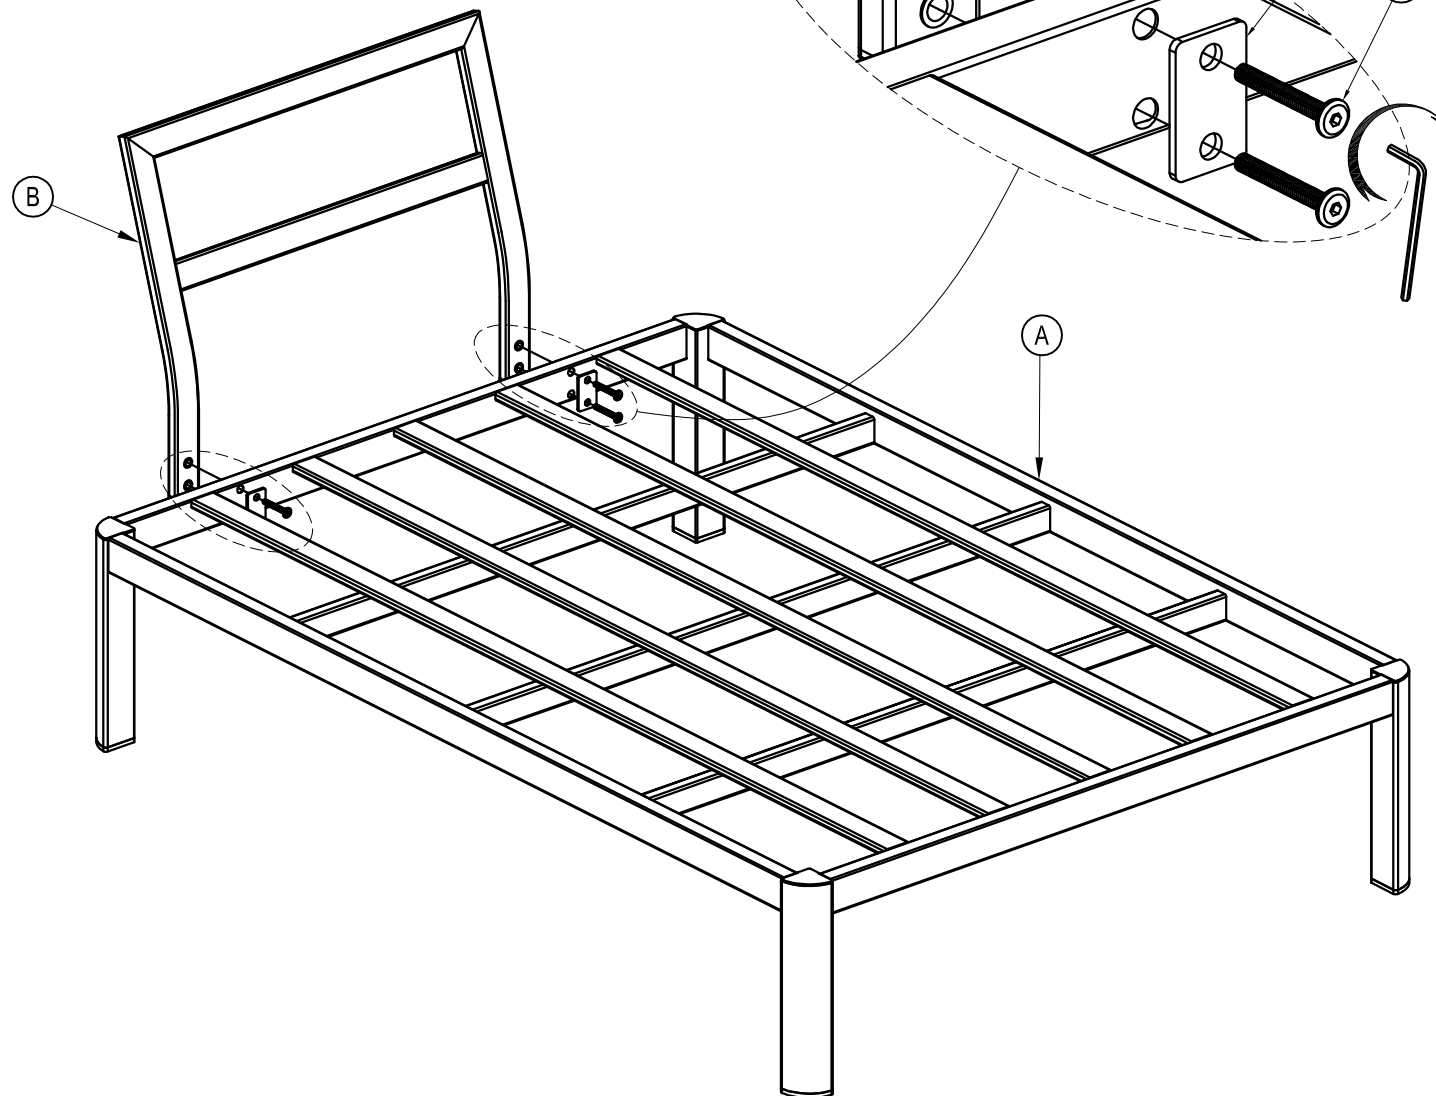

ASSEMBLY INSTRUCTION

DE - MONTAGEANWEISUNG

FR - INSTRUCTIONS DE MONTAGE

DK - MONTAGEVEJLEDNING

CZ - NÁVOD K MONTÁŽI

ES - INSTRUCCIONES DE MONTAJE

FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU

SE - MONTERINGSANVISNING

SI - NAVODILA ZA MONTAŽO

TR - MONTAJ TALIMATI

NO - MONTASJEANVISNING

IT - ISTRUZIONI DI MONTAGGIO

GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ

NL - MONTAGE INSTRUCTIE



PT - INSTRUÇÕES DE MONTAGEM

PL - INSTRUKCJA MONTAŻU


HU - SZERELÉSI UTASÍTÁS



10 min

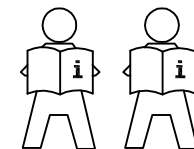

① x 8




HW-ST-02-031
(6x45)

② x 4




HW-ST-04-285
(50x30x(t3.0))

③ x 1

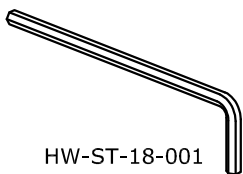


HW-ST-18-001
(4X98)

④ x 1

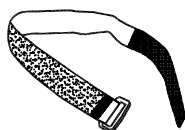


HW-MM-22-083
(400x25)

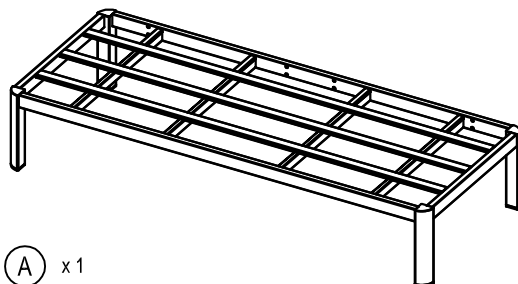

Ⓐ x 1

VSU-SC-MA-0006

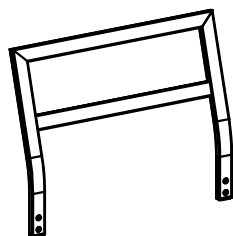

Ⓑ x 2

VSU-SC-BF-0002

