






Assembly Instruction

LOWBOARD MALIN

Article number: 05540001/26

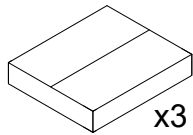


x3

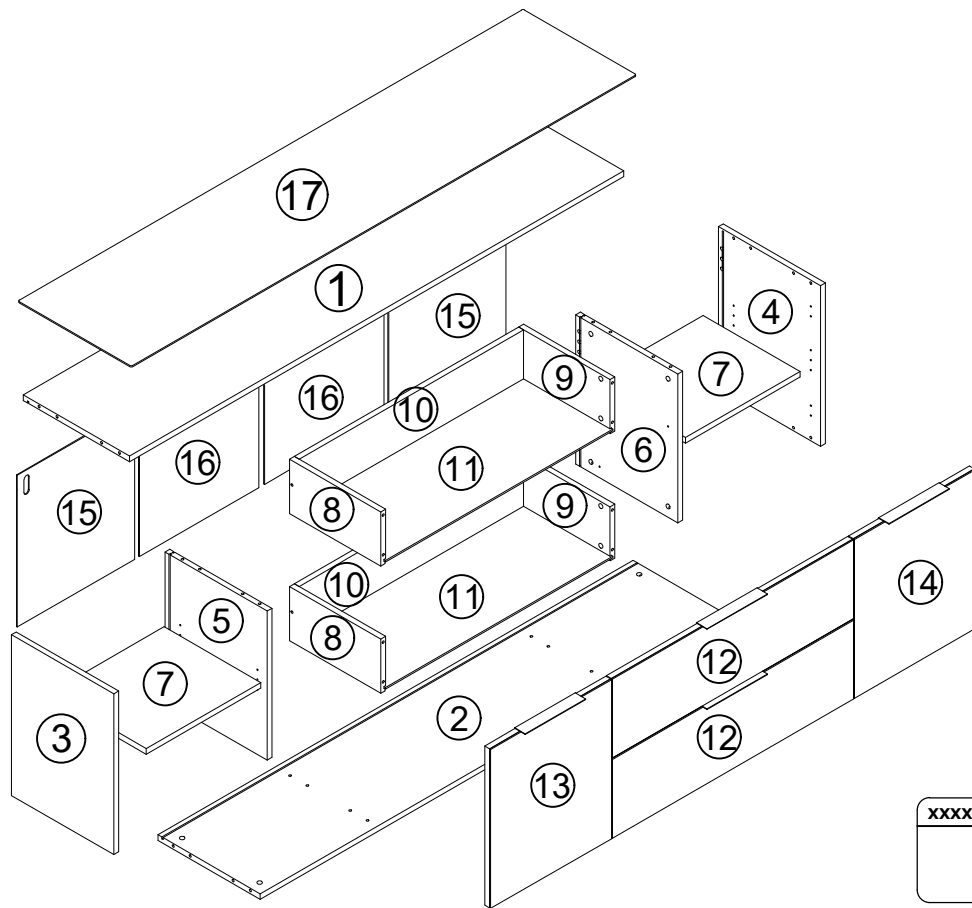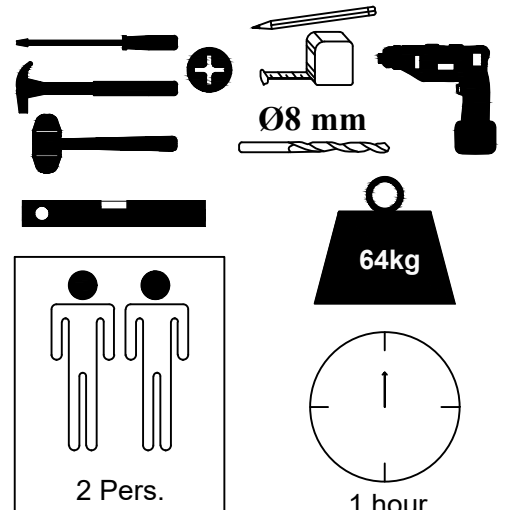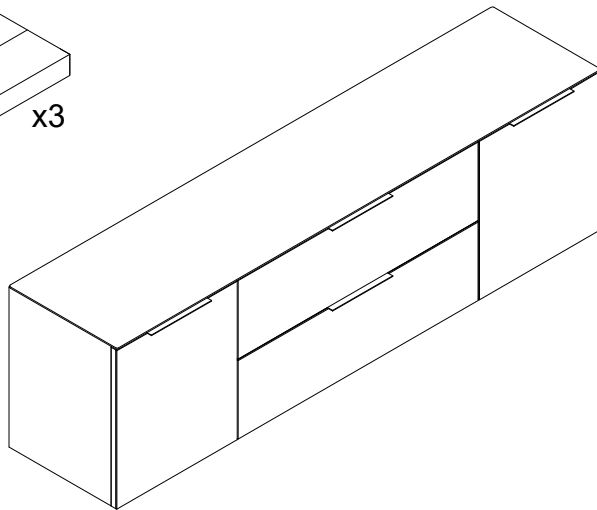


145662 X 8 PCS 	95200 X 24 PCS 	565 X 24 PCS 	XXXX X 2 PCS 	XXXX X 2 PCS 	XXXX X 2 PCS 	XXXX X 2 PCS
249 X 7 PCS 	5694 X 8 PCS 	150217 X 2 SET 	150218 X 2 SET 	298172 X 2 PCS 	298171 X 2 PCS 	298173 X 4 PCS
122439 X 8 PCS 	175 X 8 PCS 	147 X 42 PCS 	361 X 4 PCS 	146 X 16 PCS 	4997 X 8 PCS 	172 X 16 PCS
100 X 24 PCS 	101 X 24 PCS 	298176 X 8 PCS 	157124 X 28 PCS 	22018 X 36 PCS 	298177 X 4 PCS 	305058 X 7 PCS


1

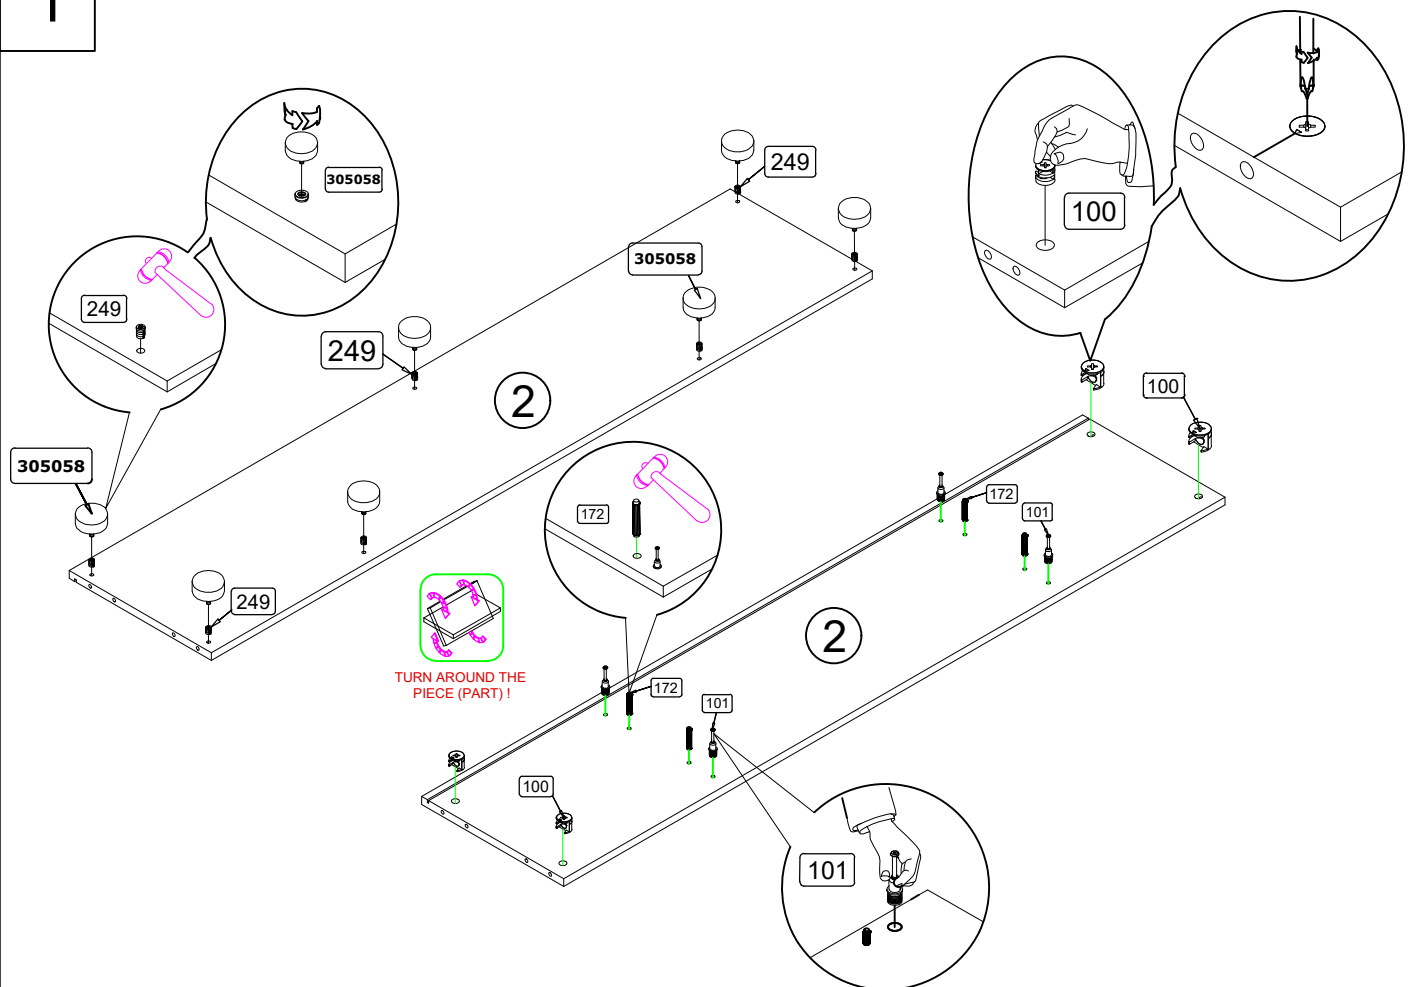


2

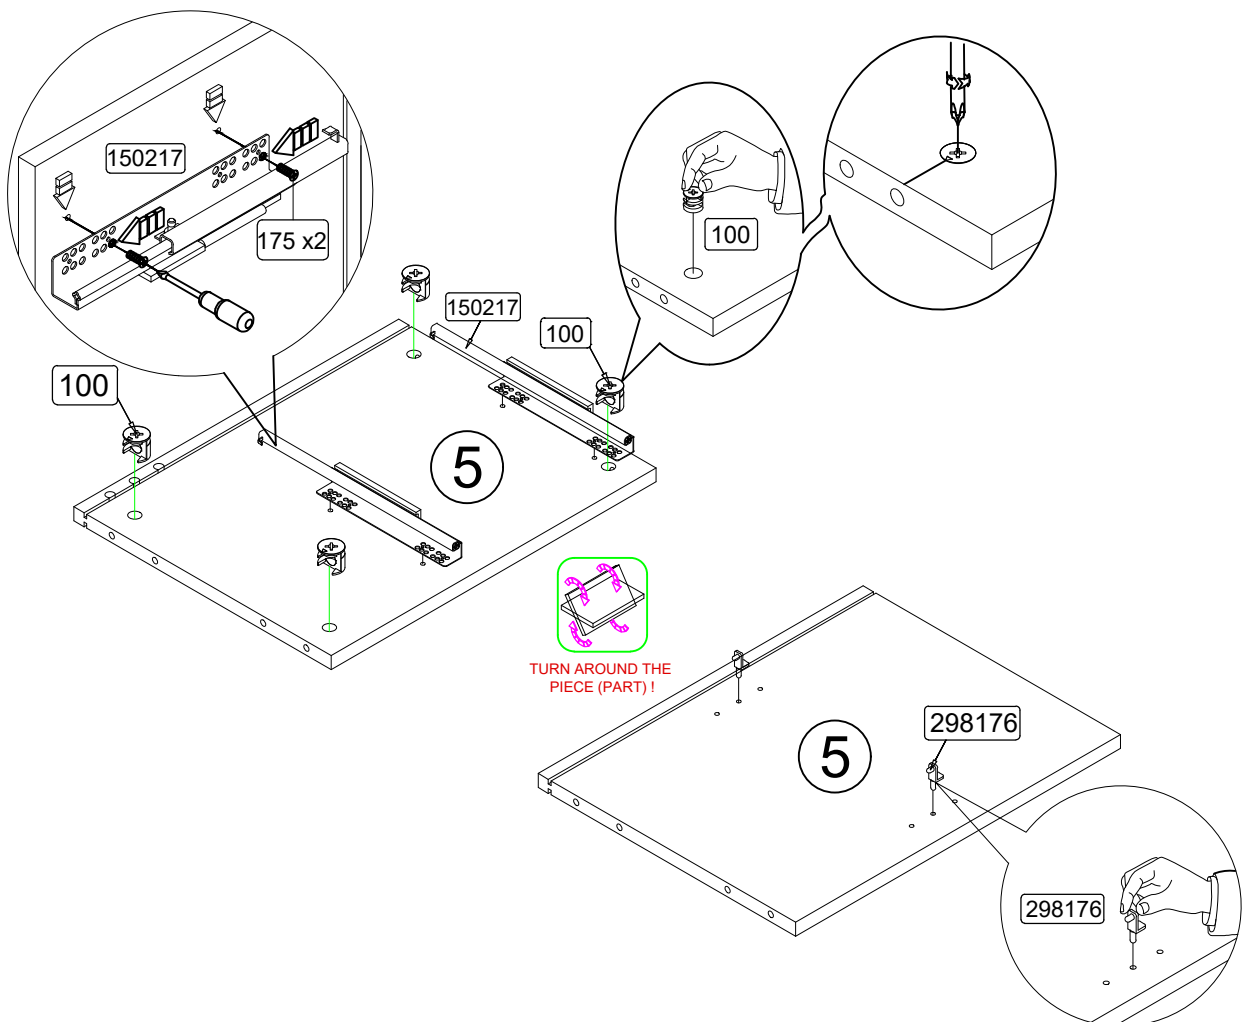

3

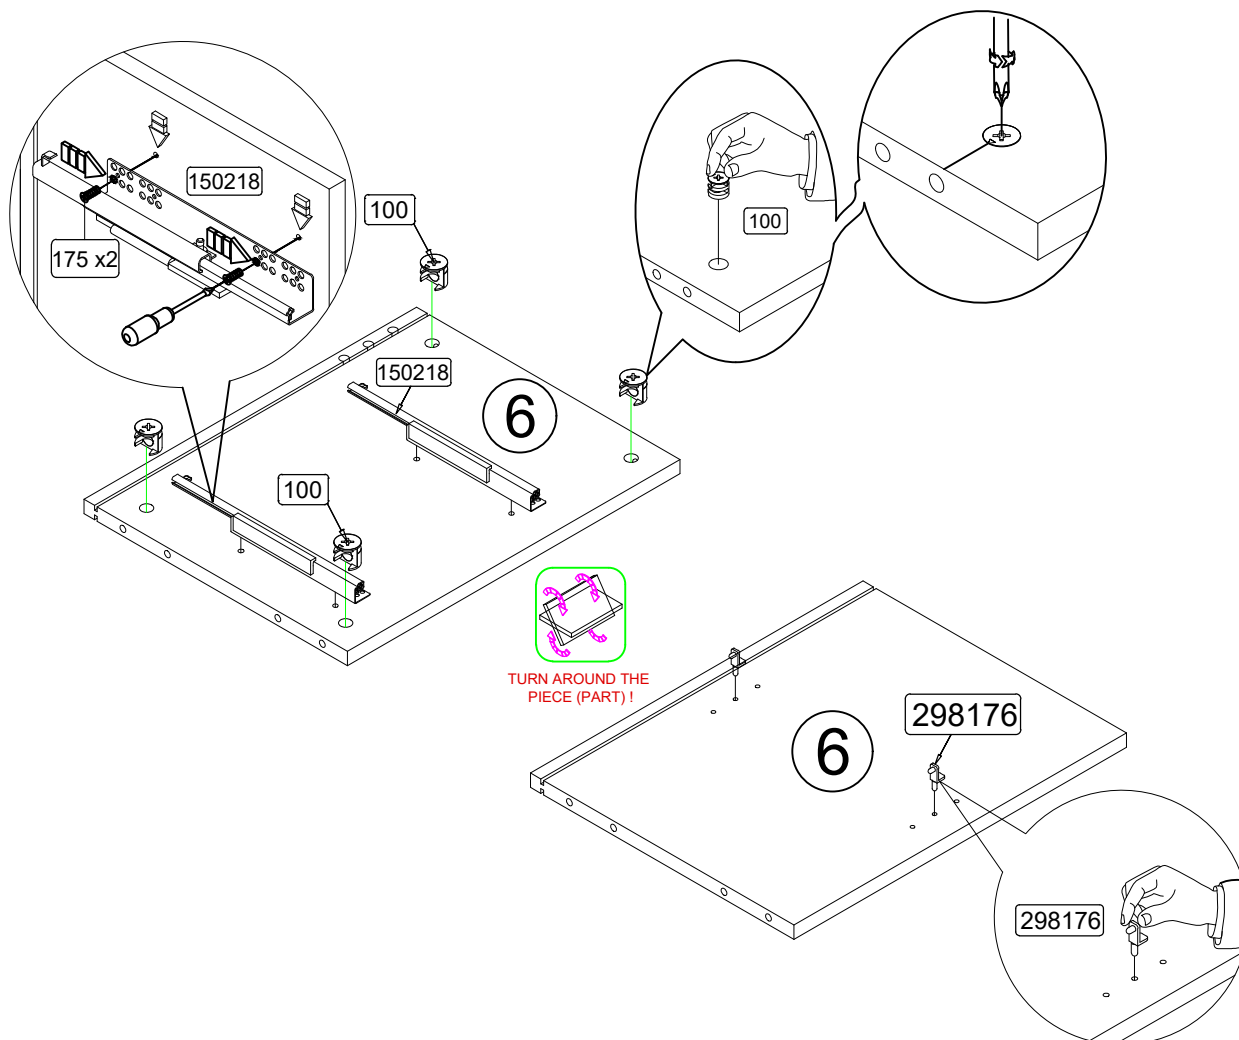

4

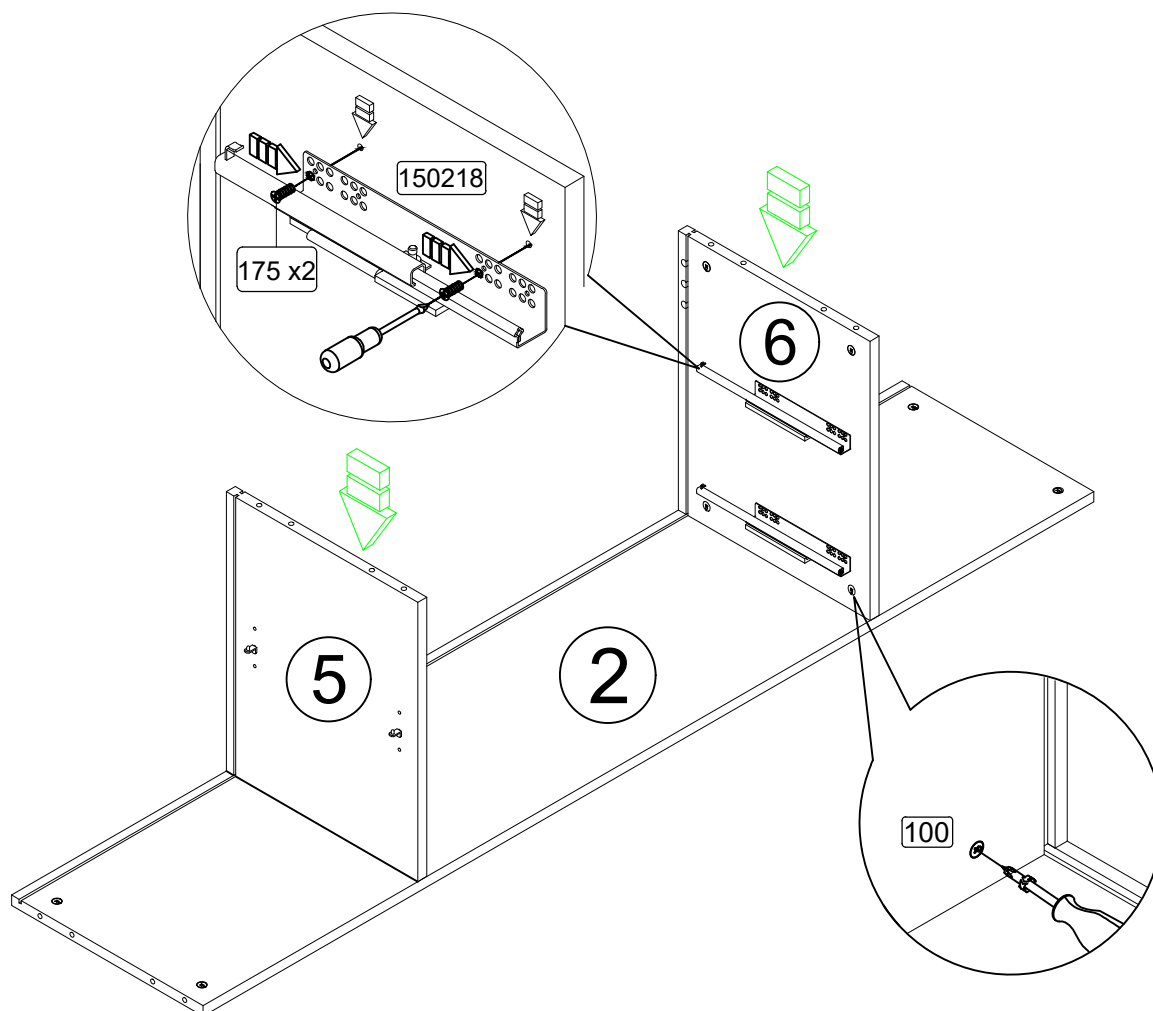


5

Isometric assembly diagram for step 5. The diagram shows the installation of panel 15 onto the side of the cabinet. Panel 15 is a vertical panel with a width of 437 mm. It is being attached to the side panel (2) using screws. The distance between the screws is 445 mm. A circular inset shows a close-up of the corner joint where panel 15 meets the top panel (5) and the side panel (2). Green arrows indicate the direction of assembly. The diagram also shows the front panel (6) and the back panel (16).


[illegible]

7

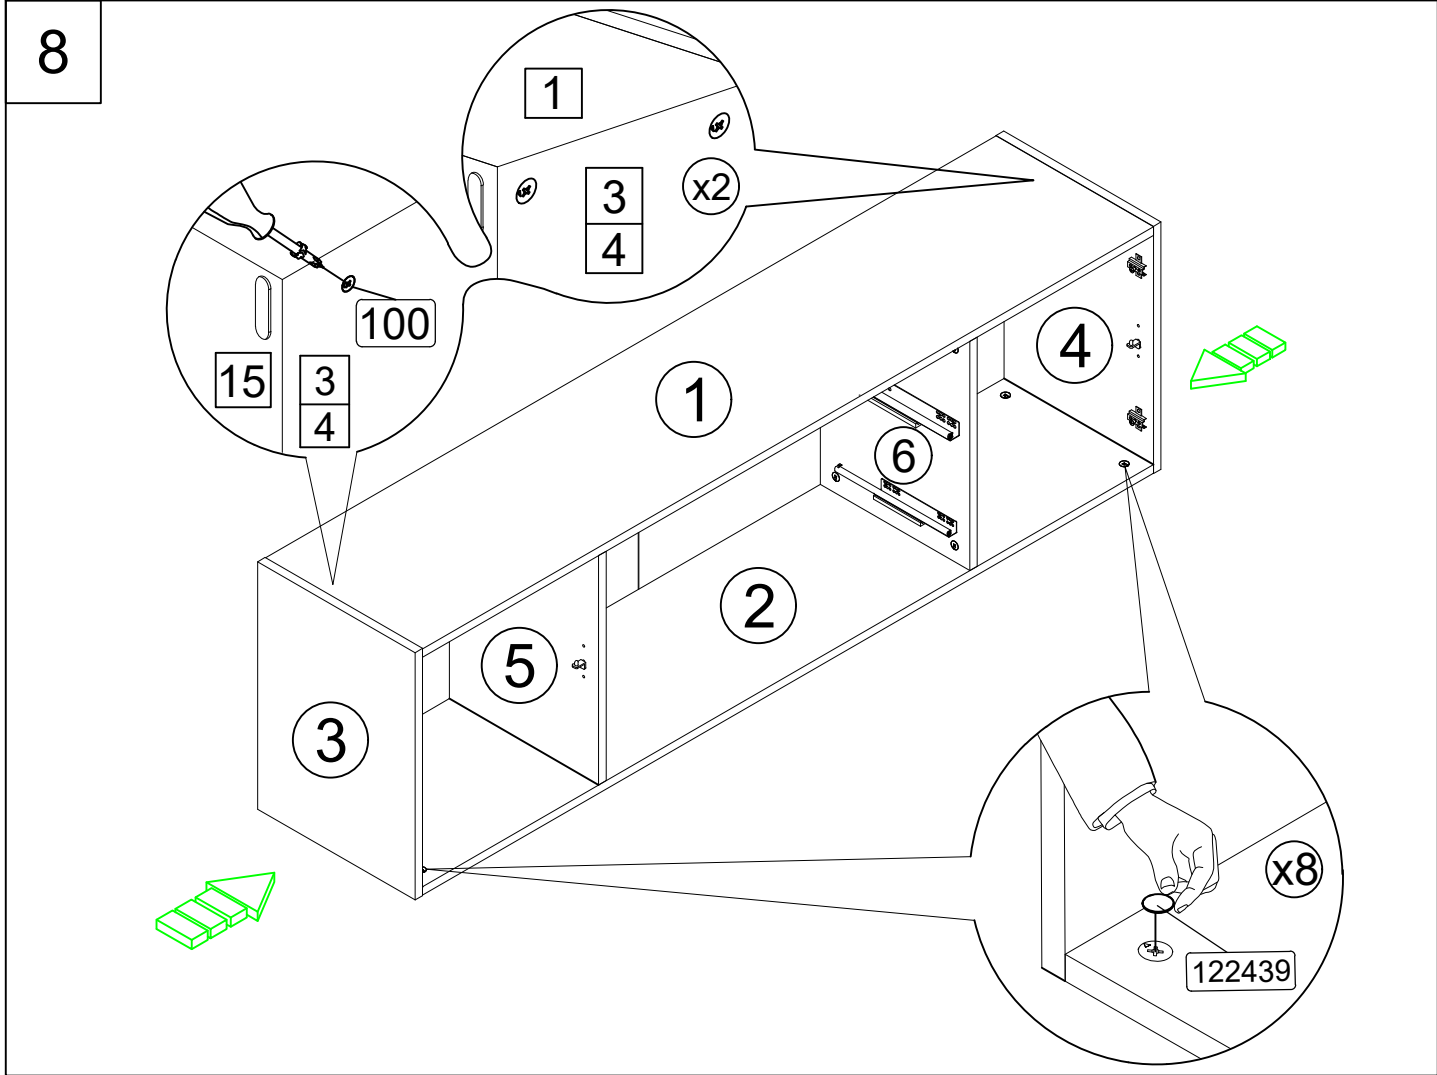


8



9

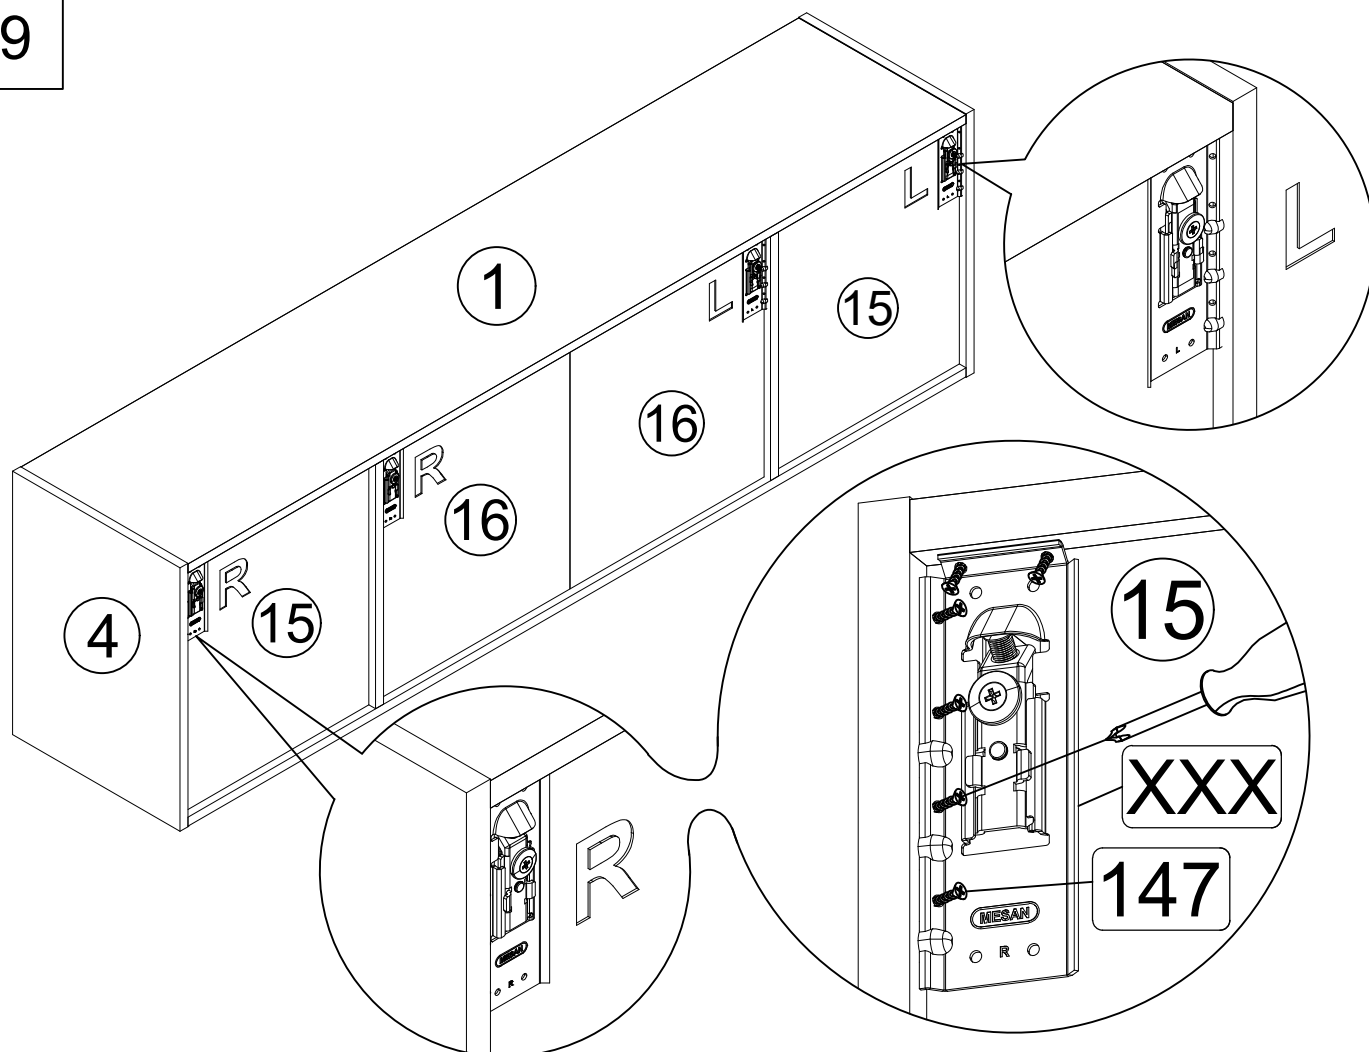









10

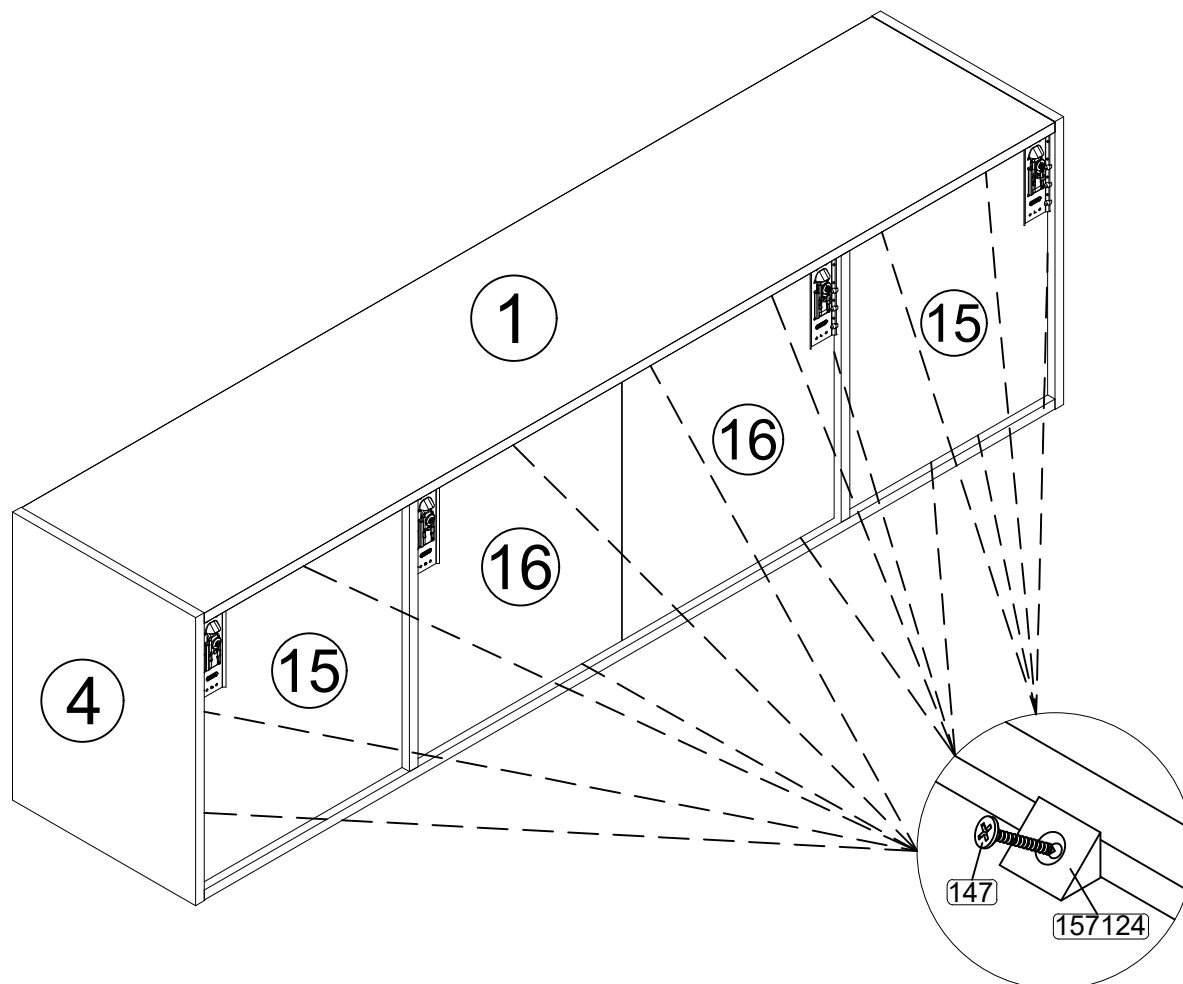


11

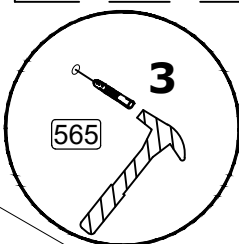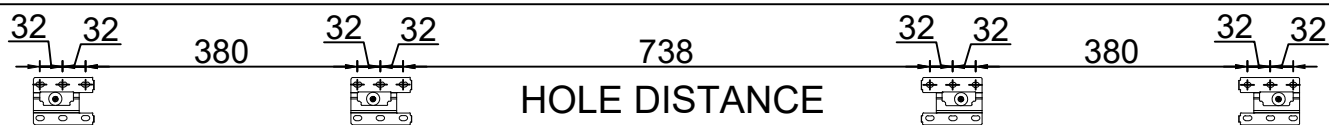


565 - Plastic dowel
8x10x40 mm
Use the wall dowel
that is suitable for
your wall.

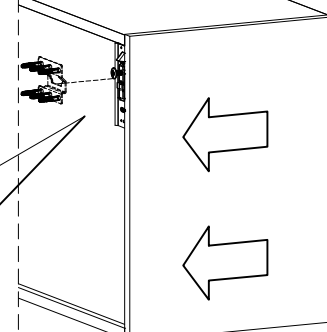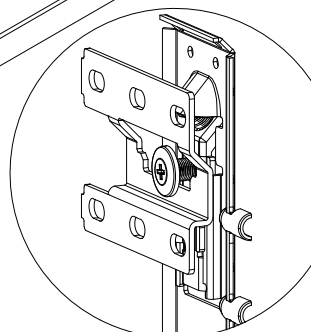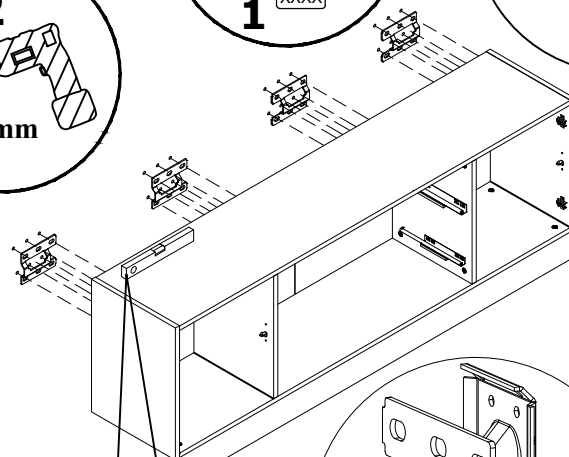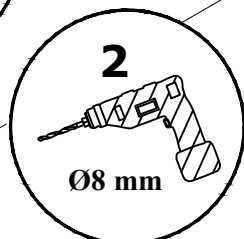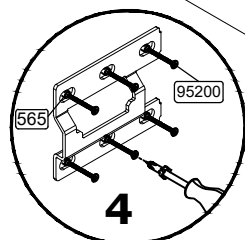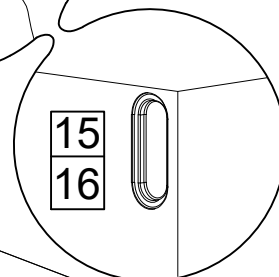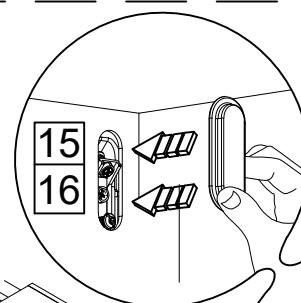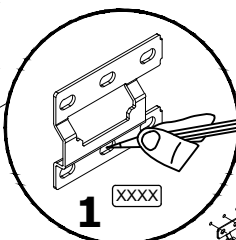


12

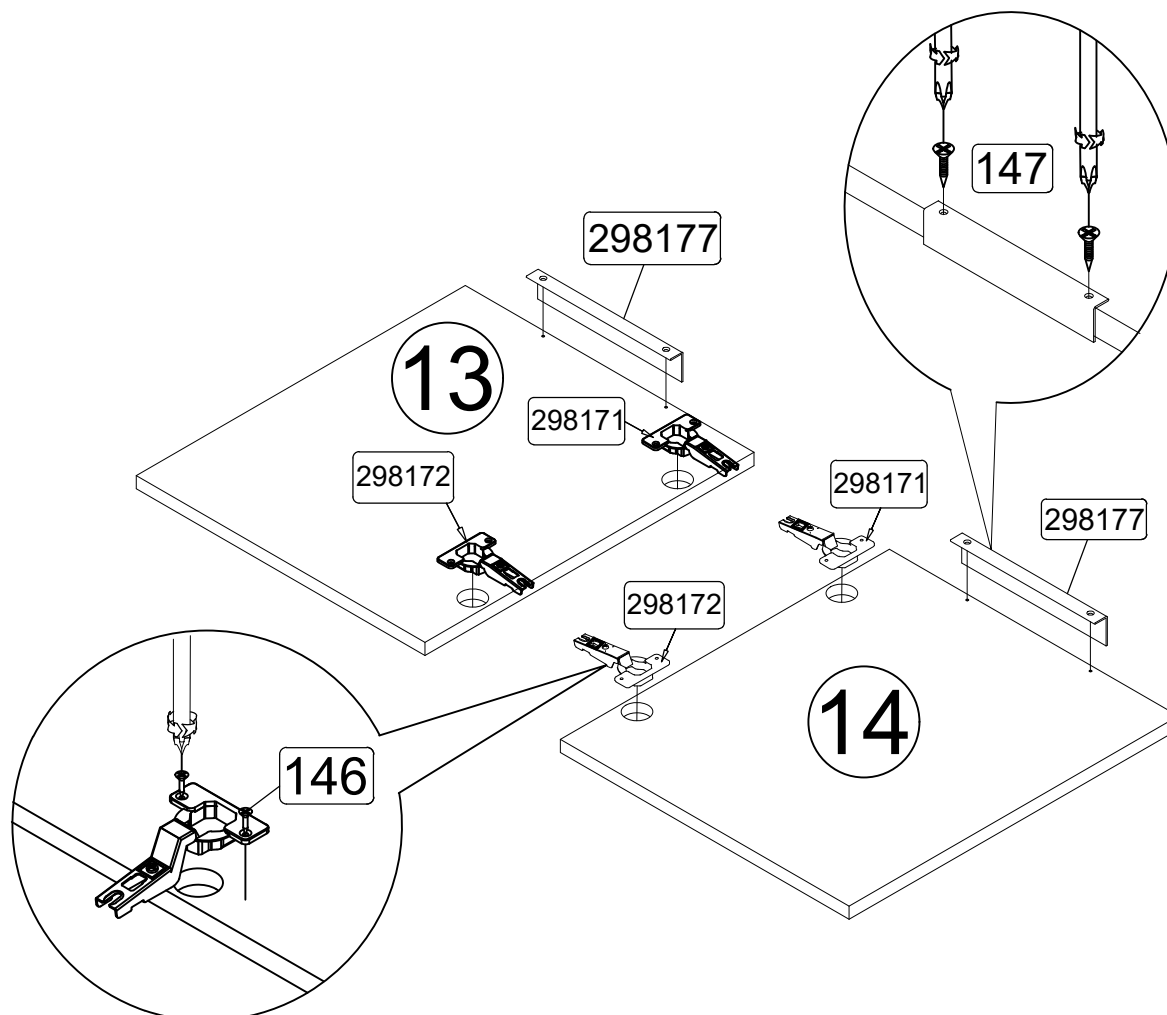


13

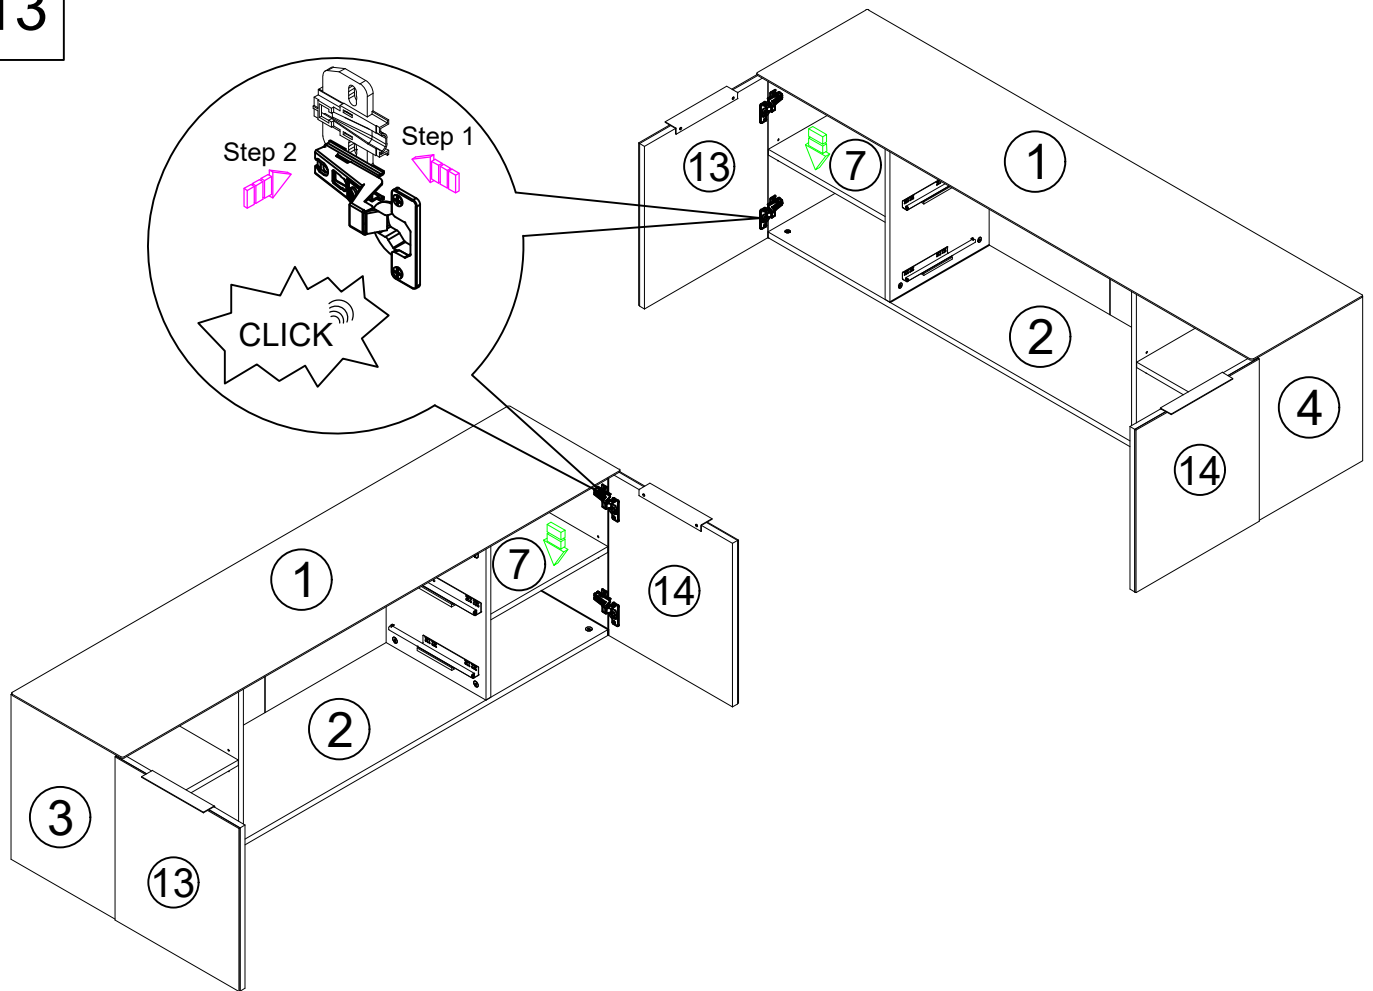

14

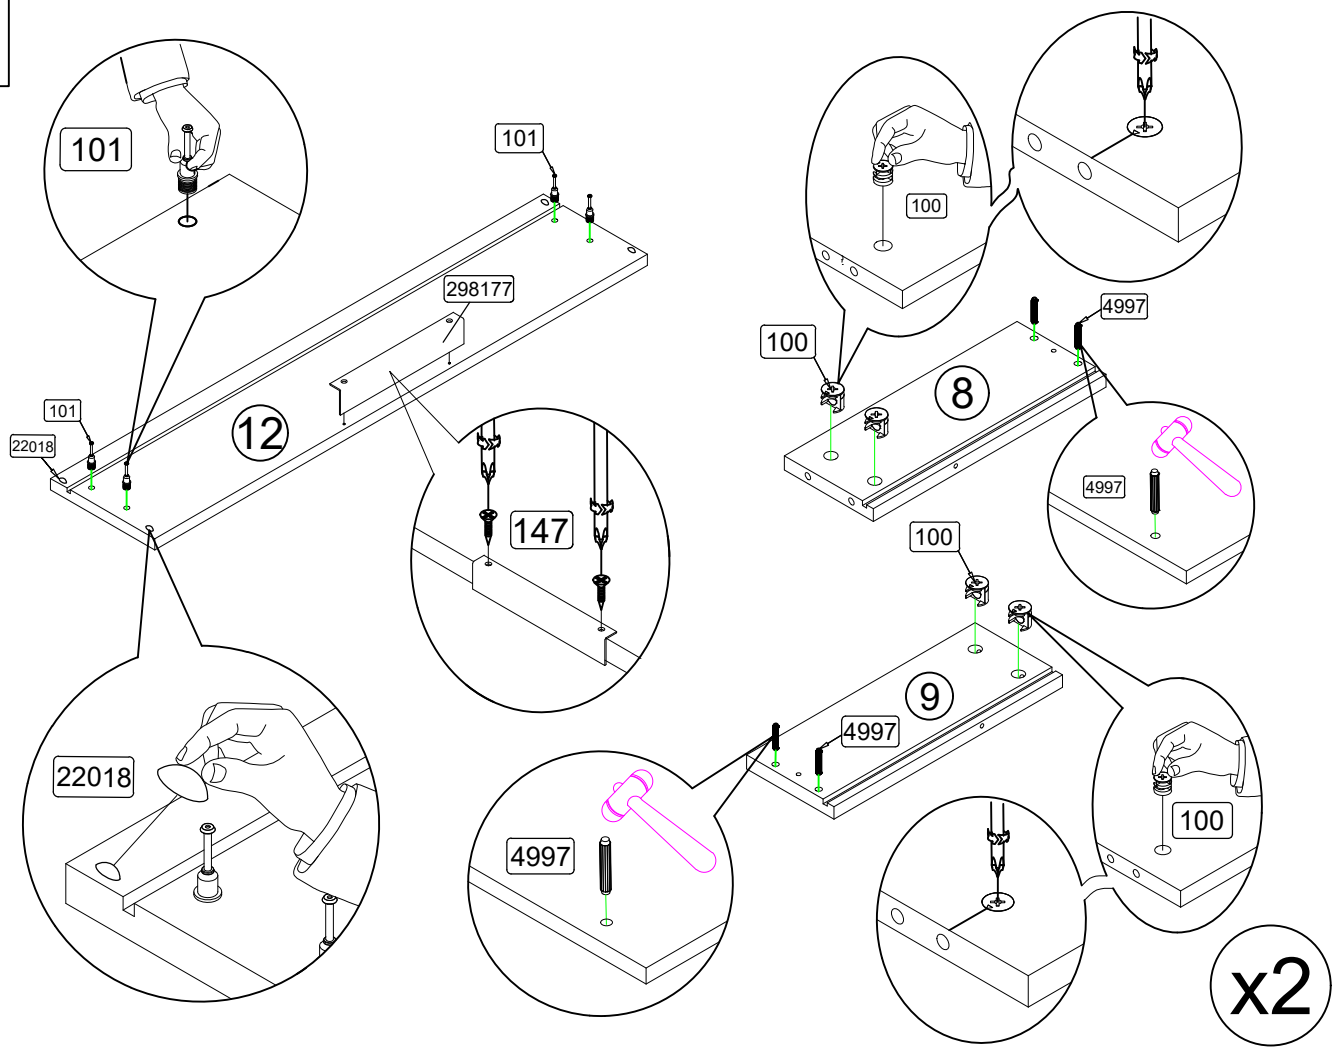

15

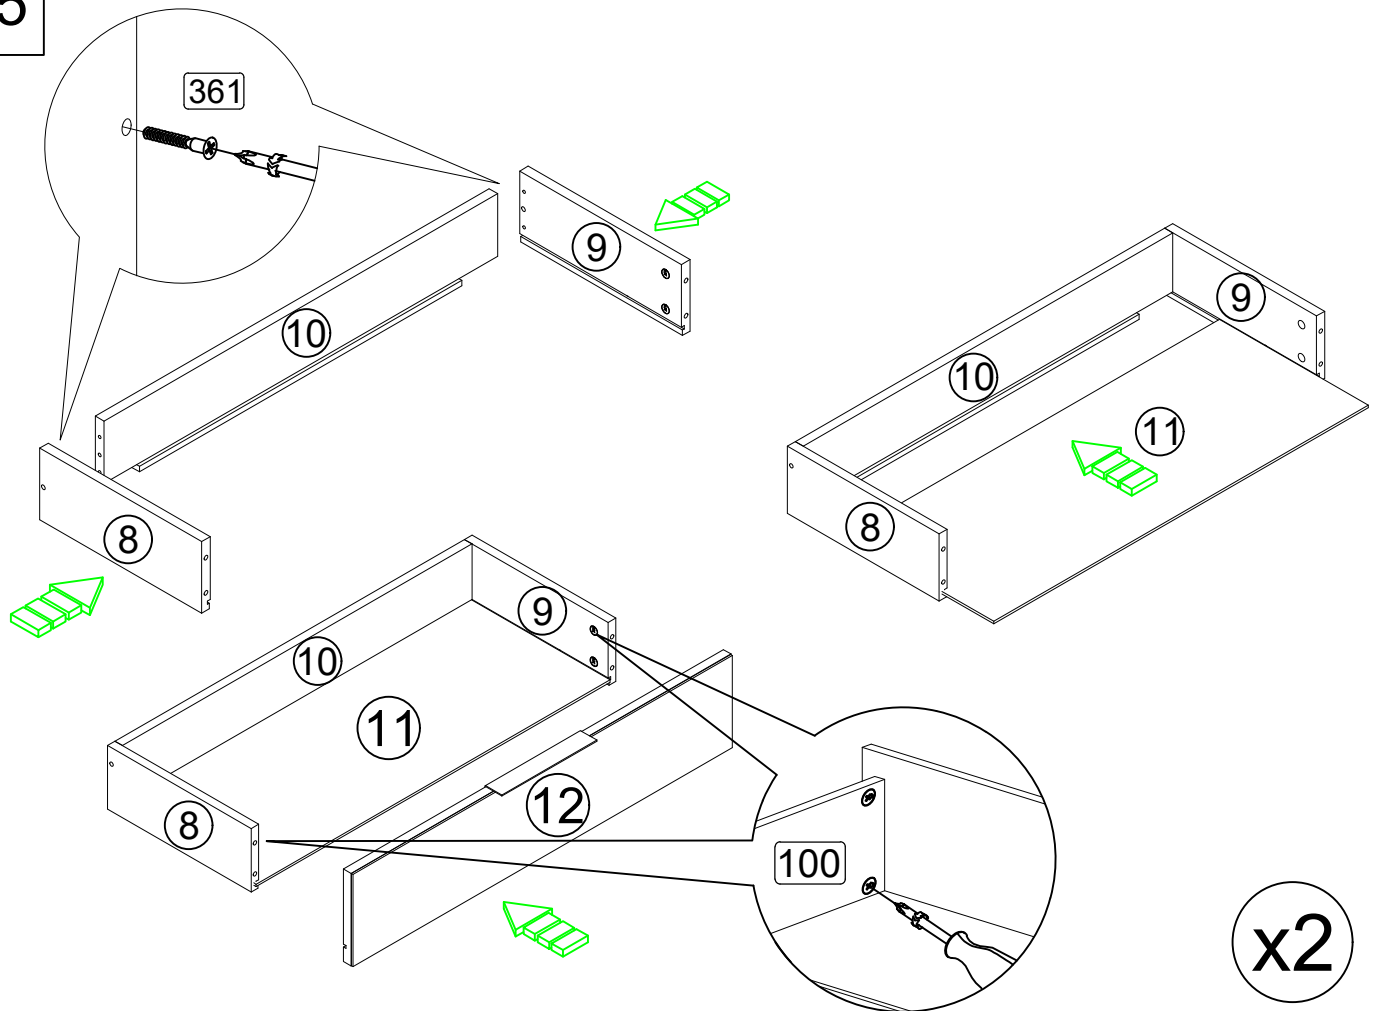

16

