

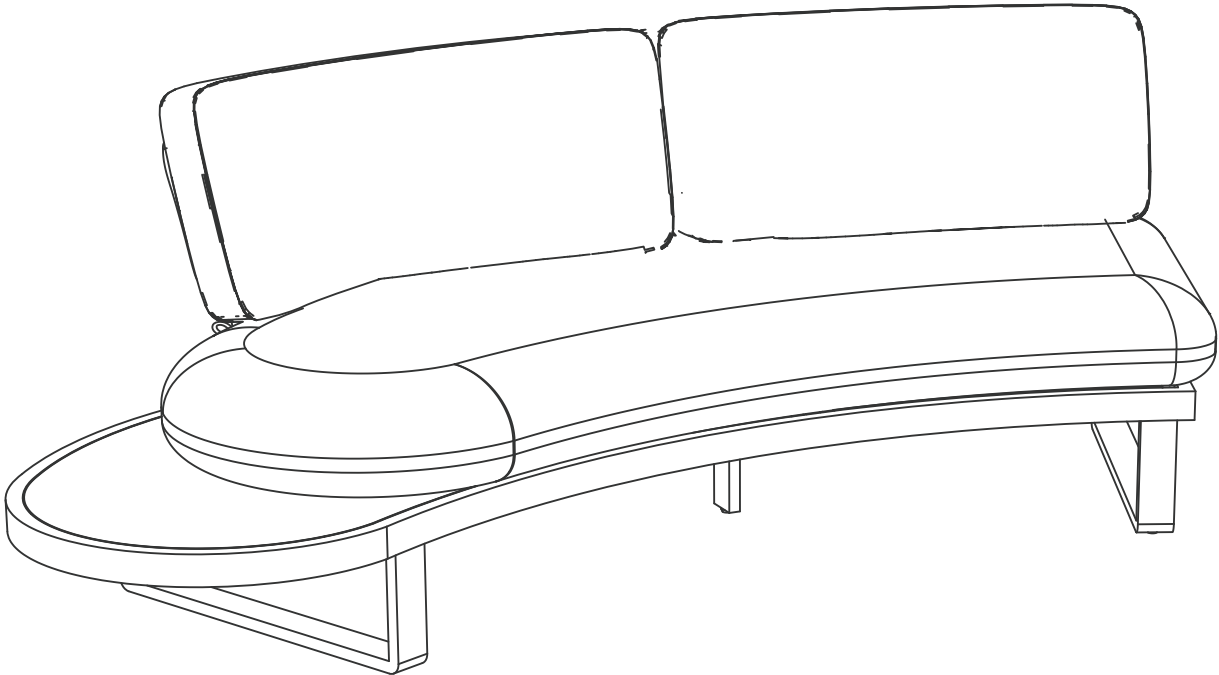


Assembly Instruction - 20080004-13

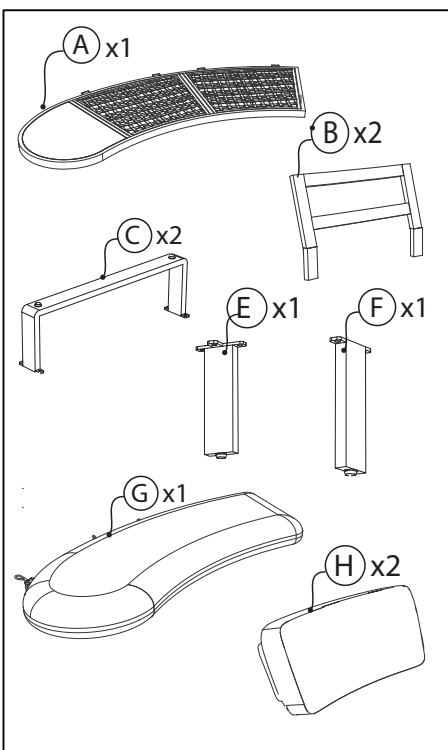


J	 Bolt- M6x20	x 17
K		x 17
L		x 17
M		x 1
S		x 1T


STEP 1

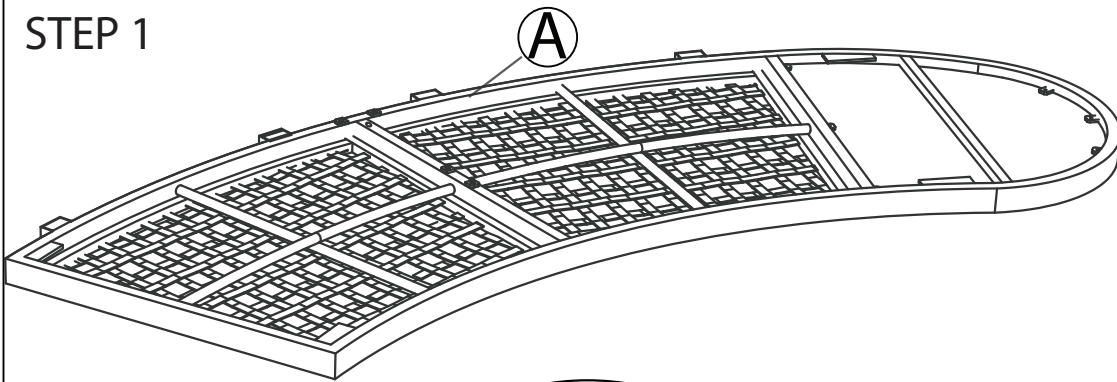


STEP 2

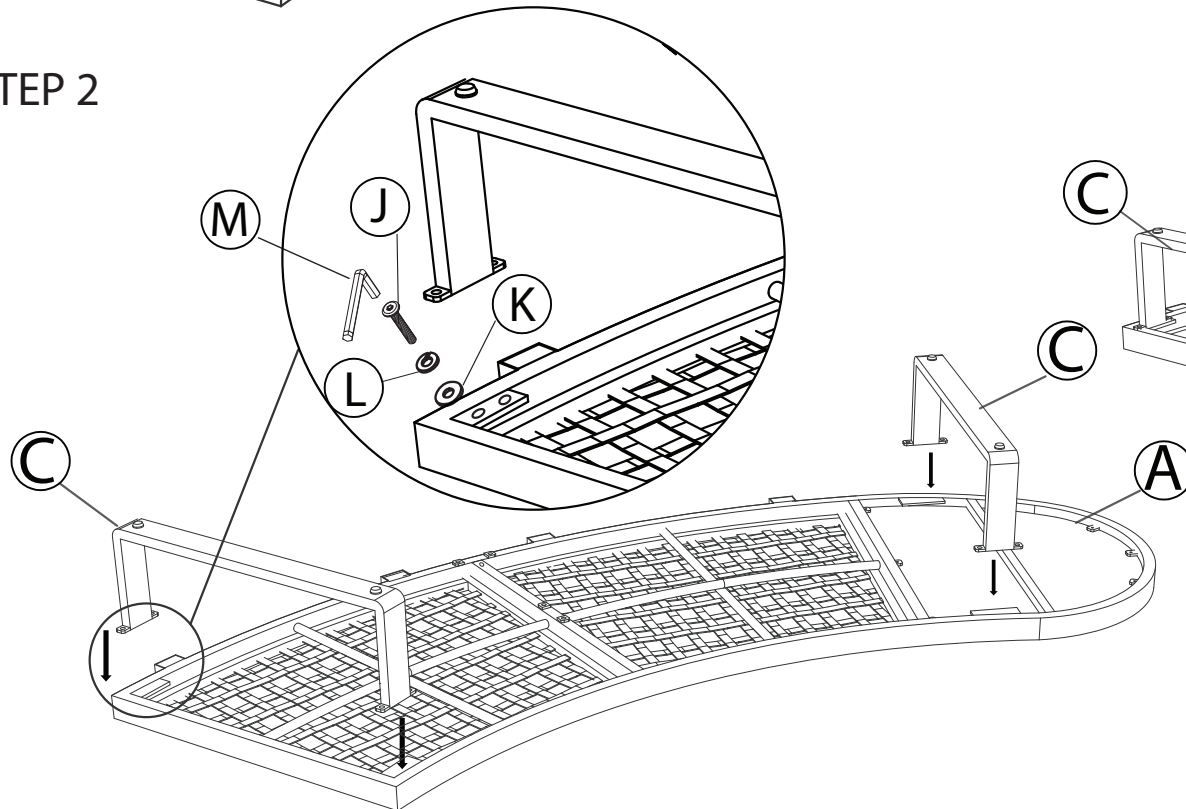


STEP 3

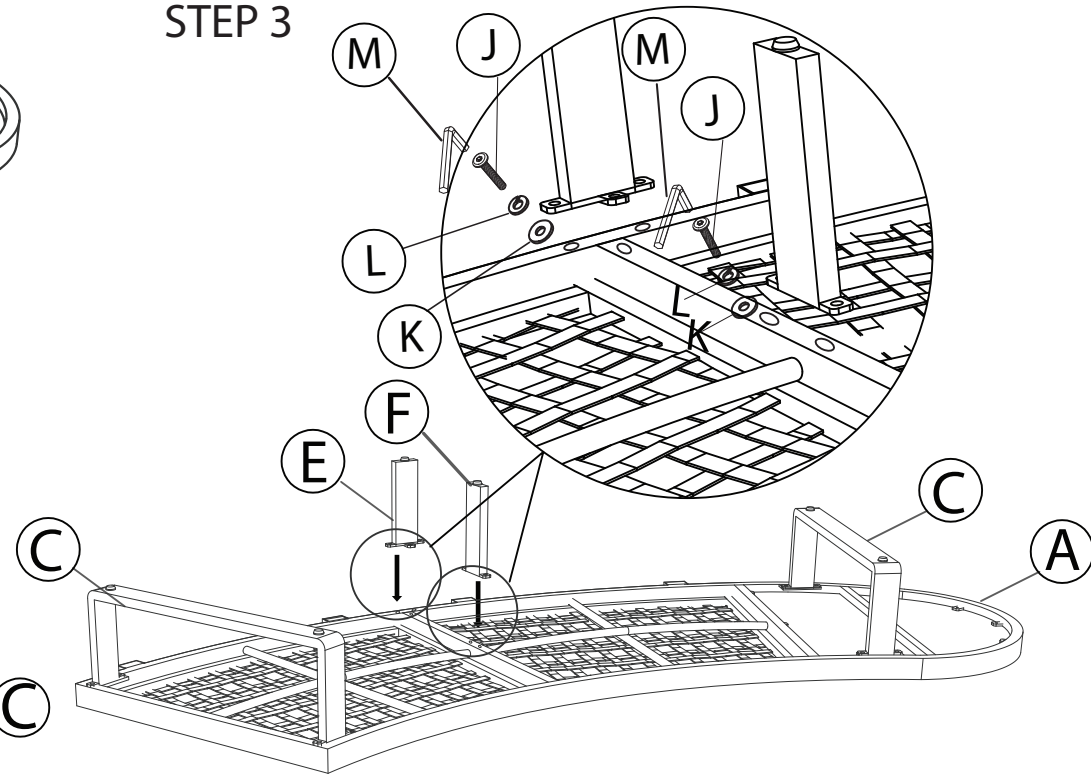


STEP 4

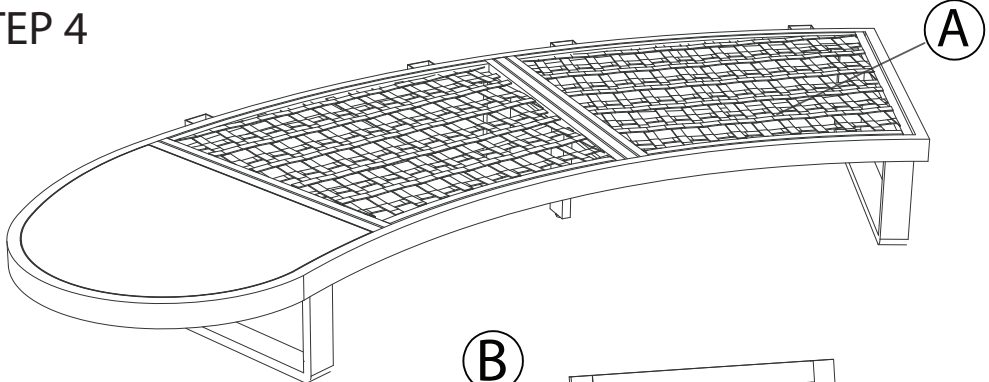


STEP 5

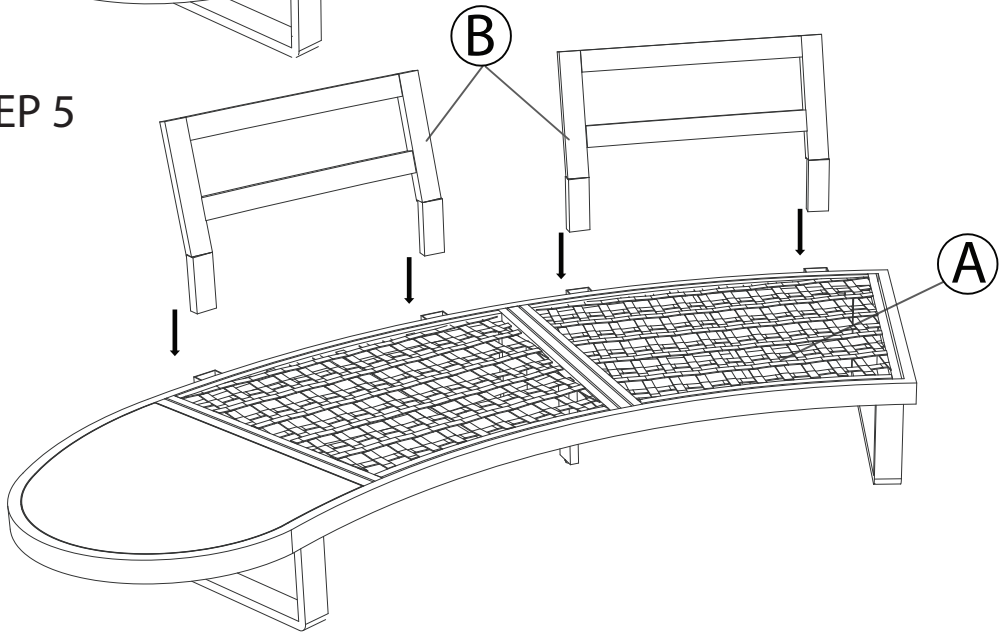


STEP 6

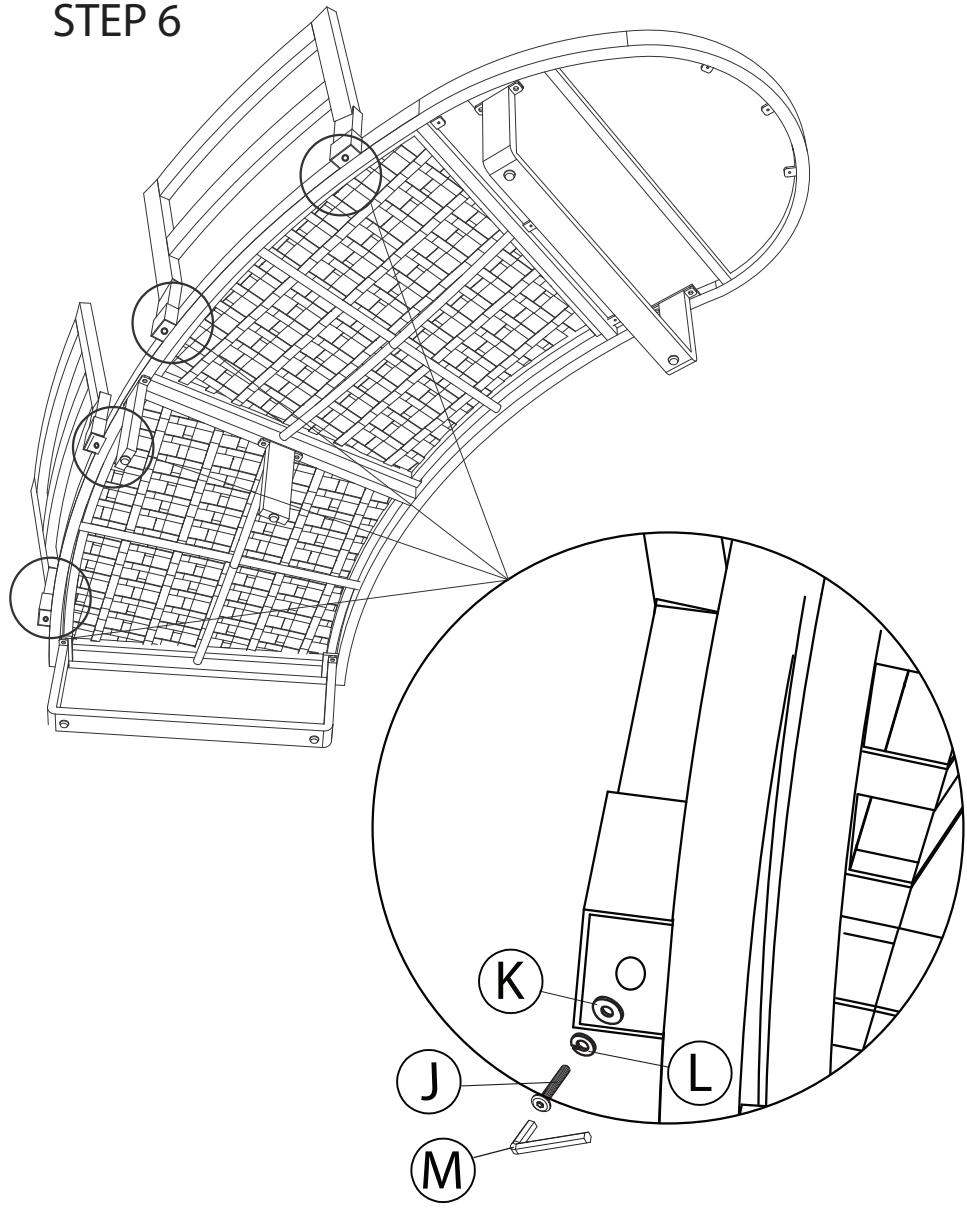

STEP 7

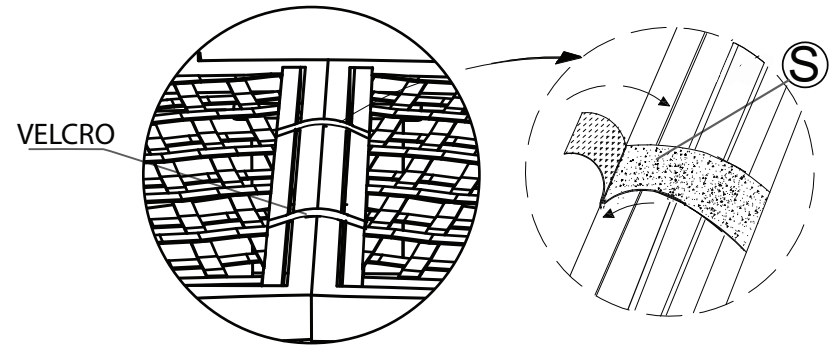


LEFT

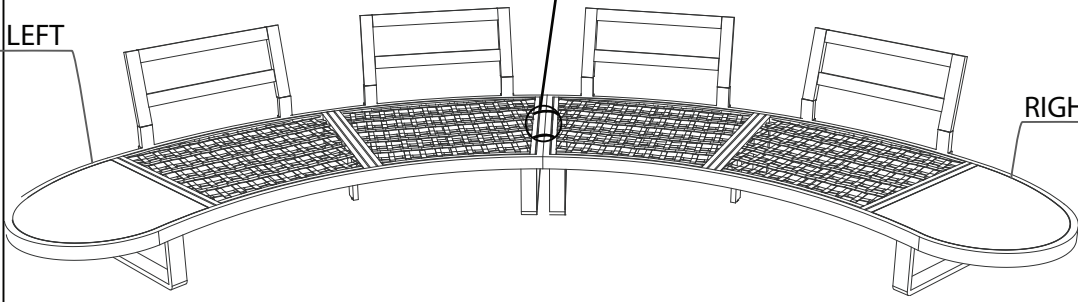

RIGHT


STEP 8

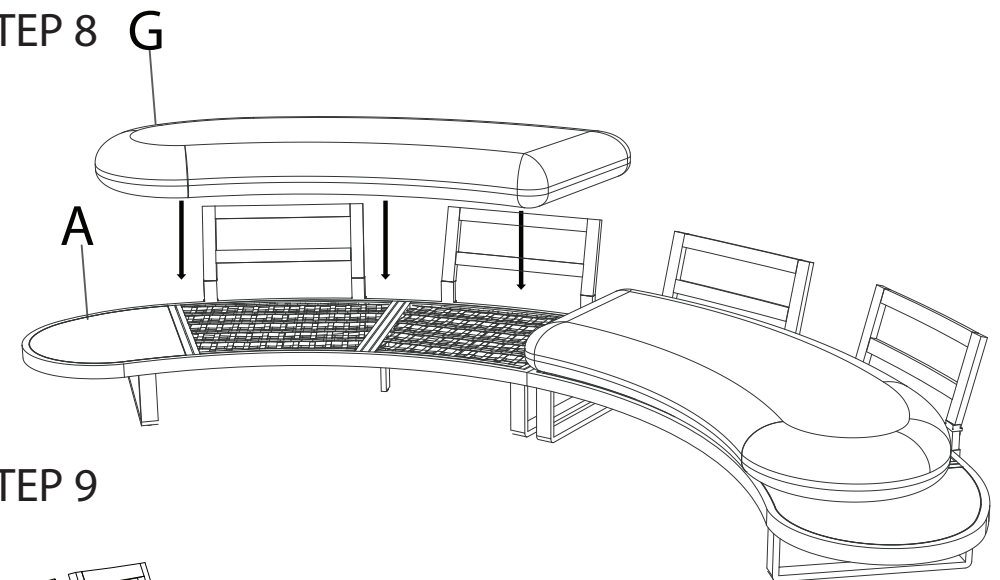

A

G

STEP 9

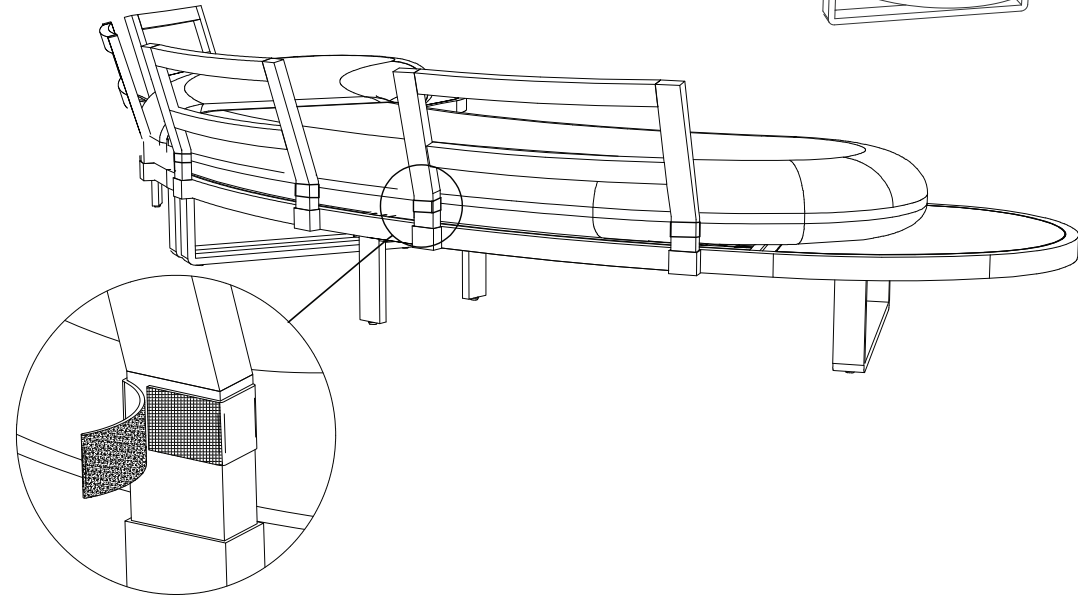

A technical line drawing of a curved sofa, viewed from the side. The sofa has a long, low backrest and a curved seat. Callout 'A' points to the front edge of the seat. Callout 'G' points to the backrest. Callout 'H' points to the top of the backrest. Two vertical arrows point downwards from the backrest to the seat, indicating the connection point for the backrest.

STEP 11

3 - 5mm

12x

Finished

5/5