

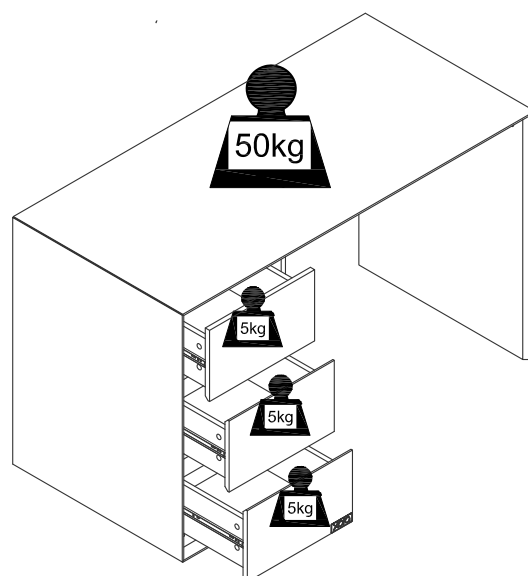
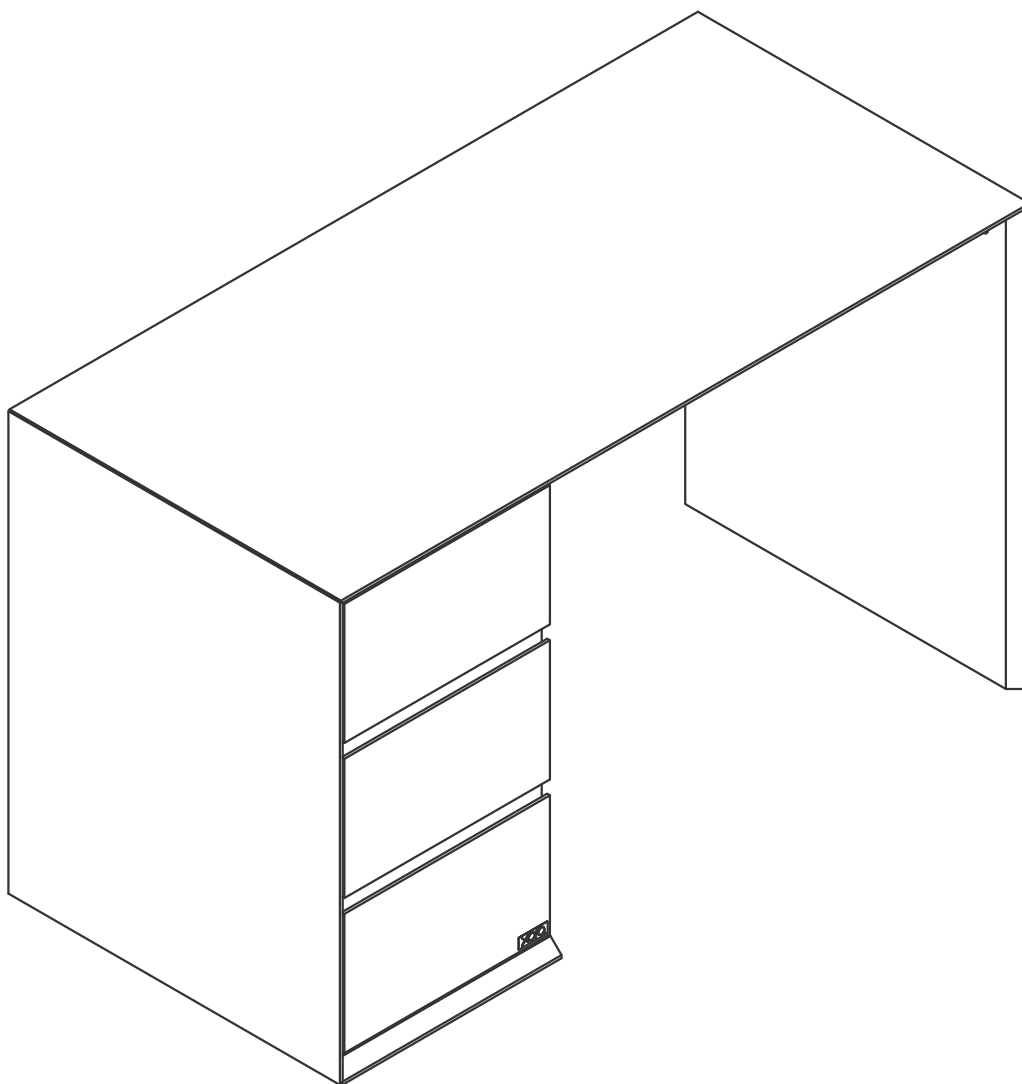
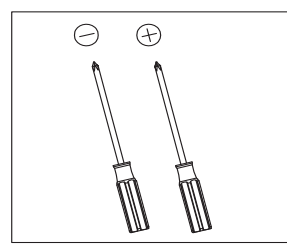
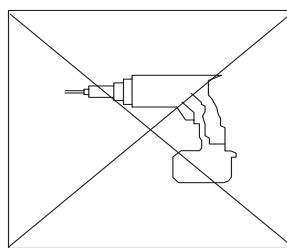
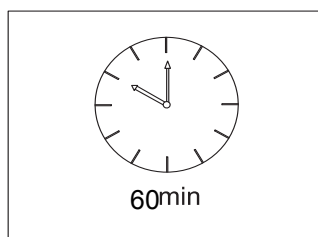


Assemble instruction


27980019/01

RICCI

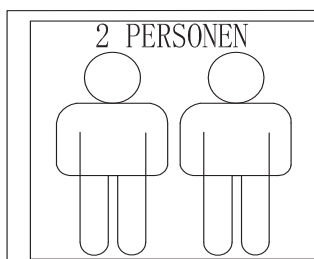



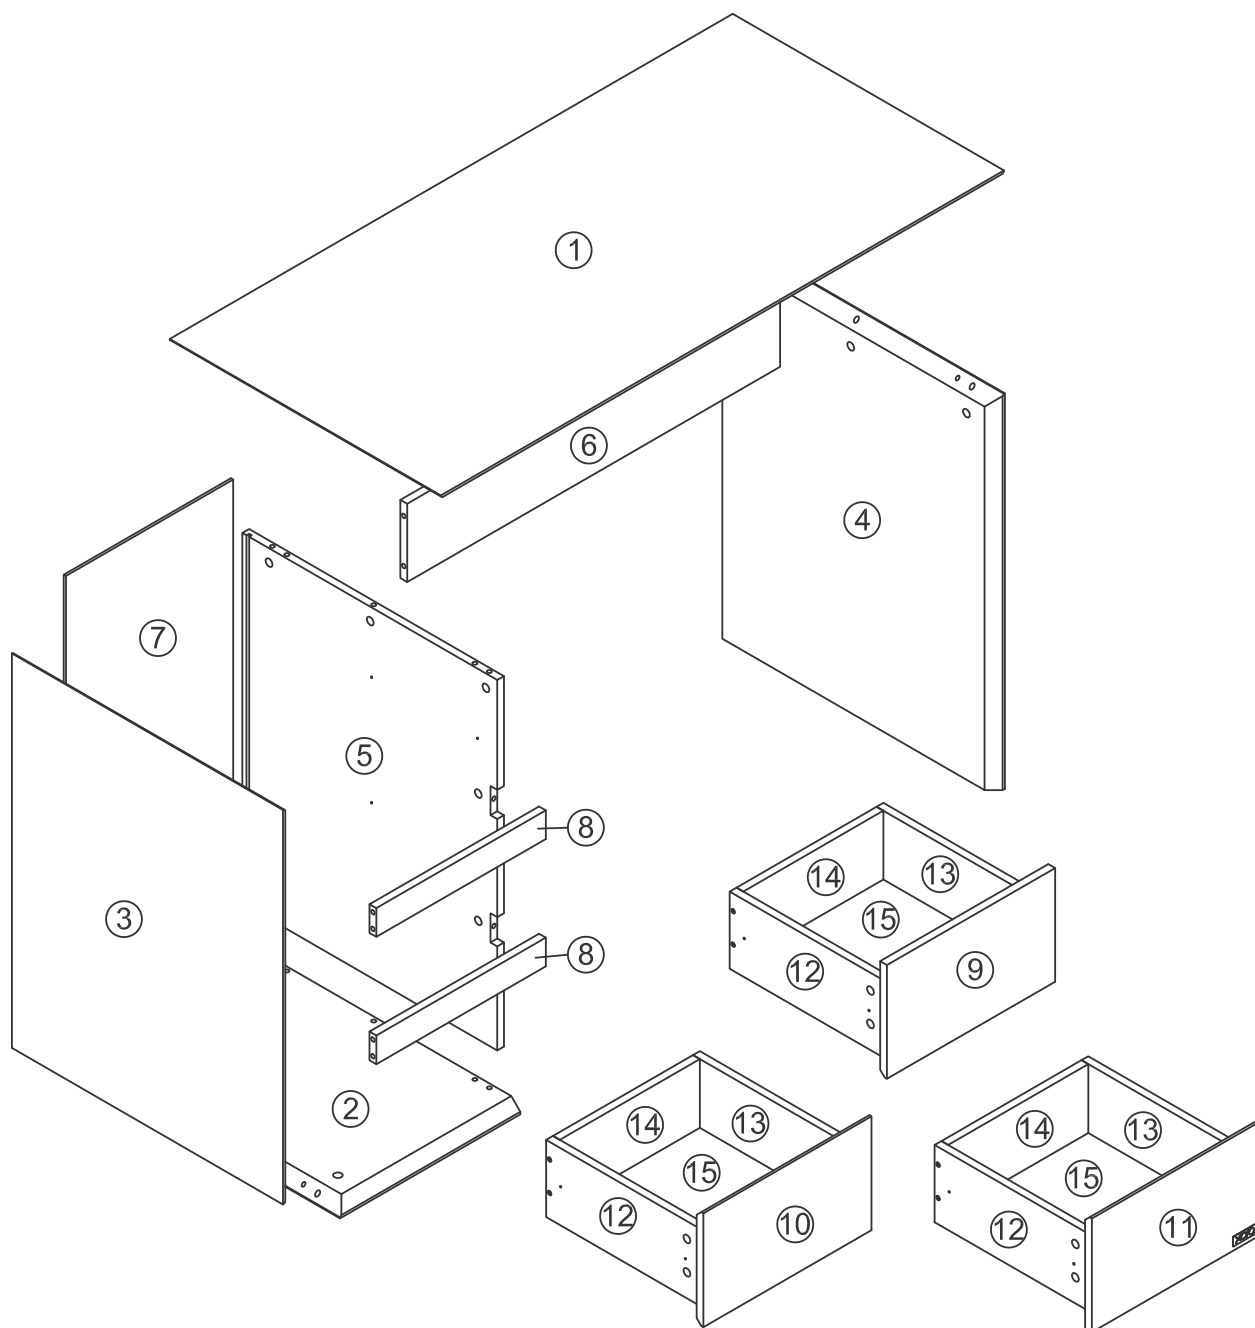


A	x28	B	x46	C	x6	D	x6	E	x3	F	x30	G	x1	H	x28
M6*35mm		Ø15mm		Ø6*25mm		Ø8*30mm		7*50mm		Ø3.5*14mm		M4			
I	x6	J	x6	K	x12	L	x6	M	x6	N	x9	O	x3		
				Ø4*35mm		340mm		340mm							

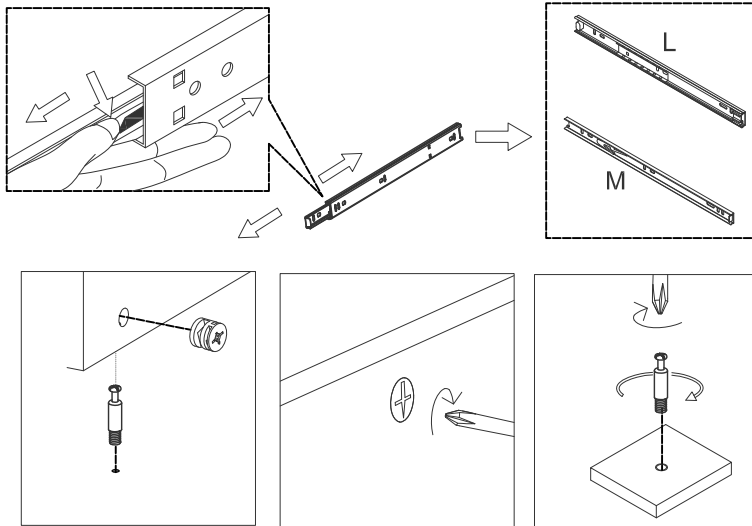


1

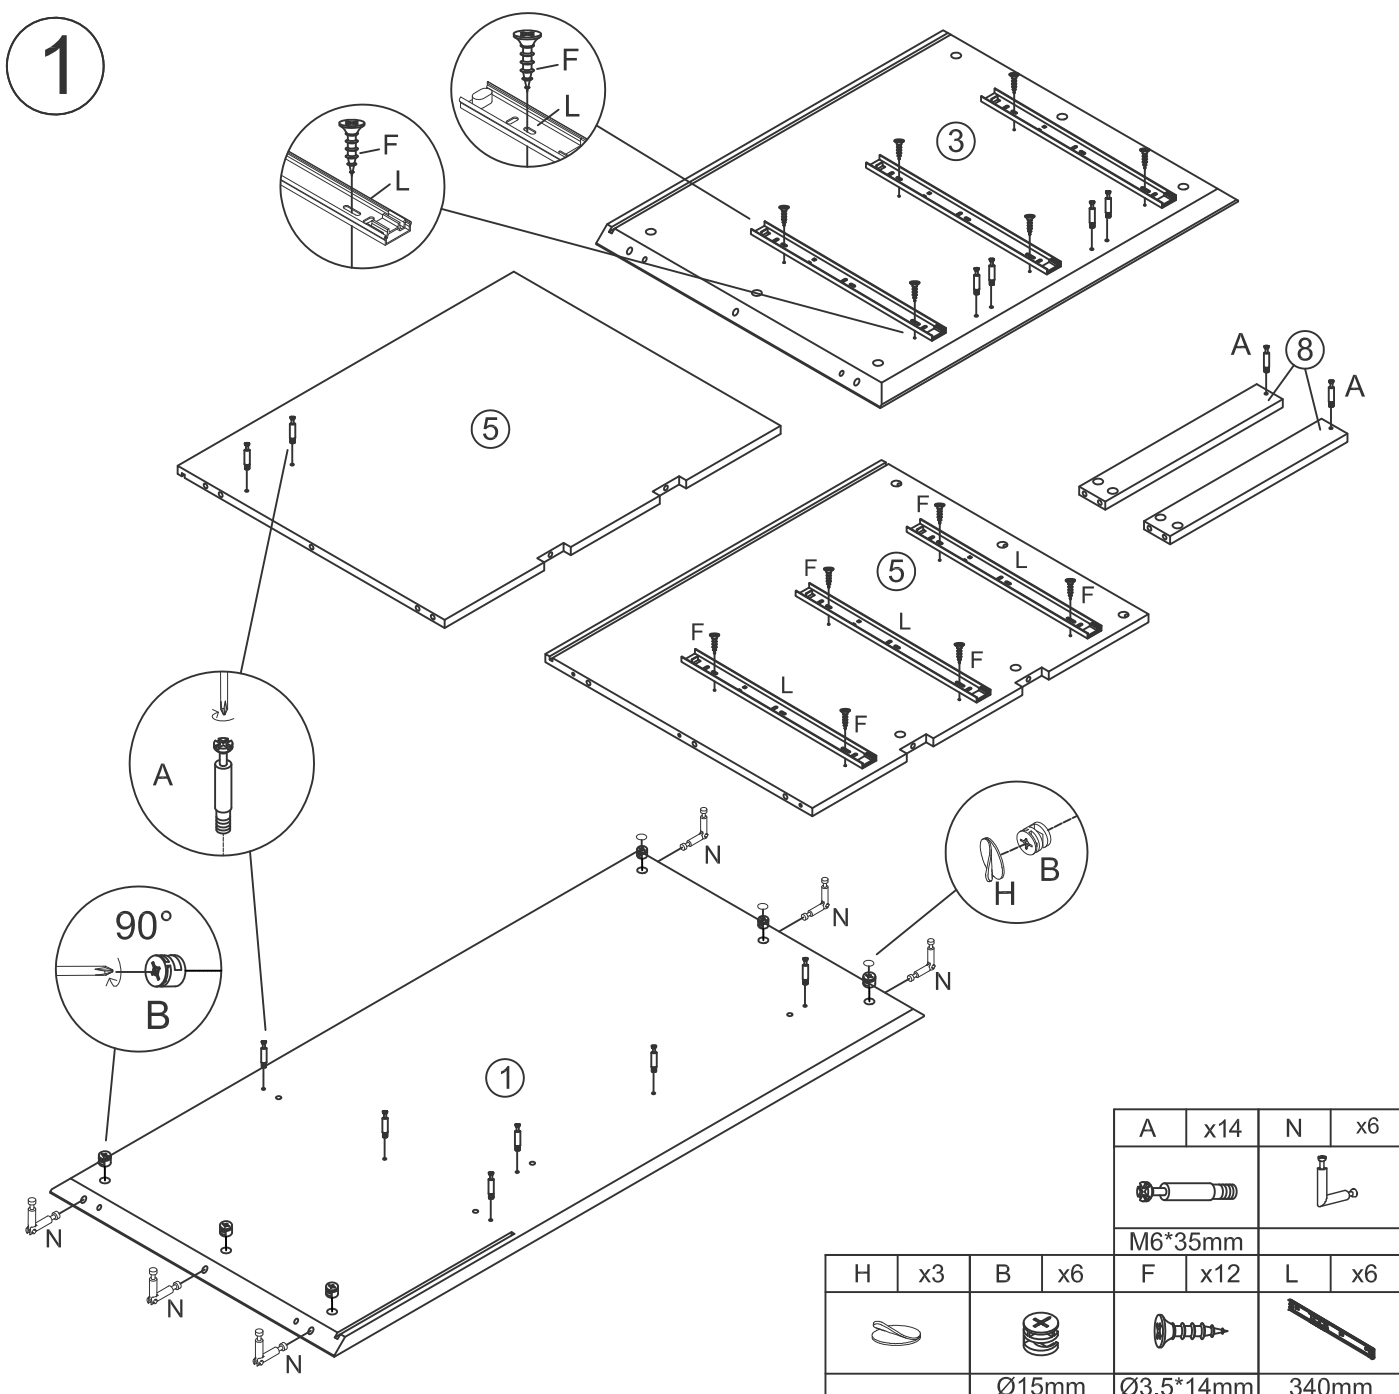


				A	x14	N	x6
							
				M6*35mm			
H	x3	B	x6	F	x12	L	x6
							
		Ø15mm		Ø3.5*14mm		340mm	

2

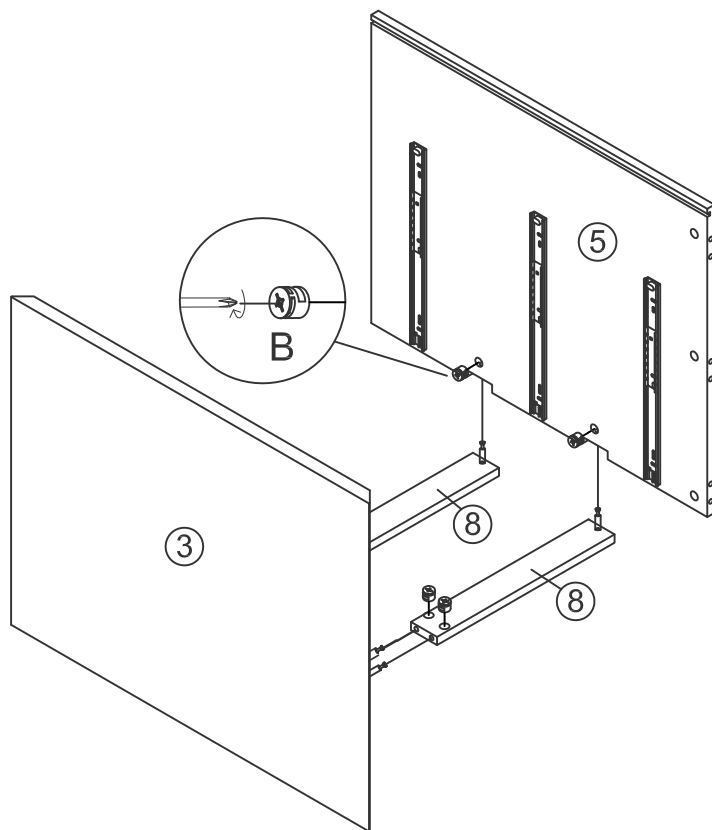


B	x6
	
Ø15mm	

3

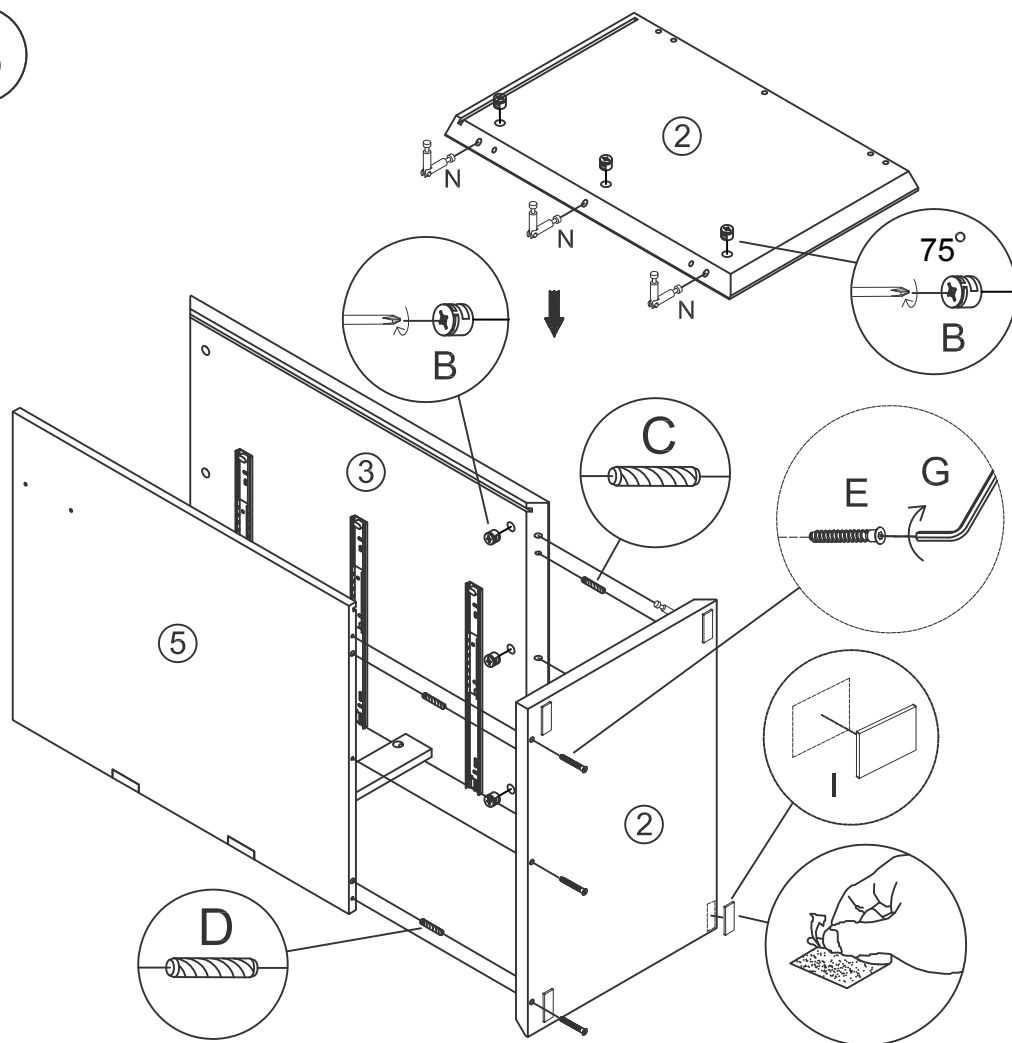



		D	x2
			
		Ø8*30mm	
N	x3	B	x6
			
		Ø15mm	
C	x2	G	x1
			
Ø6*25mm		M4	
E	x3	I	x4
			
7*50mm			

4

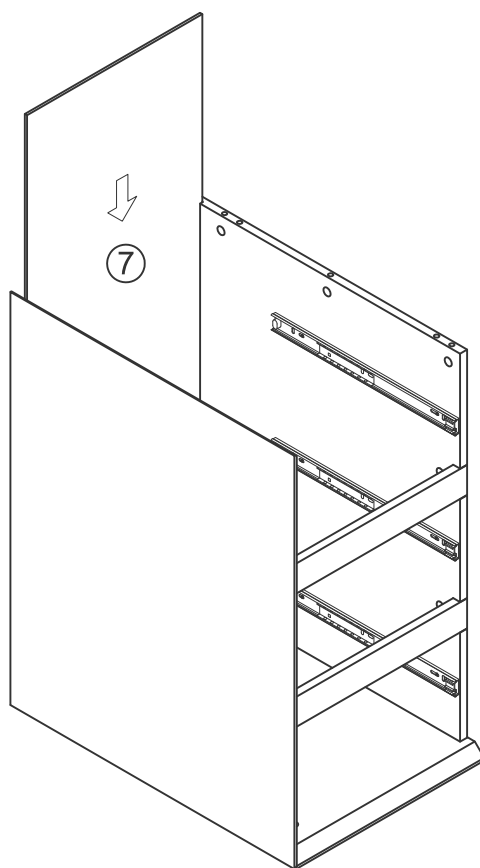


5

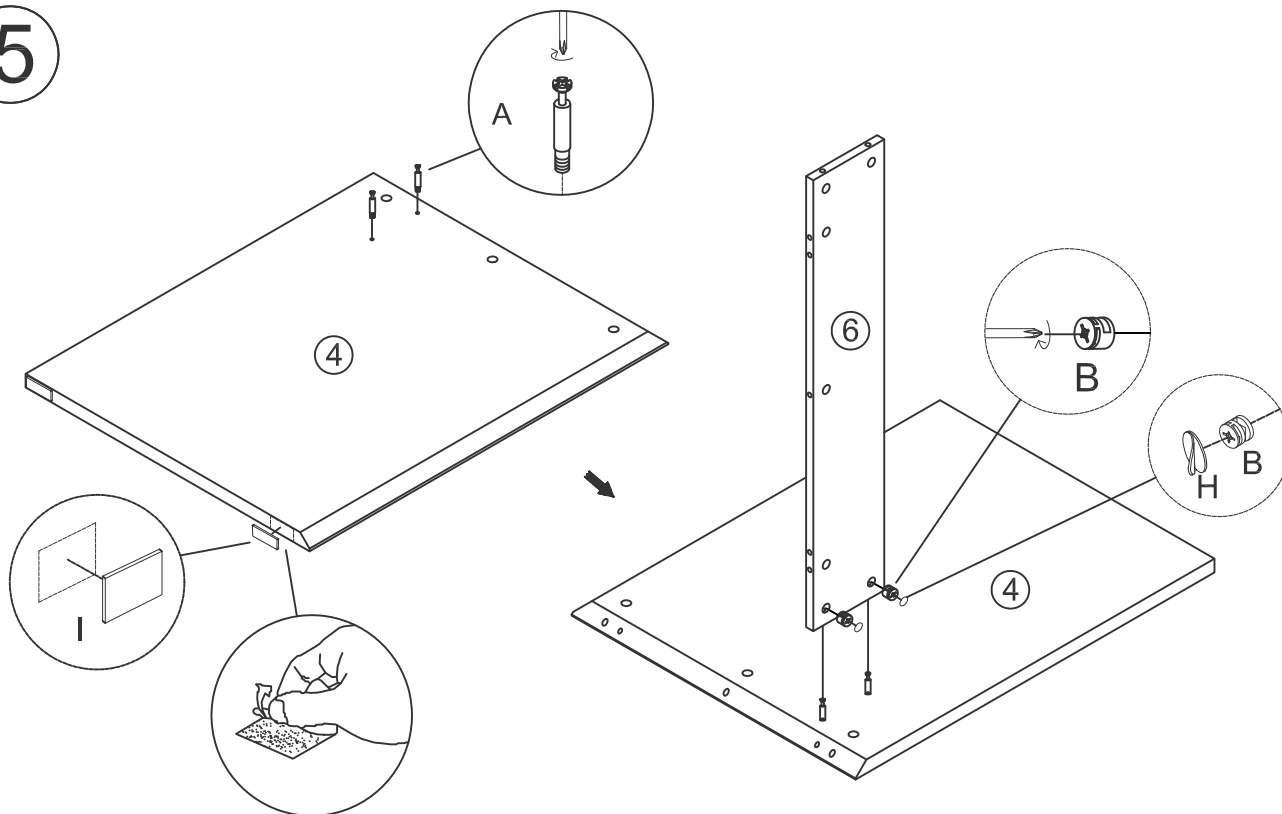


A	x2	I	x2	H	x2	B	x2
							
M6*35mm						Ø15mm	

6

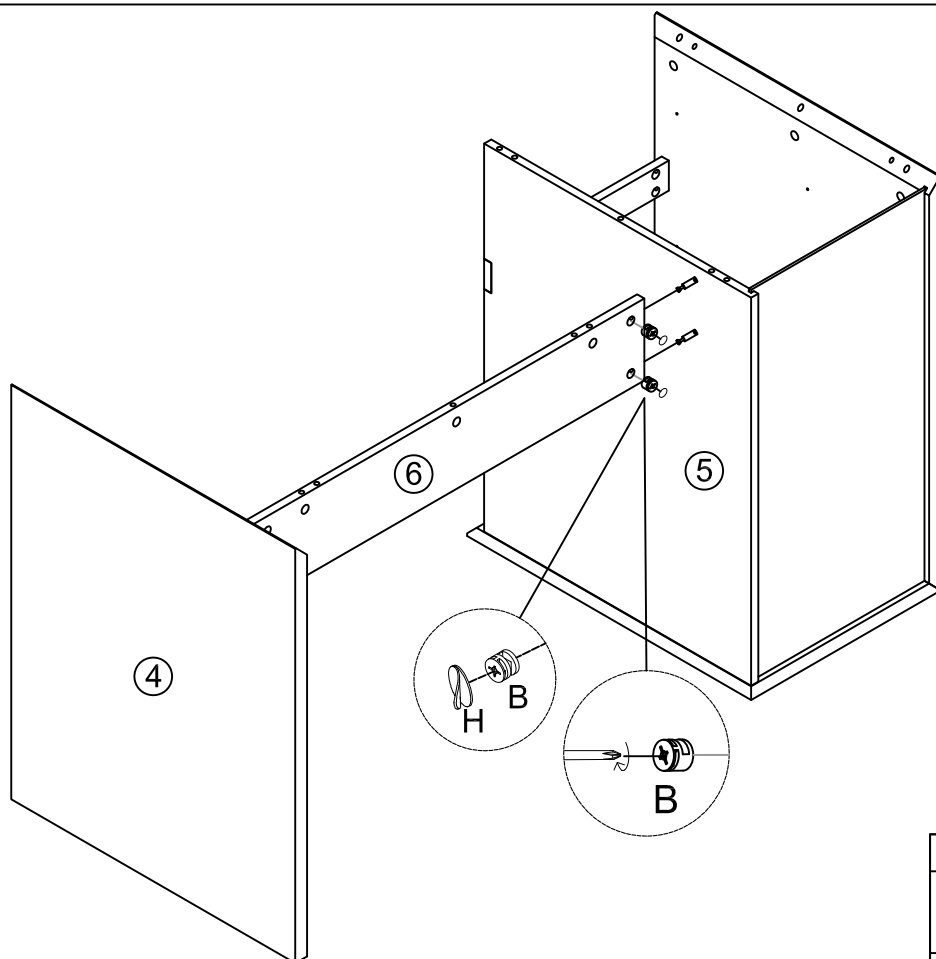


H	x2	B	x2
			
		Ø15mm	

7

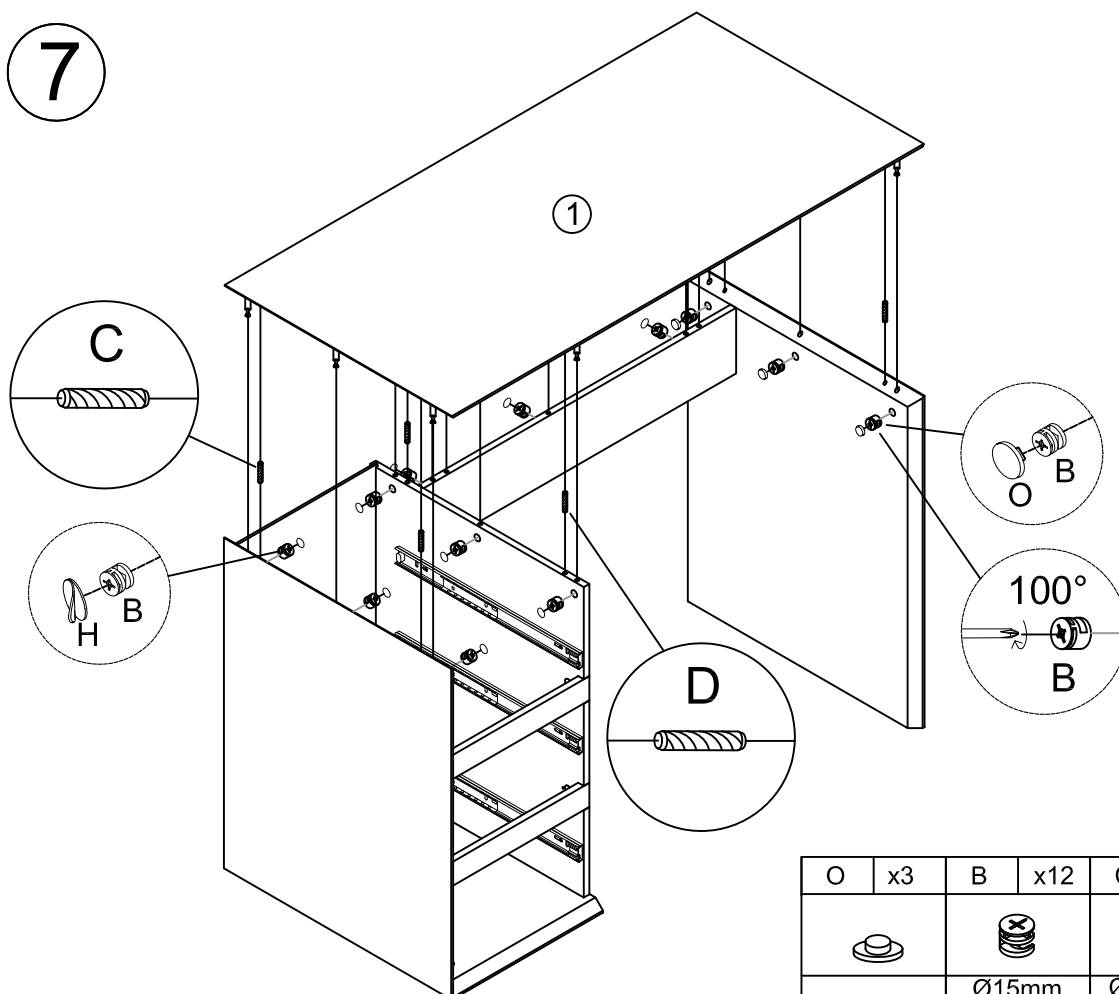


						D	x4
							
						Ø8*30mm	
O	x3	B	x12	C	x4	H	x9
							
		Ø15mm		Ø6*25mm			

8

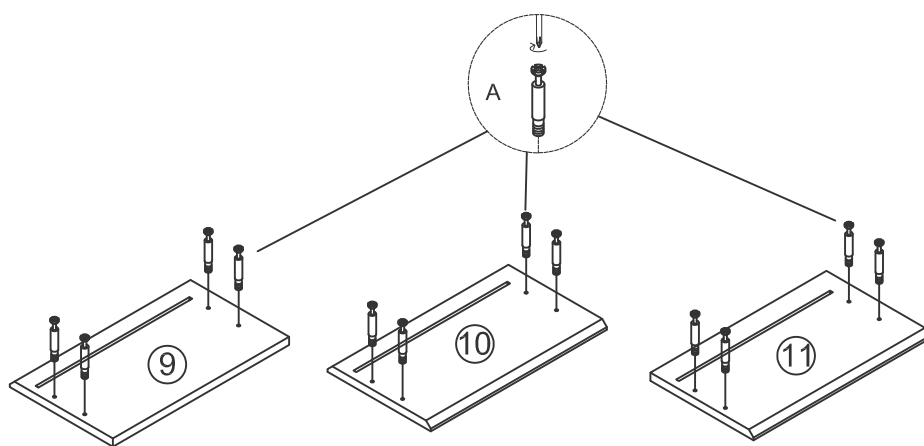


A	x12
	
M6*35mm	

9

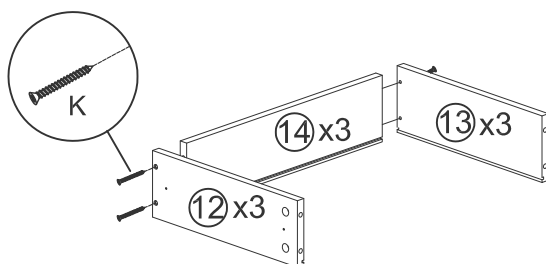


K	x12
	
Ø4*35mm	

10

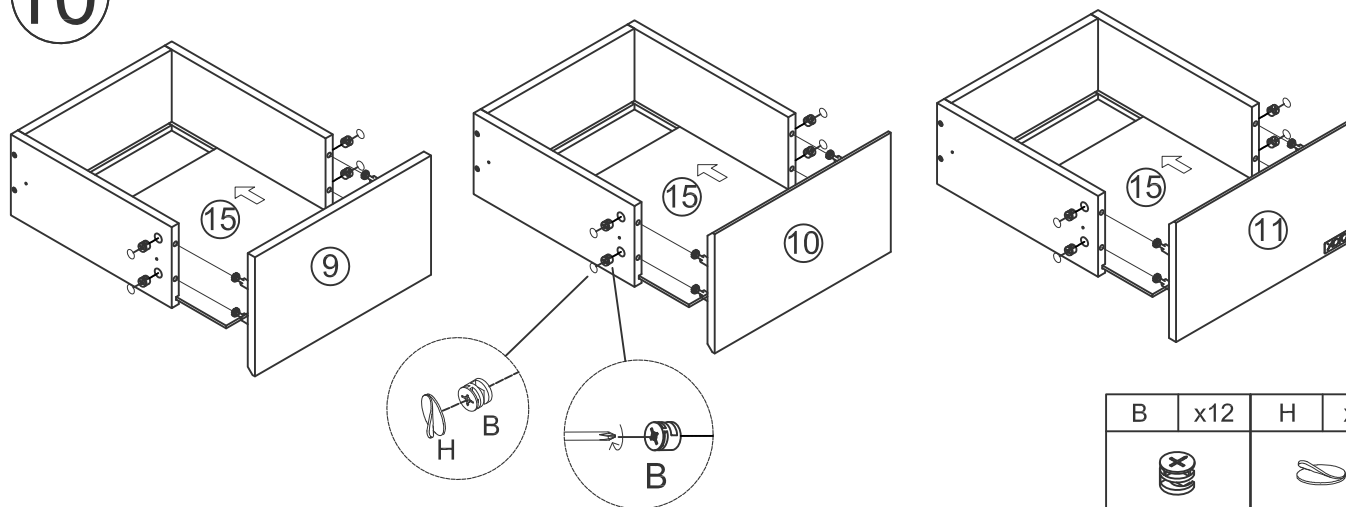




B	x12	H	x12
			
Ø15mm			

11

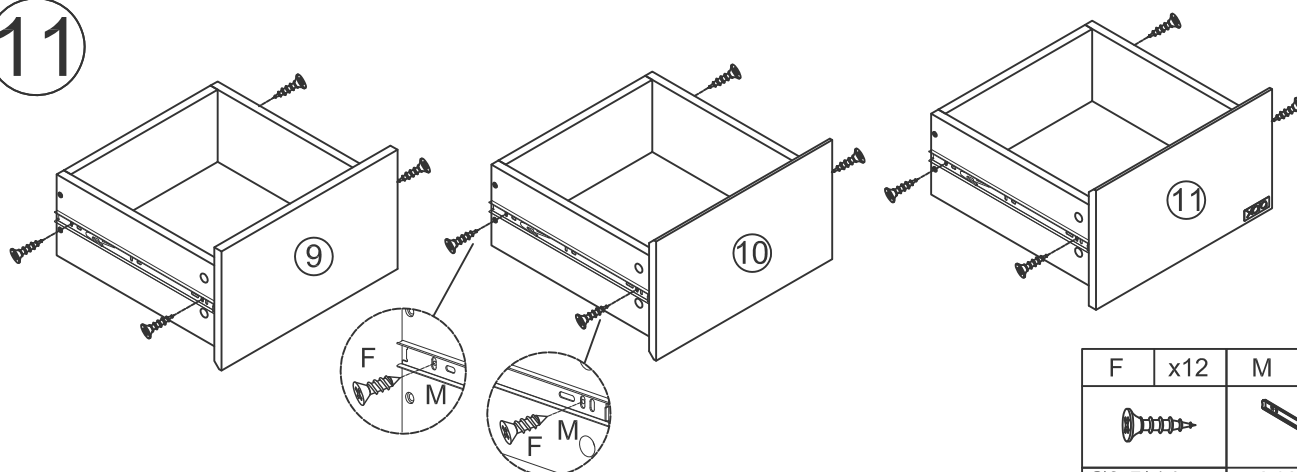


F	x12	M	x6
			
Ø3.5*14mm		340mm	

12

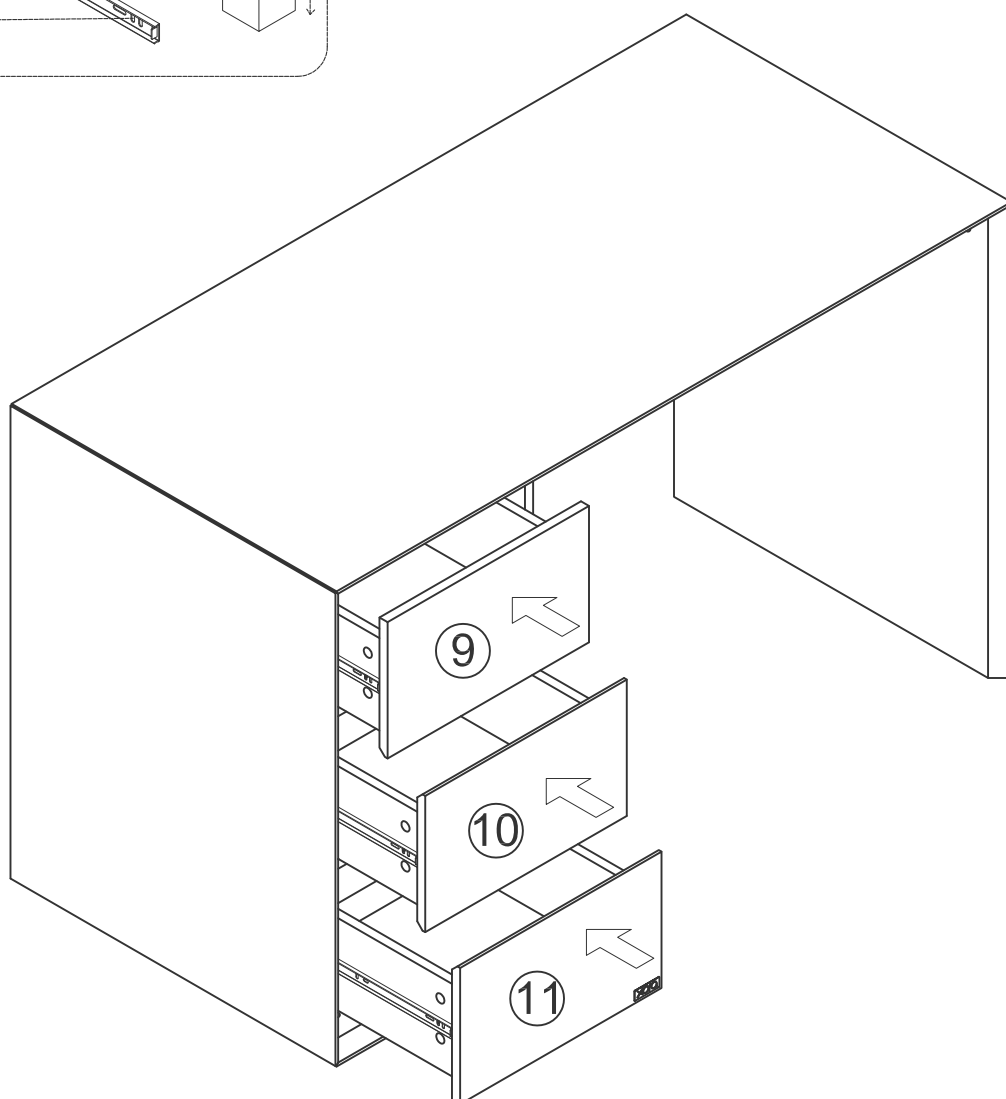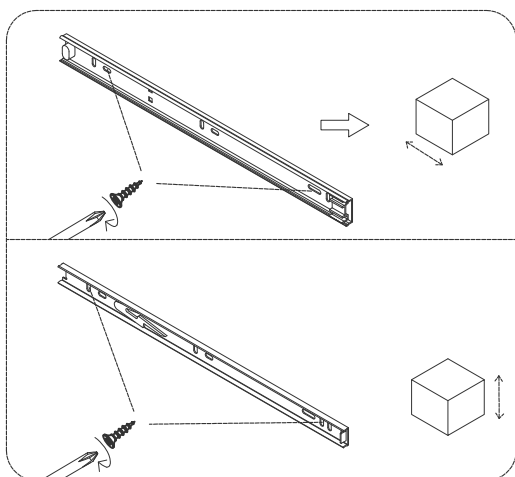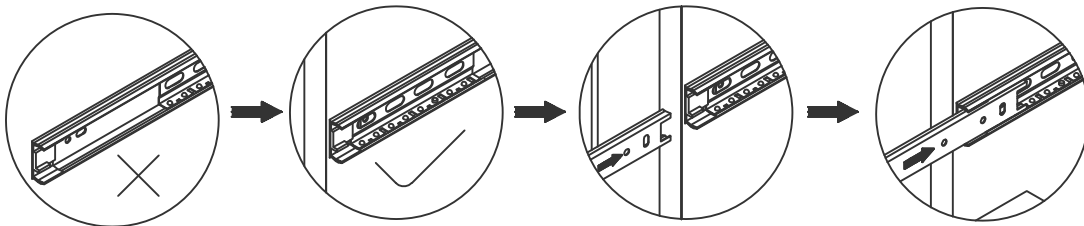

13

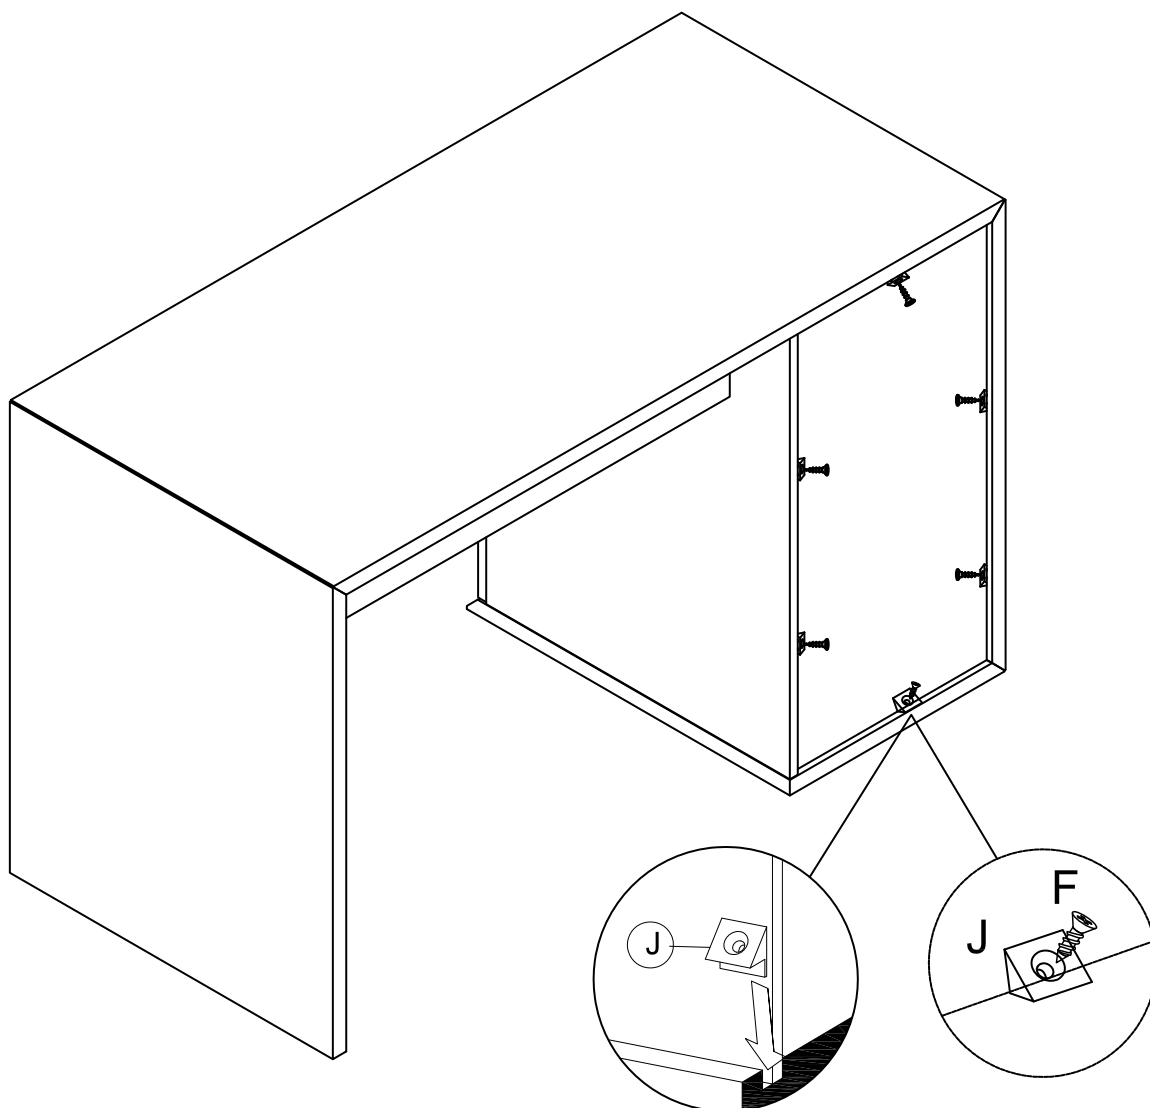

F	x6	J	x6
			
Ø3.5*14mm			