





01

ASSEMBLY INSTRUCTION


27290010/01

XXXLutz KG
Roemerstrasse 39
AT-4600 Wels
Austria

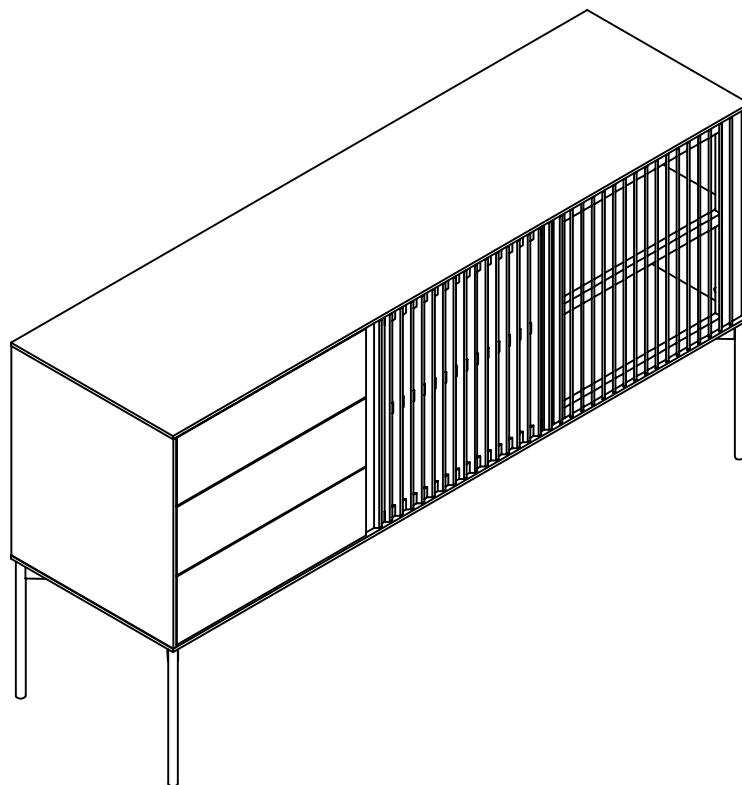


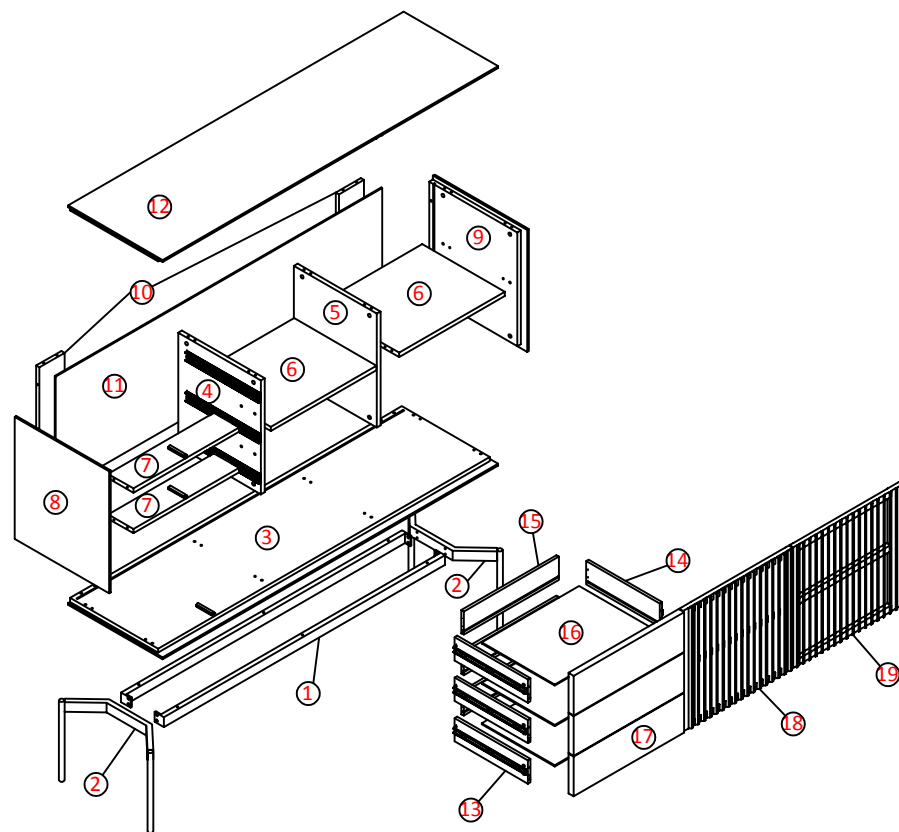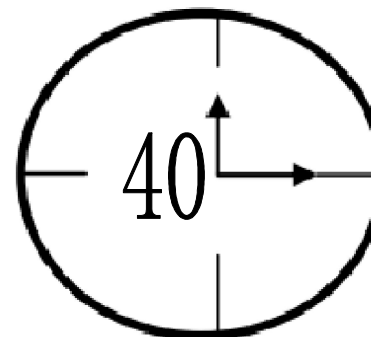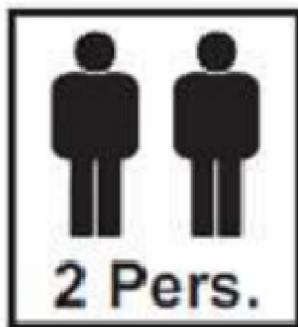


 Ax44 Φ15*12	 Bx40 M6*32	 Cx20 Φ8*30	 Dx8	 Ex44 Φ20
 Fx6 M6*55	 Gx2 Φ35*9	 Hx34 M3.5*14	 Ix5	 Jx3 J=350
 Kx8 M8*20	 Lx1 #4	 Mx1 #5	 Nx12 Φ12*10	 Ox12 M6*25
 Px12 M3.5*25	 Qx2 Ø6*68	 Rx2 Ø8*50	 Sx2 Φ35*9	 Tx24 M3.5*12
 Ux6 Φ6*16*2.0	 Xx4	 Yx12 M3*16	 Zx2	

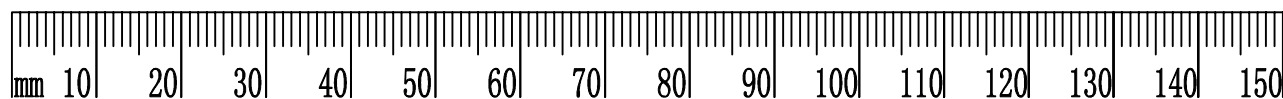


03

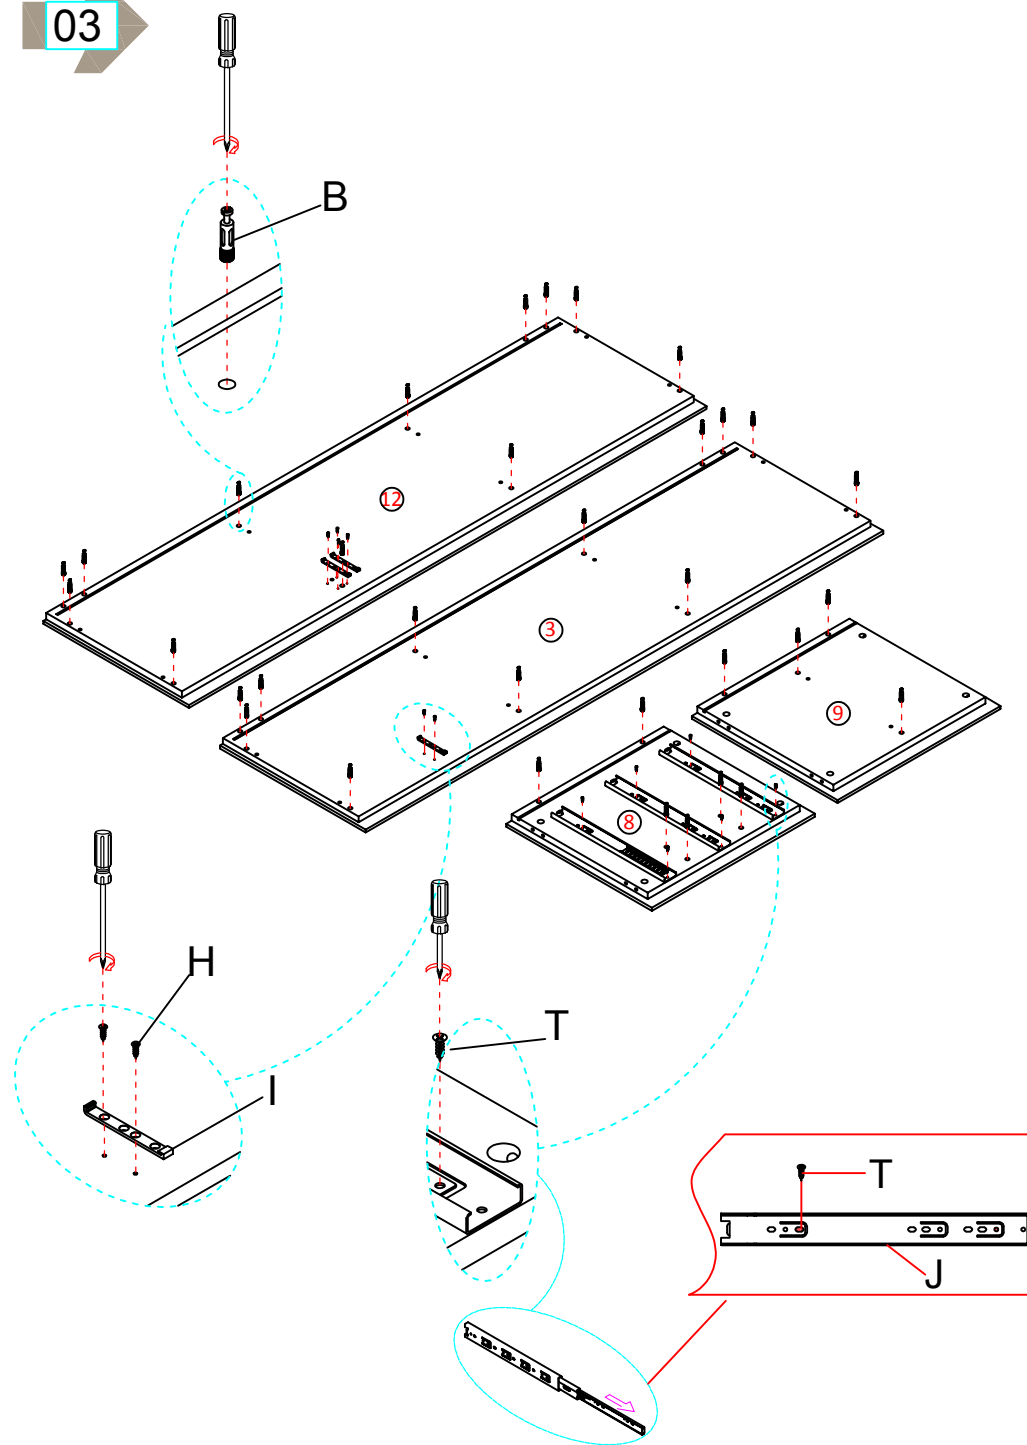


04

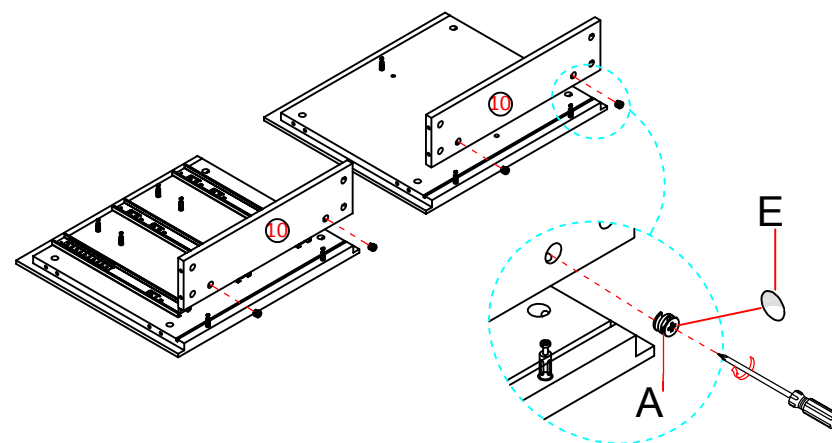


05

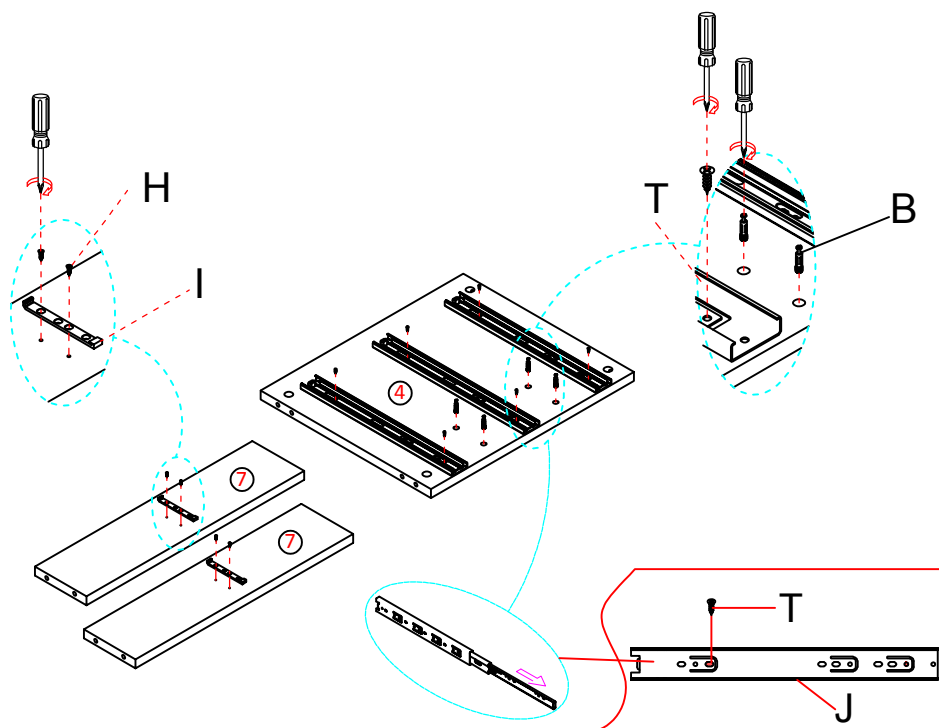


06

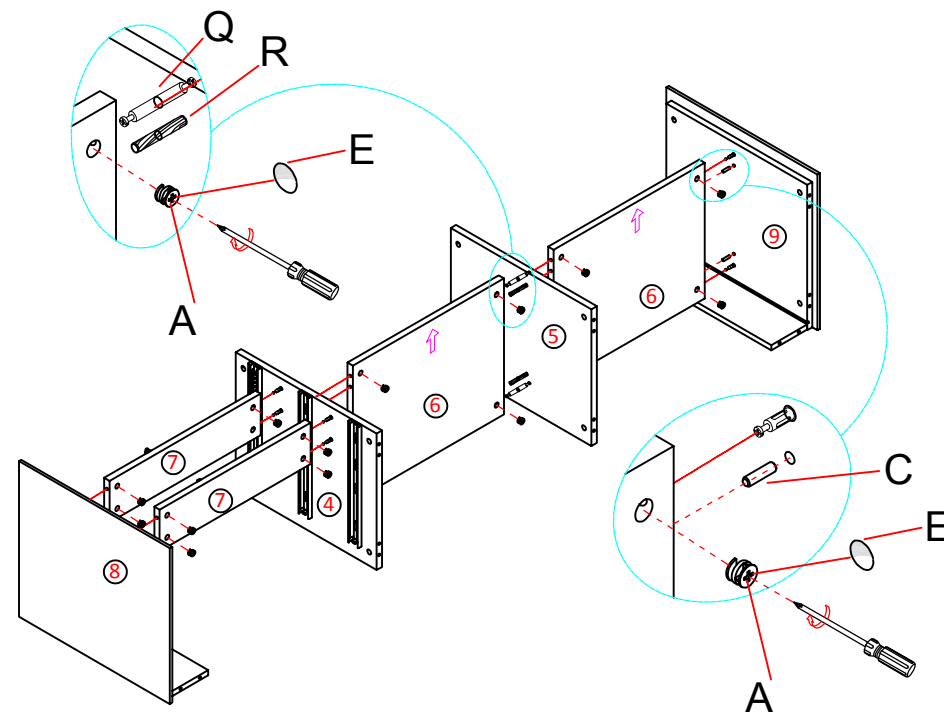


07

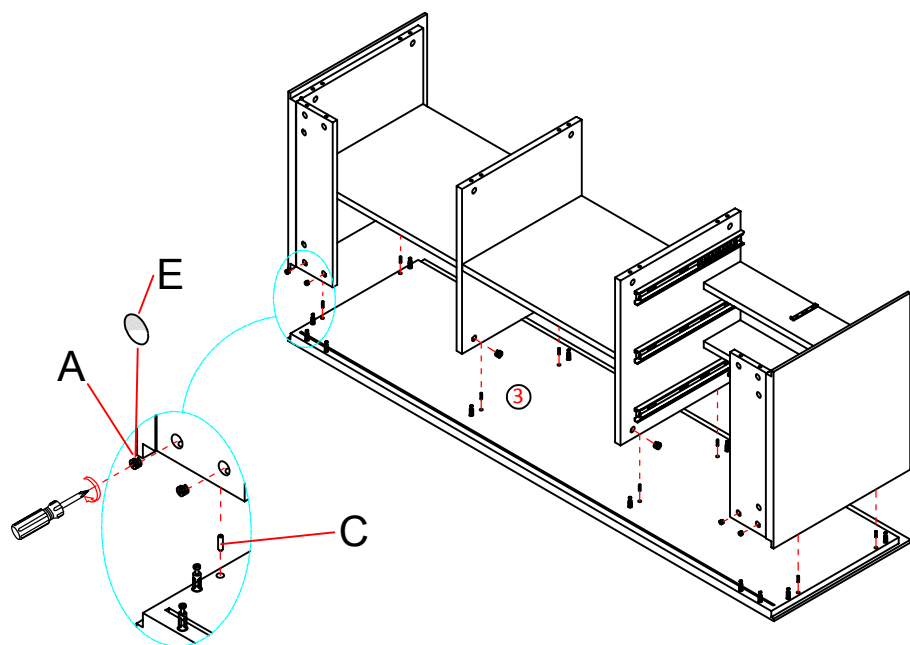


08

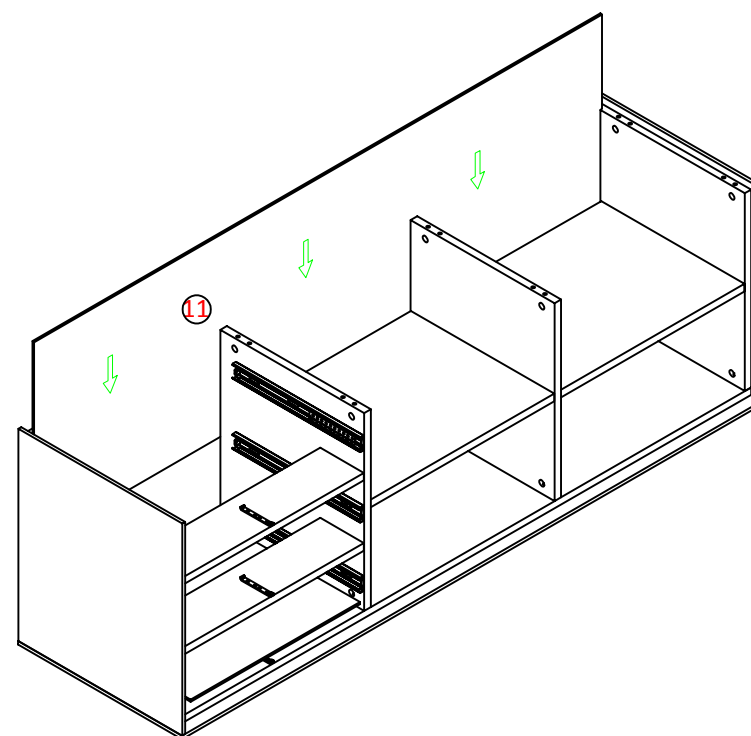


09

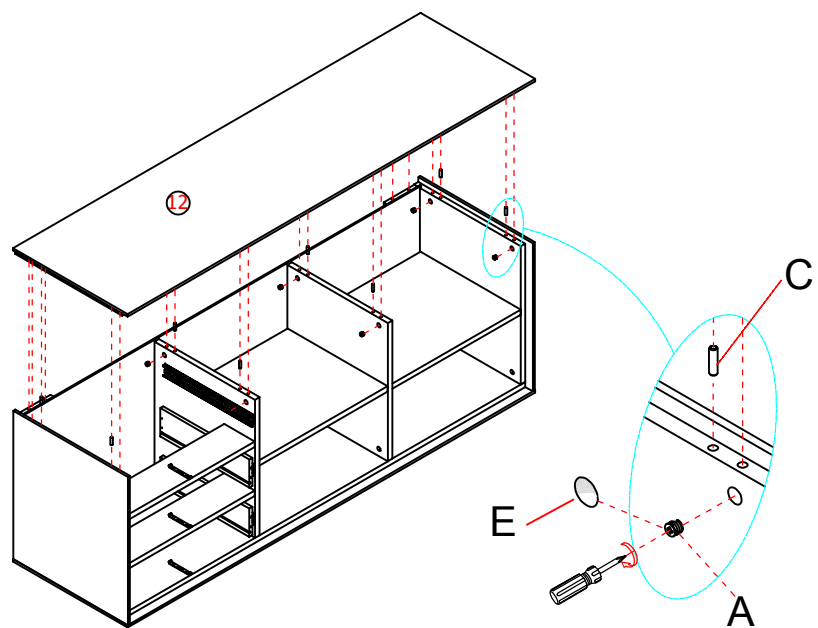

10

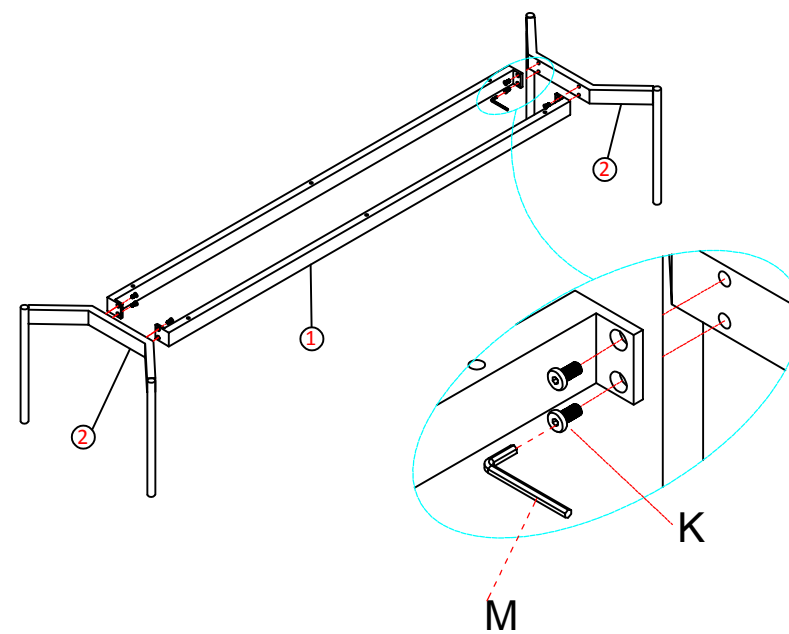


11

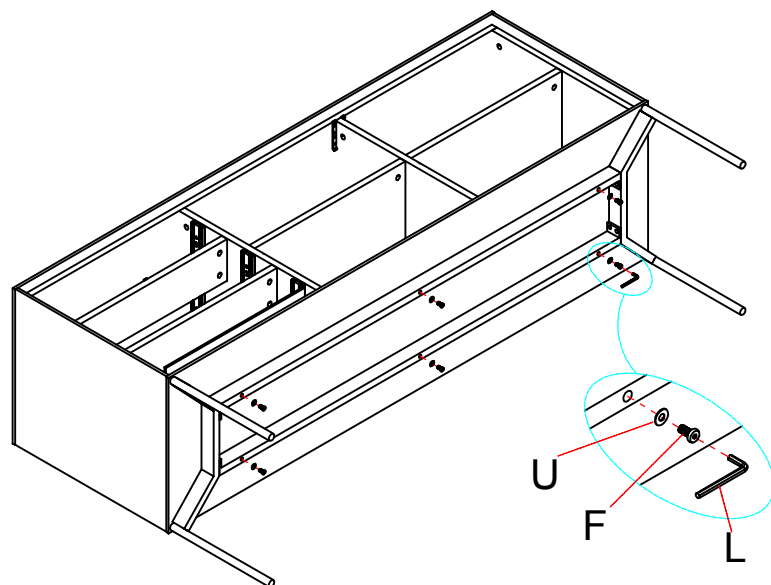


Install the screw 50% on the hardware foot first.
and then tighten the screw after the hole is correct.


12


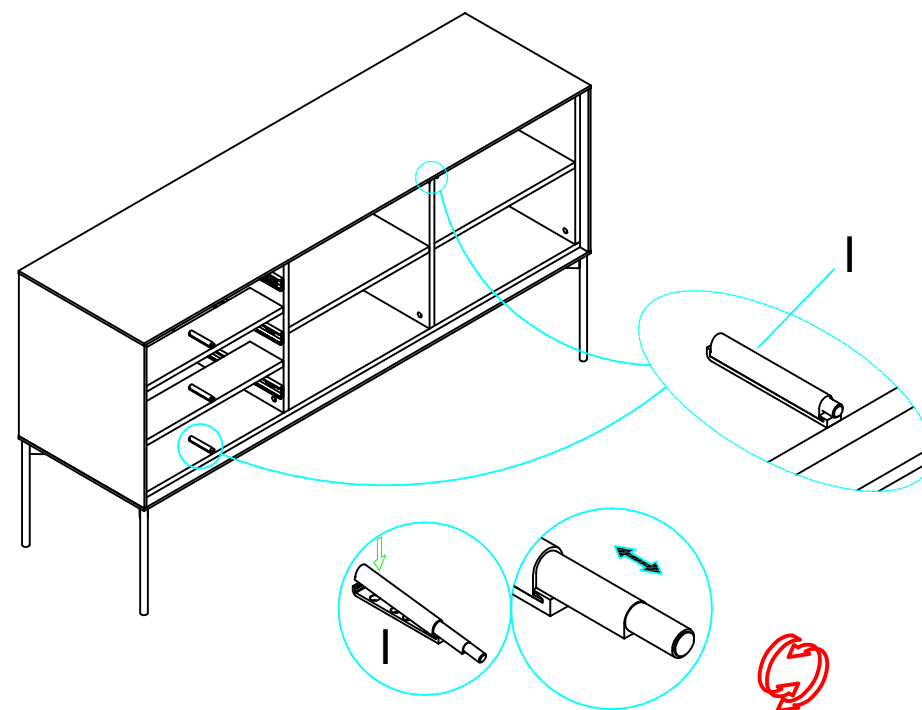


13

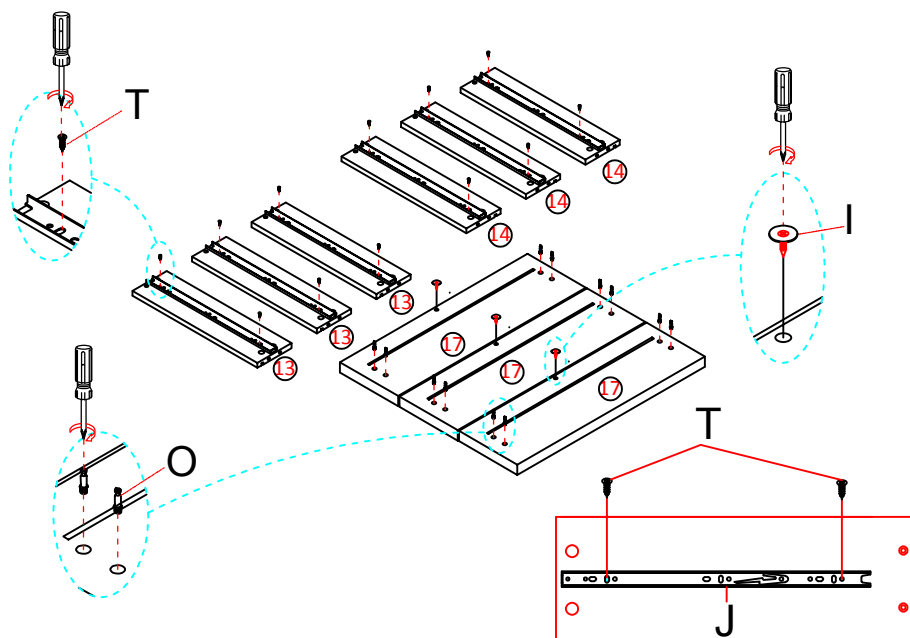


14

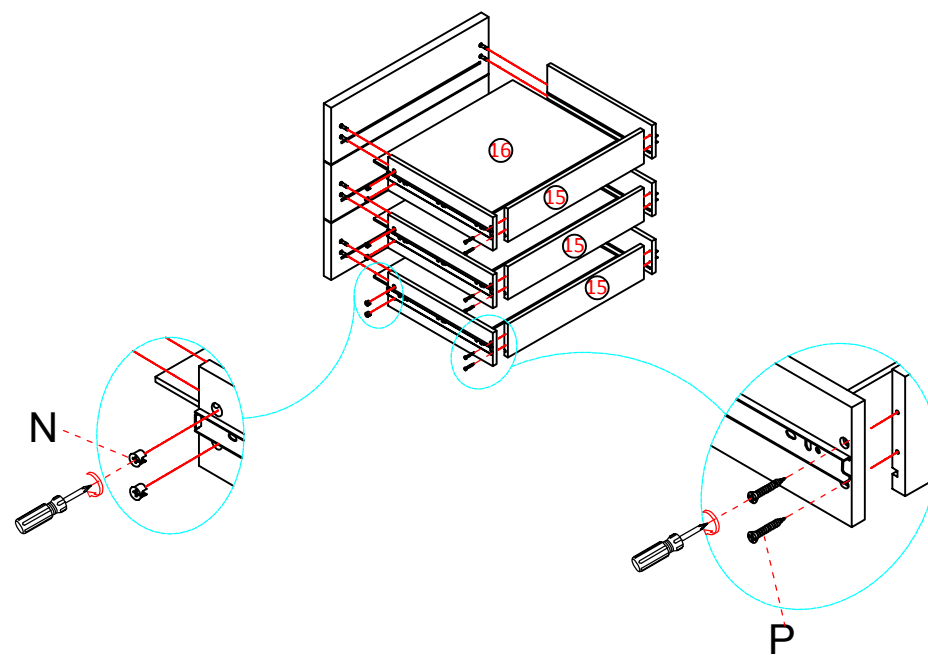


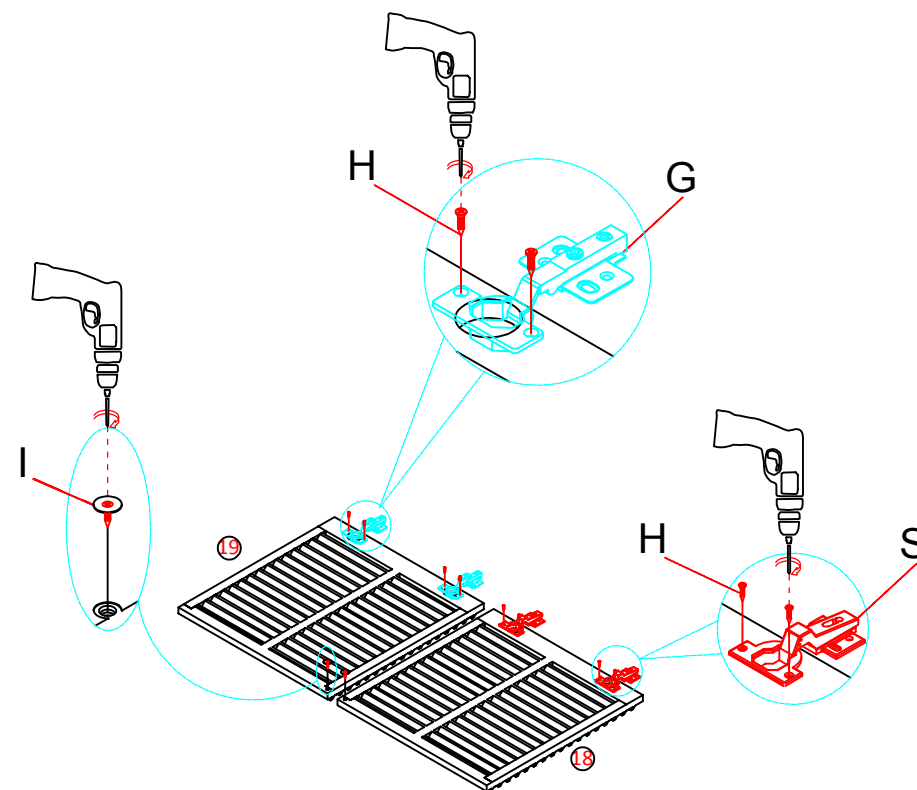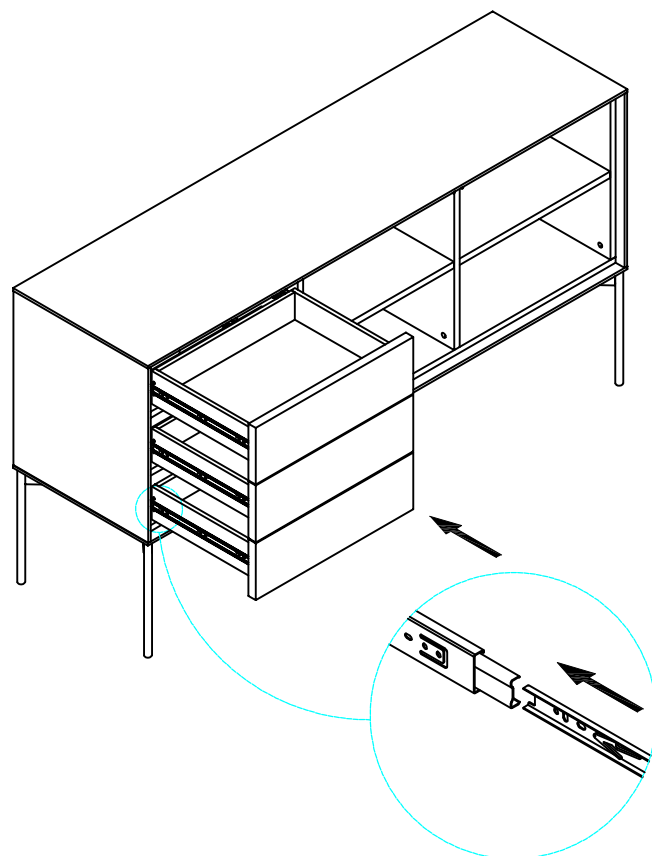


17

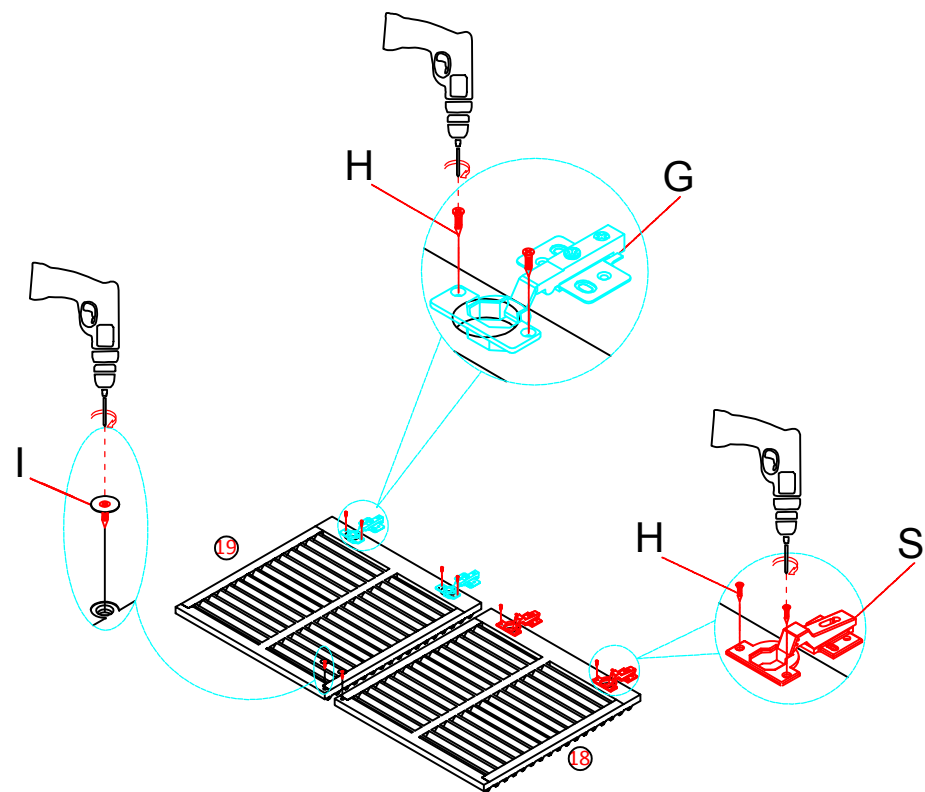


18

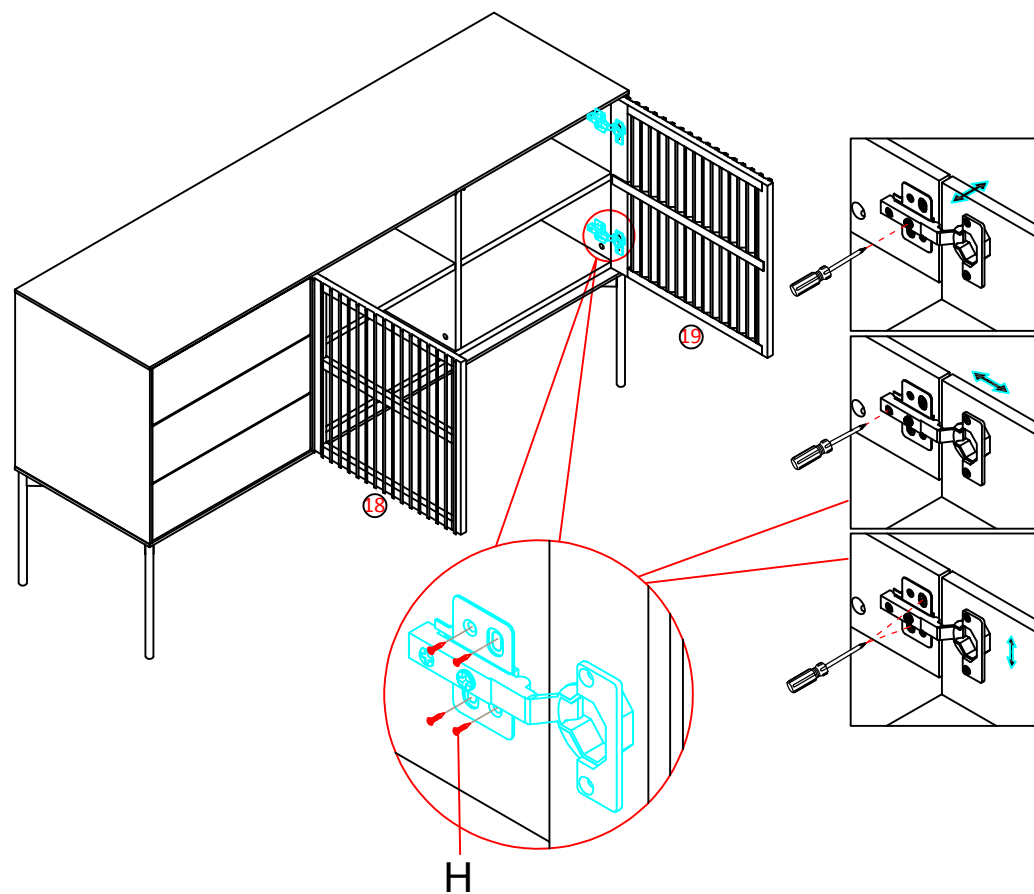




19

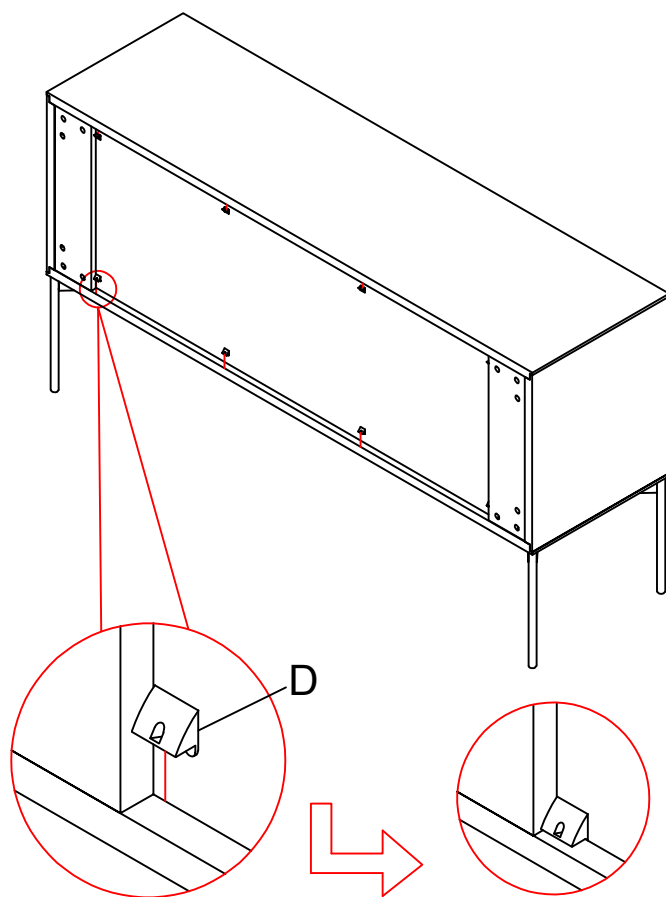


20

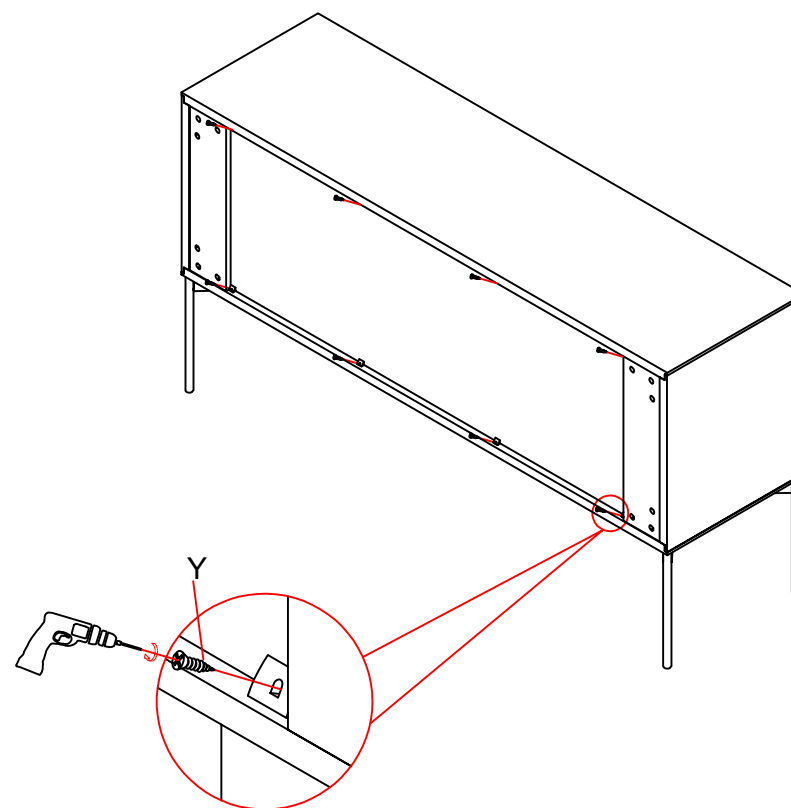


21

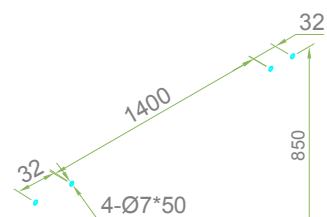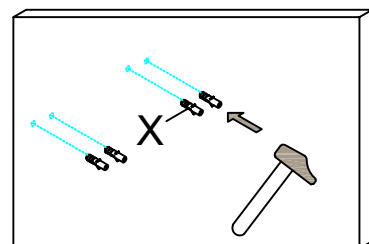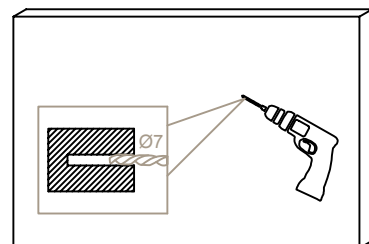

22

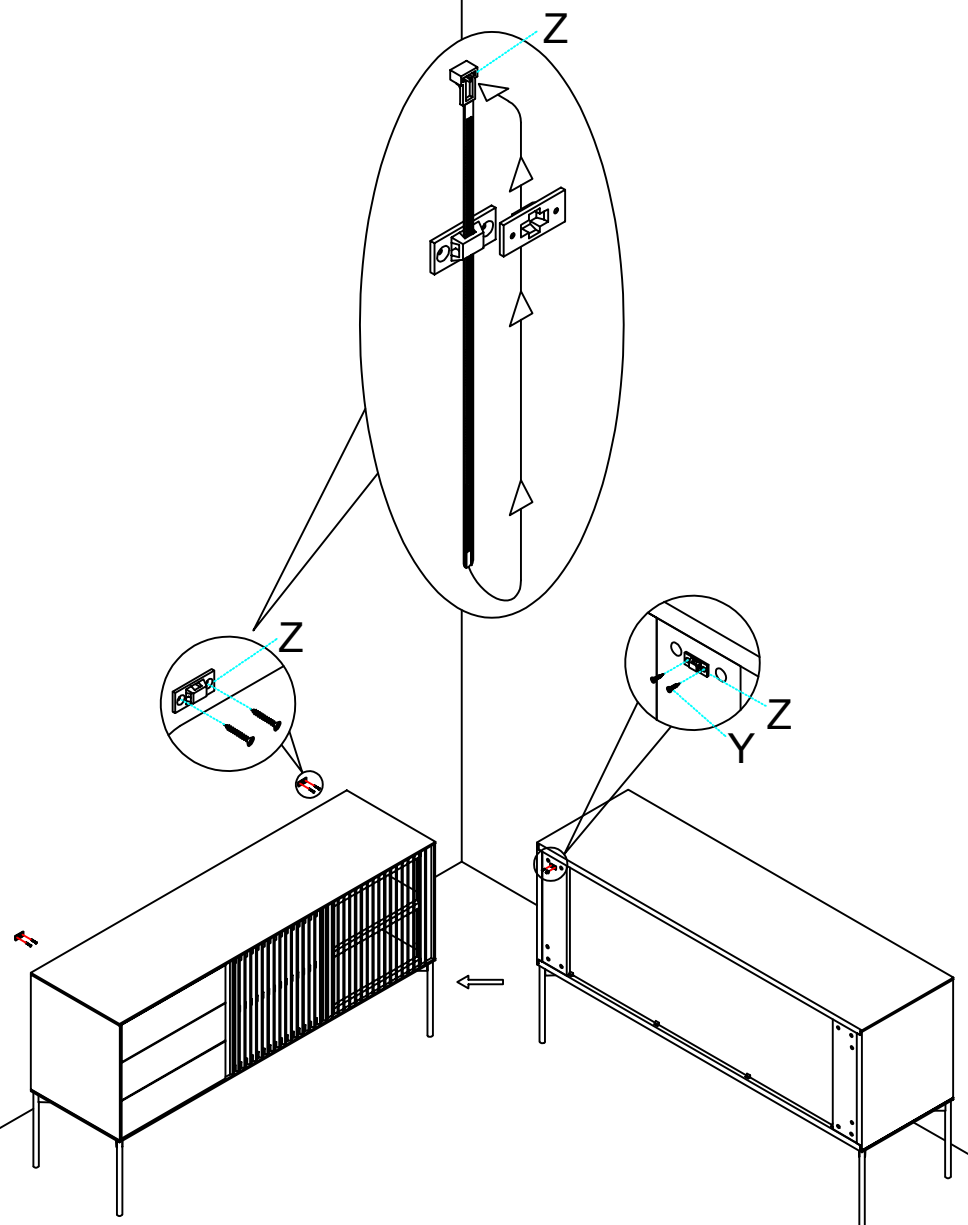

23

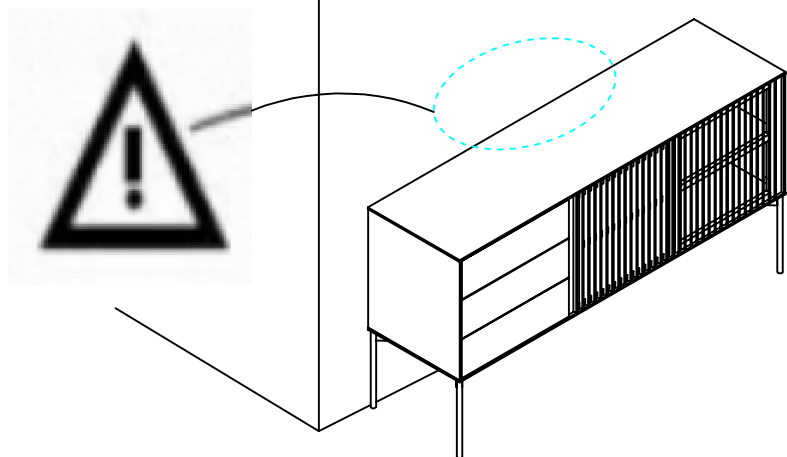

24

