
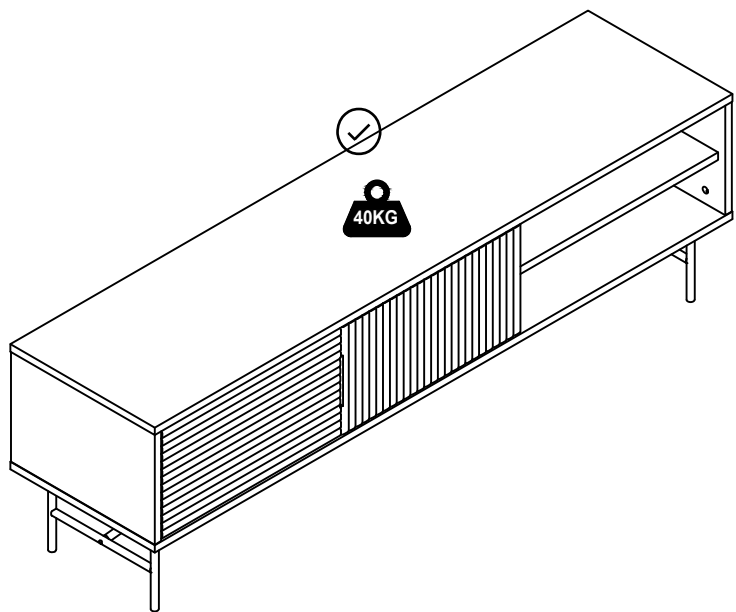







19090029-01


KNIVS





XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria




A	x 16	B	x 16	C	x 20	D	x 34	E	x 4
									
Φ15 x 12mm		M6 x 35mm		Φ8 x 40mm		M3.5x 15mm		M6 x 15mm	
F	x 8	G	x 2	H	x 2	I	x 2	J	x 4
									
M6 x 30mm		M6 x 35mm							
K	x 4	L	x 18	M	x 1	N	x 4	O	x 2
									
M6 x 45mm									
P	x 2	Q	x 2	R	x 1	S	x 2	T	x 2
									
U	x 2	V	x 16						
									
M4x37mm									




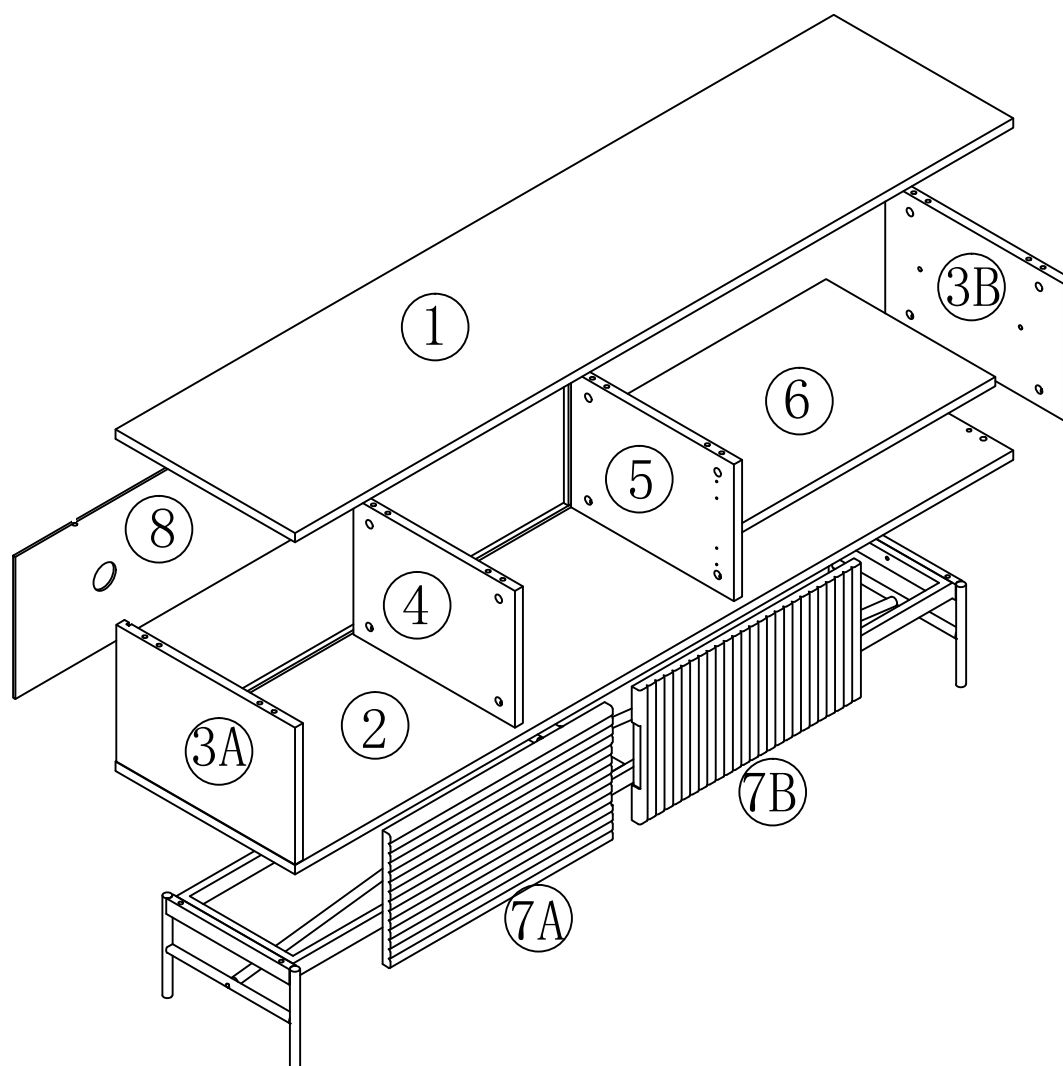

1	x 1	2	x 1	3A	x 1	3B	x 1	4	x 2
									
1600x400x18mm		1600x400x18mm		398x264x18mm		398x264x18mm		360x264x18mm	
5	x 1	6	x 1	7A	x 1	7B	x 1	8	x 1
									
379x264x18mm		565x377x18mm		495x258x18mm		495x258x18mm		989x274x5mm	



1

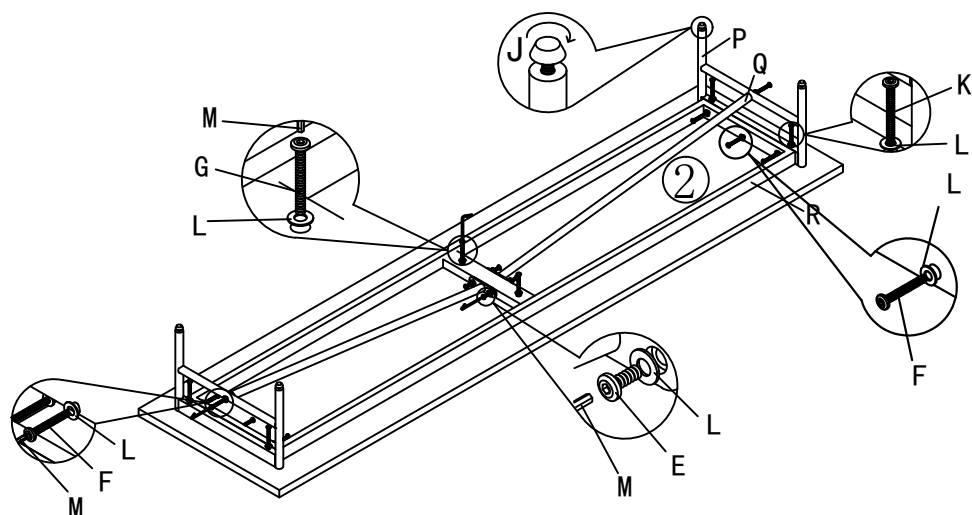

E	x 4
M6x15mm	

F	x 8
M6x30mm	

G	x 2
M6x35mm	

K	x 4
M6x45mm	

L	x 18

M	x 1


J	x 4

R	x 1

P	x 2


Q	x 2

2

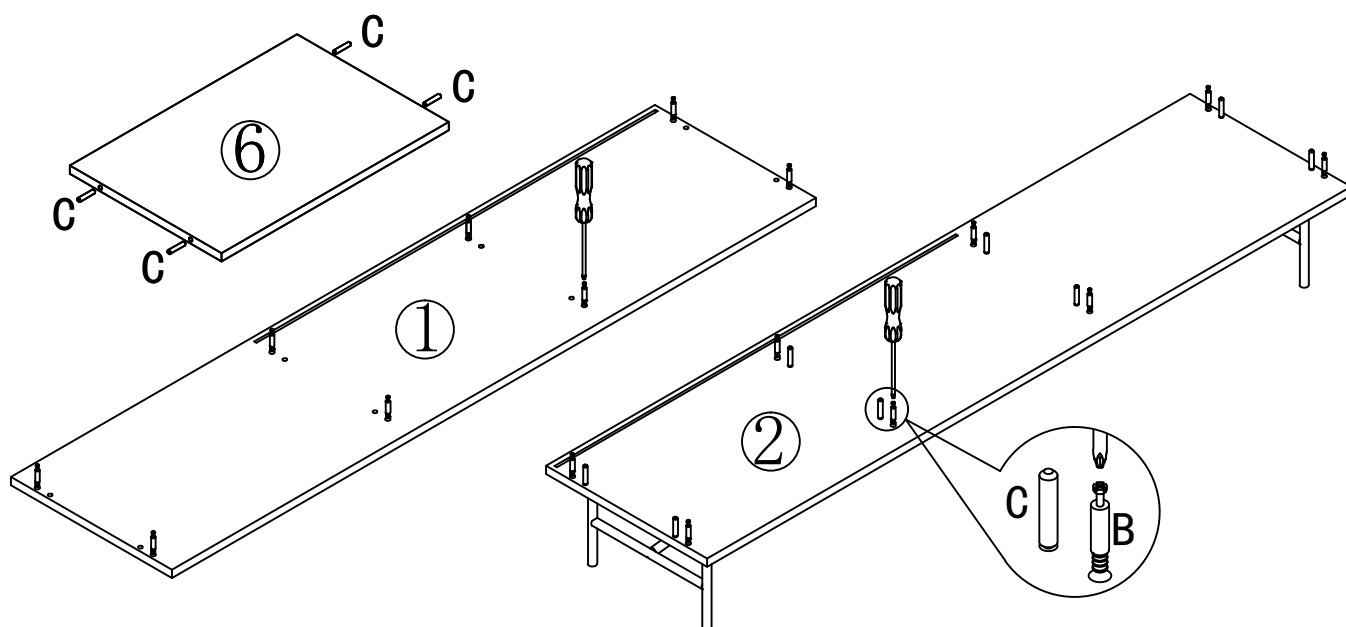


B	x 16
M6 x 35mm	

C	x 12
Φ8 x 40mm	




3

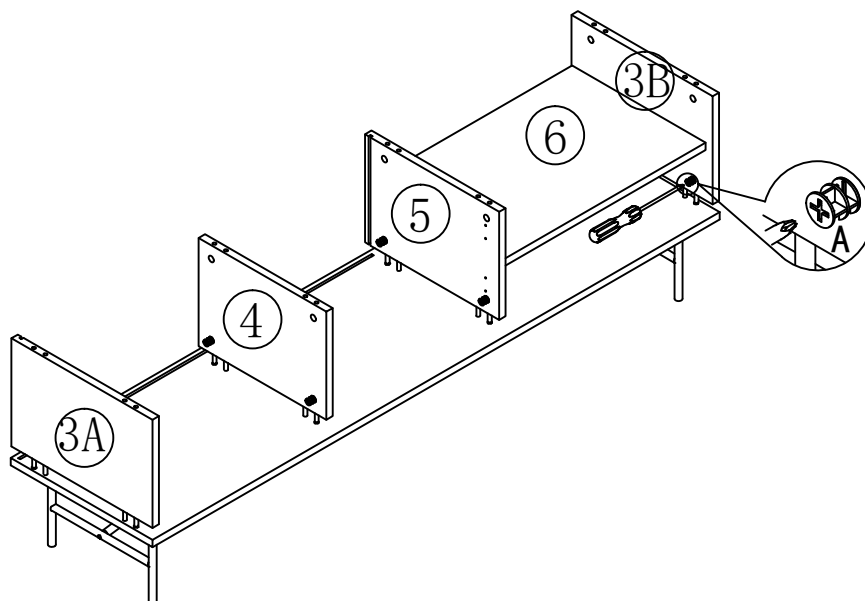


A	x 8
Φ15 x 12mm	


4

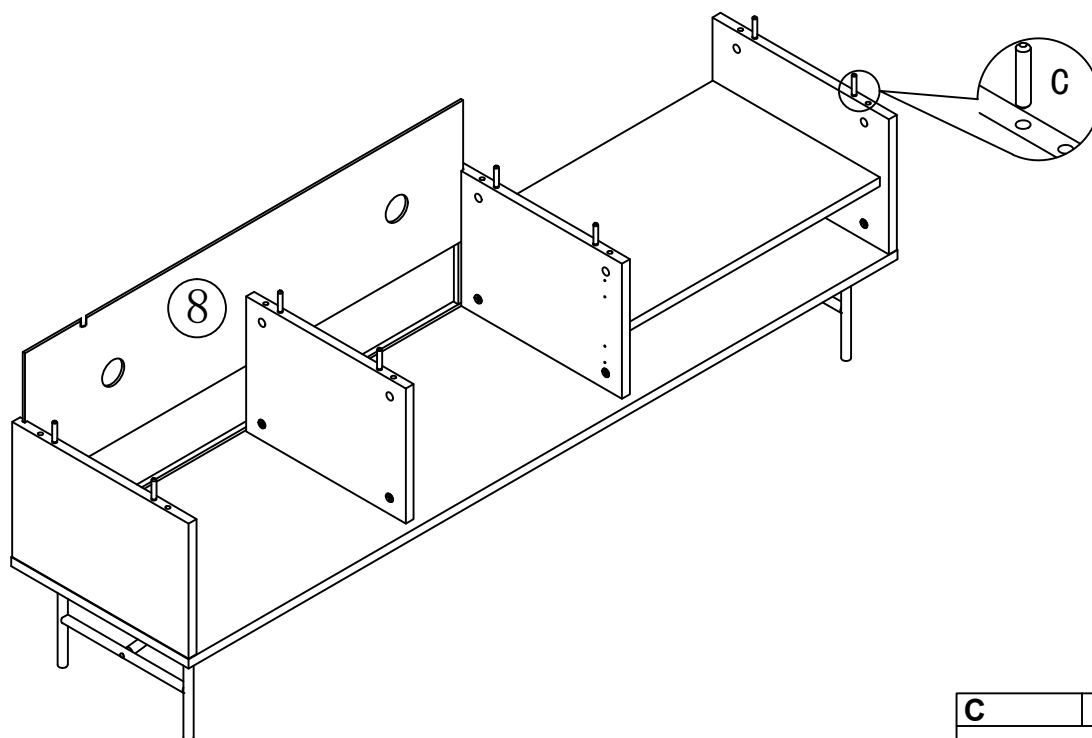

C	x 8
Φ8 x 40mm	




5

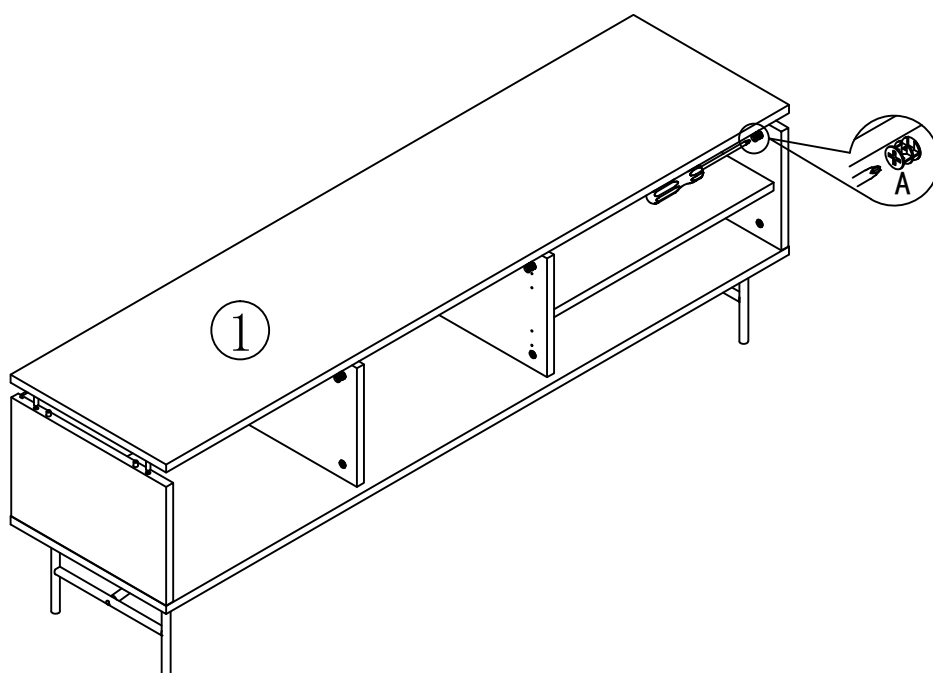


A	x 8
Φ15 x 12mm	


6


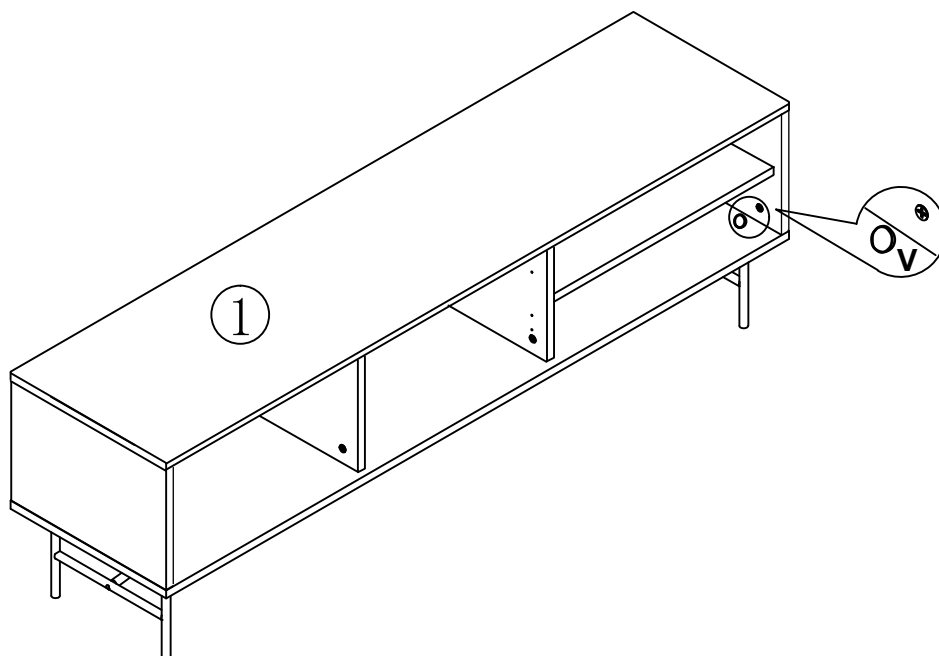


V	x 16




7

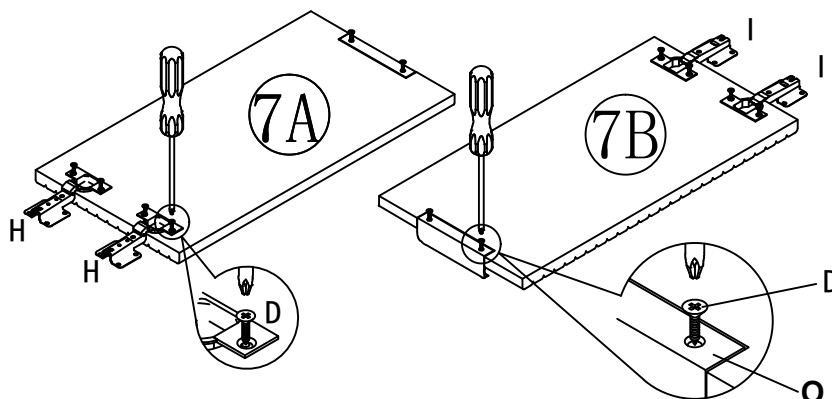




D	x 12	H	x 2	I	x 2	O	x 2
 M3.5 x 15mm							


8

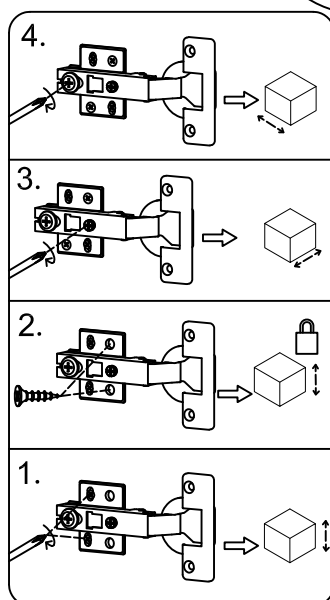


Make sure that the upper and lower positions of step 1 are properly adjusted before proceeding to step 2

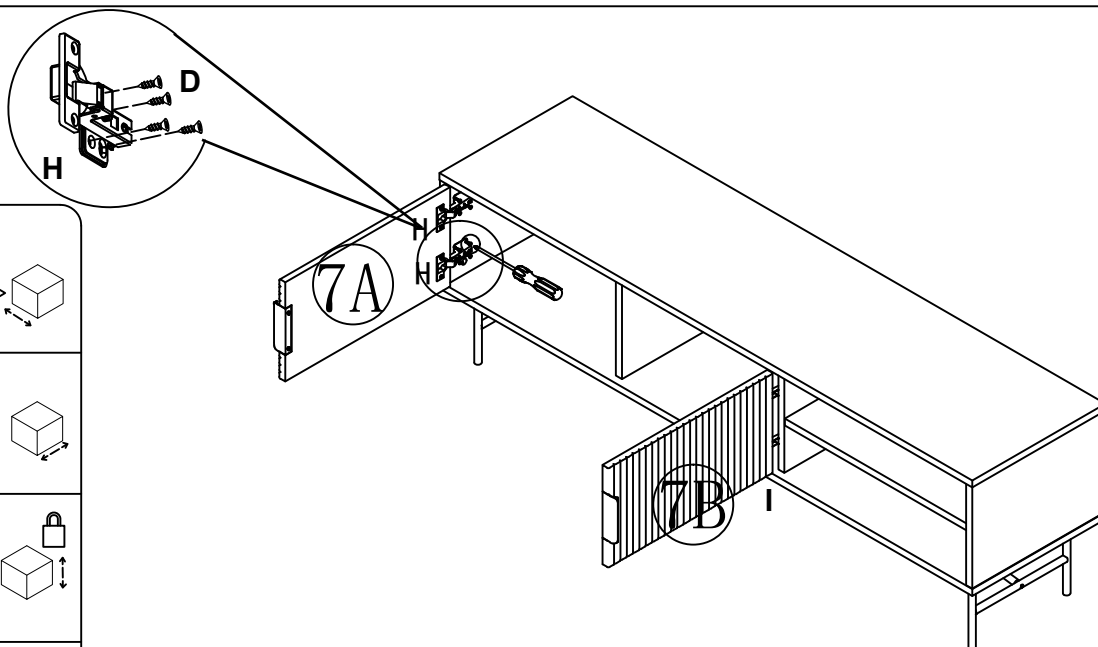

H	x 2	I	x 2	D	x 16
				 M3.5 x 15mm	




9

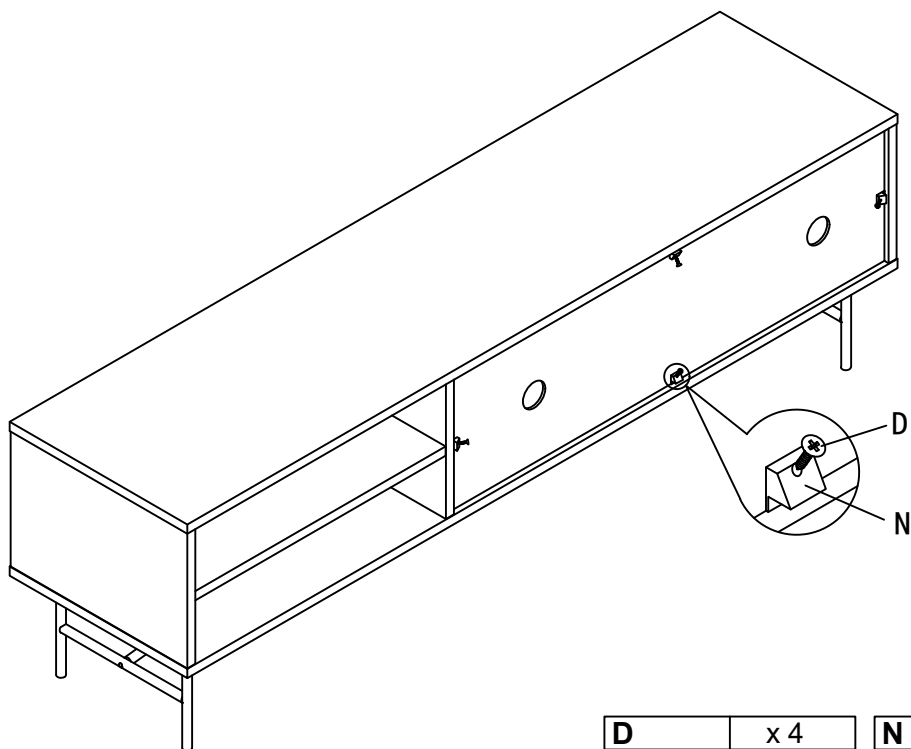


D	x 4
	
M3.5 x 15mm	

N	x 4
	


10

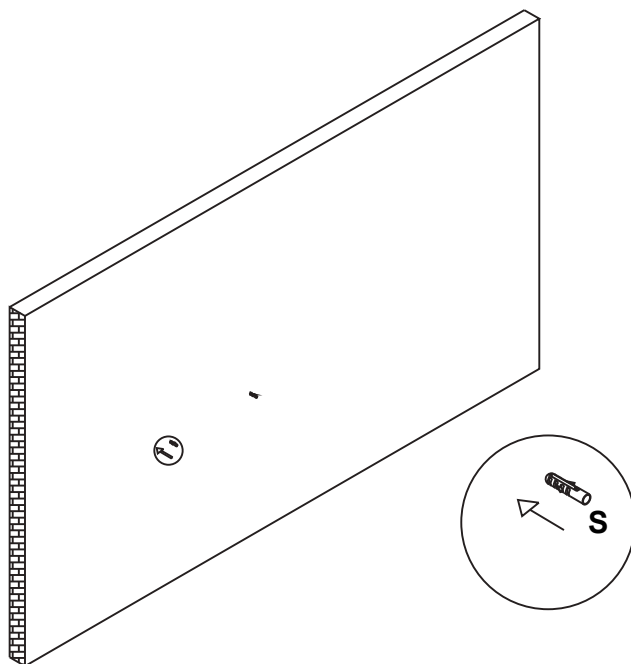


S	x 2
	





11

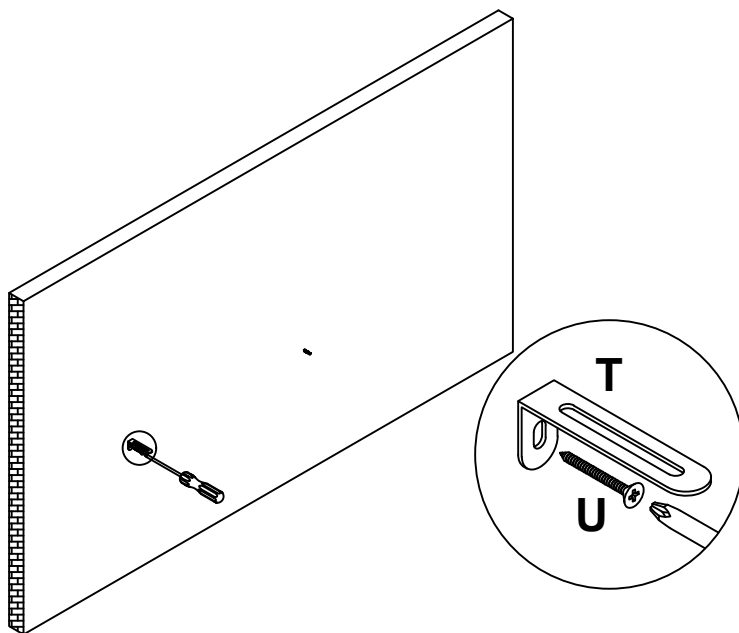



T	x 2
	

U	x 2
	
M4x37mm	

12

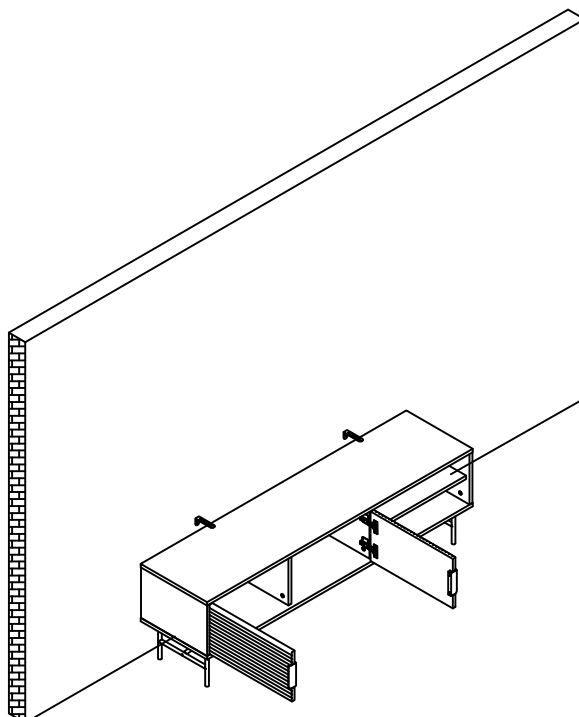

13

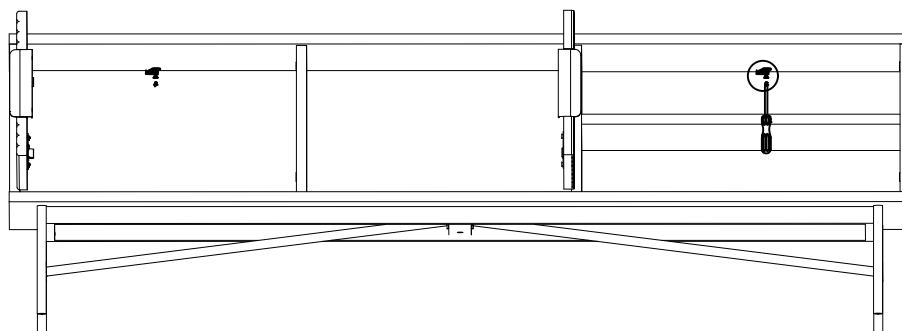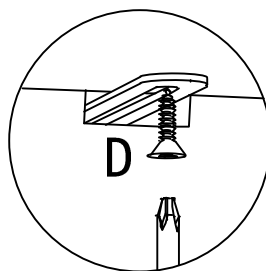

D	x 2
	
M3.5 x 15mm	

14

