
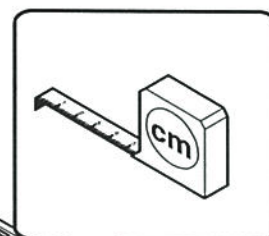
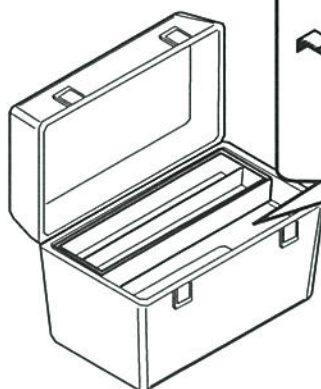


- | | |
|----------------------------------|------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

Stockholm 6309.05





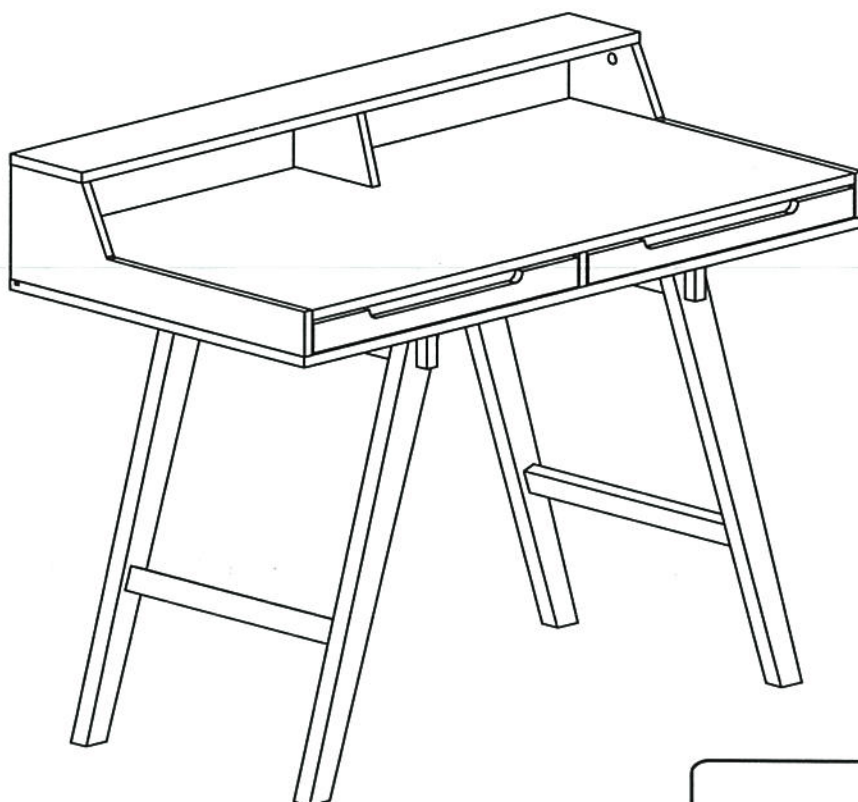


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam •
Nazwa • Jméno • Nazov • Név •
Denumire • Isim • Название


Nr. • No. • N° • Номер • Č • Sz

Typ • Type • Tip • Típus • Tipo •
Тип

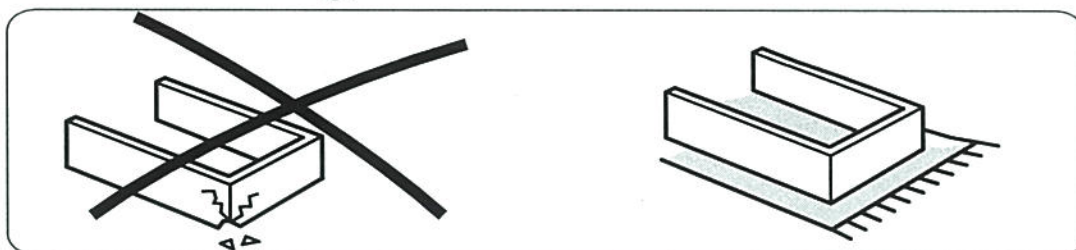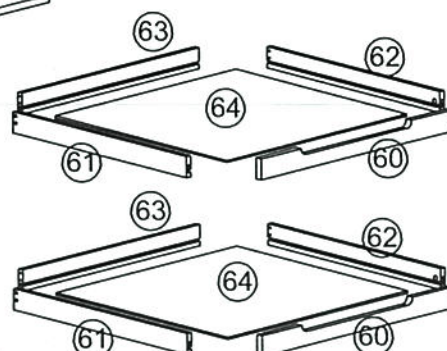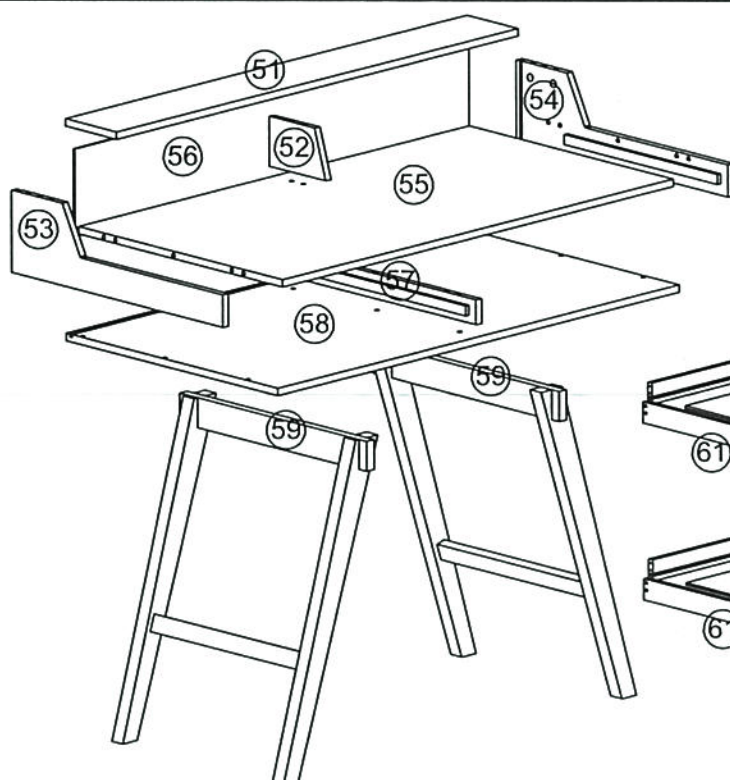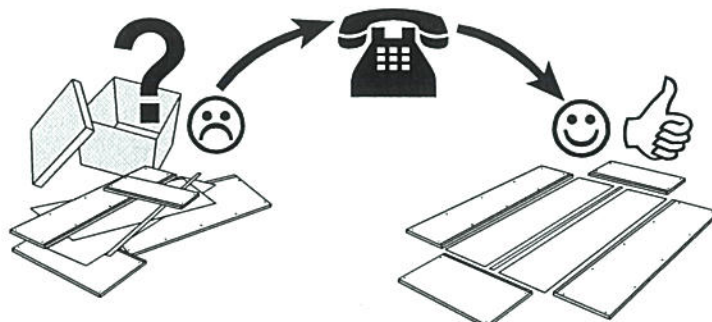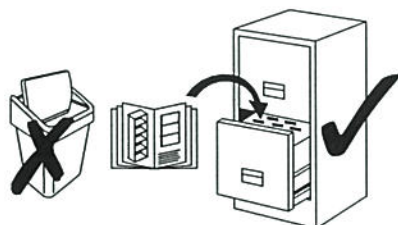


A x12 Ø6x35mm	B x15 Ø8x30mm	C x12 Ø15x12mm	D x2 Ø3.5x12mm	E x2 Ø8x50mm	F x1 Ø8x50mm	G x6 M7x50mm
H x2 M6x75mm	I x1 M6x100mm	J x8 Ø5x50mm	K x4 120x60x3mm	L x16 M6x12mm	M x8 Ø4x35mm	N x4 Ø6x25mm
O x4 Ø10x10mm	P x1 M4	Q x16 Ø10x10mm	R x4 340x10x3mm	S x4 20x20x2mm	T x3 Ø10x10mm	


Schritt 1

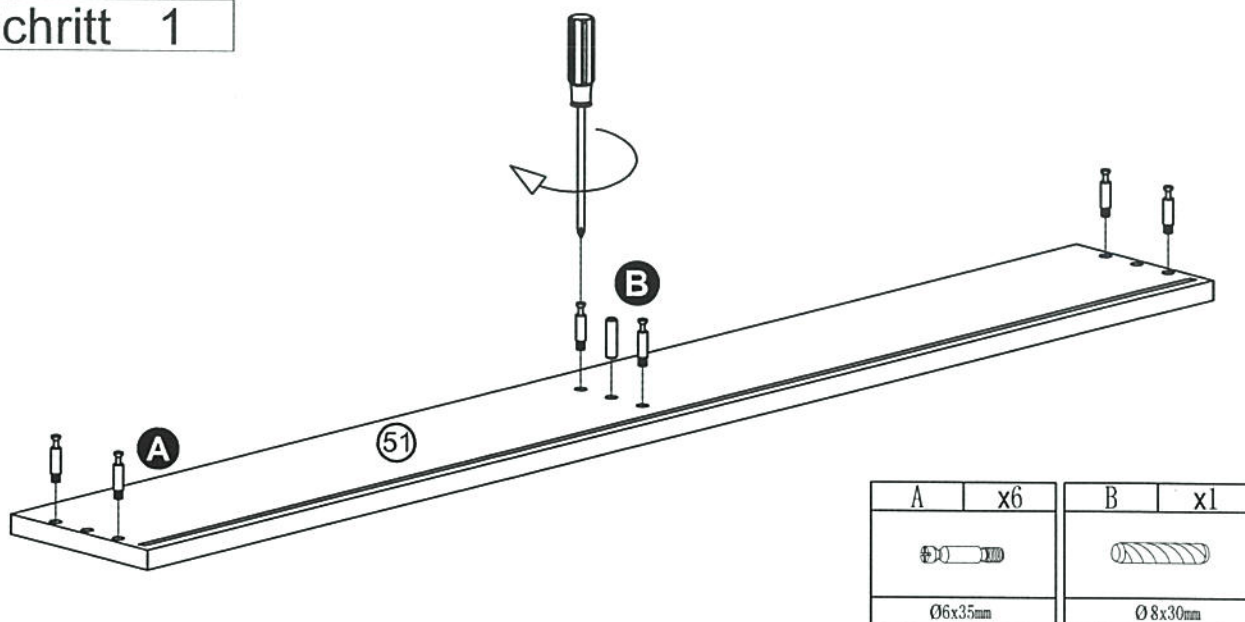


Schritt 2

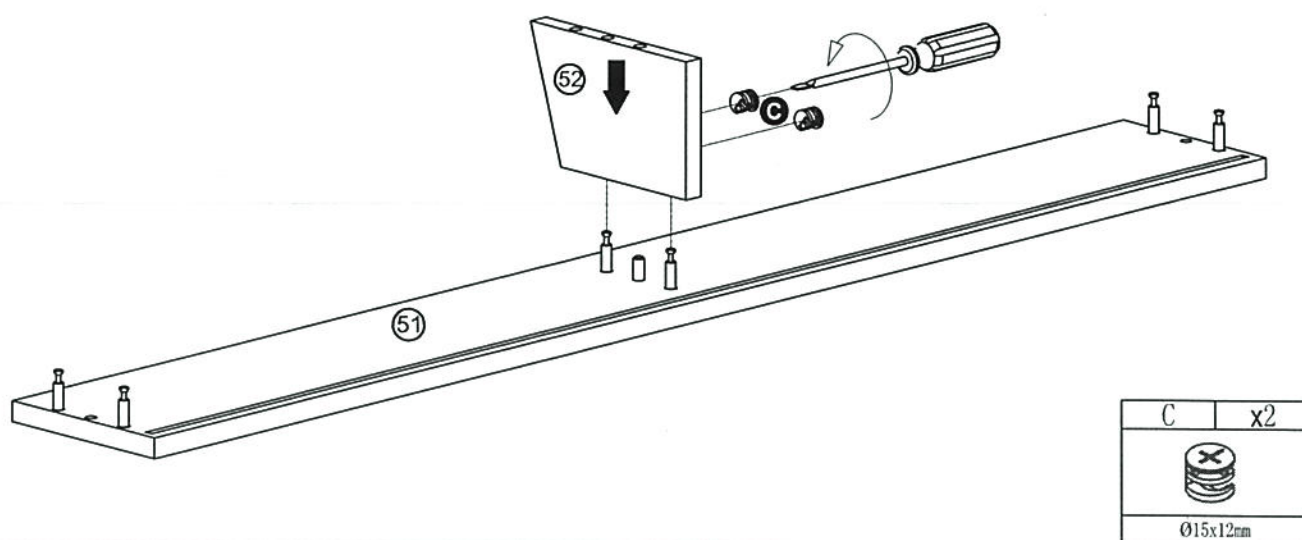

Schritt 3

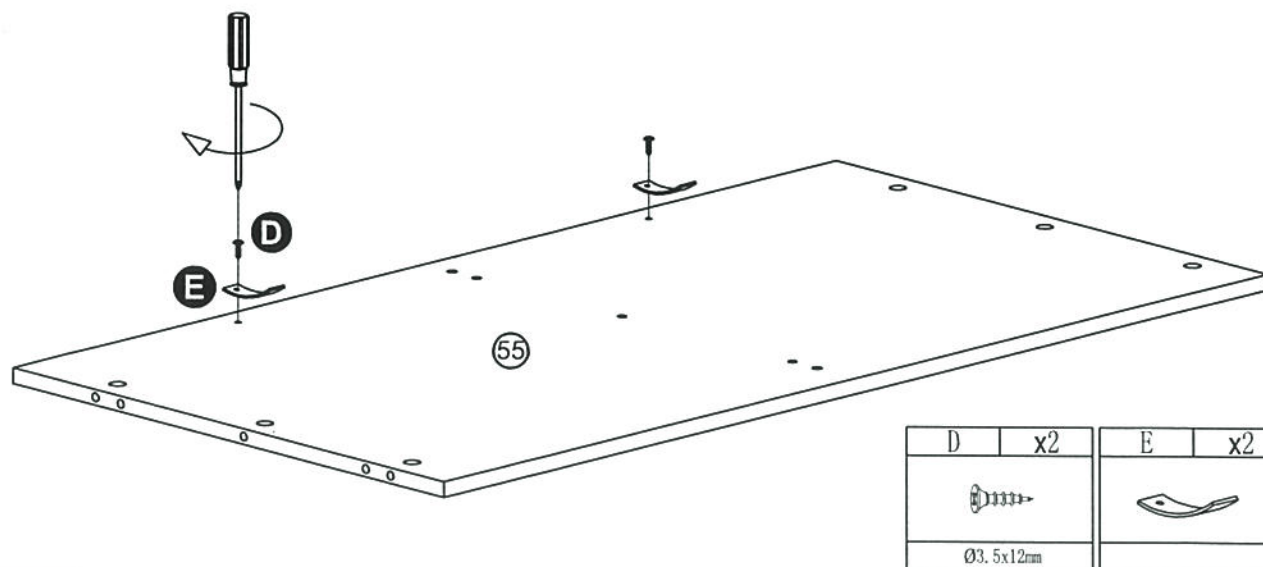


Schritt 4

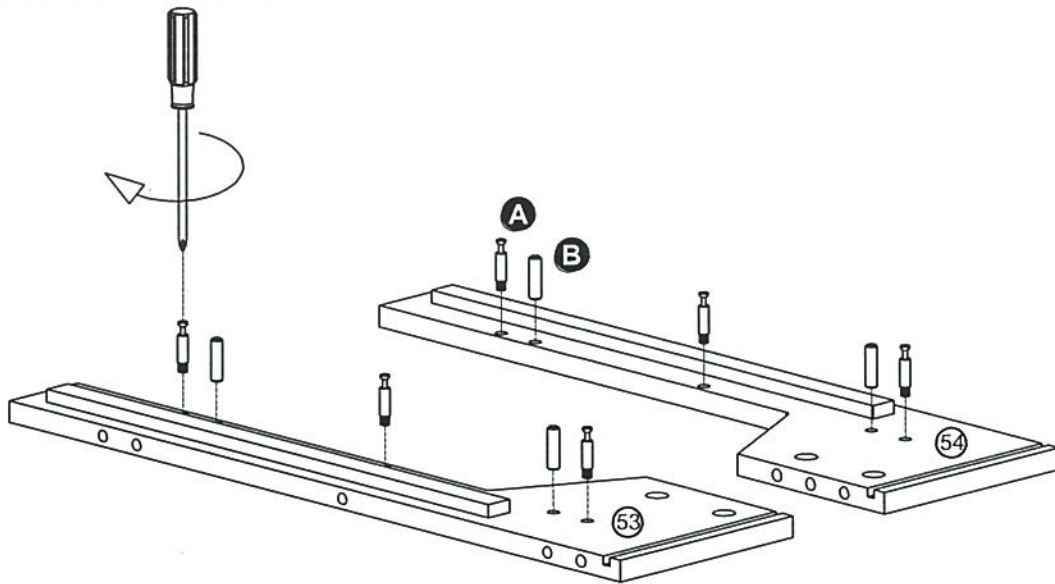


A	x6
	
Ø6x35mm	
B	x4
	
Ø8x30mm	

Schritt 5

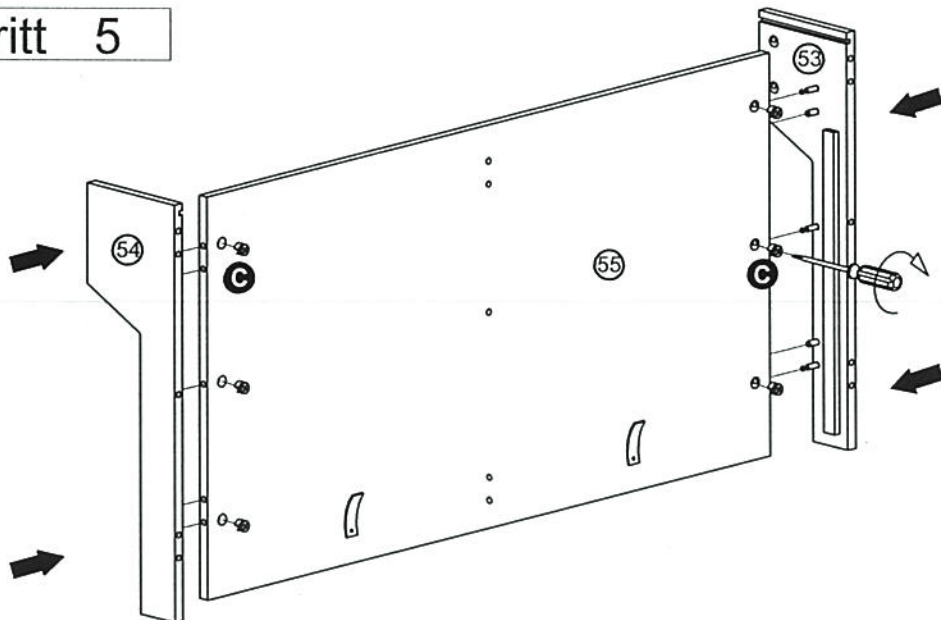


C	x6
	
Ø15x12mm	

Schritt 6

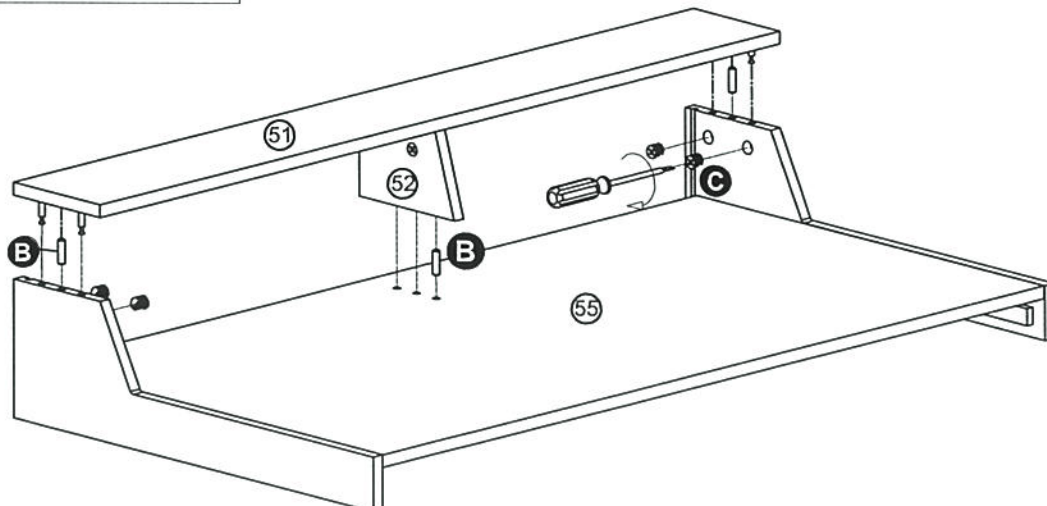


B	x3
	
Ø8x30mm	
C	x4
	
Ø15x12mm	

Schritt 7

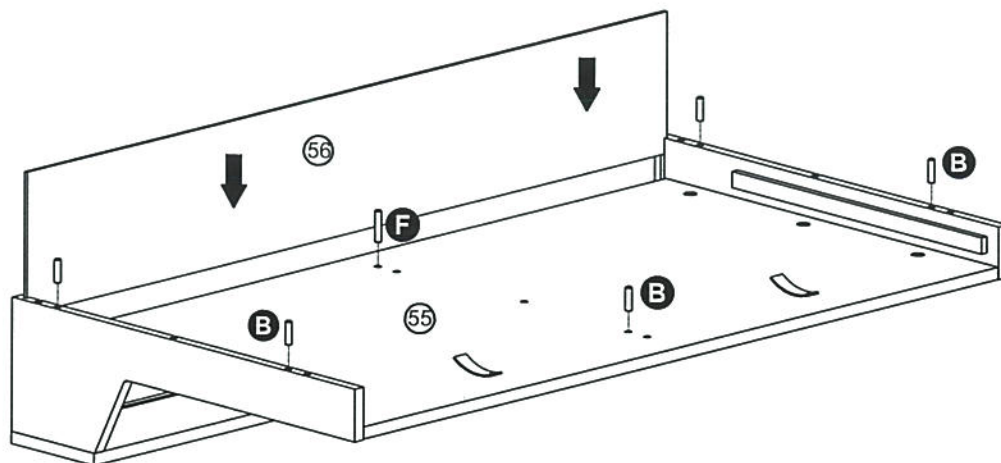


F	x1
	
Ø 8x50mm	
B	x5
	
Ø 8x30mm	

Schritt 8

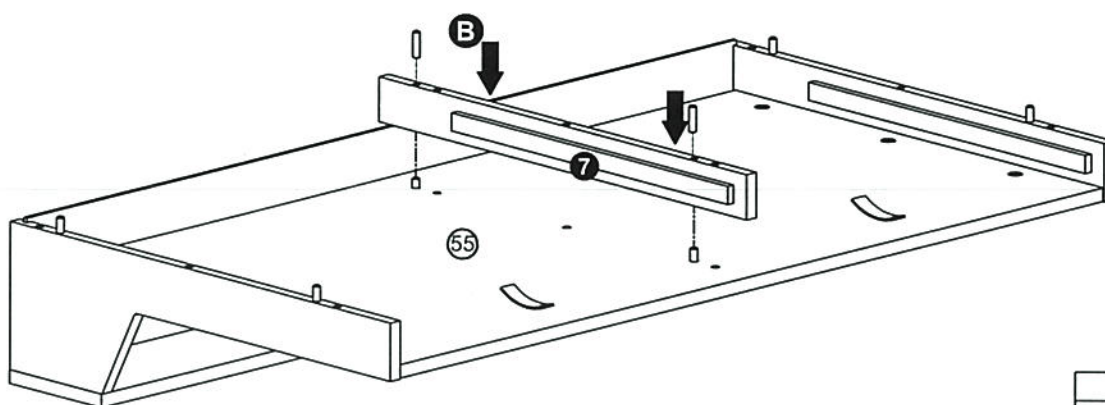


B	x2
	
Ø 8x30mm	

Schritt 9

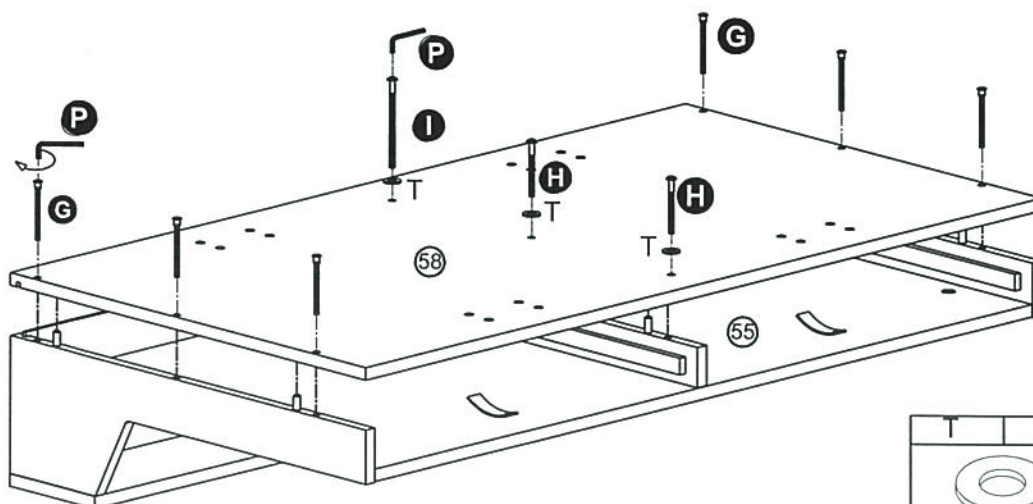

P	x1
	
M4	
G	x6
	
M7x50mm	
H	x2
	
M6x75mm	
T	x3
	
I	x1
	
M6x100mm	


Schritt 10

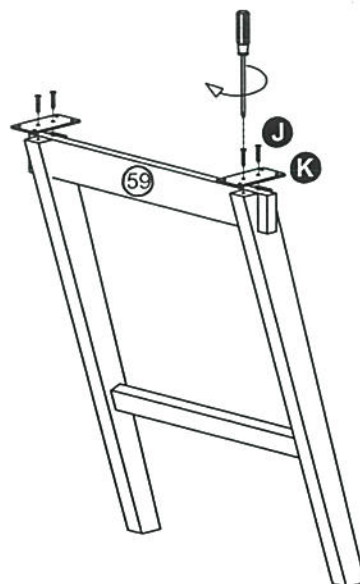

x2


J	x8
	
Ø5x50mm	
K	x4
	
120x60x3mm	


Schritt 11

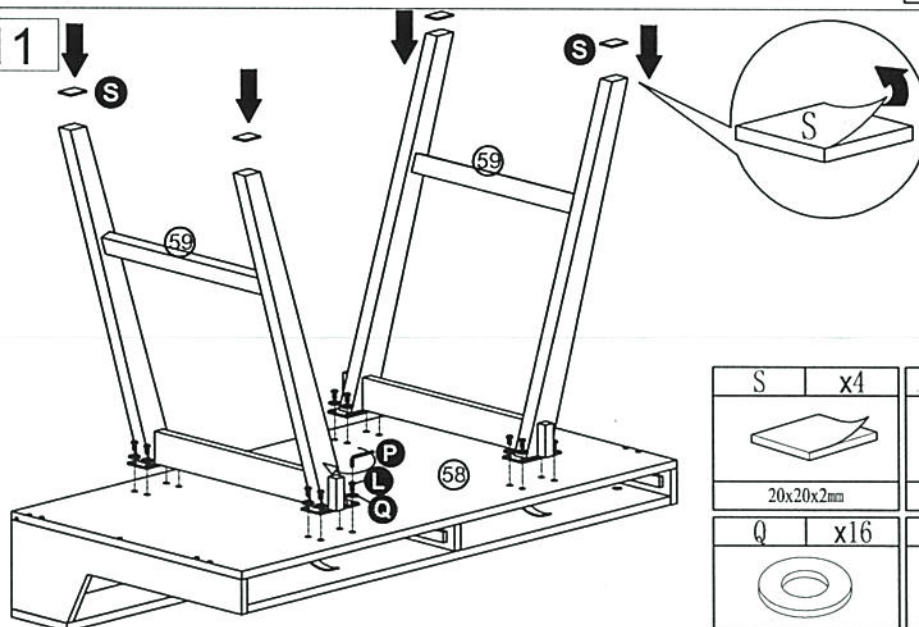


S	x4
	
20x20x2mm	
L	x16
	
M6x12mm	
Q	x16
	
P	x1
	
M4	

Schritt 12

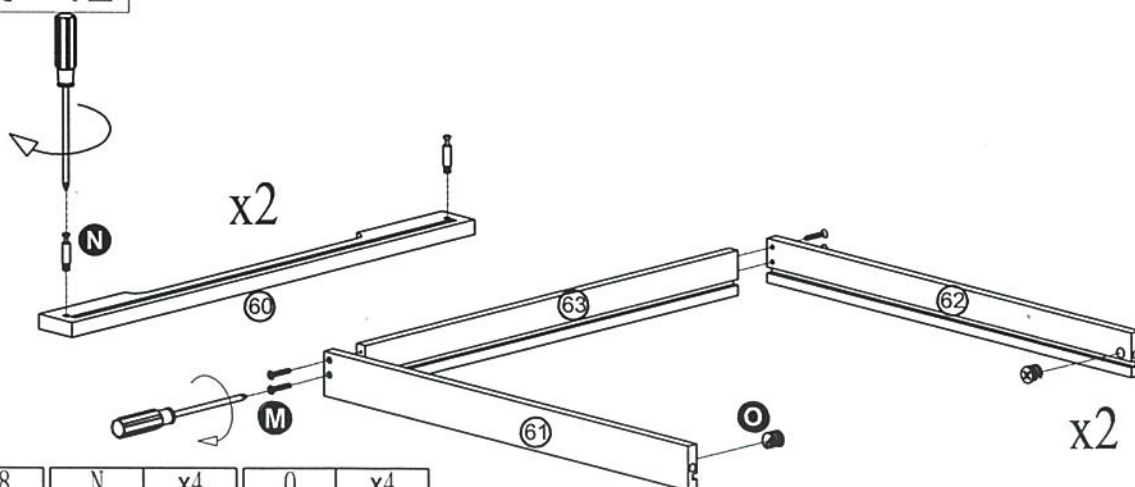

M	x8
	
Ø4x35mm	
N	x4
	
Ø6x25mm	
O	x4
	
Ø10x10mm	

Schritt 13

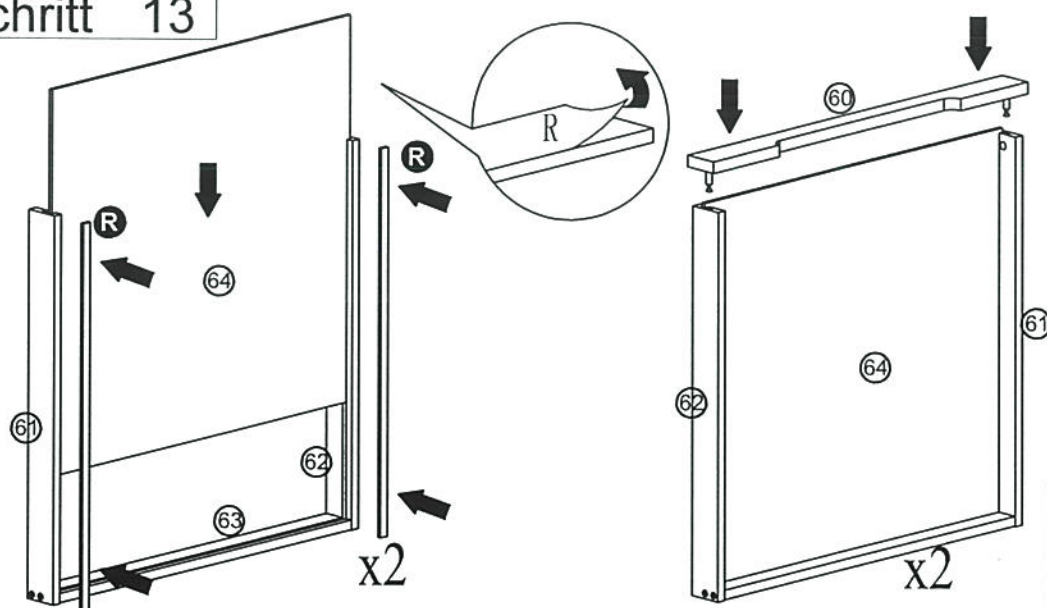

Schritt 14

