

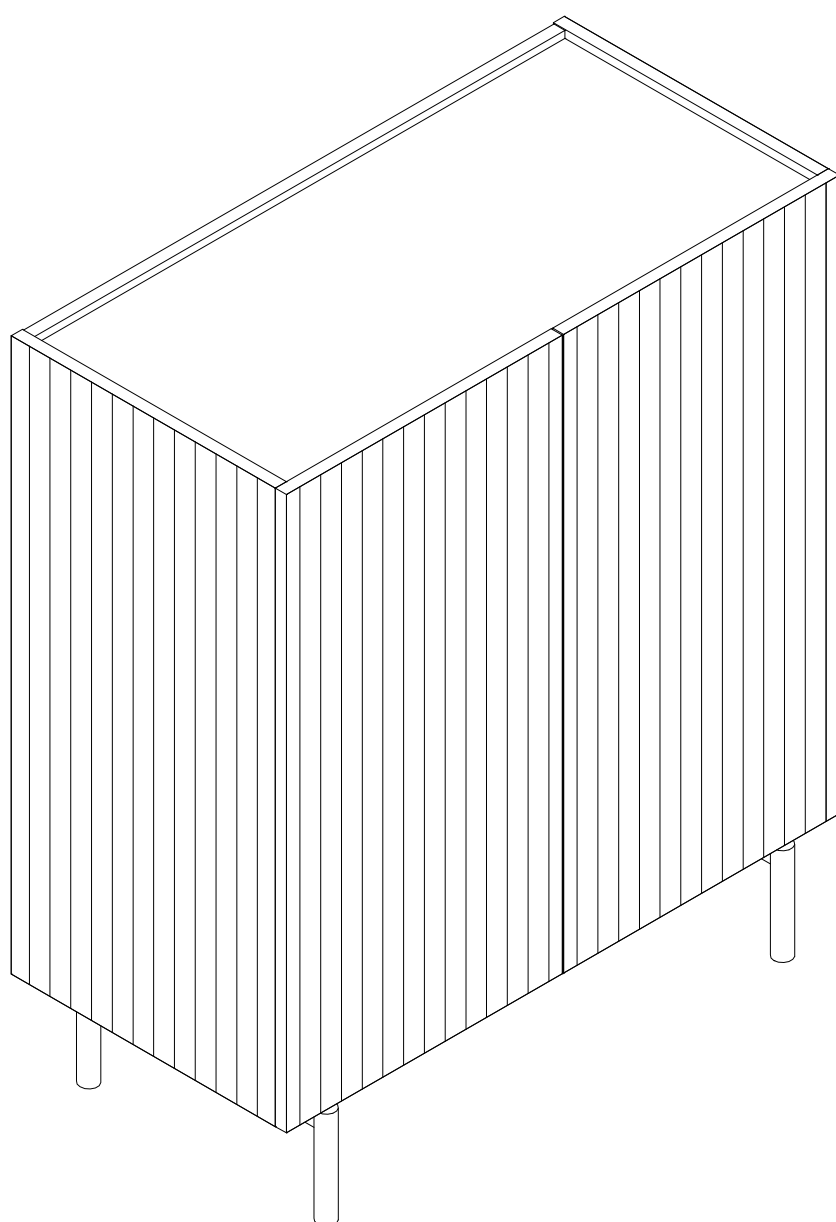
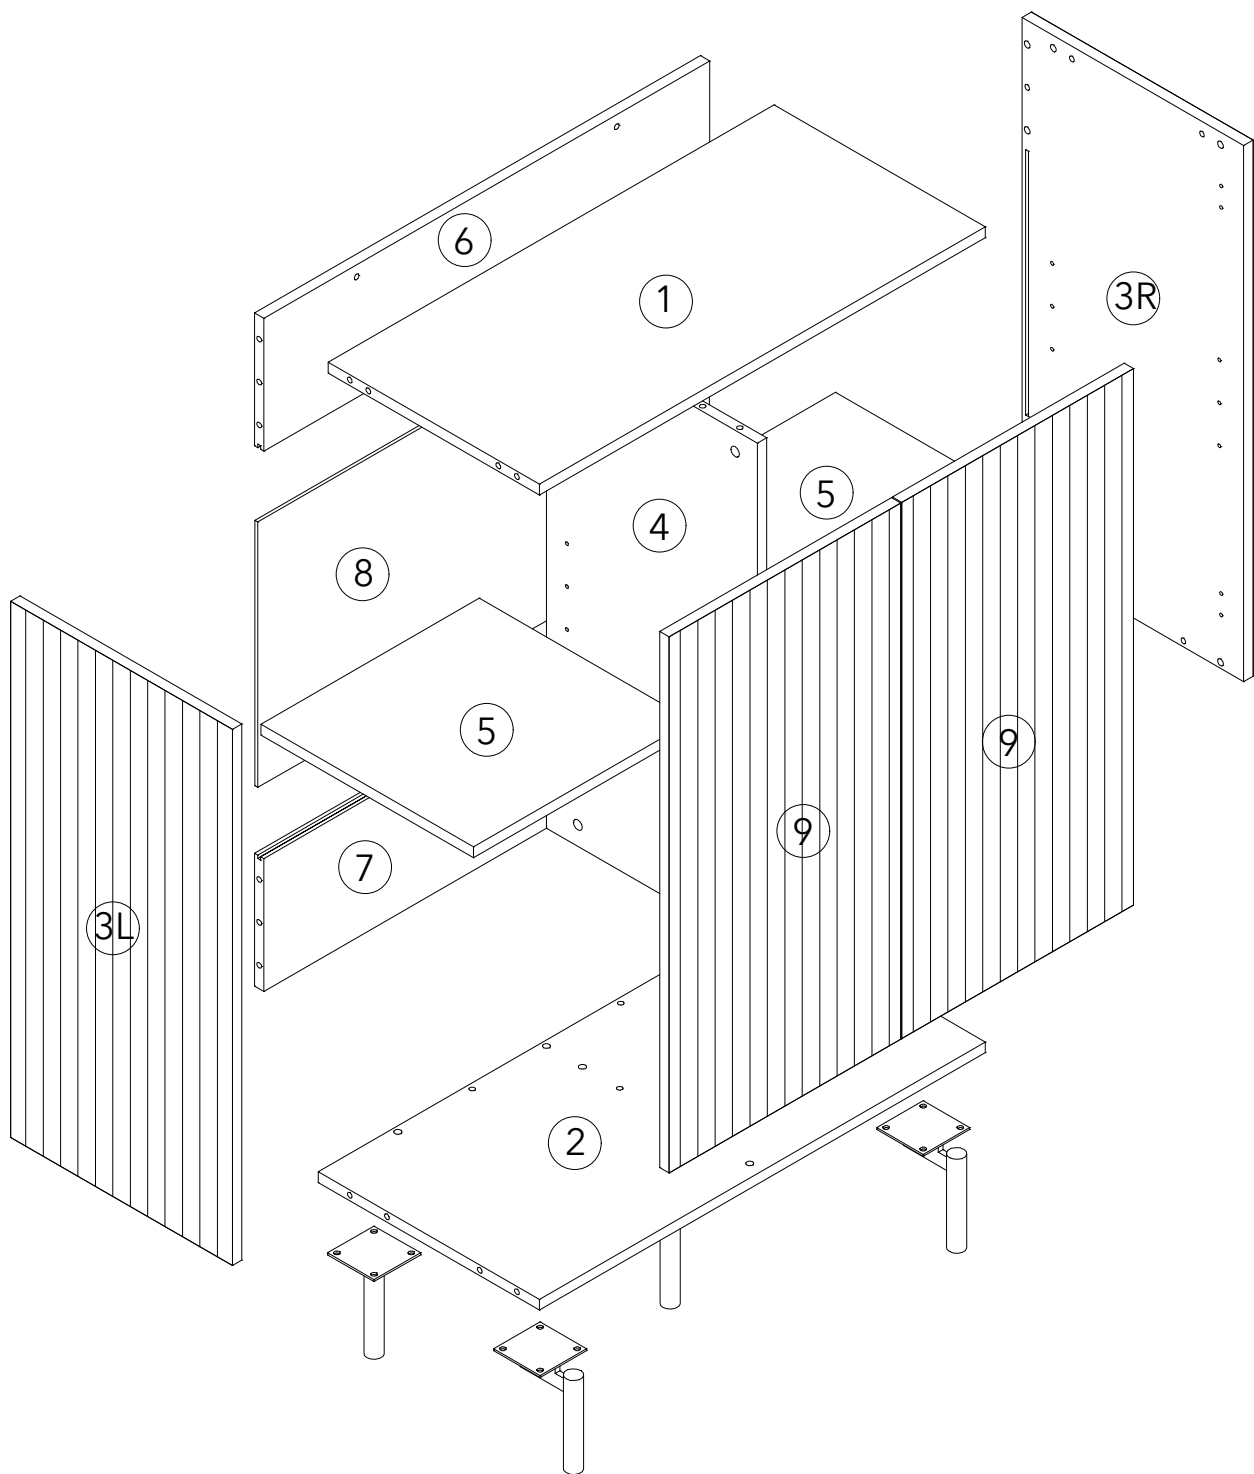
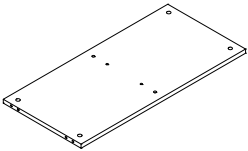
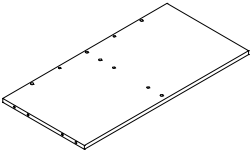
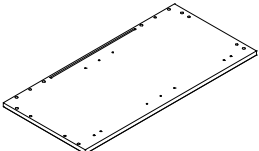
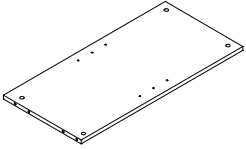

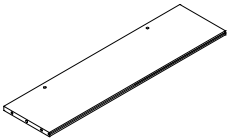
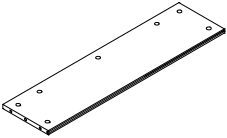










E6GS03

INSTRUCTION MANUAL


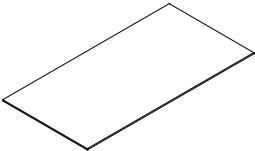


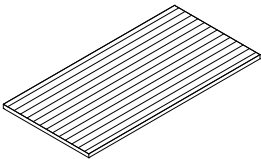



Ref	Dimensions(mm)	Visual	Qty
1	768x364x16		1
2	768x381x16		1
3	800x382x16		2
4	756x363x16		1
5	376x366x16		2
6	768x198x16		1
7	768x198x16		1
8	778x396x5		1
9	800x399x16		2

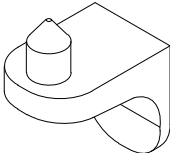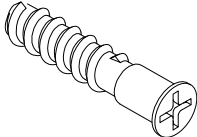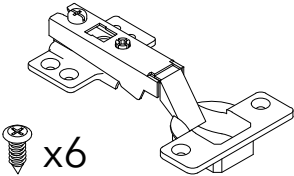								
A	M6x40mm	23pcs	B	Ø15x11.5	23pcs	C	Ø8x30	18pcs
								
G	/	8pcs	I	M6x12mm	20pcs	J	M7x50mm	2pcs
								
M	/	4set	K	/	2pcs	L	/	3pcs
								
Z	Ø20	23pcs						


Step 1:

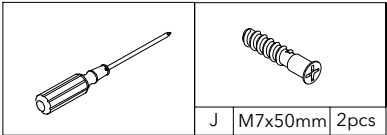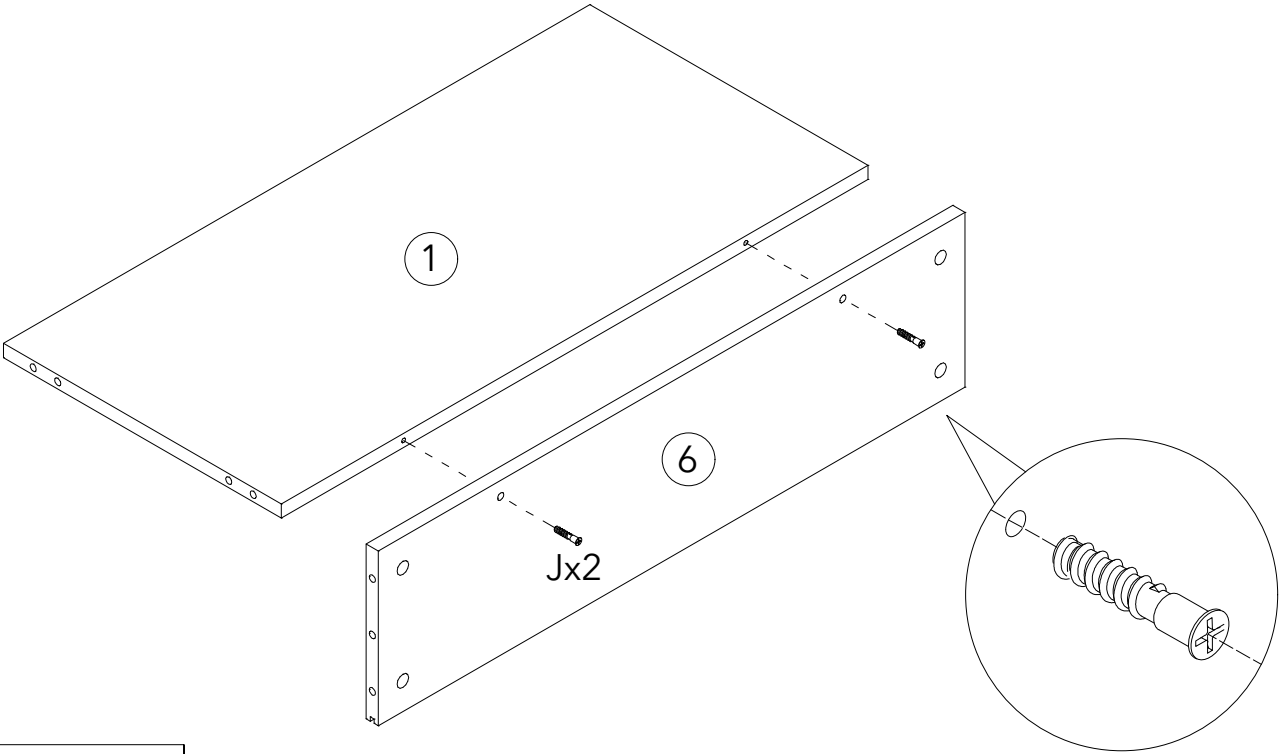


Step 2:

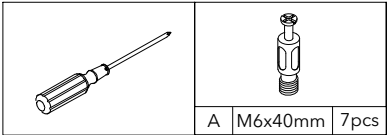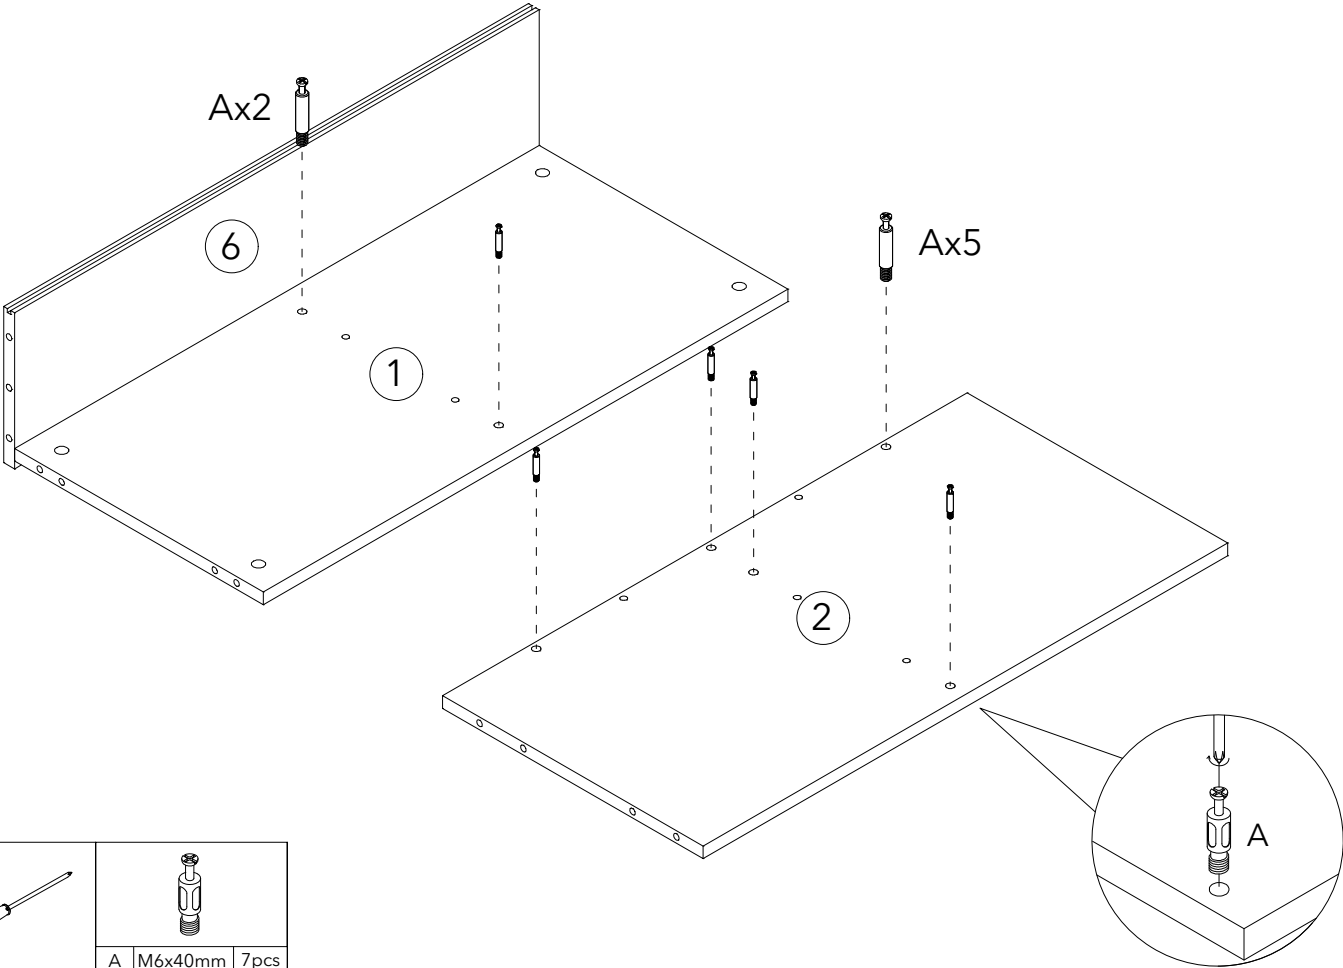

Step 3:

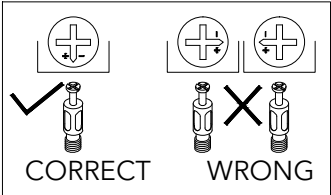


Please note that the locking cam faces outwards

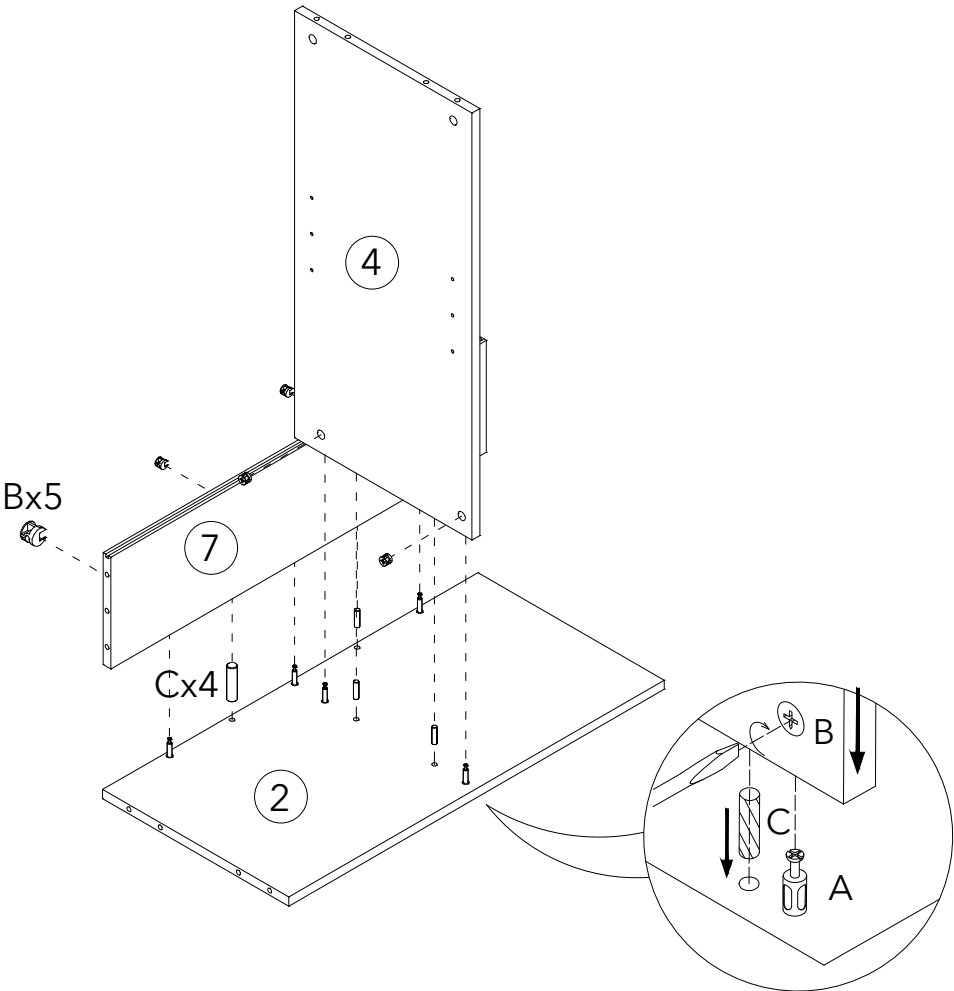


	C	Ø 8x30	4pcs
	B	Ø 15x11.5	5pcs


Step 4:

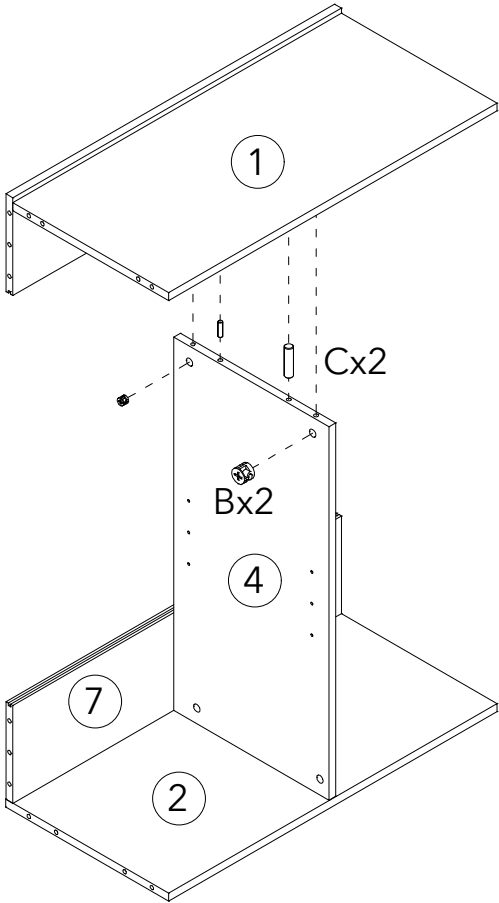


	C	Ø 8x30	2pcs
	B	Ø 15x11.5	2pcs


Step 5:

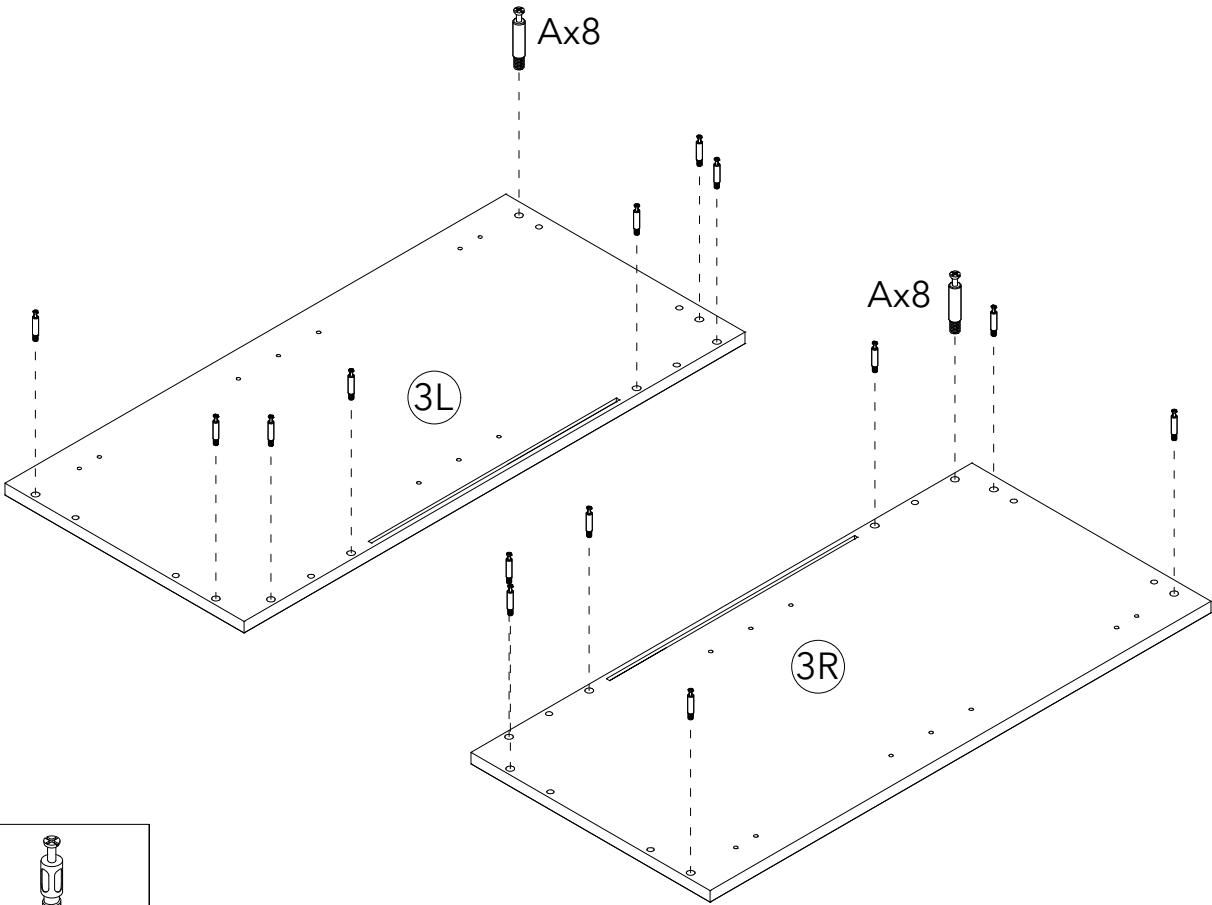


			
	A	M6x40mm	16pcs


Step 6:

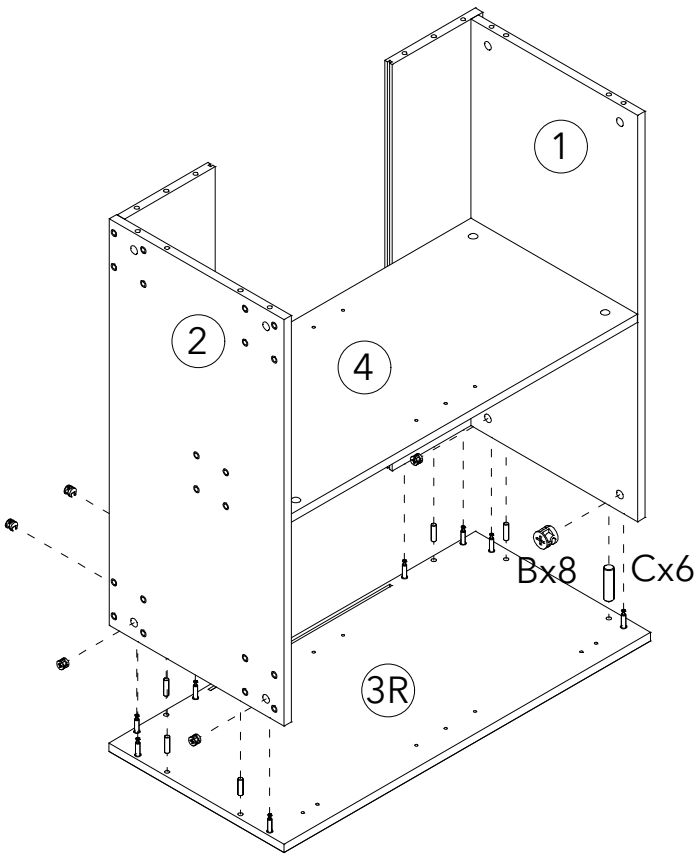


			
	C	Ø8x30	6pcs
			
	B	Ø15x11.5	8pcs


Step 7:

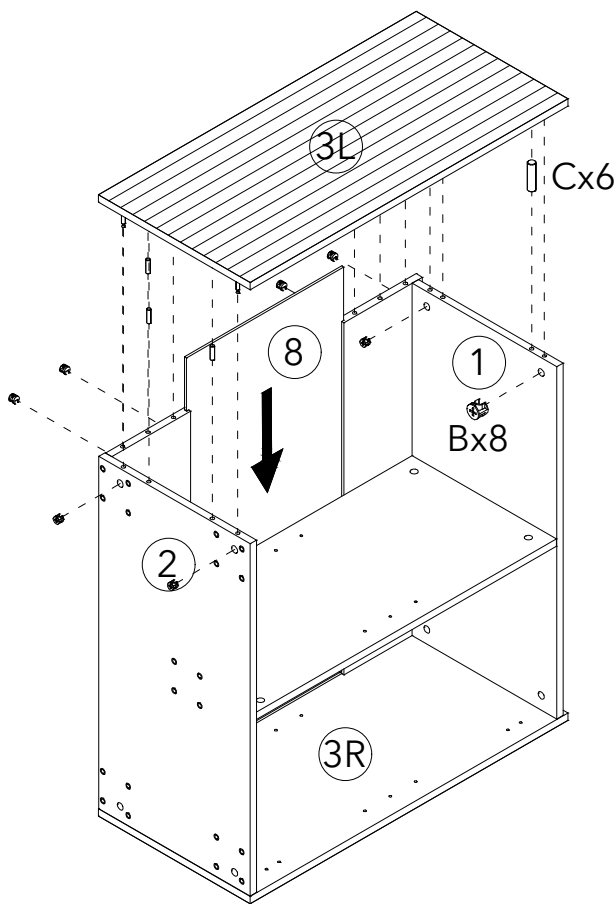


			
	C	Ø8x30	6pcs
			
	B	Ø15x11.5	8pcs

Step 8:


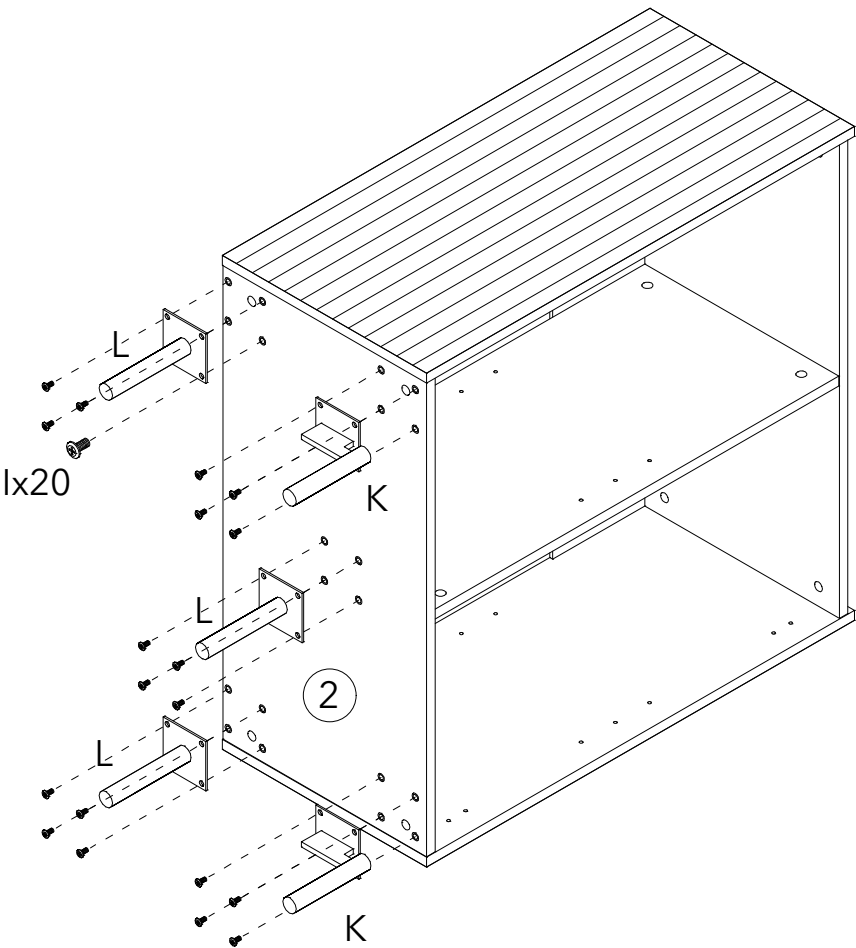


			
	K	/	2pcs
			
	L	/	3pcs
			
I M6x12mm 20pcs			



Step 9:

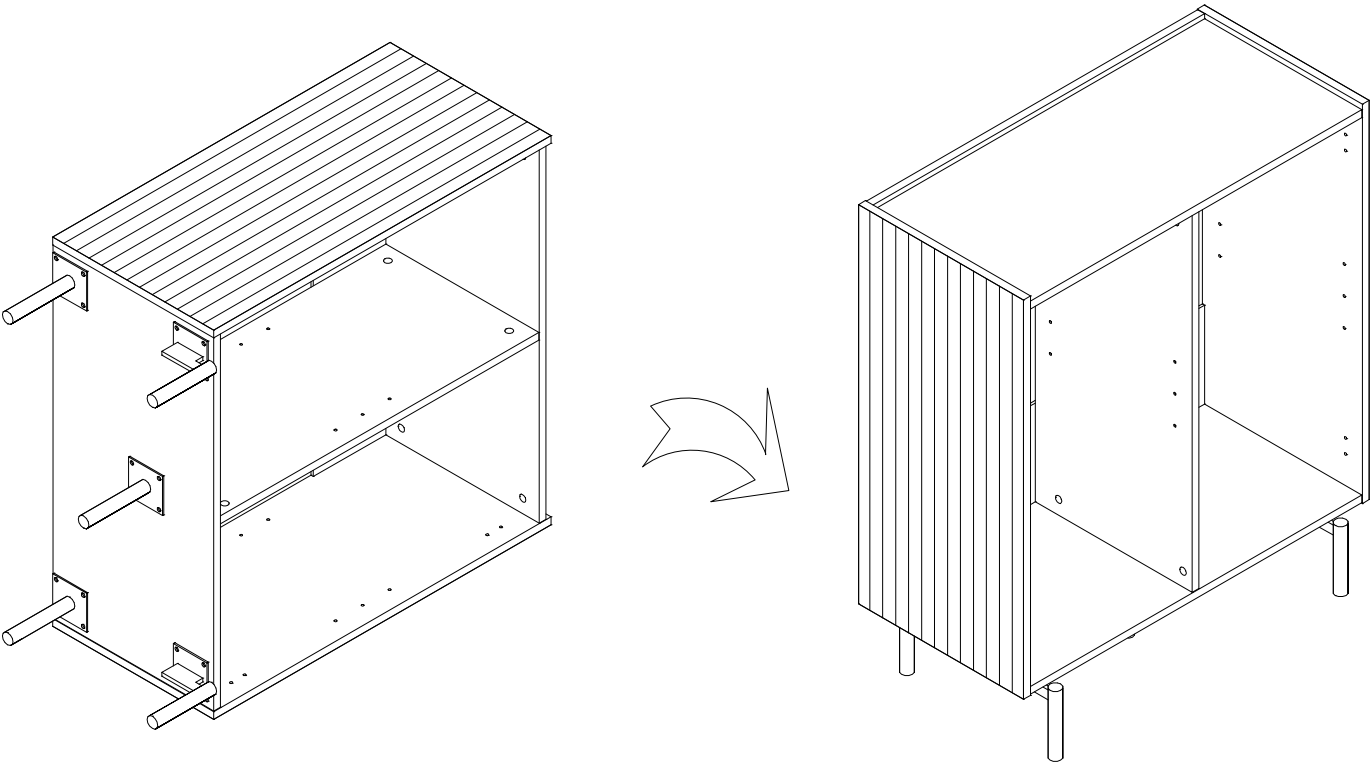



Step 10:

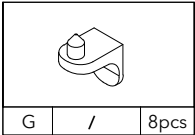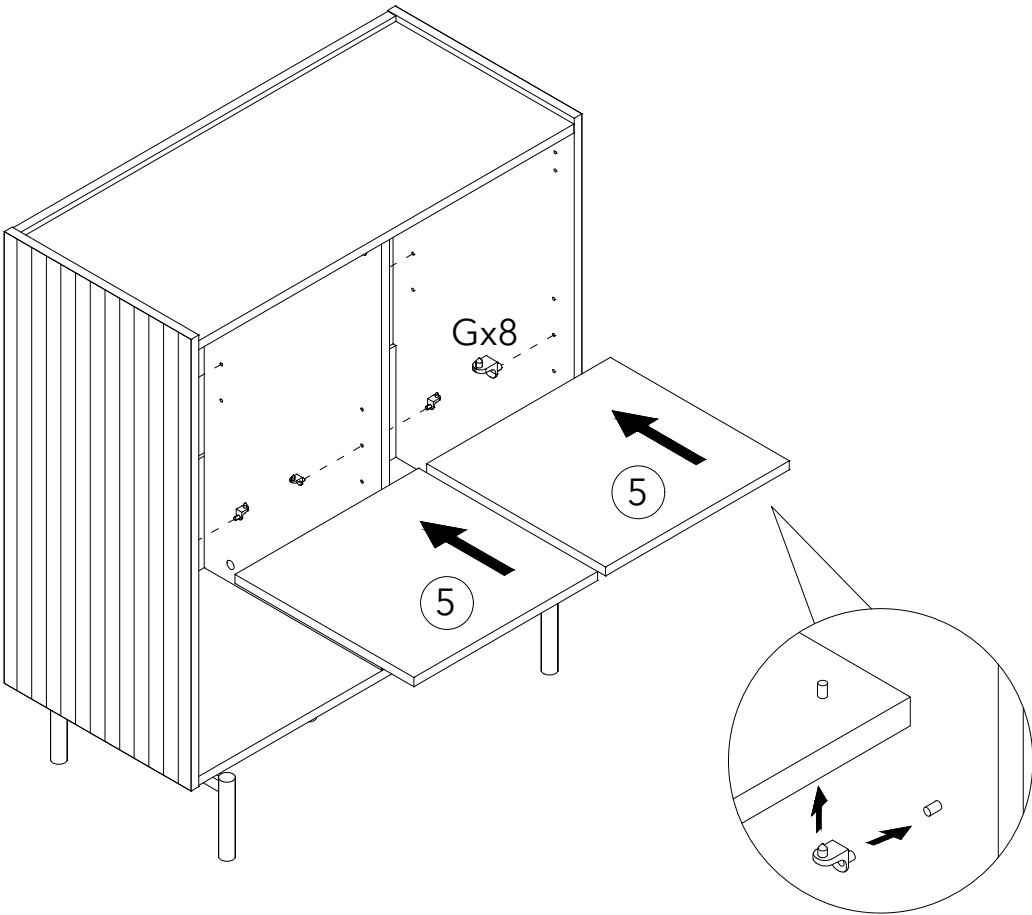


Step 11:

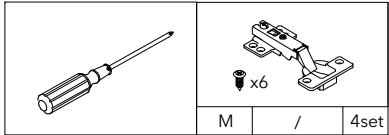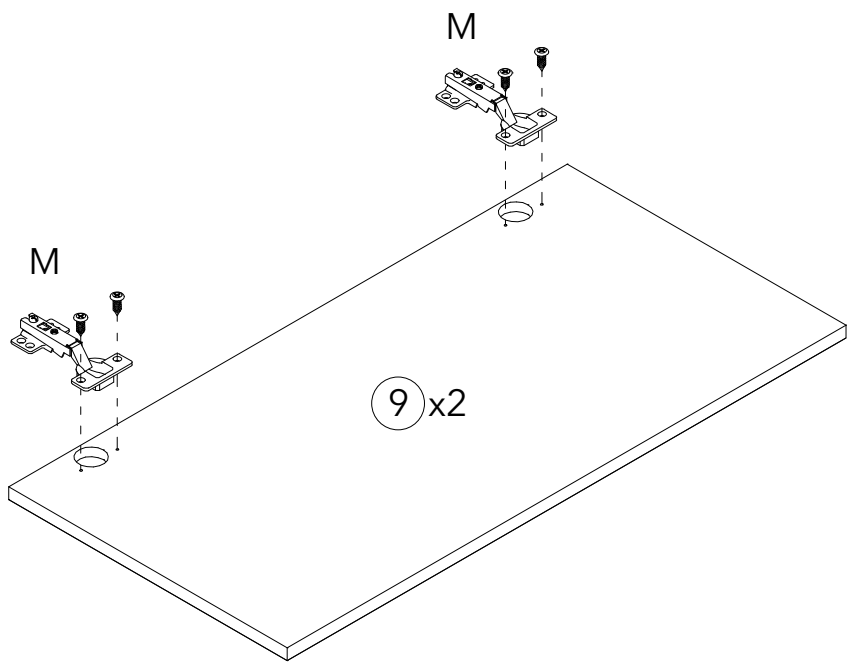


Step 12:

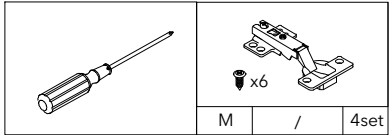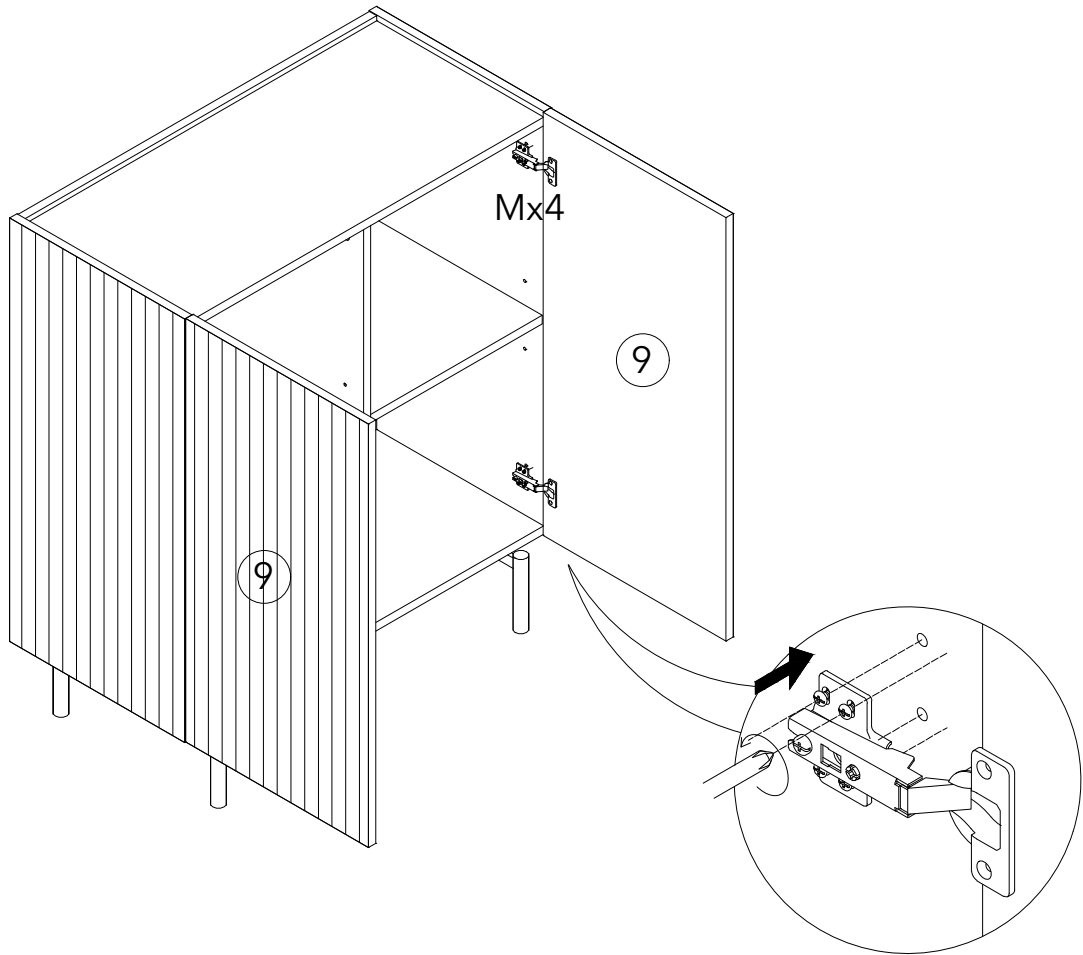

Step 13:

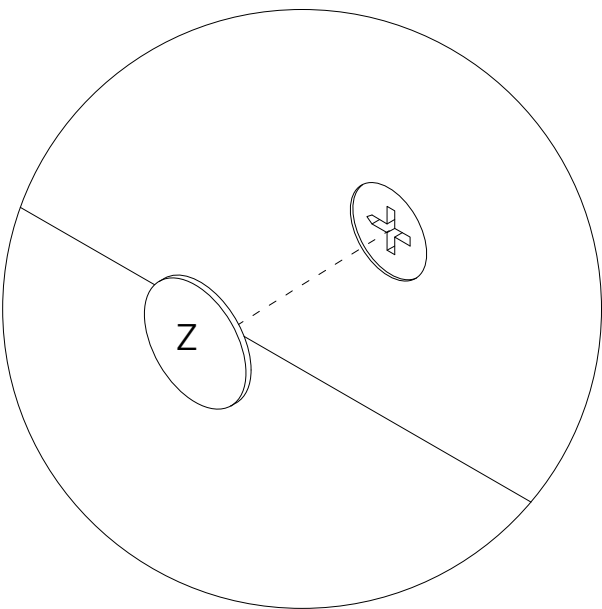

Add the screw covers
for those visible cams

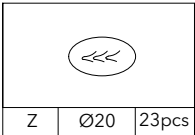

final product

