


ASSEMBLY INSTRUCTIONS: 12540084/09


ambia. GARDEN

XXXLutz KG
Roemerstrasse 39
AT-4600 Wels, Austria

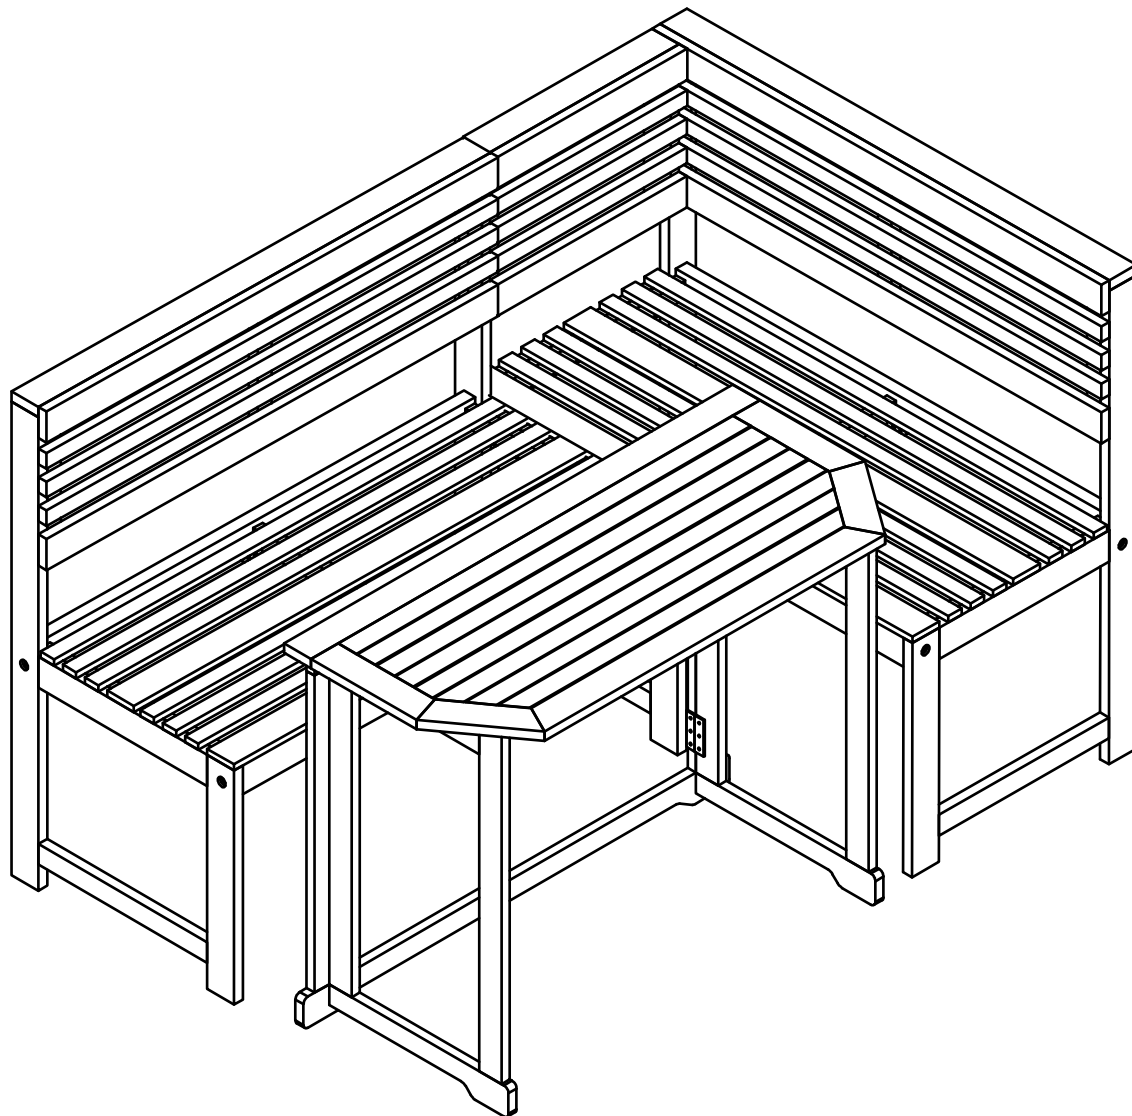


ASSEMBLY INSTRUCTIONS: 12540084/09



Step 1:

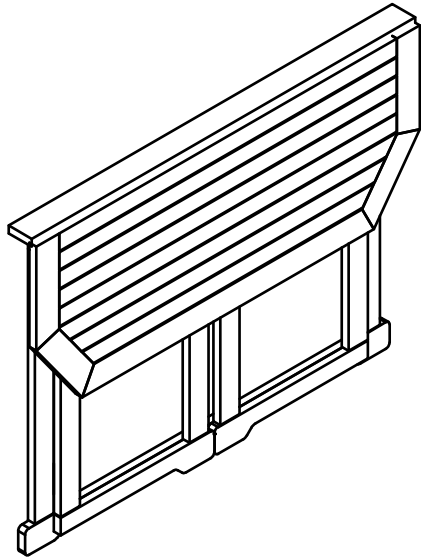

Step 2:





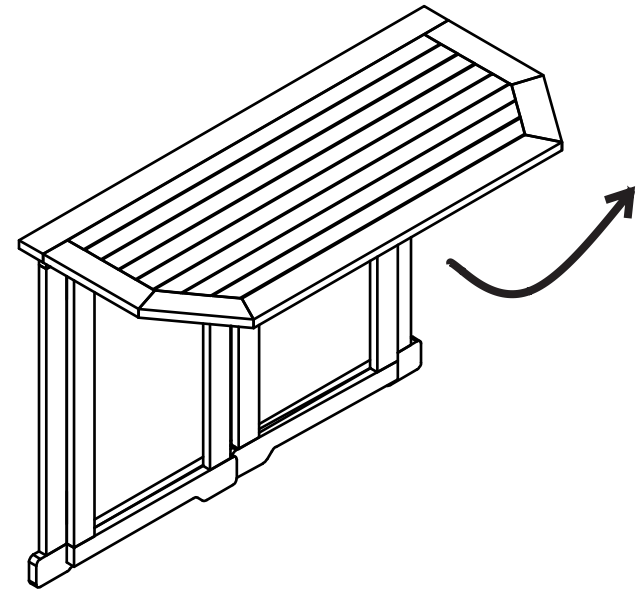


Step 3:

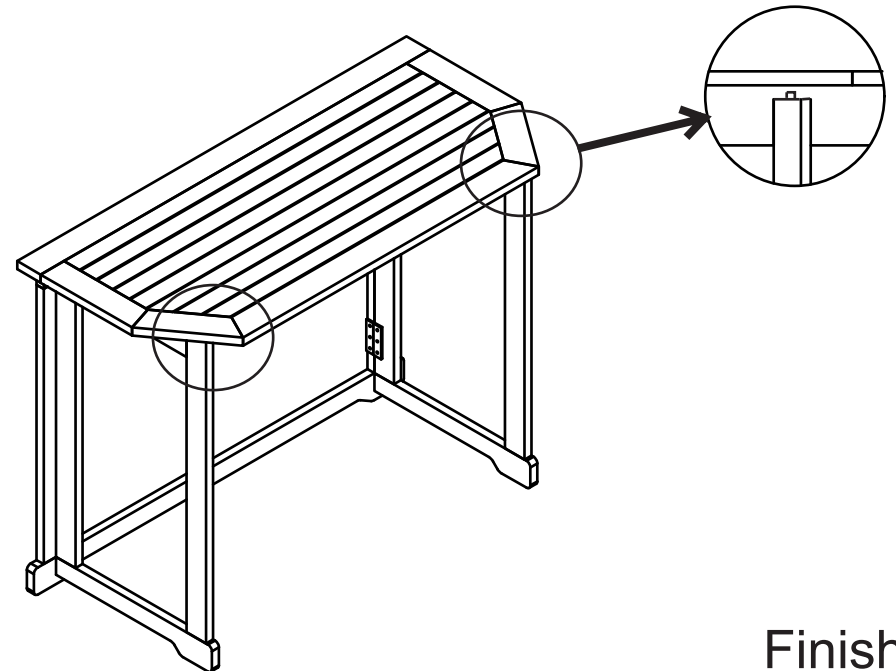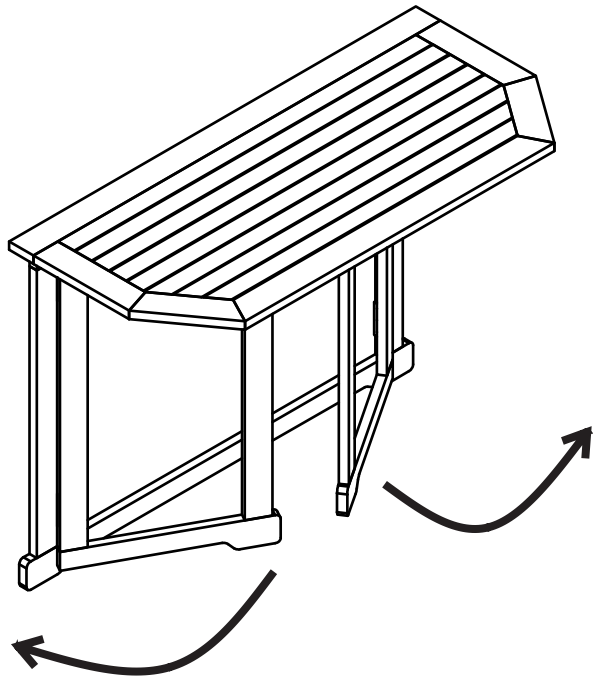


Finish.

ASSEMBLY INSTRUCTIONS: 12540084/09

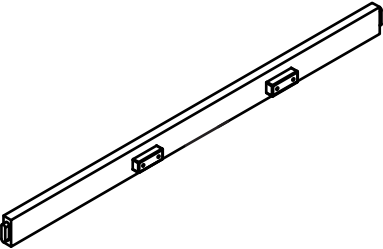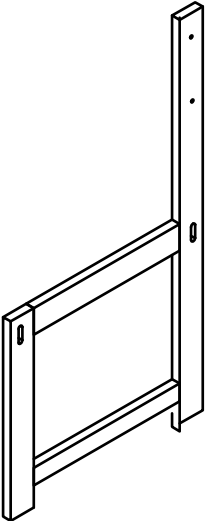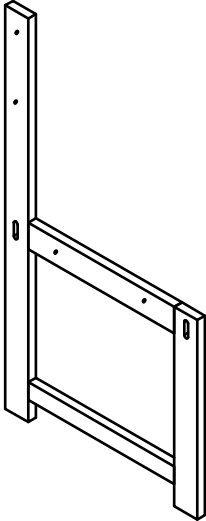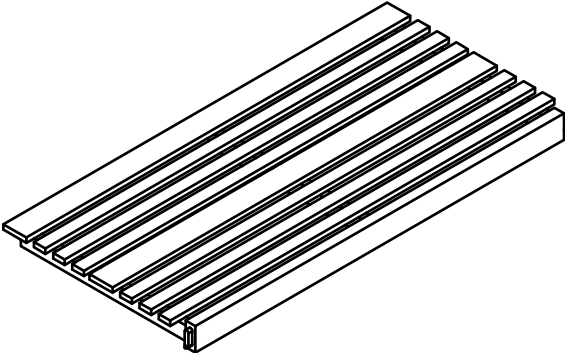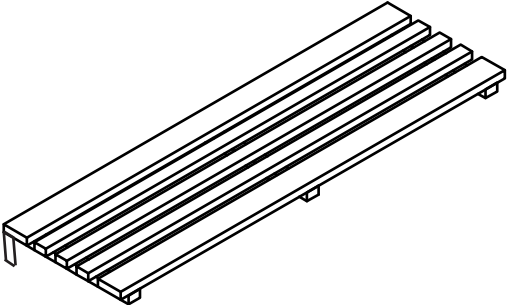
No	Name of Hardware	Fix	Qty	C  x1	
1	Screw M6x35mm		8		
2	Screw M6x60mm		4		
3	Allen Key		2		
A  x1		B  x1		D  x1	
				E  x1	

ASSEMBLY INSTRUCTIONS: 12540084/09


Step 1:

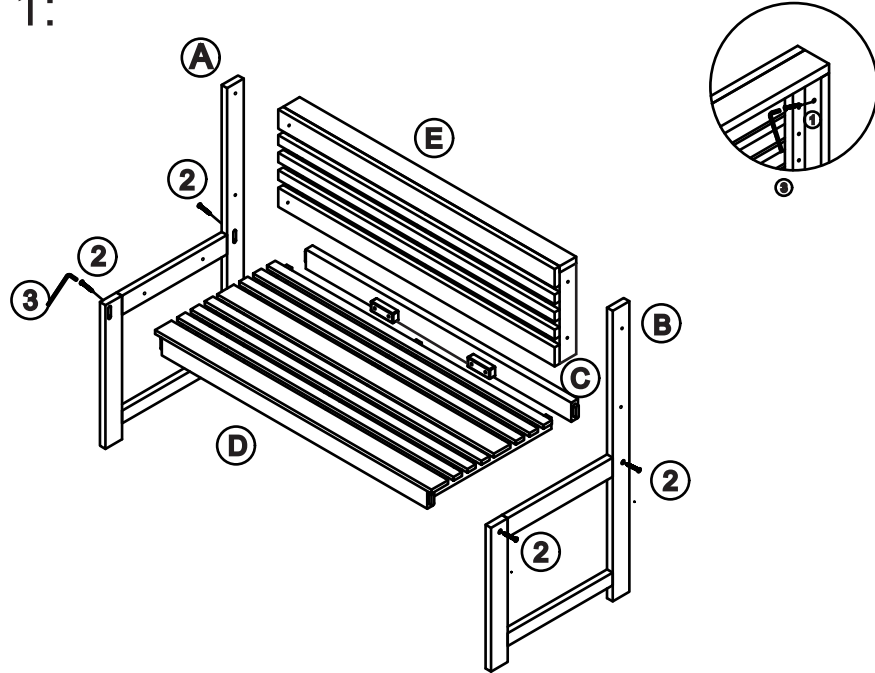







Step 2:

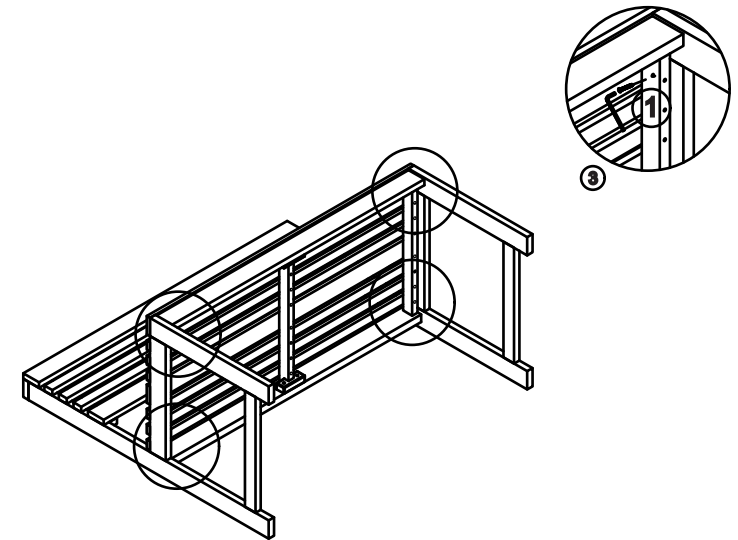

Step 3:

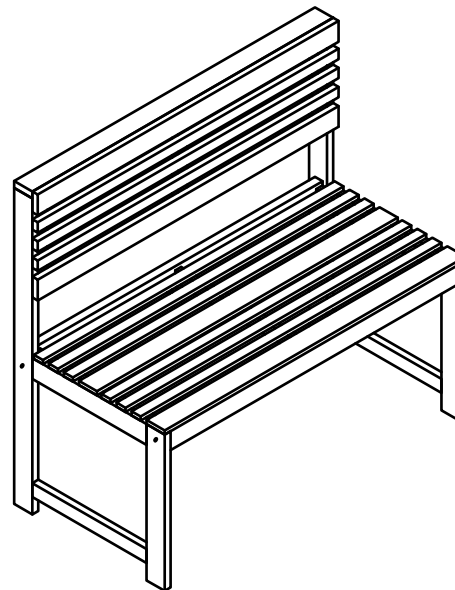


ASSEMBLY INSTRUCTIONS: 12540084/09

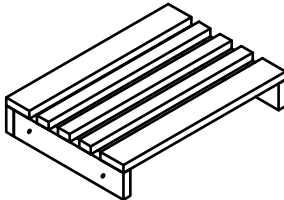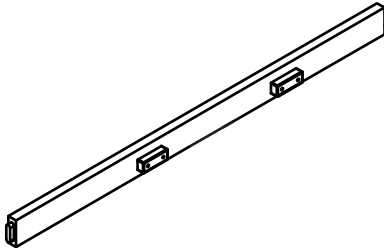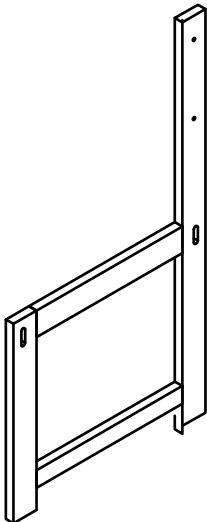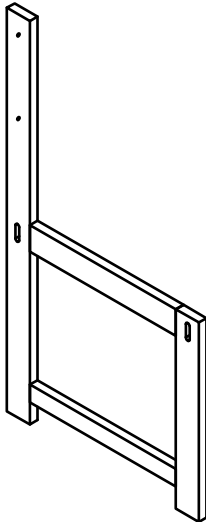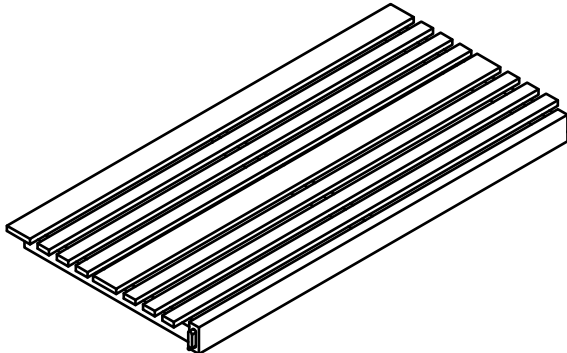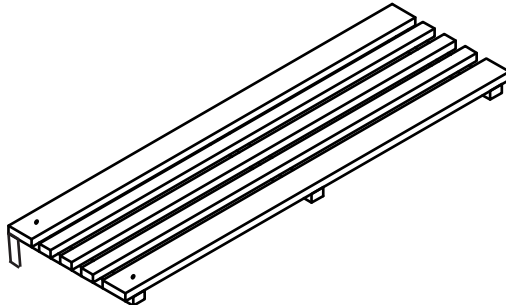
No	Name of Hardware	Fix	Qty		
1	Screw M6x35mm		10	A x1	B x1
2	Screw M6x50mm		2		
3	Screw M6x60mm		4		
4	Allen Key		2		
C x1		D x1		E x1	
				F x1	

ASSEMBLY INSTRUCTIONS: 12540084/09


Step 1:

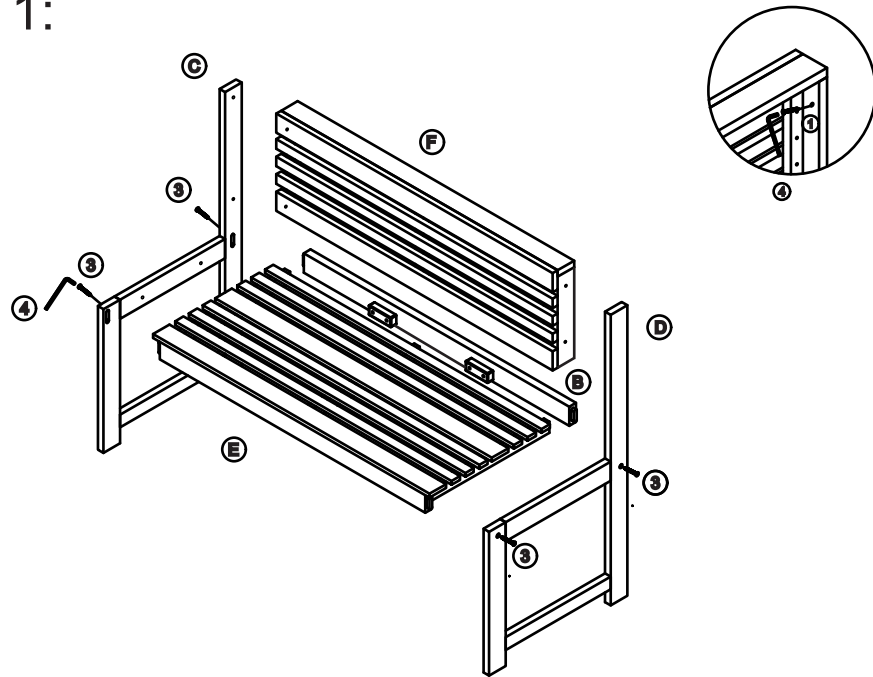


Step 2:

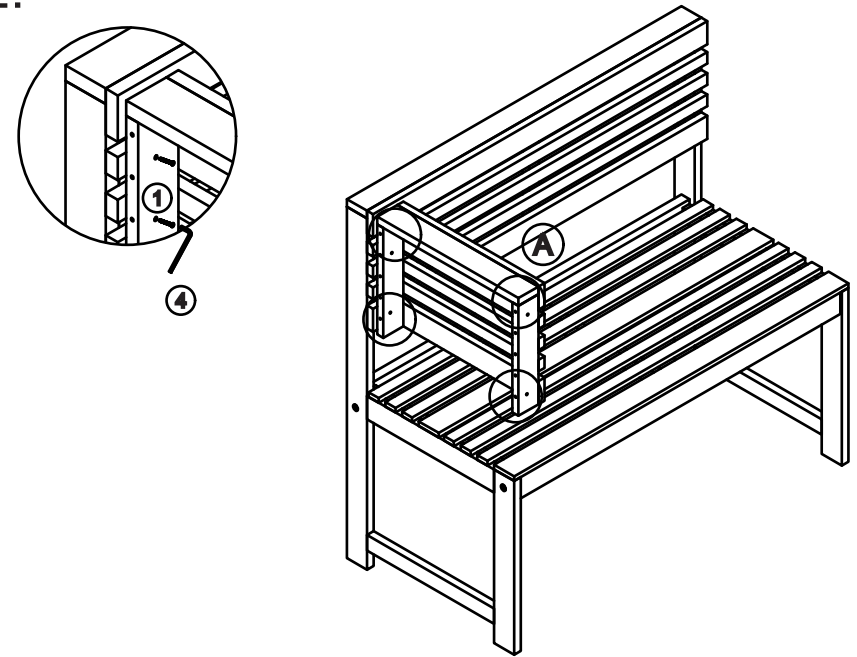

Step 3:

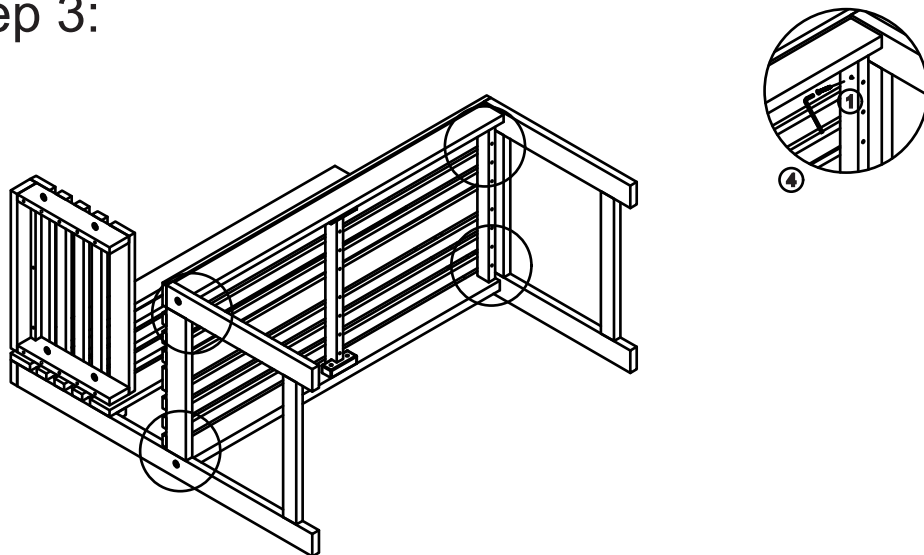

Step 4:

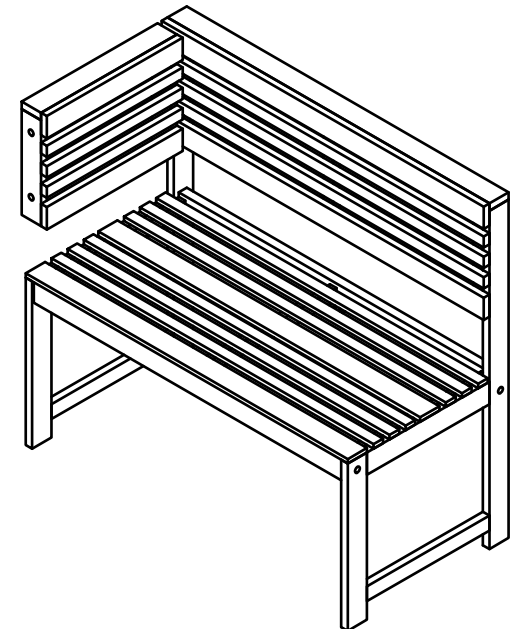

ASSEMBLY INSTRUCTIONS: 12540084/09

Step 5:

