

ASSEMBLY INSTRUCTIONS FOR F1904/4

(E) 10/04

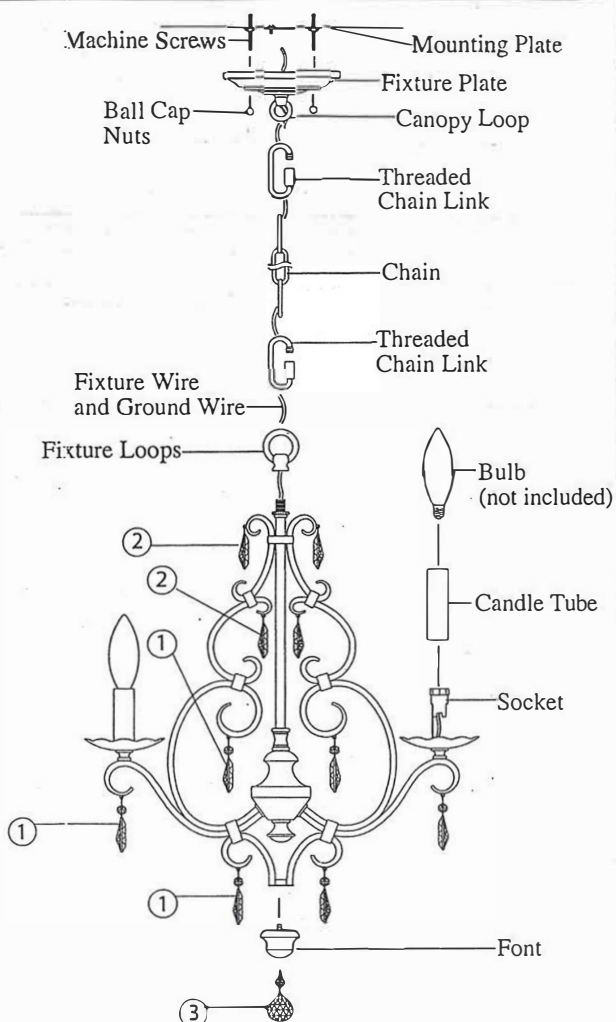


FIG: 1 CHAIN HUNG INSTALLATION


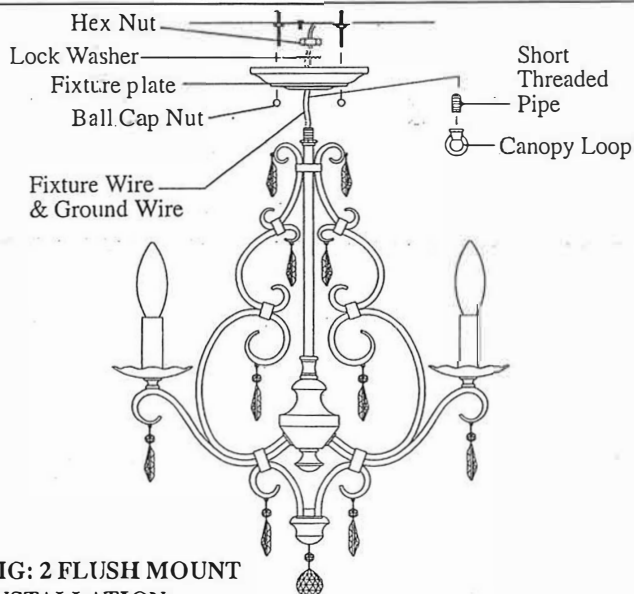


FIG: 2 FLUSH MOUNT INSTALLATION

©MURRAY FEISS IMPORT LLC.

Note: Spare crystals enclosed in hardware bag.

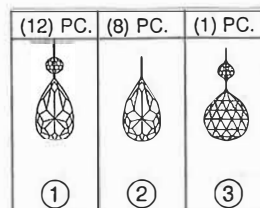

IMPORTANT TURN OFF POWER AT MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs are not included.

1. Place candle tubes over candelabra sockets and screw bulbs (not included) into sockets to secure. See relamping label on candle tube for type and maximum allowed wattage.
2. Install font by screwing into bottom of fixture.
3. Hang all crystal glass parts as shown on drawing. **NOTE:** To replace broken crystals or pins extras are included in hardware bag. To replace broken crystals open pins, remove crystal, hook new one, then close back pin. Avoid bending pins into sharp angle.
4. This fixture can be mounted onto ceiling either as chain hung or flush mount:

CHAIN HUNG INSTALLATION- Fig. 1:

- A. Take fixture wire (with plastic insulation) and ground wire and thread through fixture loop. Then install loop onto threaded pipe located at top of fixture.
- B. This fixture is supplied with 2 threaded chain links. These links are opened and closed by twisting cylinder on chain link. One threaded chain link should be installed onto canopy loop and the other should be installed onto fixture loop. The standard chain should be installed in between these 2 threaded chain links.
- C. Determine the desired length of chain to hang. Remove any unwanted links with chain plier.
- D. Take ground wire and weave through above chain links, then thread through center hole in canopy loop. Repeat with fixture wire (wire with plastic insulation).

FLUSH MOUNT INSTALLATION- Fig. 2:

- A. Remove and discard canopy loop and threaded pipe from fixture plate.
 - B. Thread ground wire and fixture wire through fixture plate, lock washer, and hex nut. Lock all together on top of fixture by tightening hex nut onto threaded pipe.
5. Cut excess wires leaving only 6" (15cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19mm) of outer plastic insulation.
 6. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.

NOTE: Before starting wire connection, enlist a helper to support the fixture, or make a hook from a wire coat hanger and temporarily suspend the fixture from mounting plate.

M U R R A Y F E I S S