

QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoise.com

Elstead Lighting Ltd
Elstead House,
Mill Lane, Alton, Hampshire
GU34 2QJ
Customer Service
T: +44 (0) 1420 82377.
www.elsteadlighting.com

Assembly Instruction Sheet #IS-QZER1814

For Styles QZER1814PN, QZER1814IS, QZER1814WS

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (1) Max 60w E27

Estimated Assembly Time: 30-45 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

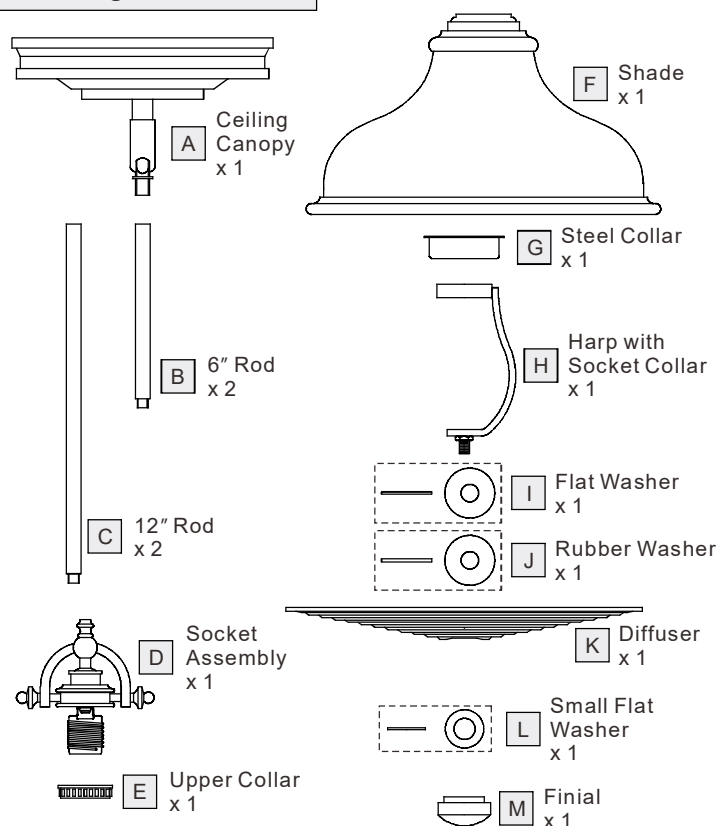


Hardware Contents

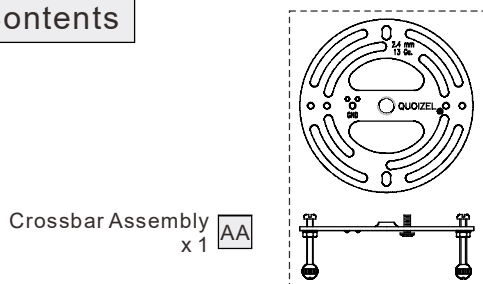

STEP 1 – Assemble the Rods and the Ceiling Canopy

- Determine the Rods (B/C) to be assembled to the Socket Assembly (D) according to your hanging height.
- Pass the supply wires and ground wire through the chosen rods (B/C) and the Ceiling Canopy (A). Thread the Socket Assembly (D), the chosen Rods (B/C) and the Ceiling Canopy (A) together. Hand tighten until snug.


Figure 1

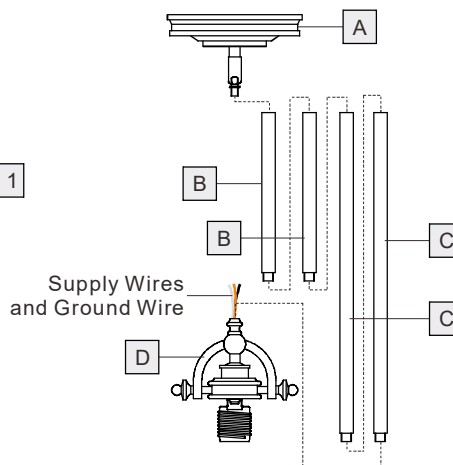

STEP 2 – Install Crossbar Assembly

Figure 2

- Pass the supply wires through the Crossbar Assembly (AA). Attach the Crossbar Assembly (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

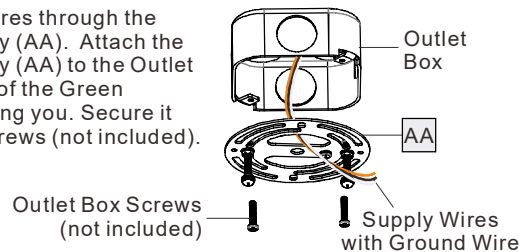

STEP 3 – Fit Ceiling Canopy to Crossbar Assembly



- Remove mounting balls from the Crossbar Assembly (AA). Fit the Ceiling Canopy (A) to the Crossbar Assembly (AA) and secure with mounting balls. Note: The Ceiling Canopy (A) should be snug against the ceiling and the mounting balls. If not, adjust the length of the nipple on the Crossbar Assembly (AA) by unscrewing the preassembled hex nut and lock washer and then screwing the

Thank you for purchasing a Quoizel product

Need assistance with parts or assembly? Call our customer service at +44(0) 1420 82377 or visit us at www.elsteadlighting.com



ER1814BN

FINISH: BRUSHED NICKEL

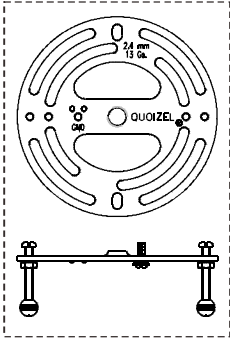

(1) Max 60W E27

(not provided)

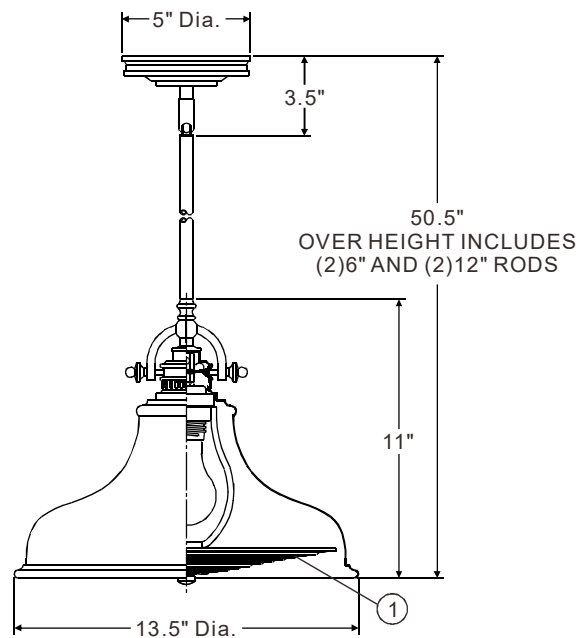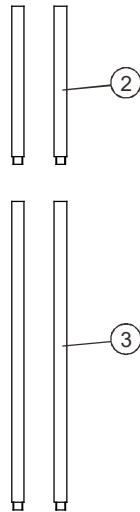

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	G134DI	DIFFUSER 9.5"D	1
2	9006EXBN	ROD EXTENSION BRUSHED NICKEL 6"L X 0.5"D	2
3	9012EXBN	ROD EXTENSION BRUSHED NICKEL 12"L X 0.5"D	2

mounting screws in or out of the crossbar until the correct length is achieved. Once the Ceiling Canopy (A) is secure, remove the mounting ball and Ceiling Canopy (A) and proceed to Step 4.

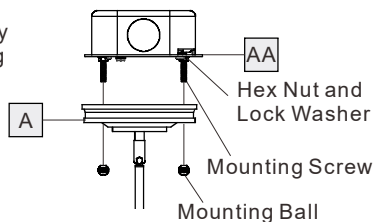


Figure 3

Canopy (A) over the outlet box. Align the holes in the Ceiling Canopy (A) with the mounting screws, then attach the Ceiling Canopy (A) using the previously removed mounting balls. Hand tighten until snug.

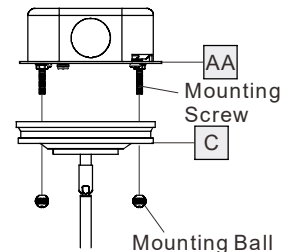


Figure 5

STEP 4 - Wire Connections

- Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- Connect White Supply Wire from the Outlet Box to Ribbed side Wire from fixture.
- Connect Black (or Red) Supply Wire from the Outlet Box to Smooth side Wire from fixture.
- Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- Twist connectors until wires are tightly joined together.
- Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.




Figure 4

STEP 5 - Install Fixture Body

- Carefully tuck all wires into the outlet box and position the Ceiling

STEP 6 - Install Shade

- Place the Upper Collar (E), the Shade (F) and the Steel Collar (G) onto the Socket Assembly (D) in turn and secure with the Harp with Socket Collar (H). Hand tighten until snug.

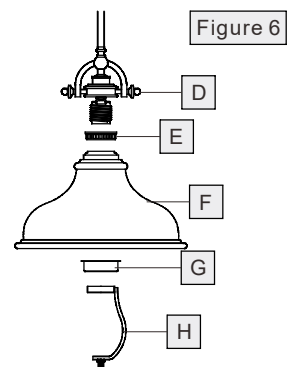


Figure 6

STEP 7 - Install Bulb

- This fixture uses (1) Max 60W E27.
- Insert bulb and screw snugly into place.

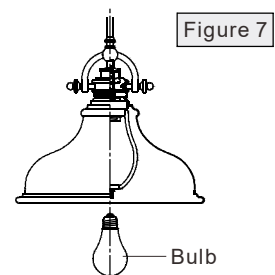


Figure 7

Thank you for purchasing a Quoizel product


Need assistance with parts or assembly? Call our customer service at +44(0) 1420 82377 or visit us at www.elsteadlighting.com

STEP 8 – Install Diffuser

Figure 8

A. Attach the Flat Washer (I), the Rubber Washer (J), the Diffuser (K) and the Small Flat Washer (L) over the nipple at the end of the Harp (H) in turn. Secure them with the Finial (M) and hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

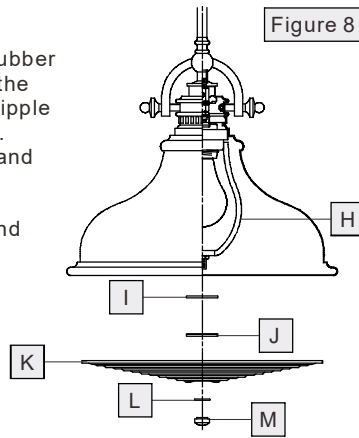

Thank you for purchasing a Quoizel product

Need assistance with parts or assembly? Call our customer service at +44(0) 1420 82377 or visit us at www.elsteadlighting.com