

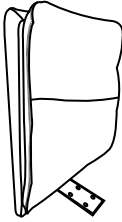

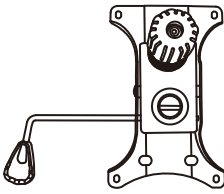





Assembly Instructions




PARTS CHECKLIST				
				 Ex5  Fx1
 Gx4 (M6X30mm)	 Hx10 (M6X12mm)	 Ix4 (M6X20mm)	 Jx5	 Kx1

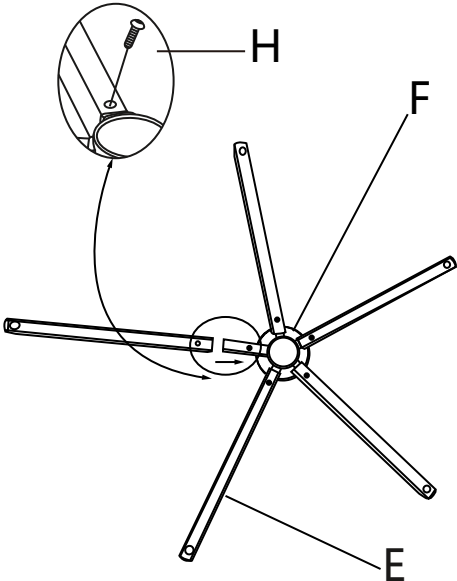


Step 1: Attach the **Chair Legs Ex5** to the **Chair Base F** with **Screws Hx10** and tighten with **Allen Wrench K**.

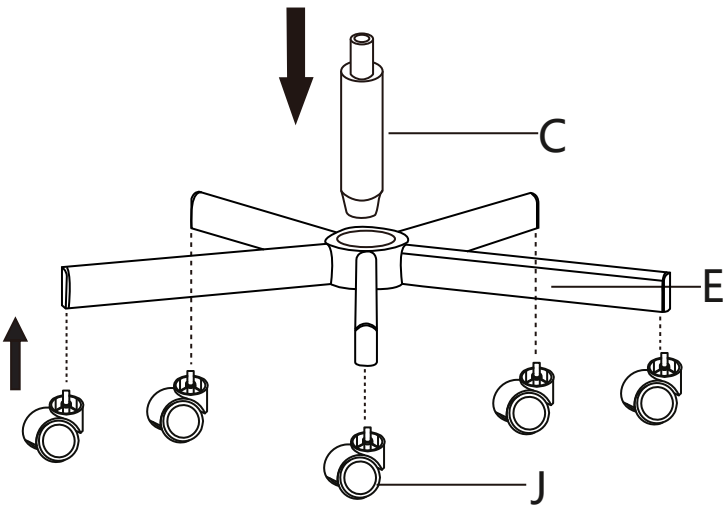

Step 2: Insert the **Casters Jx5** into the **Chair Legs Ex5**;
Insert the **Gas Lift C** into the center of the chair base.

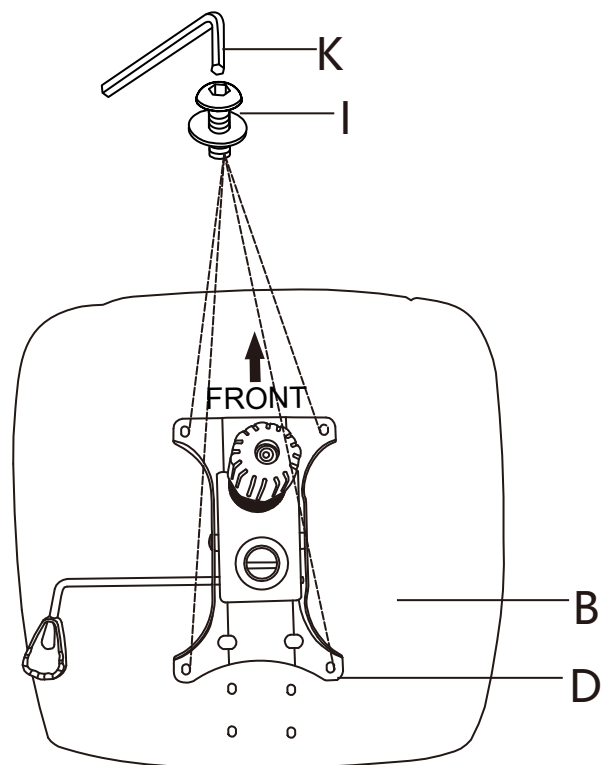


Step 3: Attach the **Tilt Mechanism D** to the **Chair Seat B** with **Screws Ix4** and tighten with **Allen Wrench K**.

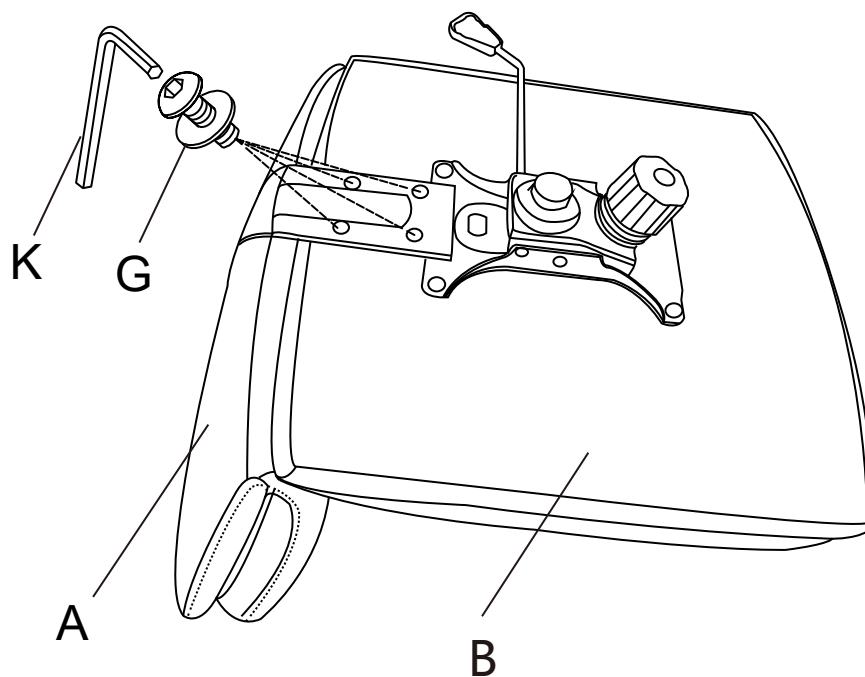


Step 4: Attach the **Chair Back A** to the **Chair Seat B** with **Screws Gx4** and tighten with **Allen Wrench K**.

Tips : Please left all the screws loose until you have them ALL aligned and screwed.

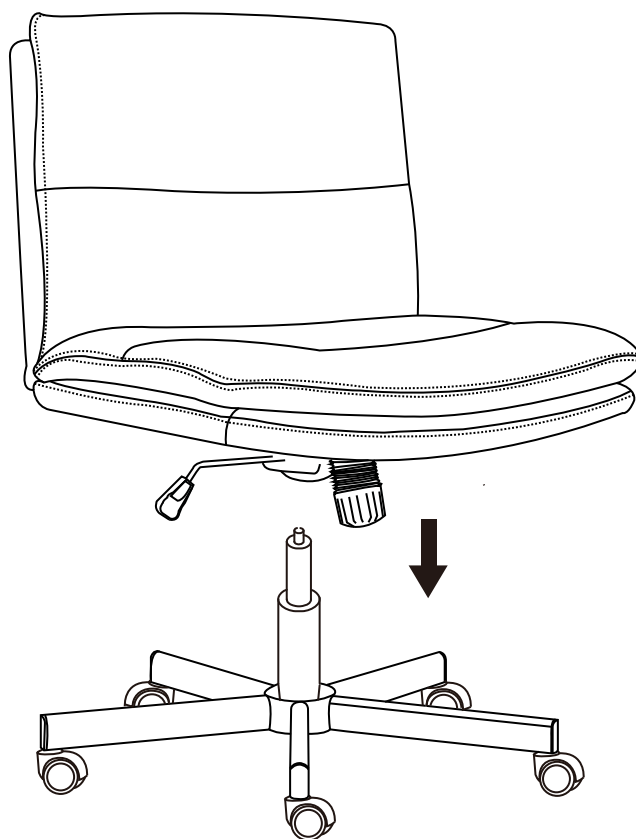

Step 5: Attach the assembled seat to the assembled base by aligning the hole in the tilt mechanism to the top of the gas lift. Push down firmly to secure.

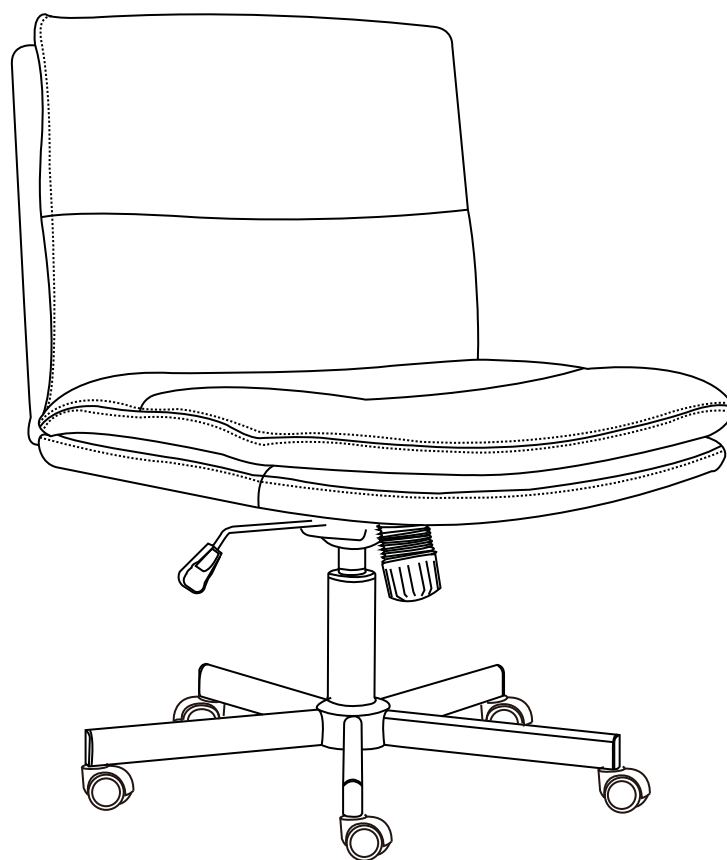

Importer:
CLP Trading GmbH
Triftenstraße 93
32791 Lage
Germany
info@clp.de