



P3 Pet Stroller with Removable Carrier



Safety & Instruction Manual

www.wonderfold.com

WONDERFOLD®

WARNING

Safety Instructions for Pet Stroller

Please read before use

Safety precautions are shown here to ensure this product is used correctly and to prevent harm and damage to you and other people. Be sure to read all these important safety instructions.

Warnings

- Do not place children in pet carrier.
- Do not leave this product unfolded when not in use. Even if the brake pedal is applied, the slope or the weight of the load may cause the stroller to move or tip over.
- Do not hang anything on the handle or apply excessive force to the handlebar. You may lose your balance and fall.
- Do not use on slick surfaces or during strong wind. There is a risk of tipping over.
- The maximum weight limit for this product is 30 lbs. (13.6 kg) for the carrier and 9 lbs. (4 kg) for the storage basket. Do not load the stroller over the weight limit. It may cause overturning or damage.
- Do not disassemble or modify this product.
- Do not allow children to play with this product.
- Be careful when using on grooved surfaces or steps, as it is easy to lose balance.
- Do not leave pets unsupervised in stroller/carrier.
- NEVER press down on the handlebar while going over a curb with the stroller. Lift it using the frame, not the handlebar.

Note

- Do not use for any other purpose than the strollers intended use.
- Do not run when pushing this product. Doing so may cause an accident such as a fall or injury to another person.
- Please be careful when using on roads such as gravel roads.

Specifications

Dimensions

Frame :

Unfolded: 23.6 in x 34.3 in x 40.6 in (60 cm x 87 cm x 103 cm)
Folded: 23.6 in x 34.3 in x 19.8 in (60 cm x 87 cm x 50 cm)

Pet Carrier:

Handle Folded: 17.7 in x 28.7 in x 11.8 in (45 cm x 73 cm x 30 cm)
Handle Unfolded: 17.7 in x 28.7 in x 28 in (45 cm x 73 cm x 71 cm)

Weight

Frame: 13.7 lbs. (6.21 kg)
Pet Carrier: 9 lbs. (4.1 kg)

Material

Stroller:

Frame: Aluminum, Iron
Handle: PU
Tire: EVA

Pet Carrier:

Fabric: Polyester
Frame: Aluminum

Weight Capacity

Pet Carrier: 48.5 lbs. (22 kg)
Storage basket: 6.6 lbs. (3 kg)

Parts Checklist3

Features.....4

Assembly

Unfolding the Stroller / Installing & Removing the Rear & Front Wheels5

Assembling the Pet Carrier / Attaching the Pet Carrier6


How to...

Fold the Stroller / Using the Brake System / Using the Front Wheel Locks7


Using the Canopy / Lower the Pet Carrier Handlebar / Attaching the Cup Holder8

Cleaning & Warranty.....9


Parts Checklist




Stroller Frame - 1pc




Pet Carrier - 1pc




Front Wheels - 2pcs



Rear Wheels - 2pcs



Baseboard - 1pc



Cup Holder - 1pc

Please take the time to make sure that all parts are included. If any parts are missing or broken, or if you need assistance assembling your stroller, please contact us at hello@wonderfold.com

Features




- 2-in-1 pet carrier and stroller.
- Lightweight, portable, and folds for easy storage.
- Dual entry allows you to quickly access your pet from either side of the carrier, with latches to keep the canopy closed on each side.
- Mesh ventilation on both sides of the canopy and on the front of the carrier.
- Removable, washable floor pad with two interior tethers to attach the pet's harness.

- Faux Leather handlebar and trim with a cup holder.
- One-step foot brake with a storage basket underneath, along with a storage pocket on the back of the carrier.






Unfolding the Stroller

1. Raise the handlebar above the stroller.
2. Unlock the side latch.
3. Swing out and extend the legs with the bottom storage pouch until you hear the click.

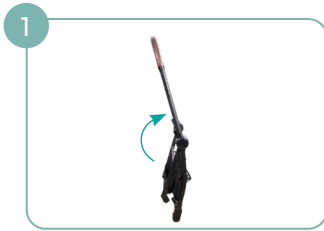

Installing & Removing the Rear Wheels

1. Insert the rear wheel axle into the brake bar until you hear a click. After attaching the rear wheels, pull on each wheel to confirm that they are securely locked.
2. To remove the rear wheels, press the release button and detach the wheel from the leg.

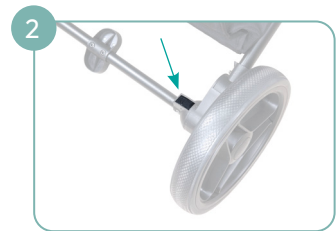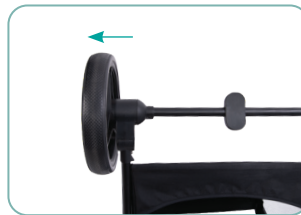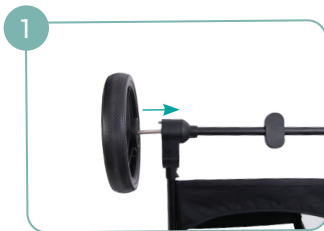

Installing & Removing the Front Wheels

1. Insert the front wheel axle into the wheel leg until you hear a click. After attaching the front wheels, pull down on each wheel to confirm that they are securely locked.
2. To remove the front wheels, press the release button and detach the wheel from the leg.



Assembling the Pet Carrier

1. Raise the carrier handlebar above the carrier frame.
2. Fold out the pet carrier by pushing the carrier floor down while raising the carrier handlebar up until you hear a click.
3. Insert the carrier baseboard on the bottom of the carrier with the fabric flaps facing up. Insert the leash through the fabric flaps.
4. Secure the baseboard fabric flaps by buttoning the edges to each side of the frame carrier.
5. To fold the pet carrier, pull up on the carrier front release latch to collapse the pet carrier.



Attaching the Pet Carrier

Pet stroller should still be fully unfolded and upright. Engage the brake when attaching the carrier.

1. Align the pet carrier connection pieces with the frame connection pieces.
2. Insert the pet carrier connection pieces into stroller frame connection pieces until you hear a click. Once the pet carrier is inserted, pull up on the carrier to ensure it is secured.
3. To remove the pet carrier from the frame press both release buttons and lift up.







How to...

Fold the Stroller

The pet carrier must be detached from the frame in order to fold the stroller frame

1. Grab the handlebar and press the button on the inside of the handlebar to unlock the frame.
2. Lower the handlebar towards the rear wheels.
3. Pull the bars above the basket together.
4. Secure the latch attached to the left rear wheel leg to the peg on the left front wheel leg.

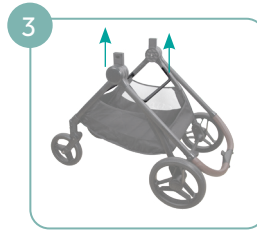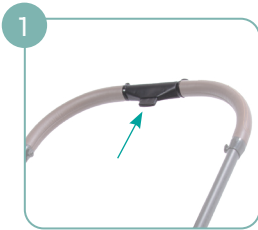

Using the Brake System

To engage the brake

1. Lower the front side of the brake pedal.



To release the brake

2. Raise the lowered side of the brake pedal to a horizontal position.



Using the Front Wheel Locks

To lock front wheels in a fixed position

1. Flip the lock switch position to the right.



To release the wheels

2. Flip the lock switch back to original position.



Using the Canopy

1. To open either side of the canopy, press the button on the front or the back of the frame to release the canopy.
2. To close the canopy, lower the canopy rim to the edge of the carrier frame and press down until you hear a click to secure the canopy.




Lower the Pet Carrier Handlebar

1. Press the carrier handlebar button on both sides simultaneously.
2. While the buttons are pressed, position the handlebar up or down to desired position.



Attaching the Cup Holder

Place cup holder slot onto the stroller peg on either side of the stroller and press firmly down until the cup holder clicks into place.

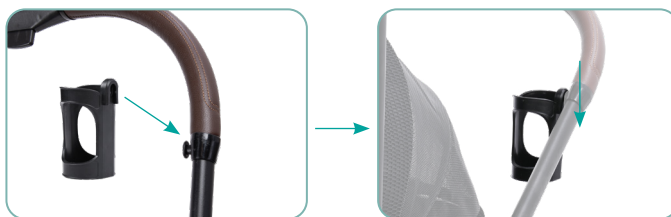



Cleaning

To maintain your product's condition, follow these steps:

1. **Regular Maintenance:** After each use, wipe off dirt and sand with a dry cloth.
2. **Deeper Cleaning:**
 - Soak a cloth in 1.3-5% diluted neutral detergent solution.
 - Wring out the cloth thoroughly to remove excess liquid.
 - Gently wipe the surface to remove dirt.
3. **Rinse:** Use a damp cloth to wipe away any remaining detergent.
4. **Dry:** Allow the product to air dry in a well-ventilated, shaded area.

Important:

Do not use thinner, benzene, alcohol, or similar substances in metal or plastic parts, as these may cause deformation or cracking.

Warranty

One Year Limited Warranty

One Year Limited Warranty WonderFold warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase when used by the original owner according to the manufacturer's instructions. The warranty does not apply to damage caused by product alteration, or customer/ user misuse or abuse of the product. Your sales receipt is your only record of the date of purchase. Warranty is subject to change at any time at manufacturer's sole discretion. Please refer to wonderfold.com/pages/warranty/ for the most current version of the manufacturer warranty. Please contact WonderFold if you have any warranty questions or if you need replacement parts:

WONDERFOLD pet

5796 Martin Rd
Irwindale, CA 91706
hello@wonderfold.com
1 (888) 681-1526



www.wonderfold.com